
labgrid Documentation

Release 0.1.dev126+gee385e6

Jan Luebbe, Rouven Czerwinski

Jun 18, 2020

CONTENTS

1	Getting Started	3
1.1	Installation	3
1.2	Running Your First Test	4
1.3	Setting Up the Distributed Infrastructure	5
1.4	udev Matching	7
1.5	Using a Strategy	8
2	Overview	9
2.1	Architecture	9
2.2	Remote Resources and Places	11
3	Usage	15
3.1	Remote Access	15
3.2	Library	17
3.3	pytest Plugin	19
3.4	Command-Line	24
4	Manual Pages	25
4.1	labgrid-client	25
4.2	labgrid-device-config	28
4.3	labgrid-exporter	31
5	Configuration	35
5.1	Resources	35
5.2	Drivers	47
5.3	Strategies	62
5.4	Reporters	63
5.5	Environment Configuration	64
5.6	Exporter Configuration	66
6	Development	69
6.1	Installation	69
6.2	Writing a Driver	69
6.3	Writing a Resource	71
6.4	Writing a Strategy	72
6.5	Graph Strategies	73
6.6	SSHManager	77
6.7	ManagedFile	78
6.8	ProxyManager	78
6.9	Contributing	78
6.10	Ideas	80

7	Design Decisions	81
7.1	Out of Scope	81
7.2	In Scope	81
7.3	Further Goals	82
8	Changes	83
8.1	Release 0.3.0 (unreleased)	83
8.2	Release 0.2.0 (released Jan 4, 2019)	84
8.3	Release 0.1.0 (released May 11, 2017)	88
9	Modules	89
9.1	labgrid package	89
10	Indices and Tables	183
	Python Module Index	185
	Index	187

labgrid is a embedded board control python library with a focus on testing, development and general automation. It includes a remote control layer to control boards connected to other hosts.

The idea behind labgrid is to create an abstraction of the hardware control layer needed for testing of embedded systems, automatic software installation and automation during development. labgrid itself is *not* a testing framework, but is intended to be combined with [pytest](#) (and additional pytest plugins). Please see [Design Decisions](#) for more background information.

It currently supports:

- pytest plugin to write tests for embedded systems connecting serial console or SSH
- remote client-exporter-coordinator infrastructure to make boards available from different computers on a network
- power/reset management via drivers for power switches or onewire PIOs
- upload of binaries via USB: imxusbloader/mxsusbloader (bootloader) or fastboot (kernel)
- functions to control external services such as emulated USB-Sticks and the [hawkBit](#) deployment service

While labgrid is currently used for daily development on embedded boards and for automated testing, several planned features are not yet implemented and the APIs may be changed as more use-cases appear. We appreciate code contributions and feedback on using labgrid on other environments (see [Contributing](#) for details). Please consider contacting us (via a GitHub issue) before starting larger changes, so we can discuss design trade-offs early and avoid redundant work. You can also look at [Ideas](#) for enhancements which are not yet implemented.

GETTING STARTED

This section of the manual contains introductory tutorials for installing labgrid, running your first test and setting up the distributed infrastructure. For an overview about the basic design and components of *labgrid*, read the *Overview* first.

1.1 Installation

Depending on your distribution you need some dependencies. On Debian stretch and buster these usually are:

```
$ apt-get install python3 python3-virtualenv python3-pip python3-setuptools virtualenv
```

In many cases, the easiest way is to install labgrid into a virtualenv:

```
$ virtualenv -p python3 labgrid-venv  
$ source labgrid-venv/bin/activate
```

Start installing labgrid by cloning the repository and installing the requirements from the *requirements.txt* file:

```
$ git clone https://github.com/labgrid-project/labgrid  
$ cd labgrid && pip install -r requirements.txt  
$ python3 setup.py install
```

Note: Previous documentation recommended the installation as via pip (*pip3 install labgrid*). This lead to broken installations due to unexpected incompatibilities with new releases of the dependencies. Consequently we now recommend using pinned versions from the *requirements.txt* file for most use cases.

labgrid also supports the installation as a library via pip, but we only test against library versions specified in the requirements.txt file. Thus when installing directly from pip you have to test compatibility yourself.

Note: If you are installing via pip and intend to use Serial over IP (RFC2217), it is highly recommended to uninstall pyserial after installation and replace it with the pyserial version from the labgrid project:

```
$ pip uninstall pyserial  
$ pip install https://github.com/labgrid-project/pyserial/archive/v3.4.0.1.  
→zip#egg=pyserial
```

This pyserial version has two fixes for an Issue we found with Serial over IP multiplexers. Additionally it reduces the Serial over IP traffic considerably since the port is not reconfigured when labgrid changes the timeout (which is done inside the library a lot).

Test your installation by running:

```
$ labgrid-client --help
usage: labgrid-client [-h] [-x URL] [-c CONFIG] [-p PLACE] [-d] COMMAND ...
...
```

If the help for `labgrid-client` does not show up, open an [Issue](#). If everything was successful so far, proceed to the next section:

1.1.1 Optional Requirements

labgrid provides optional features which are not included in the default `requirements.txt`. The tested library version for each feature is included in a separate requirements file. An example for snmp support is:

```
$ pip install -r snmp-requirements.txt
```

Onewire

Onewire support requires the `libow` library with headers, installable on debian via the `libow-dev` package. Use the `onewire-requirements.txt` file to install the correct onewire library version in addition to the normal installation.

SNMP

SNMP support requires to additional packages, `pysnmp` and `pysnmpmibs`. They are included in the `snmp-requirements.txt` file.

Modbus

Modbus support requires an additional package `pyModbusTCP`. It is included in the `modbus-requirements.txt` file.

1.2 Running Your First Test

Start by copying the initial example:

```
$ mkdir ../first_test/
$ cp examples/shell/* ../first_test/
$ cd ../first_test/
```

Connect your embedded board (raspberry pi, riotboard, ...) to your computer and adjust the `port` parameter of the `RawSerialPort` resource and `username` and `password` of the `ShellDriver` driver in `local.yaml`:

```
targets:
  main:
    resources:
      RawSerialPort:
        port: "/dev/ttyUSB0"
    drivers:
      ManualPowerDriver:
        name: "example"
      SerialDriver: {}
```

(continues on next page)

(continued from previous page)

```
ShellDriver:
  prompt: 'root@\w+: [^ ]+ '
  login_prompt: ' login: '
  username: 'root'
```

You can check which device name gets assigned to your USB-Serial converter by unplugging the converter, running `dmesg -w` and plugging it back in. Boot up your board (manually) and run your first test:

```
$ pytest --lg-env local.yaml test_shell.py
```

It should return successfully, in case it does not, open an [Issue](#).

If you want to build documentation you need some more dependencies:

```
$ pip3 install -r doc-requirements.txt
```

The documentation is inside `doc/`. HTML-Documentation is build using:

```
$ cd doc/
$ make html
```

The HTML documentation is written to `doc/.build/html/`.

1.3 Setting Up the Distributed Infrastructure

The labgrid *distributed infrastructure* consists of three components:

1. *Coordinator*
2. *Exporter*
3. *Client*

The system needs at least one coordinator and exporter, these can run on the same machine. The client is used to access functionality provided by an exporter. Over the course of this tutorial we will set up a coordinator and exporter, and learn how to access the exporter via the client.

1.3.1 Coordinator

To start the coordinator, we will download the labgrid repository, create an extra virtualenv and install the dependencies via the requirements file.

```
$ git clone https://github.com/labgrid-project/labgrid
$ cd labgrid && virtualenv -p python3 crossbar_venv
$ source crossbar_venv/bin/activate
$ pip install -r crossbar-requirements.txt
$ python setup.py install
```

All necessary dependencies should be installed now, we can start the coordinator by running `crossbar start` inside of the repository.

Note: This is possible because the labgrid repository contains the crossbar configuration the coordinator in the `.` `crossbar` folder. `crossbar` is a network messaging framework for building distributed applications, which labgrid

plugs into.

Note: For long running deployments, you should copy and customize the `.crossbar/config.yaml` file for your use case. This includes setting a different `workdir` and may include changing the running port.

1.3.2 Exporter

The exporter needs a configuration file written in YAML syntax, listing the resources to be exported from the local machine. The config file contains one or more named resource groups. Each group contains one or more resource declarations and optionally a location string (see the [configuration reference](#) for details).

For example, to export a `USBSerialPort` with `ID_SERIAL_SHORT` of `ID23421JLK`, the group name *example-port* and the location *example-location*:

```
example-group:
  location: example-location
  USBSerialPort:
    ID_SERIAL_SHORT: ID23421JLK
```

Note: Use `labgrid-suggest` to generate the YAML snippets for most exportable resources.

The exporter can now be started by running:

```
$ labgrid-exporter configuration.yaml
```

Additional groups and resources can be added:

```
example-group:
  location: example-location
  USBSerialPort:
    ID_SERIAL_SHORT: ID23421JLK
  NetworkPowerPort:
    model: netio
    host: netio1
    index: 3
example-group-2:
  USBSerialPort:
    ID_SERIAL_SHORT: KSLAH2341J
```

Restart the exporter to activate the new configuration.

Attention: The *ManagedFile* will create temporary uploads in the exporters `/var/cache/labgrid` directory. This directory needs to be created manually and should allow write access for users. The `/contrib` directory in the `labgrid-project` contains a `tmpfiles` configuration example to automatically create and clean the directory. It is also highly recommended to enable `fs.protected_regular=1` and `fs.protected_fifos=1` for kernels ≥ 4.19 , to protect the users from opening files not owned by them in world writeable sticky directories. For more information see [this kernel commit](#).

1.3.3 Client

Finally we can test the client functionality, run:

```
$ labgrid-client resources
kiwi/example-group/NetworkPowerPort
kiwi/example-group/NetworkSerialPort
kiwi/example-group-2/NetworkSerialPort
```

You can see the available resources listed by the coordinator. The groups *example-group* and *example-group-2* should be available there.

To show more details on the exported resources, use `-v` (or `-vv`):

```
$ labgrid-client -v resources
Exporter 'kiwi':
  Group 'example-group' (kiwi/example-group/*):
    Resource 'NetworkPowerPort' (kiwi/example-group/NetworkPowerPort[/
↔NetworkPowerPort]):
      {'acquired': None,
       'avail': True,
       'cls': 'NetworkPowerPort',
       'params': {'host': 'netio1', 'index': 3, 'model': 'netio'}}
  ...
```

You can now add a place with:

```
$ labgrid-client --place example-place create
```

And add resources to this place (`-p` is short for `--place`):

```
$ labgrid-client -p example-place add-match */example-port/*
```

Which adds the previously defined resource from the exporter to the place. To interact with this place, it needs to be acquired first, this is done by

```
$ labgrid-client -p example-place acquire
```

Now we can connect to the serial console:

```
$ labgrid-client -p example-place console
```

See [Remote Access](#) for some more advanced features. For a complete reference have a look at the [labgrid-client\(1\)](#) man page.

1.4 udev Matching

labgrid allows the exporter (or the client-side environment) to match resources via udev rules. The udev resources become available to the test/exporter as soon as they are plugged into the computer, e.g. allowing an exporter to export all USB ports on a specific hub and making a `NetworkSerialPort` available as soon as it is plugged into one of the hub's ports. labgrid also provides a small utility called `labgrid-suggest` which will output the proper YAML formatted snippets for you. The information udev has on a device can be viewed by executing:

```
$ udevadm info /dev/ttyUSB0
...
```

(continues on next page)

(continued from previous page)

```

E: ID_MODEL_FROM_DATABASE=CP210x UART Bridge / myAVR mySmartUSB light
E: ID_MODEL_ID=ea60
E: ID_PATH=pci-0000:00:14.0-usb-0:5:1.0
E: ID_PATH_TAG=pci-0000_00_14_0-usb-0_5_1_0
E: ID_REVISION=0100
E: ID_SERIAL=Silicon_Labs_CP2102_USB_to_UART_Bridge_Controller_P-00-00682
E: ID_SERIAL_SHORT=P-00-00682
E: ID_TYPE=generic
...

```

In this case the device has an `ID_SERIAL_SHORT` key with a unique ID embedded in the USB-serial converter. The resource match configuration for this USB serial converter is:

```

USBSerialPort:
  match:
    'ID_SERIAL_SHORT': 'P-00-00682'

```

This section can now be added under the resource key in an environment configuration or under its own entry in an exporter configuration file.

As the USB bus number can change depending on the kernel driver initialization order, it is better to use the `@ID_PATH` instead of `@sys_name` for USB devices. In the default `udev` configuration, the path is not available for all USB devices, but that can be changed by creating a `udev` rules file:

```
SUBSYSTEMS=="usb", IMPORT{builtin}="path_id"
```

1.5 Using a Strategy

Strategies allow the labgrid library to automatically bring the board into a defined state, e.g. boot through the bootloader into the Linux kernel and log in to a shell. They have a few requirements:

- A driver implementing the `PowerProtocol`, if no controllable infrastructure is available a `ManualPowerDriver` can be used.
- A driver implementing the `LinuxBootProtocol`, usually a specific driver for the board's bootloader
- A driver implementing the `CommandProtocol`, usually a `ShellDriver` with a `SerialDriver` below it.

labgrid ships with two builtin strategies, `BareboxStrategy` and `UBootStrategy`. These can be used as a reference example for simple strategies, more complex tests usually require the implementation of your own strategies.

To use a strategy, add it and its dependencies to your configuration YAML, retrieve it in your test and call the `transition(status)` function.

```

>>> strategy = target.get_driver(strategy)
>>> strategy.transition("barebox")

```

An example using the `pytest` plugin is provided under `examples/strategy`.

OVERVIEW

2.1 Architecture

labgrid can be used in several ways:

- on the command line to control individual embedded systems during development (“board farm”)
- via a pytest plugin to automate testing of embedded systems
- as a python library in other programs

In the labgrid library, a controllable embedded system is represented as a *Target*. *Targets* normally have several *Resource* and *Driver* objects, which are used to store the board-specific information and to implement actions on different abstraction levels. For cases where a board needs to be transitioned to specific states (such as *off*, *in bootloader*, *in Linux shell*), a *Strategy* (a special kind of *Driver*) can be added to the *Target*.

While labgrid comes with implementations for some resources, drivers and strategies, custom implementations for these can be registered at runtime. It is expected that for complex use-cases, the user would implement and register a custom *Strategy* and possibly some higher-level *Drivers*.

2.1.1 Resources

Resources are passive and only store the information to access the corresponding part of the *Target*. Typical examples of resources are *RawSerialPort*, *NetworkPowerPort* and *AndroidFastboot*.

An important type of *Resources* are *ManagedResources*. While normal *Resources* are always considered available for use and have fixed properties (such as the `/dev/ttyUSB0` device name for a *RawSerialPort*), the *ManagedResources* are used to represent interfaces which are discoverable in some way. They can appear/disappear at runtime and have different properties each time they are discovered. The most common examples of *ManagedResources* are the various USB resources discovered using udev, such as *USBSerialPort*, *IMXUSBLoader* or *AndroidFastboot*.

2.1.2 Drivers and Protocols

A labgrid *Driver* uses one (or more) *Resources* and/or other, lower-level *Drivers* to perform a set of actions on a *Target*. For example, the *NetworkPowerDriver* uses a *NetworkPowerPort* resource to control the *Target*’s power supply. In this case, the actions are “on”, “off”, “cycle” and “get”.

As another example, the *ShellDriver* uses any driver implementing the *ConsoleProtocol* (such as a *SerialDriver*, see below). The *ConsoleProtocol* allows the *ShellDriver* to work with any specific method of accessing the board’s console (locally via USB, over the network using a console server or even an external program). At the *ConsoleProtocol* level, characters are sent to and received from the target, but they are not yet interpreted as specific commands or their output.

The *ShellDriver* implements the higher-level *CommandProtocol*, providing actions such as “run” or “run_check”. Internally, it interacts with the Linux shell on the target board. For example, it:

- waits for the login prompt
- enters user name and password
- runs the requested shell command (delimited by marker strings)
- parses the output
- retrieves the exit status

Other drivers, such as the *SSHDriver*, also implement the *CommandProtocol*. This way, higher-level code (such as a test suite), can be independent of the concrete control method on a given board.

2.1.3 Binding and Activation

When a *Target* is configured, each driver is “bound” to the resources (or other drivers) required by it. Each *Driver* class has a “bindings” attribute, which declares which *Resources* or *Protocols* it needs and under which name they should be available to the *Driver* instance. The binding resolution is handled by the *Target* during the initial configuration and results in a directed, acyclic graph of resources and drivers. During the lifetime of a *Target*, the bindings are considered static.

In most non-trivial target configurations, some drivers are mutually exclusive. For example, a *Target* may have both a *ShellDriver* and a *BareboxDriver*. Both bind to a driver implementing the *ConsoleProtocol* and provide the *CommandProtocol*. Obviously, the board cannot be in the bootloader and in Linux at the same time, which is represented in labgrid via the *BindingState* (*boundinactive*). If, during activation of a driver, any other driver in its bindings is not active, they will be activated as well.

Activating and deactivating *Drivers* is also used to handle *ManagedResources* becoming available/unavailable at runtime. If some resources bound to by the activating drivers are currently unavailable, the *Target* will wait for them to appear (with a per resource timeout). A realistic sequence of activation might look like this:

- enable power (*PowerProtocol.on*)
- activate the *IMXUSBDriver* driver on the target (this will wait for the *IMXUSBLoader* resource to be available)
- load the bootloader (*BootstrapProtocol.load*)
- activate the *AndroidFastbootDriver* driver on the target (this will wait for the *AndroidFastboot* resource to be available)
- boot the kernel (*AndroidFastbootDriver.boot*)
- activate the *ShellDriver* driver on the target (this will wait for the *USBSerialPort* resource to be available and log in)

Any *ManagedResources* which become unavailable at runtime will automatically deactivate the dependent drivers.

2.1.4 Multiple Drivers and Names

Each driver and resource can have an optional name. This parameter is required for all manual creations of drivers and resources. To manually bind to a specific driver set a binding mapping before creating the driver:

```
>>> t = Target("Test")
>>> SerialPort(t, "First")
SerialPort(target=Target(name='Test', env=None), name='First', state=<BindingState.
↳bound: 1>, avail=True, port=None, speed=115200)
```

(continues on next page)

(continued from previous page)

```

>>> SerialPort(t, "Second")
SerialPort(target=Target(name='Test', env=None), name='Second', state=<BindingState.
↳bound: 1>, avail=True, port=None, speed=115200)
>>> t.set_binding_map({"port": "Second"})
>>> sd = SerialDriver(t, "Driver")
>>> sd
SerialDriver(target=Target(name='Test', env=None), name='Driver', state=<BindingState.
↳bound: 1>, txdelay=0.0)
>>> sd.port
SerialPort(target=Target(name='Test', env=None), name='Second', state=<BindingState.
↳bound: 1>, avail=True, port=None, speed=115200)

```

2.1.5 Priorities

Each driver supports a `priorities` class variable. This allows drivers which implement the same protocol to add a priority option to each of their protocols. This way a `NetworkPowerDriver` can implement the `ResetProtocol`, but if another `ResetProtocol` driver with a higher protocol is available, it will be selected instead.

Note: Priority resolution only takes place if you have multiple drivers which implement the same protocol and you are not fetching them by name.

The target resolves the driver priority via the Method Resolution Order (MRO) of the driver's base classes. If a base class has a `priorities` dictionary which contains the requested Protocol as a key, that priority is used. Otherwise, `0` is returned as the default priority.

To set the priority of a protocol for a driver, add a class variable with the name `priorities`, e.g.

```

@attr.s
class NetworkPowerDriver(Driver, PowerProtocol, ResetProtocol):
    priorities: {PowerProtocol: -10}

```

2.1.6 Strategies

Especially when using labgrid from pytest, explicitly controlling the board's boot process can distract from the individual test case. Each `Strategy` implements the board- or project-specific actions necessary to transition from one state to another. labgrid includes the `BareboxStrategy` and the `UBootStrategy`, which can be used as-is for simple cases or serve as an example for implementing a custom strategy.

`Strategies` themselves are not activated/deactivated. Instead, they control the states of the other drivers explicitly and execute actions to bring the target into the requested state.

See the strategy example (`examples/strategy`) and the included strategies in `labgrid/strategy` for some more information.

For more information on the reasons behind labgrid's architecture, see [Design Decisions](#).

2.2 Remote Resources and Places

labgrid contains components for accessing resources which are not directly accessible on the local machine. The main parts of this are:

labgrid-coordinator (crossbar component) Clients and exporters connect to the coordinator to publish resources, manage place configuration and handle mutual exclusion.

labgrid-exporter (CLI) Exports explicitly configured local resources to the coordinator and monitors these for changes in availability or parameters.

labgrid-client (CLI) Configures places (consisting of exported resources) and allows command line access to some actions (such as power control, bootstrap, fastboot and the console).

RemotePlace (managed resource) When used in a *Target*, the RemotePlace expands to the resources configured for the named places.

These components communicate over the **WAMP** implementation **Autobahn** and the **Crossbar** WAMP router.

The following sections describe the responsibilities of each component. See *Remote Access* for usage information.

2.2.1 Coordinator

The *Coordinator* is implemented as a Crossbar component and is started by the router. It provides separate RPC methods for the exporters and clients.

The coordinator keeps a list of all resources for clients and notifies them of changes as they occur. The resource access from clients does not pass through the coordinator, but is instead done directly from client to exporter, avoiding the need to specify new interfaces for each resource type.

The coordinator also manages the registry of “places”. These are used to configure which resources belong together from the user’s point of view. A *place* can be a generic rack location, where different boards are connected to a static set of interfaces (resources such as power, network, serial console, ...).

Alternatively, a *place* can also be created for a specific board, for example when special interfaces such as GPIO buttons need to be controlled and they are not available in the generic locations.

Each place can have aliases to simplify accessing a specific board (which might be moved between generic places). It also has a comment, which is used to store a short description of the connected board.

To support selecting a specific place from a group containing similar or identical hardware, key-value tags can be added to places and used for scheduling.

Finally, a place is configured with one or more *resource matches*. A resource match pattern has the format `<exporter>/<group>/<class>/<name>`, where each component may be replaced with the wildcard `*`. The `/<name>` part is optional and can be left out to match all resources of a class.

Some commonly used match patterns are:

/1001/ Matches all resources in groups named 1001 from all exporters.

***/1001/NetworkPowerPort** Matches only the NetworkPowerPort resource in groups named 1001 from all exporters. This is useful to exclude a NetworkSerialPort in group 1001 in cases where the serial console is connected somewhere else (such as via USB on a different exporter).

exporter1/hub1-port1/* Matches all resources exported from exporter1 in the group hub1-port1. This is an easy way to match several USB resources related to the same board (such as a USB ROM-Loader interface, Android fastboot and a USB serial gadget in Linux).

To avoid conflicting access to the same resources, a place must be *acquired* before it is used and the coordinator also keeps track of which user on which client host has currently acquired the place. The resource matches are only evaluated while a place is being acquired and cannot be changed until it is *released* again.

2.2.2 Exporter

An exporters registers all its configured resources when it connects to the router and updates the resource parameters when they change (such as (dis-)connection of USB devices). Internally, the exporter uses the normal *Resource* (and *ManagedResource*) classes as the rest of labgrid. By using *ManagedResources*, availability and parameters for resources such as USB serial ports are tracked and sent to the coordinator.

For some specific resources (such as *USBSerialPorts*), the exporter uses external tools to allow access by clients (*ser2net* in the serial port case).

Resources which do not need explicit support in the exporter, are just published as declared in the configuration file. This is useful to register externally configured resources such as network power switches or serial port servers with a labgrid coordinator.

2.2.3 Client

The client requests the current lists of resources and places from the coordinator when it connects to it and then registers for change events. Most of its functionality is exposed via the *labgrid-client* CLI tool. It is also used by the *RemotePlace* resource (see below).

Besides viewing the list of *resources*, the client is used to configure and access *places* on the coordinator. For more information on using the CLI, see the manual page for *labgrid-client*.

2.2.4 RemotePlace

To use the resources configured for a *place* to control the corresponding board (whether in pytest or directly with the labgrid library), the *RemotePlace* resource should be used. When a *RemotePlace* is configured for a *Target*, it will create a client connection to the coordinator, create additional resource objects for those configured for that place and keep them updated at runtime.

The additional resource objects can be bound to by drivers as normal and the drivers do not need to be aware that they were provided by the coordinator. For resource types which do not have an existing, network-transparent protocol (such as USB ROM loaders or JTAG interfaces), the driver needs to be aware of the mapping done by the exporter.

For generic USB resources, the exporter for example maps a *AndroidFastboot* resource to a *NetworkAndroidFastboot* resource and adds a hostname property which needs to be used by the client to connect to the exporter. To avoid the need for additional remote access protocols and authentication, labgrid currently expects that the hosts are accessible via SSH and that any file names refer to a shared filesystem (such as NFS or SMB).

Note: Using SSH's session sharing (`ControlMaster auto, ControlPersist, ...`) makes *RemotePlaces* easy to use even for exporters with require passwords or more complex login procedures.

For exporters which are not directly accessible via SSH, add the host to your `.ssh/config` file, with a `ProxyCommand` when need.

2.2.5 Proxy Mechanism

Both client and exporter support the proxy mechanism which uses SSH to tunnel connections to a remote host. To enable and force proxy mode on the exporter use the `-i` or `--isolated` command line option. This indicates to clients that all connections to remote resources made available by this exporter need to be tunneled using a SSH connection. On the other hand, clients may need to access the remote infrastructure using a SSH tunnel. In this case the `LG_PROXY` environment variable needs to be set to the remote host which should tunnel the connections. The client

then forwards all network traffic through SSH, even the coordinator connection is forwarded. This means that with `LG_PROXY` and `LG_CROSSEBAR` labgrid can be used fully remotely with only a SSH connection as a requirement. One remaining issue here is the forward of UDP connections, which is currently not possible. UDP connections are used by some of the power backends in the form of SNMP.

3.1 Remote Access

As described in *Remote Resources and Places*, one of labgrid's main features is granting access to boards connected to other hosts transparent for the client. To get started with remote access, take a look at *Setting Up the Distributed Infrastructure*.

3.1.1 Place Scheduling

When sharing places between developers or with CI jobs, it soon becomes necessary to manage who can access which places. Developers often just need any place which has one of a group of identical devices, while CI jobs should wait until the necessary place is free instead of failing.

To support these use-cases, the coordinator has support for reserving places by using a tag filter and an optional priority. First, the places have to be tagged with the relevant key-value pairs:

```
$ labgrid-client -p board-1 set-tags board=imx6-foo
$ labgrid-client -p board-2 set-tags board=imx6-foo
$ labgrid-client -p board-3 set-tags board=imx8m-bar
$ labgrid-client -v places
Place 'board-1':
  tags: bar=baz, board=imx6-foo, jlu=2, rcz=1
  matches:
    rl-test/Testport1/NetworkSerialPort
...
Place 'board-2':
  tags: board=imx6-foo
  matches:
    rl-test/Testport2/NetworkSerialPort
...
Place 'board-3':
  tags: board=imx8m-bar
  matches:
    rl-test/Testport3/NetworkSerialPort
...
```

Now, if you want to access any `imx6-foo` board, you could find that all are already in use by someone else:

```
$ labgrid-client who
User      Host      Place      Changed
rcz       dude     board-1    2019-08-06 12:14:38.446201
jenkins   worker1  board-2    2019-08-06 12:52:44.762131
```

In this case, you can create a reservation. You can specify any custom tags as part of the filter, as well as `name=<place-name>` to select only a specific place (even if it has no custom tags).

```
$ labgrid-client reserve board=imx6-foo
Reservation 'SP37P5OQRU':
  owner: rettich/jlu
  token: SP37P5OQRU
  state: waiting
  filters:
    main: board=imx6-foo
  created: 2019-08-06 12:56:49.779982
  timeout: 2019-08-06 12:57:49.779983
```

As soon as any matching place becomes free, the reservation state will change from `waiting` to `allocated`. Then, you can use the reservation token prefixed by `+` to refer to the allocated place for locking and usage. While a place is allocated for a reservation, only the owner of the reservation can lock that place.

```
$ labgrid-client wait SP37P5OQRU
owner: rettich/jlu
token: SP37P5OQRU
state: waiting
filters:
  main: board=imx6-foo
created: 2019-08-06 12:56:49.779982
timeout: 2019-08-06 12:58:14.900621
...
owner: rettich/jlu
token: SP37P5OQRU
state: allocated
filters:
  main: board=imx6-foo
allocations:
  main: board-2
created: 2019-08-06 12:56:49.779982
timeout: 2019-08-06 12:58:46.145851
$ labgrid-client -p +SP37P5OQRU lock
acquired place board-2
$ labgrid-client reservations
Reservation 'SP37P5OQRU':
  owner: rettich/jlu
  token: SP37P5OQRU
  state: acquired
  filters:
    main: board=imx6-foo
  allocations:
    main: board-2
  created: 2019-08-06 12:56:49.779982
  timeout: 2019-08-06 12:59:11.840780
$ labgrid-client -p +SP37P5OQRU console
```

When using reservation in a CI job or to save some typing, the `labgrid-client reserve` command supports a `--shell` command to print code for evaluating in the shell. This sets the `LG_TOKEN` environment variable, which is then automatically used by `wait` and expanded via `-p +`.

```
$ eval `labgrid-client reserve --shell board=imx6-foo`
$ echo $LG_TOKEN
ZDMZJZNLBF
$ labgrid-client wait
```

(continues on next page)

(continued from previous page)

```

owner: rettich/jlu
token: ZDMZJZNLBF
state: waiting
filters:
  main: board=imx6-foo
created: 2019-08-06 13:05:30.987072
timeout: 2019-08-06 13:06:44.629736
...
owner: rettich/jlu
token: ZDMZJZNLBF
state: allocated
filters:
  main: board=imx6-foo
allocations:
  main: board-1
created: 2019-08-06 13:05:30.987072
timeout: 2019-08-06 13:06:56.196684
$ labgrid-client -p + lock
acquired place board-1
$ labgrid-client -p + show
Place 'board-1':
  tags: bar=baz, board=imx6-foo, jlu=2, rcz=1
  matches:
    rettich/Testport1/NetworkSerialPort
  acquired: rettich/jlu
  acquired resources:
    created: 2019-07-29 16:11:52.006269
    changed: 2019-08-06 13:06:09.667682
  reservation: ZDMZJZNLBF

```

Finally, to avoid calling the `wait` command explicitly, you can add `--wait` to the `reserve` command, so it waits until the reservation is allocated before returning.

A reservation will time out after a short time, if it is neither refreshed nor used by locked places.

3.2 Library

labgrid can be used directly as a Python library, without the infrastructure provided by the pytest plugin.

3.2.1 Creating and Configuring Targets

The labgrid library provides two ways to configure targets with resources and drivers: either create the *Target* directly or use *Environment* to load a configuration file.

Targets

At the lower level, a *Target* can be created directly:

```

>>> from labgrid import Target
>>> t = Target('example')

```

Next, the required *Resources* can be created:

```
>>> from labgrid.resource import RawSerialPort
>>> rsp = RawSerialPort(t, name=None, port='/dev/ttyUSB0')
```

Note: Since we support multiple drivers of the same type, resources and drivers have a required name attribute. If you don't require support for this functionality set the name to *None*.

Then, a *Driver* needs to be created on the *Target*:

```
>>> from labgrid.driver import SerialDriver
>>> sd = SerialDriver(t, name=None)
```

As the *SerialDriver* declares a binding to a *SerialPort*, the target binds it to the resource created above:

```
>>> sd.port
RawSerialPort(target=Target(name='example', env=None), name=None, state=<BindingState.
↳bound: 1>, avail=True, port='/dev/ttyUSB0', speed=115200)
>>> sd.port is rsp
True
```

Before the driver can be used, it needs to be activated:

```
>>> t.activate(sd)
>>> sd.write(b'test')
```

Active drivers can be accessed by class (any *Driver* or *Protocol*) using some syntactic sugar:

```
>>> target = Target('main')
>>> console = FakeConsoleDriver(target, 'console')
>>> target.activate(console)
>>> target[FakeConsoleDriver]
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
>>> target[FakeConsoleDriver, 'console']
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
```

Environments

In practice, it is often useful to separate the *Target* configuration from the code which needs to control the board (such as a test case or installation script). For this use-case, labgrid can construct targets from a configuration file in YAML format:

```
targets:
  example:
    resources:
      RawSerialPort:
        port: '/dev/ttyUSB0'
    drivers:
      SerialDriver: {}
```

To parse this configuration file, use the *Environment* class:

```
>>> from labgrid import Environment
>>> env = Environment('example-env.yaml')
```

Using `Environment.get_target`, the configured `Targets` can be retrieved by name. Without an argument, `get_target` would default to 'main':

```
>>> t = env.get_target('example')
```

To access the target's console, the correct driver object can be found by using `Target.get_driver`:

```
>>> from labgrid.protocol import ConsoleProtocol
>>> cp = t.get_driver(ConsoleProtocol)
>>> cp
SerialDriver(target=Target(name='example', env=Environment(config_file='example.yaml
↳')), name=None, state=<BindingState.active: 2>, txdelay=0.0)
>>> cp.write(b'test')
```

When using the `get_driver` method, the driver is automatically activated. The driver activation will also wait for unavailable resources when needed.

For more information on the environment configuration files and the usage of multiple drivers, see [Environment Configuration](#).

3.3 pytest Plugin

labgrid includes a `pytest` plugin to simplify writing tests which involve embedded boards. The plugin is configured by providing an environment config file (via the `-lg-env` `pytest` option, or the `LG_ENV` environment variable) and automatically creates the targets described in the environment.

Two `pytest` fixtures are provided:

env (session scope) Used to access the `Environment` object created from the configuration file. This is mostly used for defining custom fixtures at the test suite level.

target (session scope) Used to access the 'main' `Target` defined in the configuration file.

3.3.1 Command-Line Options

The `pytest` plugin also supports the verbosity argument of `pytest`:

- `-vv`: activates the step reporting feature, showing function parameters and/or results
- `-vvv`: activates debug logging

This allows debugging during the writing of tests and inspection during test runs.

Other labgrid-related `pytest` plugin options are:

--lg-env=LG_ENV (was --env-config=ENV_CONFIG) Specify a labgrid environment config file. This is equivalent to labgrid-client's `-c/--config`.

--lg-coordinator=CROSSBAR_URL Specify labgrid coordinator websocket URL. Defaults to `ws://127.0.0.1:20408/ws`. This is equivalent to labgrid-client's `-x/--crossbar`.

--lg-log=[path to logfiles] Path to store console log file. If option is specified without path the current working directory is used.

--lg-colored-steps Enables the `ColoredStepReporter`. Different events have different colors. The more colorful, the more important. In order to make less important output "blend into the background" different color schemes are available. See [LG_COLOR_SCHEME](#).

`pytest --help` shows these options in a separate *labgrid* section.

3.3.2 Environment Variables

LG_ENV

Behaves like LG_ENV for *labgrid-client*.

LG_COLOR_SCHEME

Influences the color scheme used for the Colored Step Reporter. `dark` (default) is meant for dark terminal background. `light` is optimized for light terminal background. Takes effect only when used with `--lg-colored-steps`.

LG_PROXY

Specifies a SSH proxy host to be used for port forwards to access the coordinator and network resources.

3.3.3 Simple Example

As a minimal example, we have a target connected via a USB serial converter (`/dev/ttyUSB0`) and booted to the Linux shell. The following environment config file (`shell-example.yaml`) describes how to access this board:

```
targets:
  main:
    resources:
      RawSerialPort:
        port: '/dev/ttyUSB0'
    drivers:
      SerialDriver: {}
      ShellDriver:
        prompt: 'root@\w+: [^ ]+ '
        login_prompt: ' login: '
        username: 'root'
```

We then add the following test in a file called `test_example.py`:

```
from labgrid.protocol import CommandProtocol

def test_echo(target):
    command = target.get_driver(CommandProtocol)
    result = command.run_check('echo OK')
    assert 'OK' in result
```

To run this test, we simply execute `pytest` in the same directory with the environment config:

```
$ pytest --lg-env shell-example.yaml --verbose
===== test session starts =====
platform linux -- Python 3.5.3, pytest-3.0.6, py-1.4.32, pluggy-0.4.0
...
collected 1 items

test_example.py::test_echo PASSED
===== 1 passed in 0.51 seconds =====
```

`pytest` has automatically found the test case and executed it on the target.

3.3.4 Custom Fixture Example

When writing many test cases which use the same driver, we can get rid of some common code by wrapping the *CommandProtocol* in a fixture. As pytest always executes the `confstest.py` file in the test suite directory, we can define additional fixtures there:

```
import pytest

from labgrid.protocol import CommandProtocol

@pytest.fixture(scope='session')
def command(target):
    return target.get_driver(CommandProtocol)
```

With this fixture, we can simplify the `test_example.py` file to:

```
def test_echo(command):
    result = command.run_check('echo OK')
    assert 'OK' in result
```

3.3.5 Strategy Fixture Example

When using a *Strategy* to transition the target between states, it is useful to define a function scope fixture per state in `confstest.py`:

```
import pytest

from labgrid.protocol import CommandProtocol
from labgrid.strategy import BareboxStrategy

@pytest.fixture(scope='session')
def strategy(target):
    try:
        return target.get_driver(BareboxStrategy)
    except NoDriverFoundError:
        pytest.skip("strategy not found")

@pytest.fixture(scope='function')
def switch_off(target, strategy, capsys):
    with capsys.disabled():
        strategy.transition('off')

@pytest.fixture(scope='function')
def bootloader_command(target, strategy, capsys):
    with capsys.disabled():
        strategy.transition('barebox')
    return target.get_active_driver(CommandProtocol)

@pytest.fixture(scope='function')
def shell_command(target, strategy, capsys):
    with capsys.disabled():
        strategy.transition('shell')
    return target.get_active_driver(CommandProtocol)
```

Note: The `capsys.disabled()` context manager is only needed when using the *ManualPowerDriver*, as it

will not be able to access the console otherwise. See the corresponding `pytest` documentation for details.

With the fixtures defined above, switching between bootloader and Linux shells is easy:

```
def test_barebox_initial(bootloader_command):
    stdout = bootloader_command.run_check('version')
    assert 'barebox' in '\n'.join(stdout)

def test_shell(shell_command):
    stdout = shell_command.run_check('cat /proc/version')
    assert 'Linux' in stdout[0]

def test_barebox_after_reboot(bootloader_command):
    bootloader_command.run_check('true')
```

Note: The `bootloader_command` and `shell_command` fixtures use `Target.get_active_driver` to get the currently active `CommandProtocol` driver (either `BareboxDriver` or `ShellDriver`). Activation and deactivation of drivers is handled by the `BareboxStrategy` in this example.

The `Strategy` needs additional drivers to control the target. Adapt the following environment config file (`strategy-example.yaml`) to your setup:

```
targets:
  main:
    resources:
      RawSerialPort:
        port: '/dev/ttyUSB0'
    drivers:
      ManualPowerDriver:
        name: 'example-board'
      SerialDriver: {}
      BareboxDriver:
        prompt: 'barebox@[^:]+:[^ ]+ '
      ShellDriver:
        prompt: 'root@\w+:[^ ]+ '
        login_prompt: ' login: '
        username: 'root'
      BareboxStrategy: {}
```

For this example, you should get a report similar to this:

```
$ pytest --lg-env strategy-example.yaml -v
===== test session starts =====
platform linux -- Python 3.5.3, pytest-3.0.6, py-1.4.32, pluggy-0.4.0
...
collected 3 items

test_strategy.py::test_barebox_initial
main: CYCLE the target example-board and press enter
PASSED
test_strategy.py::test_shell PASSED
test_strategy.py::test_barebox_after_reboot
main: CYCLE the target example-board and press enter
PASSED

===== 3 passed in 29.77 seconds =====
```

3.3.6 Feature Flags

labgrid includes support for feature flags on a global and target scope. Adding a `@pytest.mark.lg_feature` decorator to a test ensures it is only executed if the desired feature is available:

```
import pytest

@pytest.mark.lg_feature("camera")
def test_camera(target):
    [...]
```

Here's an example environment configuration:

```
targets:
  main:
    features:
      - camera
    resources: {}
    drivers: {}
```

This would run the above test, however the following configuration would skip the test because of the missing feature:

```
targets:
  main:
    features:
      - console
    resources: {}
    drivers: {}
```

pytest will record the missing feature as the skip reason.

For tests with multiple required features, pass them as a list to pytest:

```
import pytest

@pytest.mark.lg_feature(["camera", "console"])
def test_camera(target):
    [...]
```

Features do not have to be set per target, they can also be set via the global features key:

```
features:
  - camera
targets:
  main:
    features:
      - console
    resources: {}
    drivers: {}
```

This YAML configuration would combine both the global and the target features.

3.3.7 Test Reports

pytest-html

With the `pytest-html` plugin, the test results can be converted directly to a single-page HTML report:

```
$ pip install pytest-html
$ pytest --lg-env shell-example.yaml --html=report.html
```

JUnit XML

JUnit XML reports can be generated directly by pytest and are especially useful for use in CI systems such as Jenkins with the [JUnit Plugin](#).

They can also be converted to other formats, such as HTML with [junit2html](#) tool:

```
$ pip install junit2html
$ pytest --lg-env shell-example.yaml --junit-xml=report.xml
$ junit2html report.xml
```

labgrid adds additional xml properties to a test run, these are:

- ENV_CONFIG: Name of the configuration file
- TARGETS: List of target names
- TARGET_{NAME}_REMOTE: optional, if the target uses a RemotePlace resource, its name is recorded here
- PATH_{NAME}: optional, labgrid records the name and path
- PATH_{NAME}_GIT_COMMIT: optional, labgrid tries to record git sha1 values for every path
- IMAGE_{NAME}: optional, labgrid records the name and path to the image
- IMAGE_{NAME}_GIT_COMMIT: optional, labgrid tries to record git sha1 values for every image

3.4 Command-Line

labgrid contains some command line tools which are used for remote access to resources. See [labgrid-client](#), [labgrid-device-config](#) and [labgrid-exporter](#) for more information.

4.1 labgrid-client

4.1.1 labgrid-client interface to control boards

Author Rouven Czerwinski <r.czerwinski@pengutronix.de>

organization Labgrid-Project

Date 2017-04-15

Copyright Copyright (C) 2016-2017 Pengutronix. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

Version 0.0.1

Manual section 1

Manual group embedded testing

SYNOPSIS

```
labgrid-client --help
labgrid-client -p <place> <command>
labgrid-client places | resources
```

DESCRIPTION

Labgrid is a scalable infrastructure and test architecture for embedded (linux) systems. This is the client to control a boards status and interface with it on remote machines.

OPTIONS

- h, --help** display command line help
- p PLACE, --place PLACE** specify the place to operate on
- x, --crossbar-url** the crossbar url of the coordinator, defaults to `ws://127.0.0.1:20408/ws`
- c CONFIG, --config CONFIG** set the configuration file

- s STATE, --state STATE** set an initial state before executing a command, requires a configuration file and strategy
- d, --debug** enable debugging
- v, --verbose** increase verbosity
- P PROXY, --proxy PROXY** proxy connections over ssh

CONFIGURATION FILE

The configuration file follows the description in `labgrid-device-config(1)`.

ENVIRONMENT VARIABLES

Various labgrid-client commands use the following environment variable:

LG_PLACE

This variable can be used to specify a place without using the `-p` option, the `-p` option overrides it.

LG_TOKEN

This variable can be used to specify a reservation for the `wait` command and for the `+ place` expansion.

LG_STATE

This variable can be used to specify a state which the device transitions into before executing a command. Requires a configuration file and a Strategy specified for the device.

LG_ENV

This variable can be used to specify the configuration file to use without using the `--config` option, the `--config` option overrides it.

LG_CROSSBAR

This variable can be used to set the default crossbar URL (instead of using the `-x` option).

LG_CROSSBAR_REALM

This variable can be used to set the default crossbar realm to use instead of `realm1`.

LG_PROXY

This variable can be used to specify a SSH proxy hostname which should be used to connect to the coordinator and any resources which are normally accessed directly.

MATCHES

Match patterns are used to assign a resource to a specific place. The format is: exporter/group/cls/name, exporter is the name of the exporting machine, group is a name defined within the exporter, cls is the class of the exported resource and name is its name. Wild cards in match patterns are explicitly allowed, * matches anything.

LABGRID-CLIENT COMMANDS

`monitor` Monitor events from the coordinator

`resources (r)` List available resources

`places (p)` List available places

`who` List acquired places by user

`show` Show a place and related resources

`create` Add a new place (name supplied by `-p` parameter)

`delete` Delete an existing place

`add-alias alias` Add an alias to a place

`del-alias alias` Delete an alias from a place

`set-comment comment` Update or set the place comment

`set-tags comment` Set place tags (key=value)

`add-match match` Add one (or multiple) match pattern(s) to a place, see MATCHES

`del-match match` Delete one (or multiple) match pattern(s) from a place, see MATCHES

`add-named-match match name` Add one match pattern with a name to a place

`acquire (lock)` Acquire a place

`allow user` Allow another user to access a place

`release (unlock)` Release a place

`env` Generate a labgrid environment file for a place

`power (pw) action` Change (or get) a place's power status, where action is one of get, on, off, status

`io action` Interact with GPIO (OneWire, relays, ...) devices, where action is one of high, low, get

`console (con)` Connect to the console

`fastboot arg` Run fastboot with argument

`bootstrap filename` Start a bootloader

`sd-mux action` Switch USB SD Muxer, where action is one of dut (device-under-test), host, off

`ssh` Connect via SSH

`scp` Transfer file via scp (use `'dir/file'` for the remote side)

`rsync` Transfer files via rsync (use `'dir/file'` for the remote side)

`sshfs` Mount a remote path via sshfs

`telnet` Connect via telnet

`video` Start a video stream

`tmc` command Control a USB TMC device
`write-image` Write images onto block devices (USBSDMux, USB Sticks, ...)
`reserve filter` Create a reservation
`cancel-reservation token` Cancel a pending reservation
`wait token` Wait for a reservation to be allocated
`reservations` List current reservations

ADDING NAMED RESOURCES

If a target contains multiple Resources of the same type, named matches need to be used to address the individual resources. In addition to the *match* taken by *add-match*, *add-named-match* also takes a name for the resource. The other client commands support the name as an optional parameter and will inform the user that a name is required if multiple resources are found, but no name is given.

EXAMPLES

To retrieve a list of places run:

```
$ labgrid-client places
```

To access a place, it needs to be acquired first, this can be done by running the `acquire` command and passing the placename as a `-p` parameter:

```
$ labgrid-client -p <placename> acquire
```

Open a console to the acquired place:

```
$ labgrid-client -p <placename> console
```

Add all resources with the group “example-group” to the place example-place:

```
$ labgrid-client -p example-place add-match */example-group/*/*
```

SEE ALSO

`labgrid-exporter(1)`

4.2 labgrid-device-config

4.2.1 labgrid test configuration files

Author Rouven Czerwinski <r.czerwinski@pengutronix.de>

organization Labgrid-Project

Date 2017-04-15

Copyright Copyright (C) 2016-2017 Pengutronix. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

Version 0.0.1

Manual section 1

Manual group embedded testing

SYNOPSIS

*.yaml

DESCRIPTION

To integrate a device into a labgrid test, labgrid needs to have a description of the device and how to access it.

This manual page is divided into section, each describing one top-level yaml key.

TARGETS

The `targets:` top key configures a target, it's `drivers` and `resources`.

The top level key is the name of the target, it needs both a `resources` and `drivers` subkey. The order of instantiated `resources` and `drivers` is important, since they are parsed as an ordered dictionary and may depend on a previous driver.

For a list of available resources and drivers refer to <https://labgrid.readthedocs.io/en/latest/configuration.html>.

OPTIONS

The `options:` top key configures various options such as the `crossbar_url`.

OPTIONS KEYS

`crossbar_url` takes as parameter the URL of the crossbar (coordinator) to connect to. Defaults to `'ws://127.0.0.1:20408'`.

`crossbar_realm` takes as parameter the realm of the crossbar (coordinator) to connect to. Defaults to `'realm1'`.

IMAGES

The `images:` top key provides paths to access preconfigured images to flash onto the board. The image paths can be either relative to the YAML file or absolute.

IMAGE KEYS

The subkeys consist of image names as keys and their paths as values. The corresponding name can than be used with the appropriate tool found under TOOLS.

IMAGE EXAMPLE

Two configured images, one for the root filesystem, one for the bootloader:

```
images:
  root: "platform-v7a/images/root.img"
  boot: "platform-v7a/images/barebox.img"
```

TOOLS

The `tools:` top key provides paths to binaries such as fastboot.

TOOLS KEYS

fastboot Path to the fastboot binary

mxs-usb-loader Path to the mxs-usb-loader binary

imx-usb-loader Path to the imx-usb-loader binary

TOOLS EXAMPLE

Configure the tool path for `imx-usb-loader`:

```
tools:
  imx-usb-loader: "/opt/labgrid-helper/imx-usb-loader"
```

IMPORTS

The `imports` key is a list of files or python modules which are imported by the environment after loading the configuration. Paths relative to the configuration file are also supported. This is useful to load drivers and strategy which are contained in your testsuite, since the import is done before instantiating the targets.

IMPORTS EXAMPLE

Import a local `myfunctions.py` file:

```
imports:
  - myfunctions.py
```

EXAMPLES

A sample configuration with one `main` target, accessible via SerialPort `/dev/ttyUSB0`, allowing usage of the `ShellDriver`:

```
targets:
  main:
    resources:
      RawSerialPort:
```

(continues on next page)

(continued from previous page)

```

    port: "/dev/ttyUSB0"
drivers:
  SerialDriver: {}
  ShellDriver:
    prompt: 'root@\w+: [^ ]+ '
    login_prompt: ' login: '
    username: 'root'

```

A sample configuration with *RemotePlace*, using the tools configuration and importing the local *mystrategy.py* file. The *MyStrategy* strategy is contained in the loaded local python file:

```

targets:
  main:
    resources:
      RemotePlace:
        name: test-place
    drivers:
      SerialDriver: {}
      ShellDriver:
        prompt: 'root@\w+: [^ ]+ '
        login_prompt: ' login: '
        username: 'root'
      MyStrategy: {}
      IMXUSBLoader: {}
tools:
  imx-usb-loader: "/opt/lg-tools/imx-usb-loader"
imports:
  - mystrategy.py

```

SEE ALSO

labgrid-client(1), labgrid-exporter(1)

4.3 labgrid-exporter

4.3.1 labgrid-exporter interface to control boards

Author Rouven Czerwinski <r.czerwinski@pengutronix.de>

organization Labgrid-Project

Date 2017-04-15

Copyright Copyright (C) 2016-2017 Pengutronix. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

Version 0.0.1

Manual section 1

Manual group embedded testing

SYNOPSIS

```
labgrid-exporter --help
labgrid-exporter *.yaml
```

DESCRIPTION

Labgrid is a scalable infrastructure and test architecture for embedded (linux) systems.

This is the man page for the exporter, supporting the export of serial ports, USB devices and various other controllers.

OPTIONS

-h, --help	display command line help
-x, --crossbar-url	the crossbar url of the coordinator
-i, --isolated	enable isolated mode (always request SSH forwards)
-n, --name	the public name of the exporter
--hostname	hostname (or IP) published for accessing resources
-d, --debug	enable debug mode

-i / --isolated

This option enables isolated mode, which causes all exported resources being marked as requiring SSH connection forwarding. Isolated mode is useful when resources (such as NetworkSerialPorts) are not directly accessible from the clients. The client will then use SSH to create a port forward to the resource when needed.

-n / --name

This option is used to configure the exporter name under which resources are registered with the coordinator, which is useful when running multiple exporters on the same host. It defaults to the system hostname.

--hostname

For resources like USBSerialPort, USBGenericExport or USBSigrokExport, the exporter needs to provide a host name to set the exported value of the “host” key. If the system hostname is not resolvable via DNS, this option can be used to override this default with another name (or an IP address).

CONFIGURATION

The exporter uses a YAML configuration file which defines groups of related resources. See <https://labgrid.readthedocs.io/en/latest/configuration.html#exporter-configuration> for more information.

ENVIRONMENT VARIABLES

The following environment variable can be used to configure labgrid-exporter.

LG_CROSSBAR

This variable can be used to set the default crossbar URL (instead of using the `-x` option).

LG_CROSSBAR_REALM

This variable can be used to set the default crossbar realm to use instead of `realm1`.

EXAMPLES

Start the exporter with the configuration file *my-config.yaml*:

```
$ labgrid-exporter my-config.yaml
```

Same as above, but with name `myname`:

```
$ labgrid-exporter -n myname my-config.yaml
```

SEE ALSO

`labgrid-client(1)`, `labgrid-device-config(1)`

CONFIGURATION

This chapter describes the individual drivers and resources used in a device configuration. Drivers can depend on resources or other drivers, whereas resources have no dependencies.

Here the resource *RawSerialPort* provides the information for the *SerialDriver*, which in turn is needed by the *ShellDriver*. Driver dependency resolution is done by searching for the driver which implements the dependent protocol, all drivers implement one or more protocols.

5.1 Resources

5.1.1 Serial Ports

RawSerialPort

A *RawSerialPort* is a serial port which is identified via the device path on the local computer. Take note that re-plugging USB serial converters can result in a different enumeration order.

```
RawSerialPort:  
  port: /dev/ttyUSB0  
  speed: 115200
```

The example would access the serial port `/dev/ttyUSB0` on the local computer with a baud rate of 115200.

- port (str): path to the serial device
- speed (int): desired baud rate

Used by:

- *SerialDriver*

NetworkSerialPort

A *NetworkSerialPort* describes a serial port which is exported over the network, usually using RFC2217 or raw tcp.

```
NetworkSerialPort:  
  host: remote.example.computer  
  port: 53867  
  speed: 115200
```

The example would access the serial port on computer `remote.example.computer` via port 53867 and use a baud rate of 115200 with the RFC2217 protocol.

- `host` (str): hostname of the remote host
- `port` (str): TCP port on the remote host to connect to
- `speed` (int): baud rate of the serial port
- `protocol` (str): optional, protocol used for connection: `raw` or `rfc2217`

Used by:

- *SerialDriver*

USBSerialPort

A `USBSerialPort` describes a serial port which is connected via USB and is identified by matching udev properties. This allows identification through hot-plugging or rebooting.

```
USBSerialPort:
match:
  'ID_SERIAL_SHORT': 'P-00-00682'
speed: 115200
```

The example would search for a USB serial converter with the key `ID_SERIAL_SHORT` and the value `P-00-00682` and use it with a baud rate of 115200.

- `match` (str): key and value for a udev match, see *udev Matching*
- `speed` (int): baud rate of the serial port

Used by:

- *SerialDriver*

5.1.2 Power Ports

NetworkPowerPort

A `NetworkPowerPort` describes a remotely switchable power port.

```
NetworkPowerPort:
model: gude
host: powerswitch.example.computer
index: 0
```

The example describes port 0 on the remote power switch `powerswitch.example.computer`, which is a `gude` model.

- `model` (str): model of the power switch
- `host` (str): hostname of the power switch
- `index` (int): number of the port to switch

Used by:

- *NetworkPowerDriver*

PDUDaemonPort

A PDUDaemonPort describes a PDU port accessible via [PDUDaemon](#). As one PDUDaemon instance can control many PDUs, the instance name from the PDUDaemon configuration file needs to be specified.

```
PDUDaemonPort:
  host: pduserver
  pdu: apc-snmpv3-noauth
  index: 1
```

The example describes port 1 on the PDU configured as *apc-snmpv3-noauth*, with PDUDaemon running on the host *pduserver*.

- host (str): name of the host running the PDUDaemon
- pdu (str): name of the PDU in the configuration file
- index (int): index of the power port on the PDU

Used by:

- *PDUDaemonDriver*

YKUSHPowerPort

A YKUSHPowerPort describes a YEPKIT YKUSH USB (HID) switchable USB hub.

```
YKUSHPowerPort:
  serial: YK12345
  index: 1
```

The example describes port 1 on the YKUSH USB hub with the serial “YK12345”. (use “*pykush -l*” to get your serial...)

- serial (str): serial number of the YKUSH hub
- index (int): number of the port to switch

Used by:

- *YKUSHPowerDriver*

USBPowerPort

A USBPowerPort describes a generic switchable USB hub as supported by [uhubctl](#).

```
USBPowerPort:
  match:
    ID_PATH: pci-0000:00:14.0-usb-0:2:1.0
  index: 1
```

The example describes port 1 on the hub with the ID_PATH “*pci-0000:00:14.0-usb-0:2:1.0*”. (use *udevadm info /sys/bus/usb/devices/...* to find the ID_PATH value)

- index (int): number of the port to switch

Used by:

- *USBPowerDriver*

5.1.3 ModbusTCPCoil

A ModbusTCPCoil describes a coil accessible via ModbusTCP.

```
ModbusTCPCoil:  
  host: "192.168.23.42"  
  coil: 1
```

The example describes the coil with the address 1 on the ModbusTCP device *192.168.23.42*.

- host (str): hostname of the Modbus TCP server e.g. “192.168.23.42:502”
- coil (int): index of the coil e.g. 3
- invert (bool): optional, whether the logic level is be inverted (active-low)

Used by:

- *ModbusCoilDriver*

5.1.4 NetworkService

A NetworkService describes a remote SSH connection.

```
NetworkService:  
  address: example.computer  
  username: root
```

The example describes a remote SSH connection to the computer *example.computer* with the username *root*. Set the optional password property to make SSH login with a password instead of the key file (needs *sshpass* to be installed)

When used with *labgrid-exporter*, the address can contain a device scope suffix (such as *%eth1*), which is especially useful with overlapping address ranges or link-local IPv6 addresses. In that case, the SSH connection will be proxied via the exporter, using *socat* and the *labgrid-bound-connect* sudo helper. These and the sudo configuration needs to be prepared by the administrator.

- address (str): hostname of the remote system
- username (str): username used by SSH
- password (str): password used by SSH
- port (int): optional, port used by SSH (default 22)

Used by:

- *SSHDriver*

5.1.5 OneWirePIO

A OneWirePIO describes a onewire programmable I/O pin.

```
OneWirePIO:  
  host: example.computer  
  path: /29.7D6913000000/PIO.0  
  invert: false
```

The example describes a *PIO.0* at device address *29.7D6913000000* via the onewire server on *example.computer*.

- `host` (str): hostname of the remote system running the onewire server
- `path` (str): path on the server to the programmable I/O pin
- `invert` (bool): optional, whether the logic level is be inverted (active-low)

Used by:

- *OneWirePIODriver*

5.1.6 USBMassStorage

A USBMassStorage resource describes a USB memory stick or similar device.

```
USBMassStorage:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0-scsi-0:0:0:3'
```

- `match` (str): key and value for a udev match, see *udev Matching*

Used by:

- *USBStorageDriver*

5.1.7 NetworkUSBMassStorage

A NetworkUSBMassStorage resource describes a USB memory stick or similar device available on a remote computer.

Used by:

- *USBStorageDriver*

The NetworkUSBMassStorage can be used in test cases by calling the *write_image()*, and *get_size()* functions.

5.1.8 SigrokDevice

A SigrokDevice resource describes a sigrok device. To select a specific device from all connected supported devices use the *SigrokUSBDevice*.

```
SigrokUSBDevice:
  driver: fx2lafw
  channel: "D0=CLK,D1=DATA"
```

- `driver` (str): name of the sigrok driver to use
- `channel` (str): optional, channel mapping as described in the sigrok-cli man page

Used by:

- *SigrokDriver*

5.1.9 IMXUSBLoader

An IMXUSBLoader resource describes a USB device in the imx loader state.

```
IMXUSBLoader:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *IMXUSBDriver*

5.1.10 MXSUSBLoader

An MXSUSBLoader resource describes a USB device in the mxs loader state.

```
MXSUSBLoader:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *MXSUSBDriver*

5.1.11 RKUSBLoader

An RKUSBLoader resource describes a USB device in the rockchip loader state.

```
RKUSBLoader:
  match:
    'sys_name': '1-3'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *RKUSBDriver*

5.1.12 NetworkMXSUSBLoader

A NetworkMXSUSBLoader describes an *MXSUSBLoader* available on a remote computer.

5.1.13 NetworkIMXUSBLoader

A NetworkIMXUSBLoader describes an *IMXUSBLoader* available on a remote computer.

5.1.14 NetworkRKUSBLoader

A NetworkRKUSBLoader describes an *RKUSBLoader* available on a remote computer.

5.1.15 AndroidFastboot

An AndroidFastboot resource describes a USB device in the fastboot state.

```
AndroidFastboot:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *AndroidFastbootDriver*

5.1.16 USBEthernetInterface

A USBEthernetInterface resource describes a USB ethernet adapter.

```
USBEthernetInterface:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see *udev Matching*

5.1.17 AlteraUSBBlaster

An AlteraUSBBlaster resource describes an Altera USB blaster.

```
AlteraUSBBlaster:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (dict): key and value for a udev match, see *udev Matching*

Used by:

- *OpenOCDDriver*
- *QuartusHPSDriver*

5.1.18 SNMPEthernetPort

A SNMPEthernetPort resource describes a port on an Ethernet switch, which is accessible via SNMP.

```
SNMPEthernetPort:
  switch: "switch-012"
  interface: "17"
```

- switch (str): host name of the Ethernet switch
- interface (str): interface name

5.1.19 SigrokUSBDevice

A SigrokUSBDevice resource describes a sigrok USB device.

```
SigrokUSBDevice:
  driver: fx2lafw
  channel: "D0=CLK,D1=DATA"
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- driver (str): name of the sigrok driver to use

- channel (str): optional, channel mapping as described in the sigrok-cli man page
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *SigrokDriver*

5.1.20 NetworkSigrokUSBDevice

A NetworkSigrokUSBDevice resource describes a sigrok USB device connected to a host which is exported over the network. The SigrokDriver will access it via SSH.

```
NetworkSigrokUSBDevice:
  driver: fx2lafw
  channel: "D0=CLK,D1=DATA"
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
  host: remote.example.computer
```

- driver (str): name of the sigrok driver to use
- channel (str): optional, channel mapping as described in the sigrok-cli man page
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *SigrokDriver*

5.1.21 SigrokUSBSerialDevice

A SigrokUSBSerialDevice resource describes a sigrok device which communicates of a USB serial port instead of being a USB device itself (see *SigrokUSBDevice* for that case).

```
SigrokUSBSerialDevice:
  driver: manson-hcs-3xxx
  match:
    '@ID_SERIAL_SHORT': P-00-02389
```

- driver (str): name of the sigrok driver to use

Used by:

- *SigrokPowerDriver*

5.1.22 USBSDMuxDevice

A *USBSDMuxDevice* resource describes a Pengutronix USB-SD-Mux device.

```
USBSDMuxDevice:
  match:
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *USBSDMUXDriver*

5.1.23 NetworkUSBSDMuxDevice

A *NetworkUSBSDMuxDevice* resource describes a *USBSDMuxDevice* available on a remote computer.

5.1.24 USBVideo

A *USBVideo* resource describes a USB video camera which is supported by a Video4Linux2 kernel driver.

```
USBVideo:
  match:
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

Used by:

- *USBVideoDriver*

5.1.25 NetworkUSBVideo

A *NetworkUSBVideo* resource describes a *USBVideo* resource available on a remote computer.

5.1.26 USBTMC

A *USBTMC* resource describes an oscilloscope connected via the USB TMC protocol. The low-level communication is handled by the `usbtmc` kernel driver.

```
USBTMC:
  match:
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

A udev rules file may be needed to allow access for non-root users:

```
DRIVERS=="usbtmc", MODE="0660", GROUP="plugdev"
```

Used by:

- *USBTMCDriver*

5.1.27 NetworkUSBTMC

A *NetworkUSBTMC* resource describes a *USBTMC* resource available on a remote computer.

5.1.28 Flashrom

A *Flashrom* resource is used to configure the parameters to a local installed flashrom instance. It is assumed that flashrom is installed on the host and the executable is configured in:

```
tools:
  flashrom: '/usr/sbin/flashrom'
```

The resource must configure which programmer to use and the parameters to the programmer. The programmer parameter is passed directly to the flashrom bin hence `man(8) flashrom` can be used for reference. Below an example where the local spidev is used.

```
Flashrom:
  programmer: 'linux_spi:dev=/dev/spidev0.1,spispeed=30000'
```

Used by:

- *FlashromDriver*

5.1.29 NetworkFlashRom

A NetworkFlashrom describes an *Flashrom* available on a remote computer.

5.1.30 XenaManager

A XenaManager resource describes a Xena Manager instance which is the instance the *XenaDriver* must connect to in order to configure a Xena chassis.

```
XenaManager:
  hostname: "example.computer"
```

Used by:

- *XenaDriver*

5.1.31 RemotePlace

A RemotePlace describes a set of resources attached to a labgrid remote place.

```
RemotePlace:
  name: example-place
```

The example describes the remote place *example-place*. It will connect to the labgrid remote coordinator, wait until the resources become available and expose them to the internal environment.

- name (str): name or pattern of the remote place

Used by:

- potentially all drivers

5.1.32 DockerDaemon

A DockerDaemon describes where to contact a docker daemon process. DockerDaemon also participates in managing *NetworkService* instances created through interaction with that daemon.

```
DockerDaemon:
  docker_daemon_url: 'unix://var/run/docker.sock'
```

The example describes a docker daemon accessible via the `/var/run/docker.sock` unix socket. When used by a *DockerDriver*, the *DockerDriver* will first create a docker container which the *DockerDaemon* resource will subsequently use to create one/more *NetworkService* instances - as specified by *DockerDriver* configuration. Each *NetworkService* instance corresponds to a network service running inside the container.

Moreover, *DockerDaemon* will remove any hanging containers if *DockerDaemon* is used several times in a row - as is the case when executing test suites. Normally *DockerDriver* - when deactivated - cleans up the created docker

container; programming errors, keyboard interrupts or unix kill signals may lead to hanging containers, however; therefore auto-cleanup is important.

- `docker_daemon_url` (str): The url of the daemon to use for this target.

Used by:

- *DockerDriver*

5.1.33 udev Matching

udev matching allows labgrid to identify resources via their udev properties. Any udev property key and value can be used, path matching USB devices is allowed as well. This allows exporting a specific USB hub port or the correct identification of a USB serial converter across computers.

The initial matching and monitoring for udev events is handled by the *UdevManager* class. This manager is automatically created when a resource derived from *USBResource* (such as *USBSerialPort*, *IMXUSBLoader* or *AndroidFastboot*) is instantiated.

To identify the kernel device which corresponds to a configured *USBResource*, each existing (and subsequently added) kernel device is matched against the configured resources. This is based on a list of *match entries* which must all be tested successfully against the potential kernel device. Match entries starting with an @ are checked against the device's parents instead of itself; here one matching parent causes the check to be successful.

A given *USBResource* class has builtin match entries that are checked first, for example that the `SUBSYSTEM` is `tty` as in the case of the *USBSerialPort*. Only if these succeed, match entries provided by the user for the resource instance are considered.

In addition to the properties reported by `udevadm monitor --udev --property`, elements of the `ATTR(S){}` dictionary (as shown by `udevadm info <device> -a`) are useable as match keys. Finally `sys_name` allows matching against the name of the directory in `sysfs`. All match entries must succeed for the device to be accepted.

The following examples show how to use the udev matches for some common use-cases.

Matching a USB Serial Converter on a Hub Port

This will match any USB serial converter connected below the hub port 1.2.5.5 on bus 1. The `sys_name` value corresponds to the hierarchy of buses and ports as shown with `lsusb -t` and is also usually displayed in the kernel log messages when new devices are detected.

```
USBSerialPort:
  match:
    '@sys_name': '1-1.2.5.5'
```

Note the @ in the `@sys_name` match, which applies this match to the device's parents instead of directly to itself. This is necessary for the *USBSerialPort* because we actually want to find the `ttyUSB?` device below the USB serial converter device.

Matching an Android Fastboot Device

In this case, we want to match the USB device on that port directly, so we don't use a parent match.

```
AndroidFastboot:
  match:
    'sys_name': '1-1.2.3'
```

Matching a Specific UART in a Dual-Port Adapter

On this board, the serial console is connected to the second port of an on-board dual-port USB-UART. The board itself is connected to the bus 3 and port path 10.2.2.2. The correct value can be shown by running `udevadm info /dev/ttyUSB9` in our case:

```
$ udevadm info /dev/ttyUSB9
P: /devices/pci0000:00/0000:00:14.0/usb3/3-10/3-10.2/3-10.2.2/3-10.2.2.2/3-10.2.2.2:1.
↳1/ttyUSB9/tty/ttyUSB9
N: ttyUSB9
S: serial/by-id/usb-FTDI_Dual_RS232-HS-if01-port0
S: serial/by-path/pci-0000:00:14.0-usb-0:10.2.2.2:1.1-port0
E: DEVLINKS=/dev/serial/by-id/usb-FTDI_Dual_RS232-HS-if01-port0 /dev/serial/by-path/
↳pci-0000:00:14.0-usb-0:10.2.2.2:1.1-port0
E: DEVNAME=/dev/ttyUSB9
E: DEVPATH=/devices/pci0000:00/0000:00:14.0/usb3/3-10/3-10.2/3-10.2.2/3-10.2.2.2/3-10.
↳2.2.2:1.1/ttyUSB9/tty/ttyUSB9
E: ID_BUS=usb
E: ID_MODEL=Dual_RS232-HS
E: ID_MODEL_ENC=Dual\x20RS232-HS
E: ID_MODEL_FROM_DATABASE=FT2232C Dual USB-UART/FIFO IC
E: ID_MODEL_ID=6010
E: ID_PATH=pci-0000:00:14.0-usb-0:10.2.2.2:1.1
E: ID_PATH_TAG=pci-0000_00_14_0-usb-0_10_2_2_2_1_1
E: ID_REVISION=0700
E: ID_SERIAL=FTDI_Dual_RS232-HS
E: ID_TYPE=generic
E: ID_USB_DRIVER=ftdi_sio
E: ID_USB_INTERFACES=:fffff:
E: ID_USB_INTERFACE_NUM=01
E: ID_VENDOR=FTDI
E: ID_VENDOR_ENC=FTDI
E: ID_VENDOR_FROM_DATABASE=Future Technology Devices International, Ltd
E: ID_VENDOR_ID=0403
E: MAJOR=188
E: MINOR=9
E: SUBSYSTEM=tty
E: TAGS=:systemd:
E: USEC_INITIALIZED=9129609697
```

We use the `ID_USB_INTERFACE_NUM` to distinguish between the two ports:

```
USBSerialPort:
  match:
    '@sys_name': '3-10.2.2.2'
    'ID_USB_INTERFACE_NUM': '01'
```

Matching a USB UART by Serial Number

Most of the USB serial converters in our lab have been programmed with unique serial numbers. This makes it easy to always match the same one even if the USB topology changes or a board has been moved between host systems.

```
USBSerialPort:
  match:
    'ID_SERIAL_SHORT': 'P-00-00679'
```

To check if your device has a serial number, you can use `udevadm info`:

```
$ udevadm info /dev/ttyUSB5 | grep SERIAL_SHORT
E: ID_SERIAL_SHORT=P-00-00679
```

5.2 Drivers

5.2.1 SerialDriver

A SerialDriver connects to a serial port. It requires one of the serial port resources.

Binds to:

port:

- *NetworkSerialPort*
- *RawSerialPort*
- *USBSerialPort*

```
SerialDriver:
txdelay: 0.05
```

Implements:

- *ConsoleProtocol*

Arguments:

- txdelay (float): time in seconds to wait before sending each byte

5.2.2 ShellDriver

A ShellDriver binds on top of a *ConsoleProtocol* and is designed to interact with a login prompt and a Linux shell.

Binds to:

console:

- *ConsoleProtocol*

Implements:

- *CommandProtocol*

```
ShellDriver:
prompt: 'root@\w+: [^ ]+ '
login_prompt: ' login: '
username: 'root'
```

Arguments:

- prompt (regex): shell prompt to match after logging in
- login_prompt (regex): match for the login prompt
- username (str): username to use during login
- password (str): password to use during login
- keyfile (str): optional keyfile to upload after login, making the *SSHDriver* usable

- `login_timeout` (int): optional, timeout for login prompt detection in seconds (default 60)
- `await_login_timeout` (int): optional, time in seconds of silence that needs to pass before sending a newline to device.
- `console_ready` (regex): optional, pattern used by the kernel to inform the user that a console can be activated by pressing enter.

5.2.3 SSHDriver

A `SSHDriver` requires a `NetworkService` resource and allows the execution of commands and file upload via network. It uses SSH's `ServerAliveInterval` option to detect failed connections.

If a shared SSH connection to the target is already open, it will reuse it when running commands. In that case, `ServerAliveInterval` should be set outside of labgrid, as it cannot be enabled for an existing connection.

Binds to:

networkservice:

- `NetworkService`

Implements:

- `CommandProtocol`
- `FileTransferProtocol`

```
SSHDriver:
  keyfile: example.key
```

Arguments:

- `keyfile` (str): filename of private key to login into the remote system (only used if password is not set)
- **`stderr_merge` (bool): set to True to make `run()` return `stderr` merged with `stdout`, and an empty list as second element.**

5.2.4 UBootDriver

A `UBootDriver` interfaces with a U-Boot bootloader via a `ConsoleProtocol`.

Binds to:

console:

- `ConsoleProtocol`

Implements:

- `CommandProtocol`

```
UBootDriver:
  prompt: 'Uboot> '
```

Arguments:

- `prompt` (regex): U-Boot prompt to match
- `autoboot` (regex, default="stop autoboot"): autoboot message to match
- `password` (str): optional, U-Boot unlock password

- `interrupt` (str, default=`“\n”`): string to interrupt autoboot (use `“\x03”` for CTRL-C)
- `init_commands` (tuple): tuple of commands to execute after matching the prompt
- `password_prompt` (str): optional, regex to match the U-Boot password prompt, defaults to `“enter Password:”`
- `boot_expression` (str): optional, regex to match the U-Boot start string defaults to `“U-Boot 20d+”`
- `bootstring` (str): optional, regex to match on Linux Kernel boot
- `boot_command` (str): optional, boot command for booting target (default `‘run bootcmd’`)
- `login_timeout` (int): optional, timeout for login prompt detection in seconds (default 60)

5.2.5 SmallUBootDriver

A SmallUBootDriver interfaces with stripped-down U-Boot variants that are sometimes used in cheap consumer electronics.

SmallUBootDriver is meant as a driver for U-Boot with only little functionality compared to a standard U-Boot. Especially it copes with the following limitations:

- The U-Boot does not have a real password-prompt but can be activated by entering a `“secret”` after a message was displayed.
- The command line does not have a built-in echo command. Thus this driver uses `‘Unknown Command’` messages as marker before and after the output of a command.
- Since there is no echo we cannot return the exit code of the command. Commands will always return 0 unless the command was not found.

This driver needs the following features activated in U-Boot to work:

- The U-Boot must not have a real password prompt. Instead it must be keyword activated. For example it should be activated by a dialog like the following:
 - U-Boot: `“Autobooting in 1s...”`
 - labgrid: `“secret”`
 - U-Boot: `<switching to console>`
- The U-Boot must be able to parse multiple commands in a single line separated by `“;”`.
- The U-Boot must support the `“bootm”` command to boot from a memory location.

Binds to:

- *ConsoleProtocol* (see *SerialDriver*)

Implements:

- *CommandProtocol*

```
SmallUBootDriver:
prompt: 'ap143-2\.0> '
boot_expression: 'Autobooting in 1 seconds'
boot_secret: "tpl"
```

Arguments:

- `prompt` (regex): U-Boot prompt to match
- `init_commands` (tuple): tuple of commands to execute after matching the prompt

- `boot_expression` (str): optional, regex to match the U-Boot start string defaults to “U-Boot 20d+”
- `login_timeout` (str): optional, timeout for the password/login detection

5.2.6 BareboxDriver

A `BareboxDriver` interfaces with a barebox bootloader via a *ConsoleProtocol*.

Binds to:

console:

- *ConsoleProtocol*

Implements:

- *CommandProtocol*

BareboxDriver:

```
prompt: 'barebox@[^:]+:[^ ]+ '
```

Arguments:

- `prompt` (regex): barebox prompt to match
- `autoboot` (regex, default=”stop autoboot”): autoboot message to match
- `interrupt` (str, default=”\n”): string to interrupt autoboot (use “\x03” for CTRL-C)
- `bootstring` (regex, default=”Linux version d”): succesfully jumped into the kernel
- `password` (str): optional, password to use for access to the shell
- `login_timeout` (int): optional, timeout for access to the shell

5.2.7 ExternalConsoleDriver

An `ExternalConsoleDriver` implements the *ConsoleProtocol* on top of a command executed on the local computer.

Implements:

- *ConsoleProtocol*

ExternalConsoleDriver:

```
cmd: 'microcom /dev/ttyUSB2'  
txdelay: 0.05
```

Arguments:

- `cmd` (str): command to execute and then bind to.
- `txdelay` (float): time in seconds to wait before sending each byte

5.2.8 AndroidFastbootDriver

An `AndroidFastbootDriver` allows the upload of images to a device in the USB fastboot state.

Binds to:

fastboot:

- *AndroidFastboot*

Implements:

- None (yet)

AndroidFastbootDriver:

```
image: mylocal.image
sparse_size: 100M
```

Arguments:

- image (str): filename of the image to upload to the device
- sparse_size (str): optional, sparse files greater than given size (see fastboot manpage -S option for allowed size suffixes). The default is the same as the fastboot default, which is computed after querying the target's `max-download-size` variable.

5.2.9 OpenOCDDriver

An OpenOCDDriver controls OpenOCD to bootstrap a target with a bootloader.

Note that OpenOCD supports specifying USB paths since [a1b308ab](#) which is not part of a release yet. The OpenOCD-Driver passes the resource's USB path. Depending on which OpenOCD version is installed it is either used correctly or a warning is displayed and the first resource seen is used, which might be the wrong USB device. Consider updating your OpenOCD version when using multiple USB Blasters.

Binds to:**interface:**

- *AlteraUSBBlaster*

Implements:

- *BootstrapProtocol*

Arguments:

- config (str): OpenOCD configuration file
- search (str): include search path for scripts
- image (str): filename of image to bootstrap onto the device

5.2.10 QuartusHPSDriver

A QuartusHPSDriver controls the “Quartus Prime Programmer and Tools” to flash a target's QSPI.

Binds to:

- *AlteraUSBBlaster*

Implements:

- None

Arguments:

- image (str): filename of image to flash QSPI

The driver can be used in test cases by calling the *flash* function. An example strategy is included in labgrid.

5.2.11 ManualPowerDriver

A `ManualPowerDriver` requires the user to control the target power states. This is required if a strategy is used with the target, but no automatic power control is available.

Implements:

- `PowerProtocol`

```
ManualPowerDriver:
  name: 'example-board'
```

Arguments:

- name (str): name of the driver (will be displayed during interaction)

5.2.12 ExternalPowerDriver

An `ExternalPowerDriver` is used to control a target power state via an external command.

Implements:

- `PowerProtocol`

```
ExternalPowerDriver:
  cmd_on: example_command on
  cmd_off: example_command off
  cmd_cycle: example_command cycle
```

Arguments:

- cmd_on (str): command to turn power to the board on
- cmd_off (str): command to turn power to the board off
- cycle (str): optional command to switch the board off and on
- delay (float): configurable delay in seconds between off and on if cycle is not set

5.2.13 NetworkPowerDriver

A `NetworkPowerDriver` controls a `NetworkPowerPort`, allowing control of the target power state without user interaction.

Binds to:

port:

- `NetworkPowerPort`

Implements:

- `PowerProtocol`

```
NetworkPowerDriver:
  delay: 5.0
```

Arguments:

- delay (float): optional delay in seconds between off and on

5.2.14 PDUDaemonDriver

A PDUDaemonDriver controls a *PDUDaemonPort*, allowing control of the target power state without user interaction.

Note: PDUDaemon processes commands in the background, so the actual state change may happen several seconds after calls to PDUDaemonDriver return.

Binds to:

port:

- *PDUDaemonPort*

Implements:

- *PowerProtocol*

```
PDUDaemonDriver:
```

```
  delay: 5
```

Arguments:

- delay (int): optional delay in seconds between off and on

5.2.15 YKUSHPowerDriver

A YKUSHPowerDriver controls a *YKUSHPowerPort*, allowing control of the target power state without user interaction.

Binds to:

port:

- *YKUSHPowerPort*

Implements:

- *PowerProtocol*

```
YKUSHPowerDriver:
```

```
  delay: 5.0
```

Arguments:

- delay (float): optional delay in seconds between off and on

5.2.16 DigitalOutputPowerDriver

A DigitalOutputPowerDriver can be used to control the power of a Device using a DigitalOutputDriver.

Using this driver you probably want an external relay to switch the power of your DUT.

Binds to:

output:

- *DigitalOutputProtocol*

```
DigitalOutputPowerDriver:  
  delay: Delay for a power cycle
```

Arguments:

- delay (float): configurable delay in seconds between off and on

5.2.17 USBPowerDriver

A USBPowerDriver controls a *USBPowerPort*, allowing control of the target power state without user interaction.

Binds to:

- *USBPowerPort*

Implements:

- *PowerProtocol*

```
USBPowerPort:  
  delay: 5.0
```

Arguments:

- delay (float): optional delay in seconds between off and on

5.2.18 GpioDigitalOutputDriver

The GpioDigitalOutputDriver writes a digital signal to a GPIO line.

This driver configures GPIO lines via *the sysfs kernel interface* <<https://www.kernel.org/doc/html/latest/gpio/sysfs.html>>. While the driver automatically exports the GPIO, it does not configure it in any other way than as an output.

Implements:

- *DigitalOutputProtocol*

```
GpioDigitalOutputDriver:  
  index: 42
```

Arguments:

- index (int): The index of a GPIO line

5.2.19 SerialPortDigitalOutputDriver

The SerialPortDigitalOutputDriver makes it possible to use a UART as a 1-Bit general-purpose digital output.

This driver acts on top of a SerialDriver and uses the its pyserial port to control the flow control lines.

Implements:

- *DigitalOutputProtocol*

```
SerialPortDigitalOutputDriver:  
  signal: "DTR"  
  bindings: { serial : "nameOfSerial" }
```

Arguments:

- `signal` (str): control signal to use: DTR or RTS
- `bindings` (dict): A named resource of the type `SerialDriver` to bind against. This is only needed if you have multiple `SerialDriver` in your environment (what is likely to be the case if you are using this driver).

5.2.20 FileDigitalOutputDriver

The `FileDigitalOutputDriver` uses a file to write arbitrary string representations of booleans to a file and read from it. The file is checked to exist at configuration time.

If the file's content does not match any of the representations reading defaults to `False`.

A prime example for using this driver is Linux's `sysfs`.

Implements:

- `DigitalOutputProtocol`

```
FileDigitalOutputDriver:
  filepath: "/sys/class/leds/myled/brightness"
```

Arguments:

- `filepath` (str): A file that is used for reads and writes.
- `false_repr` (str): A representation for `False` (default: "0n")
- `true_repr` (str): A representation for `True` (default: "1n")

5.2.21 ModbusCoilDriver

A `ModbusCoilDriver` controls a `ModbusTCPCoil` resource. It can set and get the current state of the resource.

Binds to:

coil:

- `ModbusTCPCoil`

Implements:

- `DigitalOutputProtocol`

```
ModbusCoilDriver: {}
```

Arguments:

- `None`

5.2.22 MXSUSBDriver

A `MXSUSBDriver` is used to upload an image into a device in the `mxs USB loader` state. This is useful to bootstrap a bootloader onto a device.

Binds to:

loader:

- `MXSUSBLoader`

- *NetworkMXSUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:
  main:
    drivers:
      MXSUSBDriver:
        image: mybootloaderkey
images:
  mybootloaderkey: path/to/mybootloader.img
```

Arguments:

- image (str): The key in *images* containing the path of an image to bootstrap onto the target

5.2.23 IMXUSBDriver

A IMXUSBDriver is used to upload an image into a device in the imx USB loader state. This is useful to bootstrap a bootloader onto a device.

Binds to:**loader:**

- *IMXUSBLoader*
- *NetworkIMXUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:
  main:
    drivers:
      IMXUSBDriver:
        image: mybootloaderkey
images:
  mybootloaderkey: path/to/mybootloader.img
```

Arguments:

- image (str): The key in *images* containing the path of an image to bootstrap onto the target

5.2.24 RKUSBDriver

A RKUSBDriver is used to upload an image into a device in the rockchip USB loader state. This is useful to bootstrap a bootloader onto a device.

Binds to:**loader:**

- *RKUSBLoader*
- *NetworkRKUSBLoader*

Implements:

- *BootstrapProtocol*

```

targets:
  main:
    drivers:
      RKUSBDriver:
        image: mybootloaderkey
        usb_loader: myloaderkey
images:
  mybootloaderkey: path/to/mybootloader.img
  myloaderkey: path/to/myloader.bin

```

Arguments:

- image (str): The key in *images* containing the path of an image to bootstrap onto the target
- usb_loader (str): The key in *images* containing the path of an image to bootstrap onto the target

5.2.25 USBStorageDriver

A USBStorageDriver allows access to a USB stick or similar local or remote device.

Binds to:

- *USBMassStorage*
- *NetworkUSBMassStorage*

Implements:

- None (yet)

```

USBStorageDriver:
  image: flashimage

```

```

images:
  flashimage: ../images/myusb.image

```

Arguments:

- image (str): filename of the image to write to the remote usb storage

5.2.26 OneWirePIODriver

A OneWirePIODriver controls a *OneWirePIO* resource. It can set and get the current state of the resource.

Binds to:**port:**

- *OneWirePIO*

Implements:

- *DigitalOutputProtocol*

```

OneWirePIODriver: {}

```

Arguments:

- None

5.2.27 QEMUDriver

The QEMUDriver allows the usage of a QEMU instance as a target. It requires several arguments, listed below. The kernel, flash, rootfs and dtb arguments refer to images and paths declared in the environment configuration.

Binds to:

- None

```
QEMUDriver:
  qemu_bin: qemu_arm
  machine: vexpress-a9
  cpu: cortex-a9
  memory: 512M
  boot_args: "root=/dev/root console=ttyAMA0,115200"
  extra_args: ""
  kernel: kernel
  rootfs: rootfs
  dtb: dtb
```

```
tools:
  qemu_arm: /bin/qemu-system-arm
paths:
  rootfs: ../images/root
images:
  dtb: ../images/mydtb.dtb
  kernel: ../images/vmlinuz
```

Implements:

- *ConsoleProtocol*
- *PowerProtocol*

Arguments:

- `qemu_bin` (str): reference to the tools key for the QEMU binary
- `machine` (str): QEMU machine type
- `cpu` (str): QEMU cpu type
- `memory` (str): QEMU memory size (ends with M or G)
- `extra_args` (str): extra QEMU arguments, they are passed directly to the QEMU binary
- `boot_args` (str): optional, additional kernel boot argument
- `kernel` (str): optional, reference to the images key for the kernel
- `disk` (str): optional, reference to the images key for the disk image
- `flash` (str): optional, reference to the images key for the flash image
- `rootfs` (str): optional, reference to the paths key for use as the virtio-9p filesystem
- `dtb` (str): optional, reference to the image key for the device tree

The QEMUDriver also requires the specification of:

- a tool key, this contains the path to the QEMU binary
- an image key, the path to the kernel image and optionally the dtb key to specify the build device tree
- a path key, this is the path to the rootfs

5.2.28 SigrokDriver

The SigrokDriver uses a SigrokDevice resource to record samples and provides them during test runs.

Binds to:

sigrok:

- *SigrokUSBDevice*
- *SigrokDevice*
- *NetworkSigrokUSBDevice*

Implements:

- None yet

The driver can be used in test cases by calling the *capture*, *stop* and *analyze* functions.

5.2.29 SigrokPowerDriver

The SigrokPowerDriver uses a *SigrokUSBSerialDevice* resource to control a programmable power supply.

Binds to:

sigrok:

- *SigrokUSBSerialDevice*
- *NetworkSigrokUSBSerialDevice*

Implements:

- *PowerProtocol*

```
SigrokPowerDriver:
  delay: 3.0
```

Arguments:

- delay (float): optional delay in seconds between off and on, defaults to 3.0
- max_voltage (float): maximum allowed voltage for protection against accidental damage (optional, in volts)
- max_current (float): maximum allowed current for protection against accidental damage (optional, in ampere)

5.2.30 USBSDMuxDriver

The *USBSDMuxDriver* uses a USBSDMuxDevice resource to control a USB-SD-Mux device via *usbmux* tool.

Implements:

- None yet

The driver can be used in test cases by calling the `set_mode()` function with argument being `dut`, `host`, `off`, or `client`.

5.2.31 USBVideoDriver

The `USBVideoDriver` is used to show a video stream from a remote USB video camera in a local window. It uses the GStreamer command line utility `gst-launch` on both sides to stream the video via an SSH connection to the exporter.

Binds to:

video:

- `USBVideo`
- `NetworkUSBVideo`

Implements:

- None yet

Although the driver can be used from Python code by calling the `stream()` method, it is currently mainly useful for the `video` subcommand of `labgrid-client`. It supports the *Logitech HD Pro Webcam C920* with the USB ID 046d:082d, but other cameras can be added to `get_caps()` in `labgrid/driver/usbvideodriver.py`.

5.2.32 USBTMCDriver

The `USBTMCDriver` is used to control a oscilloscope via the USB TMC protocol.

Binds to:

tmc:

- `USBTMC`
- `NetworkUSBTMC`

Implements:

- None yet

Currently, it can be used by the `labgrid-client tmc` subcommands to show (and save) a screenshot, to show per channel measurements and to execute raw TMC commands. It only supports the *Keysight DSO-X 2000* series (with the USB ID 0957:1798), but more devices can be added by extending `on_activate()` in `labgrid/driver/usbtmcdriver.py` and writing a corresponding backend in `labgrid/driver/usbtmc/`.

5.2.33 FlashromDriver

The `FlashromDriver` is used to flash a rom, using the `flashrom` utility.

```
FlashromDriver:
    image: 'foo'
images:
    foo: ../images/image_to_load.raw
```

Binds to:

flashrom_resource:

- `Flashrom`

- *NetworkFlashrom*

The FlashromDriver allows using the linux util “flashrom” to write directly to a ROM e.g. a NOR SPI flash. The assumption is that the device flashing the DUT e.g. an exporter is wired to the Flash to be flashed. The driver implements the bootstrap protocol. The driver uses tool configuration section and the key: flashrom to determine the path of the installed flashrom utility.

5.2.34 XenaDriver

The XenaDriver allows to use Xena networking test equipment. Using the *xenavalkyrie* library a full API to control the tester is available.

binds to:

xena_manager:

- *XenaManager*

The driver is supposed to work with all Xena products from the “Valkyrie Layer 2-3 Test platform” Currently tested on a *XenaCompact* chassis equipped with a *1 GE test module*.

5.2.35 DockerDriver

A DockerDriver binds to a *DockerDaemon* and is used to create and control one docker container.

The driver uses the docker python module to interact with the docker daemon.

For more information on the parameters see:

<https://docker-py.readthedocs.io/en/stable/containers.html#container-objects>

binds to:

docker_daemon:

- *DockerDaemon*

implements:

- *PowerProtocol*

```
DockerDriver:
  image_uri: "rastasheep/ubuntu-sshd:16.04"
  container_name: "ubuntu-lg-example"
  host_config: {"network_mode": "bridge"}
  network_services: [{"port": 22, "username": "root", "password": "root"}]
```

Arguments:

- image_uri (str): identifier of the docker image to use (may have a tag suffix)
- command (str): command to run in the container (optional, depends on image)
- volumes (list): list to configure volumes mounted inside the container (optional)
- container_name (str): name of the container
- environment (list): list of environment variables (optional)
- host_config (dict): dictionary of host configurations

- `network_services` (list): dictionaries that describe individual *NetworkService* instances that come alive when the container is created. The “address” argument which *NetworkService* also requires will be derived automatically upon container creation.

5.3 Strategies

Strategies are used to ensure that the device is in a certain state during a test. Such a state could be the bootloader or a booted Linux kernel with shell.

5.3.1 BareboxStrategy

A `BareboxStrategy` has four states:

- `unknown`
- `off`
- `barebox`
- `shell`

to transition to the shell state:

```
t = get_target("main")
s = BareboxStrategy(t)
s.transition("shell")
```

this command would transition from the bootloader into a Linux shell and activate the shell driver.

5.3.2 ShellStrategy

A `ShellStrategy` has three states:

- `unknown`
- `off`
- `shell`

to transition to the shell state:

```
t = get_target("main")
s = ShellStrategy(t)
s.transition("shell")
```

this command would transition directly into a Linux shell and activate the shell driver.

5.3.3 UBootStrategy

A `UBootStrategy` has four states:

- `unknown`
- `off`
- `uboot`

- shell

to transition to the shell state:

```
t = get_target("main")
s = UBootStrategy(t)
s.transition("shell")
```

this command would transition from the bootloader into a Linux shell and activate the shelldriver.

5.3.4 DockerShellStrategy

A DockerShellStrategy has three states:

- unknown
- off
- shell

To transition to the shell state:

```
t = get_target("main")
s = DockerShellStrategy(t)
s.transition("shell")
```

These commands would activate the docker driver which creates and starts a docker container. This will subsequently make *NetworkService* instance(s) available which can be used for e.g. SSH access.

Note: Transitioning to the “off” state will make any *NetworkService* instance(s) unresponsive - which may in turn invalidate SSH connection sharing. Therefore, during automated test suites, refrain from transitioning to the “off” state.

5.4 Reporters

5.4.1 StepReporter

The StepReporter outputs individual labgrid steps to *STDOUT*.

```
from labgrid.stepreporter import StepReporter

StepReporter.start()
```

The Reporter can be stopped with a call to the stop function:

```
from labgrid.stepreporter import StepReporter

StepReporter.stop()
```

Stopping the StepReporter if it has not been started will raise an *AssertionError*, as will starting an already started StepReporter.

5.4.2 ColoredStepReporter

The ColoredStepReporter inherits from the StepReporter. The output is colored using ANSI color code sequences.

5.4.3 ConsoleLoggingReporter

The ConsoleLoggingReporter outputs read calls from the console transports into files. It takes the path as a parameter.

```
from labgrid.consoleloggingreporter import ConsoleLoggingReporter

ConsoleLoggingReporter.start(".")
```

The Reporter can be stopped with a call to the stop function:

```
from labgrid.consoleloggingreporter import ConsoleLoggingReporter

ConsoleLoggingReporter.stop()
```

Stopping the ConsoleLoggingReporter if it has not been started will raise an AssertionError, as will starting an already started StepReporter.

5.5 Environment Configuration

The environment configuration for a test environment consists of a YAML file which contains targets, drivers and resources. The invocation order of objects is important here since drivers may depend on other drivers or resources.

The skeleton for an environment consists of:

```
targets:
  <target-1>:
    resources:
      <resource-1>:
        <resource-1 parameters>
      <resource-2>:
        <resource-2 parameters>
    drivers:
      <driver-1>:
        <driver-1 parameters>
      <driver-2>: {} # no parameters for driver-2
  <target-2>:
    resources:
      <resources>
    drivers:
      <drivers>
  <more targets>
options:
  <option-1 name>: <value for option-1>
  <more options>
images:
  <image-1 name>: <absolute or relative path for image-1>
  <more images>
tools:
  <tool-1 name>: <absolute or relative path for tool-1>
  <more tools>
imports:
  - <import.py>
  - <python module>
```

If you have a single target in your environment, name it “main”, as the `get_target` function defaults to “main”.

All the resources and drivers in this chapter have a YAML example snippet which can simply be added (at the correct indentation level, one level deeper) to the environment configuration.

If you want to use multiple drivers of the same type, the resources and drivers need to be lists, e.g:

```
resources:
  RawSerialPort:
    port: '/dev/ttyS1'
drivers:
  SerialDriver: {}
```

becomes:

```
resources:
- RawSerialPort:
  port: '/dev/ttyS1'
- RawSerialPort:
  port: '/dev/ttyS2'
drivers:
- SerialDriver: {}
- SerialDriver: {}
```

This configuration doesn't specify which *RawSerialPort* to use for each *SerialDriver*, so it will cause an exception when instantiating the *Target*. To bind the correct driver to the correct resource, explicit name and bindings properties are used:

```
resources:
- RawSerialPort:
  name: 'foo'
  port: '/dev/ttyS1'
- RawSerialPort:
  name: 'bar'
  port: '/dev/ttyS2'
drivers:
- SerialDriver:
  name: 'foo_driver'
  bindings:
    port: 'foo'
- SerialDriver:
  name: 'bar_driver'
  bindings:
    port: 'bar'
```

The property name for the binding (e.g. *port* in the example above) is documented for each individual driver in this chapter.

The YAML configuration file also supports templating for some substitutions, these are:

- `LG_*` variables, are replaced with their respective `LG_*` environment variable
- `BASE` is substituted with the base directory of the YAML file.

As an example:

```
targets:
  main:
    resources:
      RemotePlace:
        name: !template $LG_PLACE
```

(continues on next page)

(continued from previous page)

```
tools:
  qemu_bin: !template "$BASE/bin/qemu-bin"
```

would resolve the `qemu_bin` path relative to the `BASE` dir of the YAML file and try to use the `RemotePlace` with the name set in the `LG_PLACE` environment variable.

See the *labgrid-device-config* man page for documentation on the top-level options, images, tools, and examples keys in the environment configuration.

5.6 Exporter Configuration

The exporter is configured by using a YAML file (with a syntax similar to the environment configs used for pytest) or by instantiating the *Environment* object. To configure the exporter, you need to define one or more *resource groups*, each containing one or more *resources*. The syntax for exported resource names is `<exporter>/<group>/<class>/<name>`, which allows the exporter to group resources for various usage scenarios, e.g. all resources of a specific place or for a specific test setup. For information on how the exporter fits into the rest of labgrid, see *Remote Resources and Places*.

The `<exporter>` part can be specified on the *labgrid-exporter* command line, and defaults to the hostname of the exporter.

The basic structure of an exporter configuration file is:

```
<group-1>:
  <resource-name-1>:
    <params>
  <resource-name-2>:
    <params>
<group-2>:
  <resource-name-1>:
    <params>
```

By default, the class name is inferred from the resource name, and `<params>` will be passed to its constructor. For USB resources, you will most likely want to use *udev Matching* here.

As a simple example, here is one group called *usb-hub-in-rack12* containing a single *USBSerialPort* resource (using udev matching), which will be exported as *exportername/usb-hub-in-rack12/NetworkSerialPort/USBSerialPort*:

```
usb-hub-in-rack12:
  USBSerialPort:
    match:
      '@sys_name': '3-1.3'
```

To export multiple resources of the same class in the same group, you can choose a unique resource name, and then use the `cls` parameter to specify the class name instead (which will not be passed as a parameter to the class constructor). In this next example we will export one *USBSerialPort* as *exportername/usb-hub-in-rack12/NetworkSerialPort/console-main*, and another *USBSerialPort* as *exportername/usb-hub-in-rack12/NetworkSerialPort/console-secondary*:

```
usb-hub-in-rack12:
  console-main:
    cls: USBSerialPort
    match:
      '@sys_name': '3-1.3'
```

(continues on next page)

(continued from previous page)

```

console-secondary:
  cls: USBSerialPort
  match:
    '@sys_name': '3-1.4'

```

Note that you could also split the resources up into distinct groups instead to achieve the same effect:

```

usb-hub-in-rack12-port3:
  USBSerialPort:
    match:
      '@sys_name': '3-1.3'
usb-hub-in-rack12-port4:
  USBSerialPort:
    match:
      '@sys_name': '3-1.4'

```

5.6.1 Templating

To reduce the amount of repeated declarations when many similar resources need to be exported, the [Jinja2 template engine](#) is used as a preprocessor for the configuration file:

```

## Iterate from group 1001 to 1016
# for idx in range(1, 17)
{{ 1000 + idx }}:
  NetworkSerialPort:
    {host: r11, port: {{ 4000 + idx }}}
  NetworkPowerPort:
    # if 1 <= idx <= 8
    {model: apc, host: apc1, index: {{ idx }}}
    # elif 9 <= idx <= 12
    {model: netio, host: netio4, index: {{ idx - 8 }}}
    # elif 13 <= idx <= 16
    {model: netio, host: netio5, index: {{ idx - 12 }}}
    # endif
# endfor

```

Use # for line statements (like the for loops in the example) and ## for line comments. Statements like {{ 4000 + idx }} are expanded based on variables in the Jinja2 template.

DEVELOPMENT

The first step is to install labgrid into a local virtualenv.

6.1 Installation

Clone the git repository:

```
git clone https://github.com/labgrid-project/labgrid && cd labgrid
```

Create and activate a virtualenv for labgrid:

```
virtualenv -p python3 venv  
source venv/bin/activate
```

Install required dependencies:

```
sudo apt install python3-dev libow-dev
```

Install the development requirements:

```
pip install -r dev-requirements.txt
```

Install labgrid into the virtualenv in editable mode:

```
pip install -e .
```

Tests can now be run via:

```
python -m pytest --lg-env <config>
```

6.2 Writing a Driver

To develop a new driver for labgrid, you need to decide which protocol to implement, or implement your own protocol. If you are unsure about a new protocol's API, just use the driver directly from the client code, as deciding on a good API will be much easier when another similar driver is added.

labgrid uses the [attrs library](#) for internal classes. First of all import attr, the protocol and the common driver class into your new driver file.

```
import attr

from labgrid.driver.common import Driver
from labgrid.protocol import ConsoleProtocol
```

Next, define your new class and list the protocols as subclasses of the new driver class. Try to avoid subclassing existing other drivers, as this limits the flexibility provided by connecting drivers and resources on a given target at runtime.

```
import attr

from labgrid.driver.common import Driver
from labgrid.protocol import ConsoleProtocol

@attr.s(eq=False)
class ExampleDriver(Driver, ConsoleProtocol):
    pass
```

The `ConsoleExpectMixin` is a mixin class to add expect functionality to any class supporting the `ConsoleProtocol` and has to be the first item in the subclass list. Using the mixin class allows sharing common code, which would otherwise need to be added into multiple drivers.

```
import attr

from labgrid.driver.common import Driver
from labgrid.driver.consoleexpectmixin import ConsoleExpectMixin
from labgrid.protocol import ConsoleProtocol

@attr.s(eq=False)
class ExampleDriver(ConsoleExpectMixin, Driver, ConsoleProtocol):
    pass
```

Additionally the driver needs to be registered with the `target_factory` and provide a bindings dictionary, so that the `Target` can resolve dependencies on other drivers or resources.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Driver
from labgrid.driver.consoleexpectmixin import ConsoleExpectMixin
from labgrid.protocol import ConsoleProtocol

@target_factory.reg_driver
@attr.s(eq=False)
class ExampleDriver(ConsoleExpectMixin, Driver, ConsoleProtocol):
    bindings = { "port": SerialPort }
    pass
```

The listed resource `SerialPort` will be bound to `self.port`, making it usable in the class. Checks are performed that the target which the driver binds to has a `SerialPort`, otherwise an error will be raised.

If your driver can support alternative resources, you can use a set of classes instead of a single class:

```
bindings = { "port": {SerialPort, NetworkSerialPort}}
```

Optional bindings can be declared by including `None` in the set:

```
bindings = { "port": {SerialPort, NetworkSerialPort, None}}
```

If you need to do something during instantiation, you need to add a `__attrs_post_init__` method (instead of the usual `__init__` used for non-attr-classes). The minimum requirement is a call to `super().__attrs_post_init__()`.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Driver
from labgrid.driver.consoleexpectmixin import ConsoleExpectMixin
from labgrid.protocol import ConsoleProtocol

@target_factory.reg_driver
@attr.s(eq=False)
class ExampleDriver(ConsoleExpectMixin, Driver, ConsoleProtocol):
    bindings = { "port": SerialPort }

    def __attrs_post_init__(self):
        super().__attrs_post_init__()
```

All that's left now is to implement the functionality described by the used protocol, by using the API of the bound drivers and resources.

6.3 Writing a Resource

To add a new resource to labgrid, we import `attr` into our new resource file. Additionally we need the `target_factory` and the common Resource class.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Resource
```

Next we add our own resource with the `Resource` parent class and register it with the `target_factory`.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Resource

@target_factory.reg_resource
@attr.s(eq=False)
class ExampleResource(Resource):
    pass
```

All that is left now is to add attributes via `attr.ib()` member variables.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Resource

@target_factory.reg_resource
@attr.s(eq=False)
```

(continues on next page)

(continued from previous page)

```
class ExampleResource(Resource):
    examplevar1 = attr.ib()
    examplevar2 = attr.ib()
```

The `attr.ib()` style of member definition also supports defaults and validators, see the [attrs documentation](#).

6.4 Writing a Strategy

labgrid only offers two basic strategies, for complex use cases a customized strategy is required. Start by creating a strategy skeleton:

```
import enum

import attr

from labgrid.step import step
from labgrid.driver.common import Strategy

class Status(enum.Enum):
    unknown = 0

class MyStrategy(Strategy):
    bindings = {
    }

    status = attr.ib(default=Status.unknown)

    @step
    def transition(self, status, *, step):
        if not isinstance(status, Status):
            status = Status[status]
        if status == Status.unknown:
            raise StrategyError("can not transition to {}".format(status))
        elif status == self.status:
            step.skip("nothing to do")
            return # nothing to do
        else:
            raise StrategyError(
                "no transition found from {} to {}".format(
                    self.status, status
                )
            )
        self.status = status
```

The `bindings` variable needs to declare the drivers necessary for the strategy, usually one for power, bootloader and shell. It is possible to reference drivers via their protocol, e.g. `ConsoleProtocol`. Note that drivers which implement multiple protocols must not be referenced multiple times via different protocols. The `Status` class needs to be extended to cover the states of your strategy, then for each state an `elif` entry in the transition function needs to be added.

Lets take a look at the builtin `BareboxStrategy`. The `Status` enum for the `BareboxStrategy`:

```
class Status(enum.Enum):
    unknown = 0
    off = 1
```

(continues on next page)

(continued from previous page)

```
barebox = 2
shell = 3
```

defines 3 custom states and the *unknown* state as the start point. These three states are handled in the transition function:

```
elif status == Status.off:
    self.target.deactivate(self.barebox)
    self.target.deactivate(self.shell)
    self.target.activate(self.power)
    self.power.off()
elif status == Status.barebox:
    self.transition(Status.off)
    # cycle power
    self.power.cycle()
    # interrupt barebox
    self.target.activate(self.barebox)
elif status == Status.shell:
    # transition to barebox
    self.transition(Status.barebox)
    self.barebox.boot("")
    self.barebox.await_boot()
    self.target.activate(self.shell)
```

Here the *barebox* state simply cycles the board and activates the driver, while the *shell* state uses the barebox state to cycle the board and then boot the linux kernel. The *off* states switch the power off.

6.5 Graph Strategies

Warning: This feature is experimental and brings much complexity to your project.

GraphStrategies are made for more complex strategies, with multiple, on each other depending, states. A GraphStrategy graph has to be a directed graph with one root state.

Using a GraphStrategy makes only sense if you have board states that are reachable by different ways. In this case GraphStrategies reduce state duplication.

6.5.1 Example

Listing 1: confptest.py

```
from labgrid.strategy import GraphStrategy

class TestStrategy(GraphStrategy):
    def state_unknown(self):
        pass

    @GraphStrategy.depends('unknown')
    def state_boot_via_nand(self):
        pass
```

(continues on next page)

(continued from previous page)

```

@GraphStrategy.depends('unknown')
def state_boot_via_nfs(self):
    pass

@GraphStrategy.depends('boot_via_nand', 'boot_via_nfs')
def state_barebox(self):
    pass

@GraphStrategy.depends('barebox')
def state_linux_shell(self):
    pass

```

The class can also render a graph as PNG (using GraphViz):

Listing 2: test.yaml

```

targets:
  main:
    resources: {}
    drivers: {}

```

Listing 3: render_teststrategy.py

```

from labgrid.environment import Environment
from confstest import TestStrategy
env = Environment('test.yaml')
strategy = TestStrategy(env.get_target(), "strategy name")

strategy.transition('barebox', via=['boot_via_nfs'])
# returned: ['unknown', 'boot_via_nfs', 'barebox']
strategy.graph.render("teststrategy-via-nfs")
# returned: 'teststrategy-via-nfs.png'

strategy.transition('barebox', via=['boot_via_nand'])
# returned: ['unknown', 'boot_via_nand', 'barebox']
strategy.graph.render("teststrategy-via-nand")
# returned: 'teststrategy-via-nand.png'

```

6.5.2 State

Every graph node describes a board state and how to reach it, A state has to be a class method following this prototype:
`def state_$STATENAME(self) :` A state may not call `transition()` in its state definition.

6.5.3 Dependency

Every state, but the root state, can depend on other States, If a state has multiple dependencies, not all of them, but one, have to be reached before running the current state. When no `via` is used during a transition the order of the given dependencies decides which one gets called, where the first one has the highest priority and the last one the lowest. Dependencies are represented by graph edges.

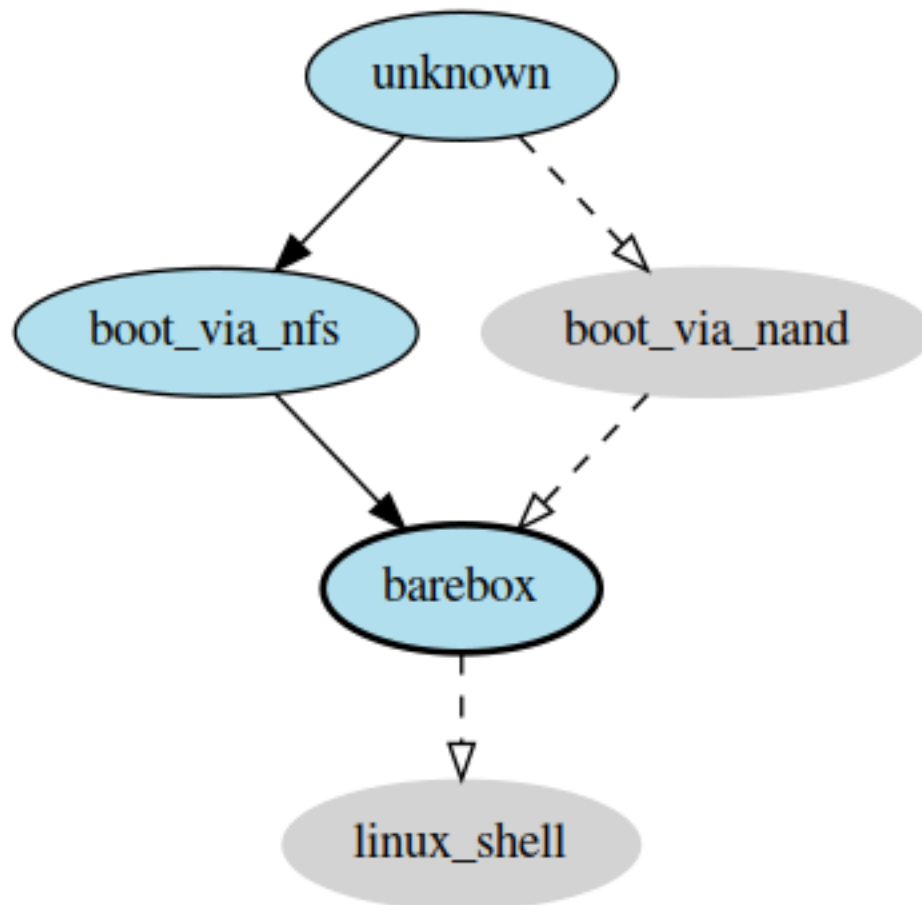


Fig. 1: TestStrategy transitioned to 'barebox' via 'boot_via_nfs'

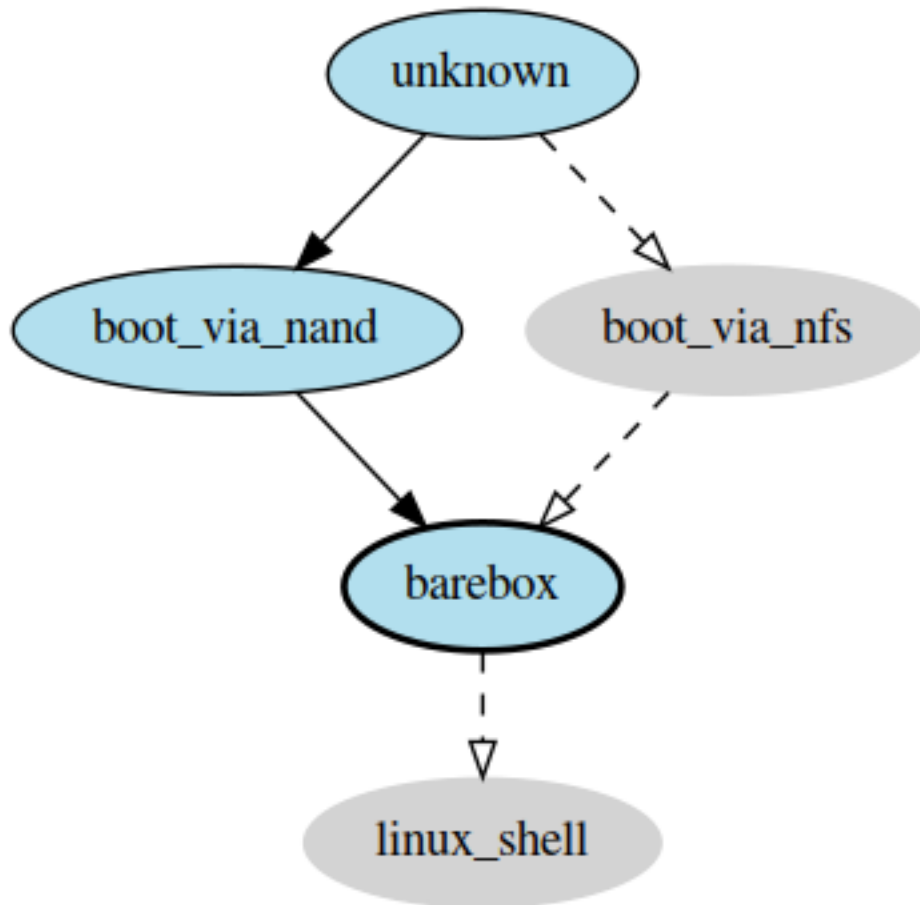


Fig. 2: TestStrategy transitioned to 'barebox' via 'boot_via_nand'

6.5.4 Root State

Every GraphStrategy has to define exactly one root state. The root state defines the start of the graph and therefore the start of every transition. A state becomes a root state if it has no dependencies.

6.5.5 Transition

A transition describes a path, or a part of a path, through a GraphStrategy graph. Every State in the graph has a auto generated default path starting from the root state. So using the given example, the GraphStrategy would call the states *unknown*, *boot_via_nand*, *barebox*, and *linux_shell* in this order if `transition('linux_shell')` would be called. The GraphStrategy would prefer *boot_via_nand* over *boot_via_nfs* because *boot_via_nand* is mentioned before *boot_via_nfs* in the dependencies of *barebox*. If you want to reach via *boot_via_nfs* the call would look like this: `transition('linux_shell', via='boot_via_nfs')`.

A transition can be incremental. If we trigger a transition with `transition('barebox')` first, the states *unknown*, *boot_via_nand* and *barebox* will be called in this order. If we trigger a transition `transition('linux_shell')` afterwards only *linux_shell* gets called. This happens because *linux_shell* is reachable from *barebox* and the Strategy holds state of the last walked path. But there is a catch! The second, incremental path must be *fully* incremental to the previous path! For example: Lets say we reached *barebox* via *boot_via_nfs*, (`transition('barebox', via='boot_via_nfs')`). If we trigger `transition('linux_shell')` afterwards the GraphStrategy would compare the last path *'unknown', 'boot_via_nfs', 'barebox'* with the default path to *linux_shell* which would be *'unknown', 'boot_via_nand', 'barebox', 'linux_shell'*, and decides the path is not fully incremental and starts over by the root state. If we had given the second transition *boot_via_nfs* like in the first transition the paths had been incremental.

6.6 SSHManager

labgrid provides a SSHManager to allow connection reuse with control sockets. To use the SSHManager in your code, import it from `labgrid.util.ssh`:

```
from labgrid.util.ssh import sshmanager
```

you can now request or remove forwards:

```
from labgrid.util.ssh import sshmanager

localport = sshmanager.request_forward('somehost', 3000)

sshmanager.remove_forward('somehost', 3000)
```

or get and put files:

```
from labgrid.util.ssh import sshmanager

sshmanager.put_file('somehost', '/path/to/local/file', '/path/to/remote/file')
```

Note: The SSHManager will reuse existing Control Sockets and set up a keepalive loop to prevent timeouts of the socket during tests.

6.7 ManagedFile

While the *SSHManager* exposes a lower level interface to use SSH Connections, the *ManagedFile* provides a higher level interface for file upload to another host. It is meant to be used in conjunction with a remote resource, and store the file on the remote host with the following pattern:

```
/tmp/labgrid-<username>/<sha256sum>/<filename>
```

Additionally it provides *get_remote_path()* to retrieve the complete file path, to easily employ it for driver implementations. To use it in conjunction with a *Resource* and a file:

```
from labgrid.util.managedfile import ManagedFile

mf = ManagedFile(<your-file>, <your-resource>)
mf.sync_to_resource()
path = mf.get_remote_path()
```

Unless constructed with *ManagedFile(..., detect_nfs=False)*, *ManagedFile* employs the following heuristic to check if a file is stored on a NFS share available both locally and remotely via the same path:

- check if GNU coreutils `stat(1)` with option `-format` exists on local and remote system
- check if inode number, total size and birth/modification timestamps match on local and remote system

If this is the case the actual file transfer in `sync_to_resource` is skipped.

6.8 ProxyManager

The proxymanager is used to open connections across proxies via an attribute in the resource. This allows gated testing networks by always using the exporter as an SSH gateway to proxy the connections using SSH Forwarding. Currently this is used in the *SerialDriver* for proxy connections.

Usage:

```
from labgrid.util.proxy import proxymanager

proxymanager.get_host_and_port(<resource>)
```

6.9 Contributing

Thank you for thinking about contributing to labgrid! Some different backgrounds and use-cases are essential for making labgrid work well for all users.

The following should help you with submitting your changes, but don't let these guidelines keep you from opening a pull request. If in doubt, we'd prefer to see the code earlier as a work-in-progress PR and help you with the submission process.

6.9.1 Workflow

- Changes should be submitted via a [GitHub pull request](#).
- Try to limit each commit to a single conceptual change.

- Add a signed-off-by line to your commits according to the *Developer's Certificate of Origin* (see below).
- Check that the tests still work before submitting the pull request. Also check the CI's feedback on the pull request after submission.
- When adding new drivers or resources, please also add the corresponding documentation and test code.
- If your change affects backward compatibility, describe the necessary changes in the commit message and update the examples where needed.

6.9.2 Code

- Follow the [PEP 8](#) style.
- Use `attr.ib` attributes for public attributes of your drivers and resources.
- Use `isort` to sort the import statements.

6.9.3 Documentation

- Use [semantic linefeeds](#) in `.rst` files.

6.9.4 Run Tests

```
$ tox -r
```

6.9.5 Developer's Certificate of Origin

labgrid uses the [Developer's Certificate of Origin 1.1](#) with the same process as used for the Linux kernel:

Developer's Certificate of Origin 1.1

By making a contribution to this project, I certify that:

- The contribution was created in whole or in part by me and I have the right to submit it under the open source license indicated in the file; or
- The contribution is based upon previous work that, to the best of my knowledge, is covered under an appropriate open source license and I have the right under that license to submit that work with modifications, whether created in whole or in part by me, under the same open source license (unless I am permitted to submit under a different license), as indicated in the file; or
- The contribution was provided directly to me by some other person who certified (a), (b) or (c) and I have not modified it.
- I understand and agree that this project and the contribution are public and that a record of the contribution (including all personal information I submit with it, including my sign-off) is maintained indefinitely and may be redistributed consistent with this project or the open source license(s) involved.

Then you just add a line (using `git commit -s`) saying:

```
Signed-off-by: Random J Developer <random@developer.example.org>
```

using your real name (sorry, no pseudonyms or anonymous contributions).

6.10 Ideas

6.10.1 Driver Preemption

To allow better handling of unexpected reboots or crashes, inactive Drivers could register callbacks on their providers (for example the BareboxDriver it's ConsoleProtocol). These callbacks would look for indications that the Target has changed state unexpectedly (by looking for the bootloader startup messages, in this case). The inactive Driver could then cause a preemption and would be activated. The current caller of the originally active driver would be notified via an exception.

6.10.2 Step Tracing

The Step infrastructure already collects timing and nesting information on executed commands, but is currently only used in the pytest plugin or via the standalone StepReporter. By writing these events to a file (or sqlite database) as a trace, we can collect data over multiple runs for later analysis. This would become more useful by passing recognized events (stack traces, crashes, ...) and benchmark results via the Step infrastructure.

6.10.3 CommandProtocol Support for Background Processes

Currently the CommandProtocol does not support long running processes well. An implementation should start a new process, return a handle and forbid running other processes in the foreground. The handle can be used to retrieve output from a command.

DESIGN DECISIONS

This document outlines the design decisions influencing the development of labgrid.

7.1 Out of Scope

Out of scope for labgrid are:

7.1.1 Integrated Build System

In contrast to some other tools, labgrid explicitly has no support for building target binaries or images.

Our reasons for this are:

- Several full-featured build systems already exist and work well.
- We want to test unmodified images produced by any build system (OE/Yocto, PTXdist, Buildroot, Debian, ...).

7.1.2 Test Infrastructure

labgrid does not include a test framework.

The main reason is that with `pytest` we already have a test framework which:

- makes it easy to write tests
- reduces boilerplate code with flexible fixtures
- is easy to extend and has many available plugins
- allows using any Python library for creating inputs or processing outputs
- supports test report generation

Furthermore, the hardware control functionality needed for testing is also very useful during development, provisioning and other areas, so we don't want to hide that behind another test framework.

7.2 In Scope

- usable as a library for hardware provisioning
- device control via:
 - serial console

- SSH
- file management
- power and reset
- emulation of external services:
 - USB stick emulation
 - external update services (Hawkbit)
- bootstrap services:
 - fastboot
 - imxusbloader

7.3 Further Goals

- tests should be equivalent for workstations and servers
- discoverability of available boards
- distributed board access

CHANGES

8.1 Release 0.3.0 (unreleased)

8.1.1 New Features in 0.3.0

- The new *FileDigitalOutputDriver* represents a digital signal with a file.
- The new *GpioDigitalOutputDriver* controls the state of a GPIO via the sysfs interface.
- Crossbar and autobahn have been updated to 19.3.3 and 19.3.5 respectively.
- The InfoDriver was removed. The functions have been integrated into the labgridhelper library, please use the library for the old functionality.
- `labgrid-client write-image` subcommand: labgrid client now has a `write-image` command to write images onto block devices.
- `labgrid-client ssh` now also uses port from NetworkService resource if available
- The SSHDriver's keyfile attribute is now specified relative to the config file just like the images are.
- The ShellDriver's keyfile attribute is now specified relative to the config file just like the images are.
- `labgrid-client -P <PROXY>` and the `LG_PROXY` environment variable can be used to access the coordinator and network resources via that SSH proxy host. Drivers which run commands via SSH to the exporter still connect directly, allowing custom configuration in the user's `.ssh/config` as needed. Note that not all drivers have been updated to use the ProxyManager yet.
- Flashrom support added, by hard-wiring e.g. an exporter to the DUT, the ROM on the DUT can be written directly. The flashrom driver implements the bootstrap protocol.
- AndroidFastbootDriver now supports 'getvar' and 'oem getenv' subcommands.
- The coordinator now updates the resource acquired state at the exporter. Accordingly, the exporter now starts ser2net only when a resource is acquired. Furthermore, resource conflicts between places are now detected.
- The binding dictionary can now support type name strings in addition to the types themselves, avoiding the need to import a specific protocol or driver in some cases.
- `labgrid-client write-image` gained new arguments: `--partition`, `--skip`, `--seek`.
- UBootDriver now allows overriding of default boot command (`run bootcmd`) via new `boot_command` argument.

8.1.2 Breaking changes in 0.3.0

- *ManagedFile* now saves the files in a different directory on the exporter. Previously `/tmp` was used, labgrid now uses `/var/cache/labgrid`. A `tmpfiles` example configuration for `systemd` is provided in the `/contrib` directory. It is also highly recommended to enable `fs.protected_regular=1` and `fs.protected_fifos=1` for kernels ≥ 4.19 . This requires user intervention after the upgrade to create the directory and setup the cleanup job.
- `@attr.s(cmp=False)` is deprecated and all classes have been moved to `@attr.s(eq=False)`, this release requires `attrs` version 19.2.0
- Coordinator work dir is now set to the same dir as the crossbar configuration dir. Hence coordinator specific files like `places.yaml` and `resources.yaml` are now also stored in the crossbar configuration folder. Previously it would use `...`
- The `HawkbittestClient` and `USBstick` classes have been removed
- The original `USBStorageDriver` was removed, `NetworkUSBStorageDriver` was renamed to `USBStorageDriver`. A deprecated `NetworkUSBStorageDriver` exists temporarily for compatibility reasons.

8.2 Release 0.2.0 (released Jan 4, 2019)

8.2.1 New Features in 0.2.0

- A colored `StepReporter` was added and can be used with `pytest --lg-colored-steps`.
- `labgrid-client` can now use the last changed information to sort listed resources and places.
- `labgrid-client ssh` now uses `ip/user/password` from `NetworkService` resource if available
- The `pytest` plugin option `--lg-log` enables logging of the serial traffic into a file (see below).
- The environment files can contain feature flags which can be used to control which tests are run in `pytest`.
- `LG_*` variables from the OS environment can be used in the config file with the `!template` directive.
- The new “managed file” support takes a local file and synchronizes it to a resource on a remote host. If the resource is not a `NetworkResource`, the local file is used instead.
- `ProxyManager`: a class to automatically create `ssh` forwardings to proxy connections over the exporter
- `SSHManager`: a global manager to multiplex connections to different exporters
- The target now saves it’s attached drivers, resources and protocols in a lookup table, avoiding the need of importing many `Drivers` and `Protocols` (see *Syntactic sugar for Targets*)
- When multiple `Drivers` implement the same `Protocol`, the best one can be selected using a priority (see below).
- The new subcommand `labgrid-client monitor` shows resource or places changes as they happen, which is useful during development or debugging.
- The environment `yaml` file can now list Python files (under the ‘imports’ key). They are imported before constructing the `Targets`, which simplifies using custom `Resources`, `Drivers` or `Strategies`.
- The `pytest` plugin now stores metadata about the environment `yaml` file in the `junit XML` output.
- The `labgrid-client` tool now understands a `--state` option to transition to the provided state using a `Strategy`. This requires an environment `yaml` file with a `RemotePlace` Resources and matching `Drivers`.

- Resource matches for places configured in the coordinator can now have a name, allowing multiple resources with the same class.
- The new *Target.__getitem__* method makes writing using protocols less verbose.
- Experimental: The labgrid-autoinstall tool was added (see below).

8.2.2 New and Updated Drivers

- The new *DigitalOutputResetDriver* adapts a driver implementing the *DigitalOutputProtocol* to the *ResetProtocol*.
- The new *ModbusCoilDriver* support outputs on a ModbusTCP device.
- The new *NetworkUSBStorageDriver* allows writing to remote USB storage devices (such as SD cards or memory sticks connected to a mux).
- The new *QEMUDriver* runs a system image in QEmu and implements the *ConsoleProtocol* and *PowerProtocol*. This allows using labgrid without any real hardware.
- The new *QuartusHPSDriver* controls the “Quartus Prime Programmer and Tools” to flash a target’s QSPI.
- The new *SerialPortDigitalOutputDriver* controls the state of a GPIO using the control lines of a serial port.
- The new *SigrokDriver* uses a (local or remote) device supported by sigrok to record samples.
- The new *SmallUBootDriver* supports the extremely limited U-Boot found in cheap WiFi routers.
- The new *USBSDMuxDriver* controls a Pengutronix USB-SD-Mux device.
- The new *USBTMCDriver* can fetch measurements and screenshots from the “Keysight DSOX2000 series” and the “Tektronix TDS 2000 series”.
- The new *USBVideoDriver* can stream video from a remote H.264 UVC (USB Video Class) camera using gstreamer over SSH. Currently, configuration for the “Logitech HD Pro Webcam C920” exists.
- The new *XenaDriver* allows interacting with Xena network testing equipment.
- The new *YKUSHPowerDriver* and *USBPowerDriver* support software-controlled USB hubs.
- The bootloader drivers now have a *reset* method.
- The *BareboxDriver*’s boot string is now configurable, which allows it to work with the *quiet* Linux boot parameter.
- The *IMXUSBLoader* now recognizes more USB IDs.
- The *OpenOCDDriver* is now more flexible with loading configuration files.
- The *NetworkPowerDriver* now additionally supports:
 - 24 port “Gude Expert Power Control 8080”
 - 8 port “Gude Expert Power Control 8316”
 - NETIO 4 models (via telnet)
 - a simple REST interface
- The *SerialDriver* now supports using plain TCP instead of RFC 2217, which is needed from some console servers.
- The *ShellDriver* has been improved:
 - It supports configuring the various timeouts used during the login process.

- It can use xmodem to transfer file from and to the target.

8.2.3 Incompatible Changes

- When using the coordinator, it must be upgrade together with the clients because of the newly introduce match names.
- Resources and Drivers now need to be created with an explicit name parameter. It can be `None` to keep the old behaviour. See below for details.
- Classes derived from `Resource` or `Driver` now need to use `@attr.s(cmp=False)` instead of `@attr.s` because of a change in the `attrs` module version 17.1.0.

8.2.4 Syntactic sugar for Targets

Targets are now able to retrieve requested drivers, resources or protocols by name instead of by class. This allows removing many imports, e.g.

```
from labgrid.driver import ShellDriver

shell = target.get_driver(ShellDriver)
```

becomes

```
shell = target.get_driver("ShellDriver")
```

Also take a look at the examples, they have been ported to the new syntax as well.

8.2.5 Multiple Driver Instances

For some Protocols, it is useful to allow multiple instances.

DigitalOutputProtocol: A board may have two jumpers to control the boot mode in addition to a reset GPIO. Previously, it was not possible to use these on a single target.

ConsoleProtocol: Some boards have multiple console interfaces or expose a login prompt via a USB serial gadget.

PowerProtocol: In some cases, multiple power ports need to be controlled for one Target.

To support these use cases, Resources and Drivers must be created with a name parameter. When updating your code to this version, you can either simply set the name to `None` to keep the previous behaviour. Alternatively, pass a string as the name.

Old:

```
>>> t = Target("MyTarget")
>>> SerialPort(t)
SerialPort(target=Target(name='MyTarget', env=None), state=<BindingState.bound: 1>,
↳avail=True, port=None, speed=115200)
>>> SerialDriver(t)
SerialDriver(target=Target(name='MyTarget', env=None), state=<BindingState.bound: 1>,
↳txdelay=0.0)
```

New (with name=None):

```
>>> t = Target("MyTarget")
>>> SerialPort(t, None)
SerialPort(target=Target(name='MyTarget', env=None), name=None, state=<BindingState.
↳bound: 1>, avail=True, port=None, speed=115200)
>>> SerialDriver(t, None)
SerialDriver(target=Target(name='MyTarget', env=None), name=None, state=<BindingState.
↳bound: 1>, txdelay=0.0)
```

New (with real names):

```
>>> t = Target("MyTarget")
>>> SerialPort(t, "MyPort")
SerialPort(target=Target(name='MyTarget', env=None), name='MyPort', state=
↳<BindingState.bound: 1>, avail=True, port=None, speed=115200)
>>> SerialDriver(t, "MyDriver")
SerialDriver(target=Target(name='MyTarget', env=None), name='MyDriver', state=
↳<BindingState.bound: 1>, txdelay=0.0)
```

8.2.6 Priorities

Each driver supports a `priority` class variable. This allows drivers which implement the same protocol to add a priority option to each of their protocols. This way a `NetworkPowerDriver` can implement the `ResetProtocol`, but if another `ResetProtocol` driver with a higher protocol is available, it will be selected instead. See the documentation for details.

8.2.7 ConsoleLogging Reporter

The `ConsoleLoggingReporter` can be used with the `pytest` plugin or the library. It records the Data send from a DUT to the computer running labgrid. The logfile contains a header with the name of the device from the environment configuration and a timestamp.

When using the library, the reporter can be started with:

```
from labgrid.consoleloggingreporter import ConsoleLoggingReporter

ConsoleLoggingReporter.start(".")
```

where `."` is the output directory.

The `pytest` plugin accepts the `--lg-log` commandline option, either with or without an output path.

8.2.8 Auto-Installer Tool

To simplify using labgrid for provisioning several boards in parallel, the `labgrid-autoinstall` tool was added. It reads a YAML file defining several targets and a Python script to be run for each board. Internally, it spawns a child process for each target, which waits until a matching resource becomes available and then executes the script.

For example, this makes it simple to load a bootloader via the `BootstrapProtocol`, use the `AndroidFastbootDriver` to upload a kernel with `initramfs` and then write the target's eMMC over a USB Mass Storage gadget.

Note: `labgrid-autoinstall` is still experimental and no documentation has been written.

Contributions from: Ahmad Fatoum, Bastian Krause, Björn Lässig, Chris Fiege, Enrico Joerns, Esben Haabendal, Felix Lampe, Florian Scherf, Georg Hofmann, Jan Lübbe, Jan Remmet, Johannes Nau, Kasper Revsbech, Kjeld Flarup, Laurentiu Palcu, Oleksij Rempel, Roland Hieber, Rouven Czerwinski, Stanley Phoong Cheong Kwan, Steffen Trumtrar, Tobi Gschwendtner, Vincent Prince

8.3 Release 0.1.0 (released May 11, 2017)

This is the initial release of labgrid.

9.1 labgrid package

9.1.1 Subpackages

labgrid.autoinstall package

Submodules

labgrid.autoinstall.main module

The autoinstall.main module runs an installation script automatically on multiple targets.

class labgrid.autoinstall.main.**Handler** (*env, args, name*)

Bases: multiprocessing.context.Process

__init__ (*env, args, name*)

Initialize self. See help(type(self)) for accurate signature.

run ()

Method to be run in sub-process; can be overridden in sub-class

run_once ()

__module__ = 'labgrid.autoinstall.main'

class labgrid.autoinstall.main.**Manager** (*env, args*)

Bases: object

__init__ (*env, args*)

Initialize self. See help(type(self)) for accurate signature.

configure ()

start ()

join ()

__dict__ = mappingproxy({'__module__': 'labgrid.autoinstall.main', '__init__': <func

__module__ = 'labgrid.autoinstall.main'

__weakref__

list of weak references to the object (if defined)

labgrid.autoinstall.main.**main** ()

labgrid.driver package

Subpackages

labgrid.driver.power package

Submodules

labgrid.driver.power.apc module

labgrid.driver.power.apc.**power_set** (*host, port, index, value*)

labgrid.driver.power.apc.**power_get** (*host, port, index*)

labgrid.driver.power.digipower module

labgrid.driver.power.digipower.**power_set** (*host, port, index, value*)

labgrid.driver.power.digipower.**power_get** (*host, port, index*)

labgrid.driver.power.gude module

labgrid.driver.power.gude.**power_set** (*host, port, index, value*)

labgrid.driver.power.gude.**power_get** (*host, port, index*)

labgrid.driver.power.gude24 module

labgrid.driver.power.gude24.**power_set** (*host, port, index, value*)

labgrid.driver.power.gude24.**power_get** (*host, port, index*)

labgrid.driver.power.gude8316 module

labgrid.driver.power.gude8316.**power_set** (*host, port, index, value*)

labgrid.driver.power.gude8316.**power_get** (*host, port, index*)

labgrid.driver.power.netio module

labgrid.driver.power.netio.**power_set** (*host, port, index, value*)

labgrid.driver.power.netio.**power_get** (*host, port, index*)

labgrid.driver.power.netio_kshell module

tested with NETIO 4C, should be compatible with all NETIO 4-models

labgrid.driver.power.netio_kshell.**power_set** (*host, port, index, value*)

labgrid.driver.power.netio_kshell.**power_get** (*host, port, index*)

labgrid.driver.power.sentry module

This driver was tested on those models: CW-24VDD and 4805-XLS-16 but should be working on all devices implementing Sentry3-MIB

labgrid.driver.power.sentry.**power_set** (*host, port, index, value*)

labgrid.driver.power.sentry.**power_get** (*host, port, index*)

labgrid.driver.power.simplerest module

Simple rest interface for Power Port. Used for ex. misc Raspberry Pi configs Author: Kjeld Flarup <kfa@deif.com>

The URL given in hosts in exporter.yaml must replace {value} with '0' or '1' It is optional whether to use {index} or not.

NetworkPowerPort: model: simplerest host: 'http://172.17.180.53:9999/relay/{index}/{value}' index: 0

labgrid.driver.power.simplerest.**power_set** (*host, port, index, value*)

labgrid.driver.power.simplerest.**power_get** (*host, port, index*)

labgrid.driver.usbtmc package

Submodules

labgrid.driver.usbtmc.keysight_dsox2000 module

labgrid.driver.usbtmc.keysight_dsox2000.**get_channel_info** (*driver, channel*)

labgrid.driver.usbtmc.keysight_dsox2000.**get_channel_values** (*driver, channel*)

labgrid.driver.usbtmc.keysight_dsox2000.**get_screenshot_png** (*driver*)

labgrid.driver.usbtmc.tektronix_tds2000 module

labgrid.driver.usbtmc.tektronix_tds2000.**get_channel_info** (*driver, channel*)

labgrid.driver.usbtmc.tektronix_tds2000.**get_channel_values** (*driver, channel*)

labgrid.driver.usbtmc.tektronix_tds2000.**get_screenshot_tiff** (*driver*)

Submodules

labgrid.driver.bareboxdriver module

```
class labgrid.driver.bareboxdriver.BareboxDriver (target, name, prompt=", auto-  
boot='stop autoboot', interrupt='n',  
bootstring='Linux version \d',  
password=", login_timeout=60)
```

```
Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.  
Driver, labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.  
linuxbootprotocol.LinuxBootProtocol
```

BareboxDriver - Driver to control barebox via the console. BareboxDriver binds on top of a ConsoleProtocol.

Parameters

- **prompt** (*str*) – The default Barebox Prompt
- **bootstring** (*str*) – string that indicates that the Kernel is booting
- **password** (*str*) – optional, password to use for access to the shell
- **login_timeout** (*int*) – optional, timeout for access to the shell

```
bindings = {'console': <class 'labgrid.protocol.consoleprotocol.ConsoleProtocol'>}
```

```
__attrs_post_init__()
```

```
on_activate()
```

Activate the BareboxDriver

This function tries to login if not already active

```
on_deactivate()
```

Deactivate the BareboxDriver

Simply sets the internal status to 0

```
run(cmd: str, *, timeout: int = 30)
```

Run a command

```
reset()
```

Reset the board via a CPU reset

```
get_status()
```

Retrieve status of the BareboxDriver 0 means inactive, 1 means active.

Returns status of the driver

Return type int

```
await_boot()
```

Wait for the initial Linux version string to verify we successfully jumped into the kernel.

```
boot(name: str)
```

Boot the default or a specific boot entry

Parameters **name** (*str*) – name of the entry to boot

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, prompt=", autoboot='stop autoboot', interrupt='\n', bootstring='Linux ver-  
sion \d', password=", login_timeout=60) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.driver.bareboxdriver'
```

```
__repr__()
```

Automatically created by attrs.

labgrid.driver.commandmixin module

class labgrid.driver.commandmixin.**CommandMixin**

Bases: object

CommandMixin implementing common functions for drivers which support the CommandProtocol

`__attrs_post_init__()`

wait_for (*cmd, pattern, timeout=30.0, sleepduration=1*)

Wait until the pattern is detected in the output of cmd. Raises ExecutionError when the timeout expires.

Parameters

- **cmd** (*str*) – command to run on the shell
- **pattern** (*str*) – pattern as a string to look for in the output
- **timeout** (*float*) – timeout for the pattern detection
- **sleepduration** (*int*) – sleep time between the runs of the cmd

poll_until_success (*cmd, *, expected=0, tries=None, timeout=30.0, sleepduration=1*)

Poll a command until a specific exit code is detected. Takes a timeout and the number of tries to run the cmd. The sleepduration argument sets the duration between runs of the cmd.

Parameters

- **cmd** (*str*) – command to run on the shell
- **expected** (*int*) – exitcode to detect
- **tries** (*int*) – number of tries, can be None for infinite tries
- **timeout** (*float*) – timeout for the exitcode detection
- **sleepduration** (*int*) – sleep time between the runs of the cmd

Returns whether the command finally executed successfully

Return type bool

run_check (*cmd: str, *, timeout=30, codec='utf-8', decodeerrors='strict'*)

External run_check function, only available if the driver is active. Runs the supplied command and returns the stdout, raises an ExecutionError otherwise.

Parameters **cmd** (*str*) – command to run on the shell

Returns stdout of the executed command

Return type List[str]

`__dict__ = mappingproxy({'__module__': 'labgrid.driver.commandmixin', '__doc__': '\n`

`__module__ = 'labgrid.driver.commandmixin'`

`__weakref__`

list of weak references to the object (if defined)

labgrid.driver.common module

class labgrid.driver.common.**Driver** (*target, name*)

Bases: *labgrid.binding.BindingMixin*

Represents a driver which is used externally or by other drivers. It implements functionality based on directly accessing the Resource or by building on top of other Drivers.

Life cycle: - create - bind (n times) - activate - usage - deactivate

`__attrs_post_init__()`

`get_priority(protocol)`

Retrieve the priority for a given protocol

Arguments: protocol - protocol to search for in the MRO

Returns value of the priority if it is found, 0 otherwise.

Return type Int

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.driver.common'`

`__repr__()`

Automatically created by attrs.

`labgrid.driver.common.check_file(filename, *, command_prefix=[])`

labgrid.driver.consoleexpectmixin module

class `labgrid.driver.consoleexpectmixin.ConsoleExpectMixin`

Bases: object

Console driver mixin to implement the read, write, expect and sendline methods. It uses the internal `_read` and `_write` methods.

The class using the `ConsoleExpectMixin` must provide a logger and a `txdelay` attribute.

`__attrs_post_init__()`

`read(size=1, timeout=0.0)`

`write(data)`

`sendline(line)`

`sendcontrol(char)`

`expect(pattern, timeout=-1)`

`resolve_conflicts(client)`

`__dict__ = mappingproxy({'__module__': 'labgrid.driver.consoleexpectmixin', '__doc__'`

`__module__ = 'labgrid.driver.consoleexpectmixin'`

`__weakref__`

list of weak references to the object (if defined)

labgrid.driver.deditecrelaisdriver module

class `labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver(target, name)`

Bases: `labgrid.driver.common.Driver`, `labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol`

```

bindings = {'relais': {'DeditecRelais8', <class 'labgrid.resource.remote.NetworkDedit
__attrs_post_init__ ()
on_activate ()
    Called by the Target when this object has been activated
on_deactivate ()
    Called by the Target when this object has been deactivated
set (status)
    Implementations should set the status of the OneWirePort
get ()
    Implementations should return the status of the OneWirePort.
__abstractmethods__ = frozenset ({}))
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
__init__ (target, name) → None
    Initialize self. See help (type (self)) for accurate signature.
__module__ = 'labgrid.driver.deditecrelaisdriver'
__repr__ ()
    Automatically created by attrs.

```

labgrid.driver.dockerdriver module

Class for connecting to a docker daemon running on the host machine.

```

class labgrid.driver.dockerdriver.DockerDriver (target, name, image_uri=None,
                                                command=None, volumes=None,
                                                container_name=None, environ-
                                                ment=None, host_config=None,
                                                network_services=None)

```

Bases: *labgrid.protocol.powerprotocol.PowerProtocol, labgrid.driver.common.Driver*

The DockerDriver is used to create docker containers. This is done via communication with a docker daemon.

When a container is created the container is labeled with an cleanup strategy identifier. Currently only one strategy is implemented. This strategy simply deletes all labgrid created containers before each test run. This is to ensure cleanup of dangling containers from crashed tests or hanging containers.

Image pruning is not done by the driver.

For detailed information about the arguments see the “Docker SDK for Python” documentation <https://docker-py.readthedocs.io/en/stable/containers.html#container-objects>

Parameters `bindings` (*dict*) – The labgrid bindings

Args passed to `docker.create_container`: `image_uri` (str): The uri of the image to fetch `command` (str): The command to execute once container has been created `volumes` (list): The volumes to declare `environment` (list): Docker environment variables to set `host_config` (dict): Docker host configuration parameters `network_services` (list): Sequence of dicts each specifying a network service that the docker container exposes.

```

bindings = {'docker_daemon': {'DockerDaemon'}}
__attrs_post_init__ ()

```

on_activate()

On activation: 1. Import docker module (`_client` and `_container` remain available) 2. Connect to the docker daemon 3. Pull requested image from docker registry if needed 4. Create the new container according to parameters from `conf`

on_deactivate()

Remove container after use

on()

Start the container created during activation

off()

Stop the container created during activation

cycle()

Cycle the docker container by stopping and starting it

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__(target, name, image_uri=None, command=None, volumes=None, container_name=None, environment=None, host_config=None, network_services=None) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.dockerdriver'

__repr__()

Automatically created by attrs.

labgrid.driver.exception module

exception labgrid.driver.exception.**ExecutionError**(msg, stdout=None, stderr=None)

Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of valid

__init__(msg, stdout=None, stderr=None) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.exception'

__repr__()

Automatically created by attrs.

__weakref__

list of weak references to the object (if defined)

exception labgrid.driver.exception.**CleanUpError**(msg)

Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of valid

__init__(msg) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.exception'

__repr__()

Automatically created by attrs.

__weakref__

list of weak references to the object (if defined)

labgrid.driver.externalconsoledriver module

```
class labgrid.driver.externalconsoledriver.ExternalConsoleDriver (target, name,
                                                                cmd, txde-
                                                                lay=0.0)
```

Bases: *labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.consoleprotocol.ConsoleProtocol*

Driver implementing the ConsoleProtocol interface using a subprocess

```
__attrs_post_init__ ()
```

```
open ()
```

Starts the subprocess, does nothing if it is already closed

```
close ()
```

Stops the subprocess, does nothing if it is already closed

```
on_deactivate ()
```

Called by the Target when this object has been deactivated

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, cmd, txdelay=0.0) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.driver.externalconsoledriver'
```

```
__repr__ ()
```

Automatically created by attrs.

labgrid.driver.fake module

```
class labgrid.driver.fake.FakeConsoleDriver (target, name, txdelay=0.0)
```

Bases: *labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.consoleprotocol.ConsoleProtocol*

```
__attrs_post_init__ ()
```

```
open ()
```

```
close ()
```

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, txdelay=0.0) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.driver.fake'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.driver.fake.FakeCommandDriver (target, name)
```

Bases: *labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver, labgrid.protocol.commandprotocol.CommandProtocol*

```
run (*args, timeout=None)
```

Run a command

run_check (*args)

External run_check function, only available if the driver is active. Runs the supplied command and returns the stdout, raises an ExecutionError otherwise.

Parameters **cmd** (*str*) – command to run on the shell

Returns stdout of the executed command

Return type List[str]

get_status ()

Get status of the Driver

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__ (target, name) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.fake'

__repr__ ()

Automatically created by attrs.

class labgrid.driver.fake.**FakeFileTransferDriver** (target, name)

Bases: *labgrid.driver.common.Driver*, *labgrid.protocol.filetransferprotocol.FileTransferProtocol*

get (*args)

put (*args)

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__ (target, name) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.fake'

__repr__ ()

Automatically created by attrs.

class labgrid.driver.fake.**FakePowerDriver** (target, name)

Bases: *labgrid.driver.common.Driver*, *labgrid.protocol.powerprotocol.PowerProtocol*

on (*args)

off (*args)

cycle (*args)

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__ (target, name) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.fake'

__repr__ ()

Automatically created by attrs.

labgrid.driver.fastbootdriver module

```
class labgrid.driver.fastbootdriver.AndroidFastbootDriver (target, name,
                                                    image=None,
                                                    sparse_size=None)
```

Bases: *labgrid.driver.common.Driver*

```
bindings = {'fastboot': {'AndroidFastboot', 'NetworkAndroidFastboot'}}
```

```
__attrs_post_init__ ()
```

```
on_activate ()
```

Called by the Target when this object has been activated

```
on_deactivate ()
```

Called by the Target when this object has been deactivated

```
__call__ (*args)
```

Call self as a function.

```
boot (filename)
```

```
flash (partition, filename)
```

```
run (cmd)
```

```
continue_boot ()
```

```
getvar (var)
```

Return variable value via 'fastboot getvar <var>'.

```
oem_getenv (var)
```

Return barebox environment variable value via 'fastboot oem getenv <var>'.

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, image=None, sparse_size=None) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.driver.fastbootdriver'
```

```
__repr__ ()
```

Automatically created by attrs.

labgrid.driver.filedigitaloutput module

```
class labgrid.driver.filedigitaloutput.FileDigitalOutputDriver (target, name,
                                                                filepath,
                                                                false_repr='0n',
                                                                true_repr='1n')
```

Bases: *labgrid.driver.common.Driver*, *labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol*

Two arbitrary string values `false_repr` and `true_repr` are defined as representations for False and True. These values are written to a file and read from it. If the file's content does not match any of the representations it defaults to False. A prime example for using this driver is Linux's sysfs.

```
bindings = {}
```

```
__attrs_post_init__ ()
```

`get()`

Implementations should return the status of the OneWirePort.

`set(status)`

Implementations should set the status of the OneWirePort

`__abstractmethods__ = frozenset({})`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, filepath, false_repr='0n', true_repr='1n') → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.driver.filedigitaloutput'`

`__repr__()`

Automatically created by attrs.

labgrid.driver.flashromdriver module

class `labgrid.driver.flashromdriver.FlashromDriver(target, name, image=None)`

Bases: `labgrid.driver.common.Driver`, `labgrid.protocol.bootstrapprotocol.Bootstrapprotocol`

The Flashrom driver used the flashrom utility to write an image to a raw rom. The driver is a pure wrapper of the flashrom utility

`bindings = {'flashrom_resource': {'Flashrom', <class 'labgrid.resource.flashrom.Network`

`__attrs_post_init__()`

`on_activate()`

Called by the Target when this object has been activated

`on_deactivate()`

Called by the Target when this object has been deactivated

`__call__(*args)`

Call self as a function.

`load(filename=None)`

`__abstractmethods__ = frozenset({})`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, image=None) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.driver.flashromdriver'`

`__repr__()`

Automatically created by attrs.

labgrid.driver.gpiodriver module

All GPIO-related drivers

class `labgrid.driver.gpiodriver.GpioDigitalOutputDriver(target, name)`

Bases: `labgrid.driver.common.Driver`, `labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol`


```

bindings = {'gpio': {'NetworkSysfsGPIO', 'SysfsGPIO'}}
__attrs_post_init__()
on_activate()
    Called by the Target when this object has been activated
on_deactivate()
    Called by the Target when this object has been deactivated
set(status)
    Implementations should set the status of the OneWirePort
get()
    Implementations should return the status of the OneWirePort.
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.driver.gpiodriver'
__repr__()
    Automatically created by attrs.

```

labgrid.driver.modbusdriver module

```

class labgrid.driver.modbusdriver.ModbusCoilDriver(target, name)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.
           DigitalOutputProtocol
bindings = {'coil': 'ModbusTCPCoil'}
__attrs_post_init__()
on_activate()
    Called by the Target when this object has been activated
on_deactivate()
    Called by the Target when this object has been deactivated
set(status)
    Implementations should set the status of the OneWirePort
get()
    Implementations should return the status of the OneWirePort.
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.driver.modbusdriver'
__repr__()
    Automatically created by attrs.

```

labgrid.driver.onewiredriver module

class labgrid.driver.onewiredriver.**OneWirePIODriver** (*target, name*)

Bases: *labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol*

bindings = {'port': 'OneWirePIO'}

__attrs_post_init__ ()

on_activate ()

Called by the Target when this object has been activated

on_deactivate ()

Called by the Target when this object has been deactivated

set (*status*)

Implementations should set the status of the OneWirePort

get ()

Implementations should return the status of the OneWirePort.

__abstractmethods__ = frozenset ({})

__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name*) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.onewiredriver'

__repr__ ()

Automatically created by attrs.

labgrid.driver.openocddriver module

class labgrid.driver.openocddriver.**OpenOCDDriver** (*target, name, config, search=[], image=None*)

Bases: *labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.BootstrapProtocol*

bindings = {'interface': {'AlteraUSBBlaster', 'NetworkAlteraUSBBlaster'}}

__attrs_post_init__ ()

load (*filename=None*)

execute (*commands: list*)

__abstractmethods__ = frozenset ({})

__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, config, search=[], image=None*) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.openocddriver'

__repr__ ()

Automatically created by attrs.

labgrid.driver.powerdriver module**class** labgrid.driver.powerdriver.**PowerResetMixin**Bases: *labgrid.protocol.resetprotocol.ResetProtocol*

PowerResetMixin implements the ResetProtocol for drivers which support the PowerProtocol

priorities = {<class 'labgrid.protocol.resetprotocol.ResetProtocol'>: -10}**__attrs_post_init__** ()**reset** ()**__abstractmethods__** = frozenset ({})**__attrs_attrs__** = ()**__init__** () → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.powerdriver'**__repr__** ()

Automatically created by attrs.

class labgrid.driver.powerdriver.**ManualPowerDriver** (*target, name*)Bases: *labgrid.driver.common.Driver, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol*

ManualPowerDriver - Driver to tell the user to control a target's power

on ()**off** ()**cycle** ()**__abstractmethods__** = frozenset ({})**__attrs_attrs__** = (Attribute (name='target', default=NOTHING, validator=None, repr=True**__init__** (*target, name*) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.powerdriver'**__repr__** ()

Automatically created by attrs.

class labgrid.driver.powerdriver.**ExternalPowerDriver** (*target, name, cmd_on, cmd_off,*Bases: *labgrid.driver.common.Driver, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol*

ExternalPowerDriver - Driver using an external command to control a target's power

on ()**off** ()**cycle** ()**__abstractmethods__** = frozenset ({})**__attrs_attrs__** = (Attribute (name='target', default=NOTHING, validator=None, repr=True

```
__init__(target, name, cmd_on, cmd_off, cmd_cycle=None, delay=2.0) → None  
Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.driver.powerdriver'
```

```
__repr__()  
Automatically created by attrs.
```

```
class labgrid.driver.powerdriver.NetworkPowerDriver(target, name, delay=2.0)
```

```
Bases: labgrid.driver.common.Driver, labgrid.driver.powerdriver.  
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol
```

NetworkPowerDriver - Driver using a networked power switch to control a target's power

```
bindings = {'port': <class 'labgrid.resource.power.NetworkPowerPort'>}
```

```
__attrs_post_init__()
```

```
on_activate()  
Called by the Target when this object has been activated
```

```
on()
```

```
off()
```

```
cycle()
```

```
get()
```

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, delay=2.0) → None  
Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.driver.powerdriver'
```

```
__repr__()  
Automatically created by attrs.
```

```
class labgrid.driver.powerdriver.DigitalOutputPowerDriver(target, name, de-  
lay=1.0)
```

```
Bases: labgrid.driver.common.Driver, labgrid.driver.powerdriver.  
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol
```

DigitalOutputPowerDriver uses a DigitalOutput to control the power of a DUT.

```
bindings = {'output': <class 'labgrid.protocol.digitaloutputprotocol.DigitalOutputPro
```

```
__attrs_post_init__()
```

```
on()
```

```
off()
```

```
cycle()
```

```
get()
```

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, delay=1.0) → None  
Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.driver.powerdriver'
```

```
__repr__ ()
    Automatically created by attrs.
```

```
class labgrid.driver.powerdriver.YKUSHPowerDriver (target, name, delay=2.0)
```

```
Bases:      labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
            PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol
```

YKUSHPowerDriver - Driver using a YEPKIT YKUSH switchable USB hub to control a target's power - <https://www.yepkit.com/products/ykush>

```
bindings = {'port': 'YKUSHPowerPort'}
```

```
__attrs_post_init__ ()
```

```
on ()
```

```
off ()
```

```
cycle ()
```

```
get ()
```

```
__abstractmethods__ = frozenset ({})
```

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, delay=2.0) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.driver.powerdriver'
```

```
__repr__ ()
    Automatically created by attrs.
```

```
class labgrid.driver.powerdriver.USBPowerDriver (target, name, delay=2.0)
```

```
Bases:      labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
            PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol
```

USBPowerDriver - Driver using a power switchable USB hub and the uhubctl tool (<https://github.com/mvp/uhubctl>) to control a target's power

```
bindings = {'hub': {'NetworkUSBPowerPort', 'USBPowerPort'}}
```

```
__attrs_post_init__ ()
```

```
on ()
```

```
off ()
```

```
cycle ()
```

```
get ()
```

```
__abstractmethods__ = frozenset ({})
```

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, delay=2.0) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.driver.powerdriver'
```

```
__repr__ ()
    Automatically created by attrs.
```

```
class labgrid.driver.powerdriver.PDUDaemonDriver (target, name, delay=5)
    Bases: labgrid.driver.common.Driver, labgrid.driver.powerdriver.
           PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

    PDUDaemonDriver - Driver using a PDU port available via pdudaemon

    bindings = {'port': 'PDUDaemonPort'}

    __attrs_post_init__ ()

    on_activate ()
        Called by the Target when this object has been activated

    on ()

    off ()

    cycle ()

    get ()

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

    __init__ (target, name, delay=5) → None
        Initialize self. See help(type(self)) for accurate signature.

    __module__ = 'labgrid.driver.powerdriver'

    __repr__ ()
        Automatically created by attrs.
```

labgrid.driver.qemudriver module

The QEMUDriver implements a driver to use a QEMU target

```
class labgrid.driver.qemudriver.QEMUDriver (target, name, qemu_bin, machine, cpu,
                                             memory, extra_args, boot_args=None,
                                             kernel=None, disk=None, rootfs=None,
                                             dtb=None, flash=None)

    Bases: labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.
           common.Driver, labgrid.protocol.powerprotocol.PowerProtocol, labgrid.
           protocol.consoleprotocol.ConsoleProtocol
```

The QEMUDriver implements an interface to start targets as qemu instances.

The kernel, flash, rootfs and dtb arguments refer to images and paths declared in the environment configuration.

Parameters

- **qemu_bin** (*str*) – reference to the tools key for the QEMU binary
- **machine** (*str*) – QEMU machine type
- **cpu** (*str*) – QEMU cpu type
- **memory** (*str*) – QEMU memory size (ends with M or G)
- **extra_args** (*str*) – extra QEMU arguments, they are passed directly to the QEMU binary
- **boot_args** (*str*) – optional, additional kernel boot argument
- **kernel** (*str*) – optional, reference to the images key for the kernel

- **disk** (*str*) – optional, reference to the images key for the disk image
- **flash** (*str*) – optional, reference to the images key for the flash image
- **rootfs** (*str*) – optional, reference to the paths key for use as the virtio-9p filesystem
- **dtb** (*str*) – optional, reference to the image key for the device tree

__attrs_post_init__ ()

on_activate ()

Called by the Target when this object has been activated

on_deactivate ()

Called by the Target when this object has been deactivated

on ()

Start the QEMU subprocess, accept the unix socket connection and afterwards start the emulator using a QMP Command

off ()

Stop the emulator using a monitor command and await the exitcode

cycle ()

Cycle the emulator by restarting it

monitor_command (*command*)

Execute a monitor_command via the QMP

__abstractmethods__ = frozenset ({})

__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, qemu_bin, machine, cpu, memory, extra_args, boot_args=None, kernel=None, disk=None, rootfs=None, dtb=None, flash=None*) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.qemudriver'

__repr__ ()

Automatically created by attrs.

labgrid.driver.quartushpsdriver module

class labgrid.driver.quartushpsdriver.**QuartusHPSDriver** (*target, name, image=None*)

Bases: *labgrid.driver.common.Driver*

bindings = {'interface': {'AlteraUSBBlaster', 'NetworkAlteraUSBBlaster'}}

__attrs_post_init__ ()

flash (*filename=None, address=0*)

__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, image=None*) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.quartushpsdriver'

__repr__ ()

Automatically created by attrs.

labgrid.driver.resetdriver module

```
class labgrid.driver.resetdriver.DigitalOutputResetDriver(target, name, de-  
                                                    lay=1.0)  
Bases: labgrid.driver.common.Driver, labgrid.protocol.resetprotocol.  
ResetProtocol
```

DigitalOutputResetDriver - Driver using a DigitalOutput to reset the target

```
bindings = {'output': <class 'labgrid.protocol.digitaloutputprotocol.DigitalOutputPro  
__attrs_post_init__()  
reset()  
__abstractmethods__ = frozenset({})  
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True  
__init__(target, name, delay=1.0) → None  
    Initialize self. See help(type(self)) for accurate signature.  
__module__ = 'labgrid.driver.resetdriver'  
__repr__()  
    Automatically created by attrs.
```

labgrid.driver.serialdigitaloutput module

```
class labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver(target,  
                                                                    name,  
                                                                    sig-  
                                                                    nal)  
Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.  
DigitalOutputProtocol
```

Controls the state of a GPIO using the control lines of a serial port.

This driver uses the flow-control pins of a serial port (for example an USB-UART-dongle) to control some external power switch. You may connect some kind of relay board to the flow control pins.

The serial port should NOT be used for serial communication at the same time. This will probably reset the flow-control signals.

Usable signals are DTR and RTS.

```
bindings = {'serial': <class 'labgrid.driver.serialdriver.SerialDriver'>}  
__attrs_post_init__()  
get()  
    Implementations should return the status of the OneWirePort.  
set(value)  
    Implementations should set the status of the OneWirePort  
__abstractmethods__ = frozenset({})  
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True  
__init__(target, name, signal) → None  
    Initialize self. See help(type(self)) for accurate signature.  
__module__ = 'labgrid.driver.serialdigitaloutput'
```


`__repr__()`
Automatically created by attrs.

labgrid.driver.serialdriver module

```
class labgrid.driver.serialdriver.SerialDriver (target, name, txdelay=0.0)
    Bases: labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.consoleprotocol.ConsoleProtocol

    Driver implementing the ConsoleProtocol interface over a SerialPort connection

    bindings = {'port': {'NetworkSerialPort', 'SerialPort'}}

    message = 'The installed pyserial version does not contain important RFC2217 fixes.\nY

    __attrs_post_init__()

    on_activate()
        Called by the Target when this object has been activated

    on_deactivate()
        Called by the Target when this object has been deactivated

    open()
        Opens the serialport, does nothing if it is already closed

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

    __init__ (target, name, txdelay=0.0) → None
        Initialize self. See help(type(self)) for accurate signature.

    __module__ = 'labgrid.driver.serialdriver'

    __repr__()
        Automatically created by attrs.

    close()
        Closes the serialport, does nothing if it is already closed
```

labgrid.driver.shelldriver module

The ShellDriver provides the CommandProtocol, ConsoleProtocol and InfoProtocol on top of a SerialPort.

```
class labgrid.driver.shelldriver.ShellDriver (target, name, prompt, login_prompt,
                                             username, password="", keyfile="",
                                             login_timeout=60, console_ready="",
                                             await_login_timeout=2)

    Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver, labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.filetransferprotocol.FileTransferProtocol
```

ShellDriver - Driver to execute commands on the shell ShellDriver binds on top of a ConsoleProtocol.

Parameters

- **prompt** (*regex*) – the shell prompt to detect
- **login_prompt** (*regex*) – the login prompt to detect
- **username** (*str*) – username to login with

- **password** (*str*) – password to login with
- **keyfile** (*str*) – keyfile to bind mount over users authorized keys
- **login_timeout** (*int*) – optional, timeout for login prompt detection

```
bindings = {'console': <class 'labgrid.protocol.consoleprotocol.ConsoleProtocol'>}
```

```
__attrs_post_init__()
```

```
on_activate()
```

Called by the Target when this object has been activated

```
on_deactivate()
```

Called by the Target when this object has been deactivated

```
run(cmd, timeout=30.0, codec='utf-8', decodeerrors='strict')
```

Run a command

```
get_status()
```

Returns the status of the shell-driver. 0 means not connected/found, 1 means shell

```
put_ssh_key(keyfile_path)
```

```
put_bytes(buf: bytes, remotefile: str)
```

Upload a file to the target. Will silently overwrite the remote file if it already exists.

Parameters

- **buf** (*bytes*) – file contents
- **remotefile** (*str*) – destination filename on the target

Raises *ExecutionError* – if something went wrong

```
put(localfile: str, remotefile: str)
```

Upload a file to the target. Will silently overwrite the remote file if it already exists.

Parameters

- **localfile** (*str*) – source filename on the local machine
- **remotefile** (*str*) – destination filename on the target

Raises

- **IOError** – if the provided localfile could not be found
- *ExecutionError* – if something else went wrong

```
get_bytes(remotefile: str)
```

Download a file from the target.

Parameters **remotefile** (*str*) – source filename on the target

Returns (bytes) file contents

Raises *ExecutionError* – if something went wrong

```
get(remotefile: str, localfile: str)
```

Download a file from the target. Will silently overwrite the local file if it already exists.

Parameters

- **remotefile** (*str*) – source filename on the target
- **localfile** (*str*) – destination filename on the local machine (can be relative)

Raises

- **IOError** – if localfile could not be written
- **ExecutionError** – if something went wrong

run_script (*data: bytes, timeout: int = 60*)

Upload a script to the target and run it.

Parameters

- **data** (*bytes*) – script data
- **timeout** (*int*) – timeout for the script to finish execution

Returns str, stderr: str, return_value: int)

Return type Tuple of (stdout

Raises **ExecutionError** – if something went wrong

run_script_file (*scriptfile: str, *args, timeout: int = 60*)

Upload a script file to the target and run it.

Parameters

- **scriptfile** (*str*) – source file on the local file system to upload to the target
- ***args** – (list of str): any arguments for the script as positional arguments
- **timeout** (*int*) – timeout for the script to finish execution

Returns str, stderr: str, return_value: int)

Return type Tuple of (stdout

Raises

- **ExecutionError** – if something went wrong
- **IOError** – if the provided localfile could not be found

__abstractmethods__ = frozenset ({})

__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, prompt, login_prompt, username, password="", keyfile="", login_timeout=60, console_ready="", await_login_timeout=2*) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.shelldriver'

__repr__ ()

Automatically created by attrs.

labgrid.driver.sigrokdriver module

class labgrid.driver.sigrokdriver.**SigrokCommon** (*target, name*)

Bases: *labgrid.driver.common.Driver*

__attrs_post_init__ ()

on_activate ()

Called by the Target when this object has been activated

on_deactivate ()

Called by the Target when this object has been deactivated

__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True

```
__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.driver.sigrokdriver'
__repr__ ()
    Automatically created by attrs.
```

```
class labgrid.driver.sigrokdriver.SigrokDriver(target, name)
    Bases: labgrid.driver.sigrokdriver.SigrokCommon
```

The SigrokDriver uses sigrok-cli to record samples and expose them as python dictionaries.

Parameters `bindings` (*dict*) – driver to use with sigrok

```
bindings = {'sigrok': {<class 'labgrid.resource.udev.SigrokUSBDevice'>, <class 'labgrid.driver.sigrokdriver.SigrokDriver'>}}
capture(filename, samplerate='200k')
stop()
analyze(args, filename=None)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))
__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.driver.sigrokdriver'
__repr__ ()
    Automatically created by attrs.
```

```
class labgrid.driver.sigrokdriver.SigrokPowerDriver(target, name, delay=3.0,
                                                    max_voltage=None,
                                                    max_current=None)
    Bases: labgrid.driver.sigrokdriver.SigrokCommon, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol
```

The SigrokPowerDriverDriver uses sigrok-cli to control a PSU and collect measurements.

Parameters `bindings` (*dict*) – driver to use with sigrok

```
bindings = {'sigrok': {<class 'labgrid.resource.udev.SigrokUSBSerialDevice'>, <class 'labgrid.driver.sigrokdriver.SigrokPowerDriver'>}}
on()
off()
cycle()
set_voltage_target(value)
set_current_limit(value)
get()
measure()
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))
__init__(target, name, delay=3.0, max_voltage=None, max_current=None) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.driver.sigrokdriver'
```

`__repr__()`
Automatically created by attrs.

labgrid.driver.smallubootdriver module

```
class labgrid.driver.smallubootdriver.SmallUBootDriver(target, name, prompt=",
autoboot='stop autoboot',
password=", interrupt='n',
init_commands=NOTHING,
password_prompt='enter Password:',
boot_expression='U-
Boot 20\d+', boot-
string='Linux version
\d', boot_command='run
bootcmd', boot_secret='a',
login_timeout=60.0)
```

Bases: `labgrid.driver.ubootdriver.UBootDriver`

SmallUBootDriver is meant as a driver for UBoot with only little functionality compared to standard a standard UBoot. Especially is copes with the following limitations:

- The UBoot does not have a real password-prompt but can be activated by entering a “secret” after a message was displayed.
- The command line is does not have a build-in echo command. Thus this driver uses ‘Unknown Command’ messages as marker before and after the output of a command.
- Since there is no echo we can not return the exit code of the command. Commands will always return 0 unless the command was not found.

This driver needs the following features activated in UBoot to work:

- The UBoot must not have real password prompt. Instead it must be keyword activated. For example it should be activated by a dialog like the following: UBoot: “Autobooting in 1s...” Labgrid: “secret” UBoot: <switching to console>
- The UBoot must be able to parse multiple commands in a single line separated by “;”.
- The UBoot must support the “bootm” command to boot from a memory location.

This driver was created especially for the following devices:

- TP-Link WR841 v11

boot (*name*)

Boot the device from the given memory location using ‘bootm’.

Parameters *name* (*str*) – address to boot

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, prompt="*, *autoboot='stop autoboot'*, *password="*, *interrupt='n'*,
init_commands=NOTHING, *password_prompt='enter Password:'*, *boot_expression='U-*
Boot 20\d+', *bootstring='Linux version* *\d'*, *boot_command='run bootcmd'*,
boot_secret='a', *login_timeout=60.0)* → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.smallubootdriver'

```
__repr__ ()  
    Automatically created by attrs.
```

labgrid.driver.sshdriver module

The SSHDriver uses SSH as a transport to implement CommandProtocol and FileTransferProtocol

```
class labgrid.driver.sshdriver.SSHDriver (target, name, keyfile="", stderr_merge=False)  
    Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver, labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.filetransferprotocol.FileTransferProtocol  
  
    SSHDriver - Driver to execute commands via SSH  
  
    bindings = {'networkservice': 'NetworkService'}  
  
    priorities = {<class 'labgrid.protocol.commandprotocol.CommandProtocol'>: 10, <class  
    __attrs_post_init__ ()  
  
    on_activate ()  
        Called by the Target when this object has been activated  
  
    on_deactivate ()  
        Called by the Target when this object has been deactivated  
  
    run (cmd, codec='utf-8', decodeerrors='strict', timeout=None)  
        Run a command  
  
    interact (cmd=None)  
  
    scp (*, src, dst)  
  
    rsync (*, src, dst, extra=[])  
  
    sshfs (*, path, mountpoint)  
  
    get_status ()  
        The SSHDriver is always connected, return 1  
  
    put (filename, remotepath="")  
  
    get (filename, destination='.')  
  
    __abstractmethods__ = frozenset ({})  
  
    __attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True  
    __init__ (target, name, keyfile="", stderr_merge=False) → None  
        Initialize self. See help(type(self)) for accurate signature.  
  
    __module__ = 'labgrid.driver.sshdriver'  
  
    __repr__ ()  
        Automatically created by attrs.
```

labgrid.driver.ubootdriver module

The U-Boot Module contains the UBootDriver

```
class labgrid.driver.ubootdriver.UBootDriver (target, name, prompt="", autoboot='stop
autoboot', password="", interrupt='n',
init_commands=NOTHING, password_prompt='enter Password:',
boot_expression='U-Boot 20\d+',
bootstring='Linux version \d',
boot_command='run bootcmd', login_timeout=30)
```

Bases: `labgrid.driver.commandmixin.CommandMixin`, `labgrid.driver.common.Driver`, `labgrid.protocol.commandprotocol.CommandProtocol`, `labgrid.protocol.linuxbootprotocol.LinuxBootProtocol`

UBootDriver - Driver to control uboot via the console. UBootDriver binds on top of a ConsoleProtocol.

Parameters

- **prompt** (*str*) – The default UBoot Prompt
- **password** (*str*) – optional password to unlock UBoot
- **init_commands** (*Tuple[str]*) – a tuple of commands to run after unlock
- **interrupt** (*str*) – interrupt character to use to go to prompt
- **password_prompt** (*str*) – string to detect the password prompt
- **boot_expression** (*str*) – string to search for on UBoot start
- **bootstring** (*str*) – string that indicates that the Kernel is booting
- **boot_command** (*str*) – optional boot command to boot target
- **login_timeout** (*int*) – optional, timeout for login prompt detection

```
bindings = {'console': <class 'labgrid.protocol.consoleprotocol.ConsoleProtocol'>}
```

```
__attrs_post_init__()
```

```
on_activate()
```

Activate the UBootDriver

This function checks for a prompt and awaits it if not already active

```
on_deactivate()
```

Deactivate the UBootDriver

Simply sets the internal status to 0

```
run (cmd, timeout=30)
```

Runs the specified command on the shell and returns the output.

Parameters

- **cmd** (*str*) – command to run on the shell
- **timeout** (*int*) – optional, how long to wait for completion

Returns if successful, None otherwise

Return type `Tuple[List[str],List[str], int]`

```
get_status()
```

Retrieve status of the UBootDriver. 0 means inactive, 1 means active.

Returns status of the driver

Return type `int`

reset ()

Reset the board via a CPU reset

await_boot ()

Wait for the initial Linux version string to verify we successfully jumped into the kernel.

boot (*name*)

Boot the default or a specific boot entry

Parameters *name* (*str*) – name of the entry to boot

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target*, *name*, *prompt*=", *autoboot*='stop autoboot', *password*=", *interrupt*='\n',
init_commands=NOTHING, *password_prompt*='enter Password:', *boot_expression*='U-
Boot 20\d+', *bootstring*='Linux version \d', *boot_command*='run bootcmd', *login_timeout*=30) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.ubootdriver'

__repr__ ()

Automatically created by attrs.

labgrid.driver.usbloader module

class labgrid.driver.usbloader.**MXSUSBDriver** (*target*, *name*, *image*=None)

Bases: *labgrid.driver.common.Driver*, *labgrid.protocol.bootstrapprotocol.BootstrapProtocol*

bindings = {'loader': {'MXSUSBLoader', 'NetworkMXSUSBLoader'}}

__attrs_post_init__ ()

on_activate ()

Called by the Target when this object has been activated

on_deactivate ()

Called by the Target when this object has been deactivated

load (*filename*=None)

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target*, *name*, *image*=None) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.usbloader'

__repr__ ()

Automatically created by attrs.

class labgrid.driver.usbloader.**IMXUSBDriver** (*target*, *name*, *image*=None)

Bases: *labgrid.driver.common.Driver*, *labgrid.protocol.bootstrapprotocol.BootstrapProtocol*

bindings = {'loader': {'IMXUSBLoader', 'MXSUSBLoader', 'NetworkIMXUSBLoader', 'Networ

__attrs_post_init__ ()

on_activate()

Called by the Target when this object has been activated

on_deactivate()

Called by the Target when this object has been deactivated

load(filename=None)

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__(target, name, image=None) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.usbloader'

__repr__()

Automatically created by attrs.

```
class labgrid.driver.usbloader.RKUSBDriver(target, name, image=None,
                                           usb_loader=None)
Bases: labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.
        BootstrapProtocol
```

bindings = {'loader': {'NetworkRKUSBLoader', 'RKUSBLoader'}}

__attrs_post_init__()

on_activate()

Called by the Target when this object has been activated

on_deactivate()

Called by the Target when this object has been deactivated

load(filename=None)

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__(target, name, image=None, usb_loader=None) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.driver.usbloader'

__repr__()

Automatically created by attrs.

labgrid.driver.usbsdmuxdriver module

```
class labgrid.driver.usbsdmuxdriver.USBSDMuxDriver(target, name)
```

Bases: *labgrid.driver.common.Driver*

The USBSDMuxDriver uses the usbsdmux tool (<https://github.com/pengutronix/usbsdmux>) to control the USB-SD-Mux hardware

Parameters bindings (*dict*) – driver to use with usbsdmux

bindings = {'mux': {'NetworkUSBSDMuxDevice', 'USBSDMuxDevice'}}

__attrs_post_init__()

set_mode(mode)

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.driver.usbsdmuxdriver'
__repr__ ()
    Automatically created by attrs.
```

labgrid.driver.usbstoragedriver module

```
class labgrid.driver.usbstoragedriver.Mode
```

Bases: `enum.Enum`

An enumeration.

```
DD = 1
```

```
BMAPTOOL = 2
```

```
__module__ = 'labgrid.driver.usbstoragedriver'
```

```
class labgrid.driver.usbstoragedriver.USBStorageDriver(target, name, image=None)
```

Bases: `labgrid.driver.common.Driver`

```
bindings = {'storage': {'NetworkUSBMassStorage', 'NetworkUSBSDMuxDevice', 'USBMassStorage'}}
```

```
__attrs_post_init__ ()
```

```
on_activate ()
```

Called by the Target when this object has been activated

```
on_deactivate ()
```

Called by the Target when this object has been deactivated

```
write_image(filename=None, mode=<Mode.DD: 1>, partition=None, skip=0, seek=0)
```

Writes the file specified by filename or if not specified by config image subkey to the bound USB storage root device or partition.

Parameters

- **filename** (*str*) – optional, path to the image to write to bound USB storage
- **mode** (*Mode*) – optional, `Mode.DD` or `Mode.BMAPTOOL` (defaults to `Mode.DD`)
- **partition** (*int or None*) – optional, write to the specified partition or `None` for writing to root device (defaults to `None`)
- **skip** (*int*) – optional, skip n 512-sized blocks at start of input file (defaults to 0)
- **seek** (*int*) – optional, skip n 512-sized blocks at start of output (defaults to 0)

```
get_size ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
Attribute(name='name', default=NOTHING, validator=None, repr=True)
Attribute(name='image', default=None, validator=None, repr=True)
```

```
__init__(target, name, image=None) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.driver.usbstoragedriver'
```

```
__repr__ ()
```

Automatically created by attrs.

```

class labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver (target, name, im-
                                                                age=None)
    Bases: labgrid.driver.usbstoragedriver.USBStorageDriver
    __attrs_post_init__ ()
    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
    __init__ (target, name, image=None) → None
        Initialize self. See help(type(self)) for accurate signature.
    __module__ = 'labgrid.driver.usbstoragedriver'
    __repr__ ()
        Automatically created by attrs.

```

labgrid.driver.usbtmcdriver module

```

class labgrid.driver.usbtmcdriver.USBTMCDriver (target, name)
    Bases: labgrid.driver.common.Driver
    bindings = {'tmc': {'NetworkUSBTMC', 'USBTMC'}}
    __attrs_post_init__ ()
    on_activate ()
        Called by the Target when this object has been activated
    on_deactivate ()
        Called by the Target when this object has been deactivated
    command (cmd)
    query (cmd, binary=False, raw=False)
    identify ()
    get_channel_info (channel)
    get_channel_values (channel)
    get_screenshot ()
    get_bool (cmd)
    get_int (cmd)
    get_decimal (cmd)
    get_str (cmd)
    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
    __init__ (target, name) → None
        Initialize self. See help(type(self)) for accurate signature.
    __module__ = 'labgrid.driver.usbtmcdriver'
    __repr__ ()
        Automatically created by attrs.

```

labgrid.driver.usbvideodriver module

```
class labgrid.driver.usbvideodriver.USBVideoDriver (target, name)
    Bases: labgrid.driver.common.Driver

    bindings = {'video': {'NetworkUSBVideo', 'USBVideo'}}

    get_caps ()

    select_caps (hint=None)

    get_pipeline ()

    stream (caps_hint=None)

    __attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True)
    __init__ (target, name) → None
        Initialize self. See help(type(self)) for accurate signature.

    __module__ = 'labgrid.driver.usbvideodriver'

    __repr__ ()
        Automatically created by attrs.
```

labgrid.driver.xenadriver module

```
class labgrid.driver.xenadriver.XenaDriver (target, name)
    Bases: labgrid.driver.common.Driver

    Xena Driver

    bindings = {'xena_manager': 'XenaManager'}

    __attrs_post_init__ ()

    on_activate ()
        Called by the Target when this object has been activated

    on_deactivate ()
        Called by the Target when this object has been deactivated

    get_session ()

    __attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True)
    __init__ (target, name) → None
        Initialize self. See help(type(self)) for accurate signature.

    __module__ = 'labgrid.driver.xenadriver'

    __repr__ ()
        Automatically created by attrs.
```

labgrid.protocol package

Submodules

labgrid.protocol.bootstrapprotocol module

```
class labgrid.protocol.bootstrapprotocol.BootstrapProtocol
```

```
    Bases: abc.ABC
```

```
    abstract load (filename: str)
```

```
    __abstractmethods__ = frozenset({'load'})
```

```
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.bootstrapprotocol', 'load':
```

```
    __module__ = 'labgrid.protocol.bootstrapprotocol'
```

```
    __weakref__
```

```
        list of weak references to the object (if defined)
```

labgrid.protocol.commandprotocol module

```
class labgrid.protocol.commandprotocol.CommandProtocol
```

```
    Bases: abc.ABC
```

```
    Abstract class for the CommandProtocol
```

```
    abstract run (command: str)
```

```
        Run a command
```

```
    abstract run_check (command: str)
```

```
        Run a command, return str if succesful, ExecutionError otherwise
```

```
    abstract get_status ()
```

```
        Get status of the Driver
```

```
    abstract wait_for ()
```

```
        Wait for a shell command to return with the specified output
```

```
    abstract poll_until_success ()
```

```
        Repeatedly call a shell command until it succeeds
```

```
    __abstractmethods__ = frozenset({'get_status', 'poll_until_success', 'run', 'run_check'
```

```
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.commandprotocol', '__doc__':
```

```
    __module__ = 'labgrid.protocol.commandprotocol'
```

```
    __weakref__
```

```
        list of weak references to the object (if defined)
```

labgrid.protocol.consoleprotocol module

```
class labgrid.protocol.consoleprotocol.ConsoleProtocol
```

```
    Bases: abc.ABC
```

```
    Abstract class for the ConsoleProtocol
```

```
    abstract read ()
```

```
        Read data from underlying port
```

```
    abstract write (data: bytes)
```

```
        Write data to underlying port
```

```
    sendline (line: str)
```

sendcontrol (*char: str*)

expect (*pattern: str*)

class Client

Bases: abc.ABC

abstract get_console_matches ()

abstract notify_console_match (*pattern, match*)

__abstractmethods__ = frozenset({'get_console_matches', 'notify_console_match'})

__dict__ = mappingproxy({'__module__': 'labgrid.protocol.consoleprotocol', 'get_co

__module__ = 'labgrid.protocol.consoleprotocol'

__weakref__

list of weak references to the object (if defined)

__abstractmethods__ = frozenset({'read', 'write'})

__dict__ = mappingproxy({'__module__': 'labgrid.protocol.consoleprotocol', '__doc__':

__module__ = 'labgrid.protocol.consoleprotocol'

__weakref__

list of weak references to the object (if defined)

labgrid.protocol.digitaloutputprotocol module

class labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol

Bases: abc.ABC

Abstract class providing the OneWireProtocol interface

abstract get ()

Implementations should return the status of the OneWirePort.

abstract set (*status*)

Implementations should set the status of the OneWirePort

__abstractmethods__ = frozenset({'get', 'set'})

__dict__ = mappingproxy({'__module__': 'labgrid.protocol.digitaloutputprotocol', '__d

__module__ = 'labgrid.protocol.digitaloutputprotocol'

__weakref__

list of weak references to the object (if defined)

labgrid.protocol.filesystemprotocol module

class labgrid.protocol.filesystemprotocol.FileSystemProtocol

Bases: abc.ABC

abstract read (*filename: str*)

abstract write (*filename: str, data: bytes, append: bool*)

__abstractmethods__ = frozenset({'read', 'write'})

__dict__ = mappingproxy({'__module__': 'labgrid.protocol.filesystemprotocol', 'read':

```
__module__ = 'labgrid.protocol.filesystemprotocol'
__weakref__
    list of weak references to the object (if defined)
```

labgrid.protocol.filetransferprotocol module

```
class labgrid.protocol.filetransferprotocol.FileTransferProtocol
    Bases: abc.ABC

    abstract put (filename: str, remotepath: str)
    abstract get (filename: str, destination: str)

    __abstractmethods__ = frozenset({'get', 'put'})
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.filetransferprotocol', 'put'})
    __module__ = 'labgrid.protocol.filetransferprotocol'
    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.infoprotocol module

```
class labgrid.protocol.infoprotocol.InfoProtocol
    Bases: abc.ABC

    Abstract class providing the InfoProtocol interface

    abstract get_ip (interface: str = 'eth0')
        Implementations should return the IP-adress for the supplied interface.

    abstract get_hostname ()
        Implementations should return the hostname for the supplied interface.

    abstract get_service_status (service)
        Implementations should return the status of a service

    __abstractmethods__ = frozenset({'get_hostname', 'get_ip', 'get_service_status'})
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.infoprotocol', '__doc__': 'Abstract class providing the InfoProtocol interface'})
    __module__ = 'labgrid.protocol.infoprotocol'
    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.linuxbootprotocol module

```
class labgrid.protocol.linuxbootprotocol.LinuxBootProtocol
    Bases: abc.ABC

    abstract boot (name: str)
    abstract await_boot ()
    abstract reset ()

    __abstractmethods__ = frozenset({'await_boot', 'boot', 'reset'})
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.protocol.linuxbootprotocol', 'boot':  
__module__ = 'labgrid.protocol.linuxbootprotocol'  
__weakref__  
    list of weak references to the object (if defined)
```

labgrid.protocol.mmioprotocol module

```
class labgrid.protocol.mmioprotocol.MMIOProtocol  
    Bases: abc.ABC  
  
    abstract read(address: int, size: int, count: int) → bytes  
    abstract write(address: int, size: int, data: bytes) → None  
  
    __abstractmethods__ = frozenset({'read', 'write'})  
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.mmioprotocol', 'read': <fun  
    __module__ = 'labgrid.protocol.mmioprotocol'  
    __weakref__  
        list of weak references to the object (if defined)
```

labgrid.protocol.powerprotocol module

```
class labgrid.protocol.powerprotocol.PowerProtocol  
    Bases: abc.ABC  
  
    abstract on()  
    abstract off()  
    abstract cycle()  
  
    __abstractmethods__ = frozenset({'cycle', 'off', 'on'})  
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.powerprotocol', 'on': <func  
    __module__ = 'labgrid.protocol.powerprotocol'  
    __weakref__  
        list of weak references to the object (if defined)
```

labgrid.protocol.resetprotocol module

```
class labgrid.protocol.resetprotocol.ResetProtocol  
    Bases: abc.ABC  
  
    abstract reset()  
  
    __abstractmethods__ = frozenset({'reset'})  
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.resetprotocol', 'reset': <f  
    __module__ = 'labgrid.protocol.resetprotocol'  
    __weakref__  
        list of weak references to the object (if defined)
```


labgrid.provider package

Submodules

labgrid.provider.fileprovider module

class labgrid.provider.fileprovider.**FileProvider**

Bases: abc.ABC

Abstract class for the FileProvider

abstract get (*name: str*) → dict

Get a dictionary of target paths to local paths for a given name.

abstract list ()

Get a list of names.

__abstractmethods__ = frozenset({'get', 'list'})

__dict__ = mappingproxy({'__module__': 'labgrid.provider.fileprovider', '__doc__': 'labgrid.provider.fileprovider'})

__module__ = 'labgrid.provider.fileprovider'

__weakref__

list of weak references to the object (if defined)

labgrid.provider.mediafileprovider module

class labgrid.provider.mediafileprovider.**MediaFileProvider** (*groups={}*)

Bases: labgrid.provider.fileprovider.FileProvider

get (*name*)

Get a dictionary of target paths to local paths for a given name.

list ()

Get a list of names.

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='groups', default={}, validator=<instance of validator function>))

__init__ (*groups={}*) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.provider.mediafileprovider'

__repr__ ()

Automatically created by attrs.

labgrid.pytestplugin package

Submodules

labgrid.pytestplugin.fixtures module

labgrid.pytestplugin.fixtures.**pytest_addoption** (*parser*)

labgrid.pytestplugin.fixtures.**env** (*request*)

Return the environment configured in the supplied configuration file. It contains the targets contained in the configuration file.

labgrid.pytestplugin.fixtures.**target** (*env*)

Return the default target *main* configured in the supplied configuration file.

labgrid.pytestplugin.fixtures.**strategy** (*request*, *target*)

Return the Strategy of the default target *main* configured in the supplied configuration file.

labgrid.pytestplugin.hooks module

labgrid.pytestplugin.hooks.**pytest_configure** (*config*)

labgrid.pytestplugin.hooks.**pytest_collection_modifyitems** (*config*, *items*)

This function matches function feature flags with those found in the environment and disables the item if no match is found

labgrid.pytestplugin.reporter module

class labgrid.pytestplugin.reporter.**StepReporter** (*terminalreporter*, *, *rewrite=False*)

Bases: object

__init__ (*terminalreporter*, *, *rewrite=False*)

Initialize self. See help(type(self)) for accurate signature.

notify (*event*)

pytest_runttest_logstart ()

pytest_runttest_logreport (*report*)

__dict__ = mappingproxy({'__module__': 'labgrid.pytestplugin.reporter', '__init__':

__module__ = 'labgrid.pytestplugin.reporter'

__weakref__

list of weak references to the object (if defined)

class labgrid.pytestplugin.reporter.**ColoredStepReporter** (*terminalreporter*, *, *rewrite=False*)

Bases: labgrid.pytestplugin.reporter.StepReporter

EVENT_COLORS_DARK = {'cycle\$|on\$|off\$': 246, 'expect\$': 8, 'run': 10, 'state_': 51

EVENT_COLORS_LIGHT = {'cycle\$|on\$|off\$': 8, 'expect\$': 250, 'run': 10, 'state_': 5

__init__ (*terminalreporter*, *, *rewrite=False*)

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.pytestplugin.reporter'

labgrid.remote package

Submodules

labgrid.remote.authenticator module

labgrid.remote.client module

The remote.client module contains the functionality to connect to a coordinator, acquire a place and interact with the connected resources

exception labgrid.remote.client.**Error**

Bases: Exception

`__module__ = 'labgrid.remote.client'`

`__weakref__`

list of weak references to the object (if defined)

exception labgrid.remote.client.**UserError**

Bases: *labgrid.remote.client.Error*

`__module__ = 'labgrid.remote.client'`

exception labgrid.remote.client.**ServerError**

Bases: *labgrid.remote.client.Error*

`__module__ = 'labgrid.remote.client'`

labgrid.remote.client.**start_session**(*url, realm, extra*)

labgrid.remote.client.**find_role_by_place**(*config, place*)

labgrid.remote.client.**find_any_role_with_place**(*config*)

labgrid.remote.client.**main**()

labgrid.remote.common module

class labgrid.remote.common.**ResourceEntry**(*data*)

Bases: object

`__attrs_post_init__`()

property `acquired`

property `avail`

property `cls`

property `params`

property `args`

arguments for resource construction

property `extra`

extra resource information

asdict()

update(*data*)

apply updated information from the exporter on the coordinator

acquire(*place_name*)

release()

`__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, ...`

`__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', '__attrs_post_init__'`

`__init__` (*data*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.remote.common'

`__repr__` ()
Automatically created by attrs.

`__weakref__`
list of weak references to the object (if defined)

class labgrid.remote.common.ResourceMatch (*exporter, group, cls, name=None, re-
name=None*)

Bases: object

classmethod fromstr (*pattern*)

`__repr__` ()
Return repr(self).

`__str__` ()
Return str(self).

ismatch (*resource_path*)
Return True if this matches the given resource

`__attrs_attrs__` = (Attribute(name='exporter', default=NOTHING, validator=None, repr=Tr

`__dict__` = mappingproxy({'__module__': 'labgrid.remote.common', 'fromstr': <classmet

`__eq__` (*other*)
Return self==value.

`__ge__` (*other*)
Automatically created by attrs.

`__gt__` (*other*)
Automatically created by attrs.

`__hash__` = None

`__init__` (*exporter, group, cls, name=None, rename=None*) → None
Initialize self. See help(type(self)) for accurate signature.

`__le__` (*other*)
Automatically created by attrs.

`__lt__` (*other*)
Automatically created by attrs.

`__module__` = 'labgrid.remote.common'

`__ne__` (*other*)
Check equality and either forward a NotImplemented or return the result negated.

`__weakref__`
list of weak references to the object (if defined)

class labgrid.remote.common.Place (*name, aliases=NOTHING, comment=", tags=NOTHING,
matches=NOTHING, acquired=None, ac-
quired_resources=NOTHING, allowed=NOTHING, cre-
ated=NOTHING, changed=NOTHING, reservation=None*)

Bases: object

asdict ()

update (*config*)

show (*level=0*)

getmatch (*resource_path*)

Return the ResourceMatch object for the given resource path or None if not found.

A resource_path has the structure (exporter, group, cls, name).

hasmatch (*resource_path*)

Return True if this place as a ResourceMatch object for the given resource path.

A resource_path has the structure (exporter, group, cls, name).

touch ()

__attrs_attrs__ = (Attribute(name='name', default=NOTHING, validator=None, repr=True, c

__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', 'asdict': <function l

__init__ (*name, aliases=NOTHING, comment="", tags=NOTHING, matches=NOTHING, ac-*
quired=None, acquired_resources=NOTHING, allowed=NOTHING, created=NOTHING,
changed=NOTHING, reservation=None) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.remote.common'

__repr__ ()

Automatically created by attrs.

__weakref__

list of weak references to the object (if defined)

class labgrid.remote.common.ReservationState

Bases: enum.Enum

An enumeration.

waiting = 0

allocated = 1

acquired = 2

expired = 3

invalid = 4

__module__ = 'labgrid.remote.common'

class labgrid.remote.common.Reservation(*owner, token=NOTHING, state='waiting',*
prio=0.0, filters=NOTHING, alloca-
tions=NOTHING, created=NOTHING, time-
out=NOTHING)

Bases: object

asdict ()

refresh (*delta=60*)

property expired

show (*level=0*)

__attrs_attrs__ = (Attribute(name='owner', default=NOTHING, validator=<instance_of val

__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', 'asdict': <function l

```
__init__(owner, token=NOTHING, state='waiting', prio=0.0, filters=NOTHING, allocations=NOTHING, created=NOTHING, timeout=NOTHING) → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.remote.common'

__repr__()
    Automatically created by attrs.

__weakref__
    list of weak references to the object (if defined)
```

labgrid.remote.common.**enable_tcp_nodelay**(*session*)
asyncio/autobahn does not set TCP_NODELAY by default, so we need to do it like this for now.

labgrid.remote.config module

```
class labgrid.remote.config.ResourceConfig(filename)
    Bases: object

    __attrs_post_init__()

    __attrs_attrs__ = (Attribute(name='filename', default=NOTHING, validator=<instance_of ...
    __dict__ = mappingproxy({'__module__': 'labgrid.remote.config', '__attrs_post_init__'
    __init__(filename) → None
        Initialize self. See help(type(self)) for accurate signature.

    __module__ = 'labgrid.remote.config'

    __repr__()
        Automatically created by attrs.

    __weakref__
        list of weak references to the object (if defined)
```

labgrid.remote.coordinator module

The coordinator module coordinates exported resources and clients accessing them.

```
class labgrid.remote.coordinator.Action
    Bases: enum.Enum

    An enumeration.

    ADD = 0
    DEL = 1
    UPD = 2

    __module__ = 'labgrid.remote.coordinator'

class labgrid.remote.coordinator.RemoteSession
    Bases: object

    class encapsulating a session, used by ExporterSession and ClientSession

    property key
        Key of the session
```

property name

Name of the session

`__attrs_attrs__ = (Attribute(name='coordinator', default=NOTHING, validator=None, repr=True, init=True, type=None, module='labgrid.remote.coordinator', doc='Name of the session'))``__dict__ = mappingproxy({'__module__': 'labgrid.remote.coordinator', '__doc__': 'class RemoteSession' ...})``__module__ = 'labgrid.remote.coordinator'``__repr__()`

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

class `labgrid.remote.coordinator.ExporterSession` (*coordinator, session, authid*)Bases: `labgrid.remote.coordinator.RemoteSession`

An ExporterSession is opened for each Exporter connecting to the coordinator, allowing the Exporter to get and set resources

`set_resource` (*groupname, resourcename, resourcedata*)`get_resources` ()

Method invoked by the client, get the resources from the coordinator

`__attrs_attrs__ = (Attribute(name='coordinator', default=NOTHING, validator=None, repr=True, init=True, type=None, module='labgrid.remote.coordinator', doc='Name of the session'))``__init__` (*coordinator, session, authid*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.remote.coordinator'``__repr__()`

Automatically created by attrs.

class `labgrid.remote.coordinator.ClientSession` (*coordinator, session, authid*)Bases: `labgrid.remote.coordinator.RemoteSession``__attrs_attrs__ = (Attribute(name='coordinator', default=NOTHING, validator=None, repr=True, init=True, type=None, module='labgrid.remote.coordinator', doc='Name of the session'))``__init__` (*coordinator, session, authid*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.remote.coordinator'``__repr__()`

Automatically created by attrs.

class `labgrid.remote.coordinator.ResourceImport` (*data, *, path*)Bases: `labgrid.remote.common.ResourceEntry`

Represents a local resource exported from an exporter.

The ResourceEntry attributes contain the information for the client.

`__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, init=True, type=None, module='labgrid.remote.coordinator', doc='Data of the resource'), Attribute(name='path', default=NOTHING, validator=None, repr=True, init=True, type=None, module='labgrid.remote.coordinator', doc='Path to the resource'))``__init__` (*data, *, path*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.remote.coordinator'``__repr__()`

Automatically created by attrs.

`labgrid.remote.coordinator.locked` (*func*)

labgrid.remote.exporter module

The remote.exporter module exports resources to the coordinator and makes them available to other clients on the same coordinator

exception labgrid.remote.exporter.**ExporterError**

Bases: Exception

`__module__` = 'labgrid.remote.exporter'

`__weakref__`

list of weak references to the object (if defined)

exception labgrid.remote.exporter.**BrokenResourceError**

Bases: *labgrid.remote.exporter.ExporterError*

`__module__` = 'labgrid.remote.exporter'

labgrid.remote.exporter.**log_subprocess_kernel_stack**(*logger, child*)

class labgrid.remote.exporter.**ResourceExport**(*data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False*)

Bases: *labgrid.remote.common.ResourceEntry*

Represents a local resource exported via a specific protocol.

The ResourceEntry attributes contain the information for the client.

`__attrs_post_init__`()

property broken

start()

stop()

poll()

acquire(*args, **kwargs)

release(*args, **kwargs)

`__attrs_attrs__` = (Attribute(name='data', default=NOTHING, validator=None, repr=True, ...

`__init__`(*data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False*)
→ None

Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.remote.exporter'

`__repr__`()

Automatically created by attrs.

class labgrid.remote.exporter.**SerialPortExport**(*data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False*)

Bases: *labgrid.remote.exporter.ResourceExport*

ResourceExport for a USB or Raw SerialPort

`__attrs_post_init__`()

`__del__`()

`__attrs_attrs__` = (Attribute(name='data', default=NOTHING, validator=None, repr=True, ...


```

__init__(data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Automatically created by attrs.

class labgrid.remote.exporter.USBEthernetExport(data, host='build-11282431-project-
    82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.ResourceExport
ResourceExport for a USB ethernet interface

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Automatically created by attrs.

class labgrid.remote.exporter.USBGenericExport(data, host='build-11282431-project-
    82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.ResourceExport
ResourceExport for USB devices accessed directly from userspace

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Automatically created by attrs.

class labgrid.remote.exporter.USBSigrokExport(data, host='build-11282431-project-
    82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.USBGenericExport
ResourceExport for USB devices accessed directly from userspace

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.remote.exporter'

```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.remote.exporter.USBSDMuxExport (data,          host='build-11282431-project-  
                                             82349-labgrid',      proxy=None,  
                                             proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for USB devices accessed directly from userspace

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, o
```

```
__init__ (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

```
    → None  
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.remote.exporter.USBPowerPortExport (data, host='build-11282431-project-  
                                             82349-labgrid',      proxy=None,  
                                             proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for ports on switchable USB hubs

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, o
```

```
__init__ (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

```
    → None  
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.remote.exporter.USBDeDitecRelaisExport (data,          host='build-  
                                             11282431-project-82349-  
                                             labgrid',      proxy=None,  
                                             proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for outputs on deditec relais

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, o
```

```
__init__ (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

```
    → None  
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.remote.exporter.EthernetPortExport (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.ResourceExport*

ResourceExport for a ethernet interface

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, ...
```

```
__eq__ (other)
```

Return self==value.

```
__ge__ (other)
```

Automatically created by attrs.

```
__gt__ (other)
```

Automatically created by attrs.

```
__hash__ = None
```

```
__init__ (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

→ None

Initialize self. See help(type(self)) for accurate signature.

```
__le__ (other)
```

Automatically created by attrs.

```
__lt__ (other)
```

Automatically created by attrs.

```
__module__ = 'labgrid.remote.exporter'
```

```
__ne__ (other)
```

Check equality and either forward a NotImplemented or return the result negated.

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.remote.exporter.GPIOGenericExport (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.ResourceExport*

ResourceExport for GPIO lines accessed directly from userspace

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, ...
```

```
__init__ (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

→ None

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.remote.exporter.NetworkServiceExport (data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.ResourceExport*

ResourceExport for a NetworkService

This checks if the address has a interface suffix and then provides the necessary proxy information.

`__attrs_post_init__()`

`__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True, o`

`__eq__(other)`

Return self==value.

`__ge__(other)`

Automatically created by attrs.

`__gt__(other)`

Automatically created by attrs.

`__hash__ = None`

`__init__(data, host='build-11282431-project-82349-labgrid', proxy=None, proxy_required=False)`

→ None

Initialize self. See help(type(self)) for accurate signature.

`__le__(other)`

Automatically created by attrs.

`__lt__(other)`

Automatically created by attrs.

`__module__ = 'labgrid.remote.exporter'`

`__ne__(other)`

Check equality and either forward a NotImplemented or return the result negated.

`__repr__()`

Automatically created by attrs.

`labgrid.remote.exporter.main()`

labgrid.remote.scheduler module

class `labgrid.remote.scheduler.TagSet` (*name, tags*)

Bases: object

`__attrs_attrs__ = (Attribute(name='name', default=NOTHING, validator=<instance_of vali`

`__dict__ = mappingproxy({'__module__': 'labgrid.remote.scheduler', '__dict__': <attr`

`__init__(name, tags) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.remote.scheduler'`

`__repr__()`

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

`labgrid.remote.scheduler.schedule_step` (*places, filters*)

Find the filters that can be directly allocated without overlap.

`labgrid.remote.scheduler.schedule_overlaps` (*places, filters*)

Iterate `schedule_step` until no more allocations are found.

labgrid.remote.scheduler.**schedule** (*places, filters*)

labgrid.resource package

Submodules

labgrid.resource.base module

class labgrid.resource.base.**SerialPort** (*target, name, port=None, speed=115200*)

Bases: *labgrid.resource.common.Resource*

The basic SerialPort describes port and speed

Parameters

- **port** (*str*) – port to connect to
- **speed** (*int*) – speed of the port, defaults to 115200

__attrs_attrs__ = (**Attribute**(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, port=None, speed=115200*) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.base'

__repr__ ()
Automatically created by attrs.

class labgrid.resource.base.**EthernetInterface** (*target, name, ifname=None*)

Bases: *labgrid.resource.common.Resource*

The basic EthernetInterface contains an interfacename

Parameters **ifname** (*str*) – name of the interface

__attrs_attrs__ = (**Attribute**(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, ifname=None*) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.base'

__repr__ ()
Automatically created by attrs.

class labgrid.resource.base.**EthernetPort** (*target, name, switch=None, interface=None*)

Bases: *labgrid.resource.common.Resource*

The basic EthernetPort describes a switch and interface

Parameters

- **switch** (*str*) – name of the switch
- **interface** (*str*) – name of the interface

__attrs_attrs__ = (**Attribute**(name='target', default=NOTHING, validator=None, repr=True

__eq__ (*other*)
Return self==value.

__ge__ (*other*)
Automatically created by attrs.

`__gt__` (*other*)
Automatically created by attrs.

`__hash__` = `None`

`__init__` (*target, name, switch=None, interface=None*) → `None`
Initialize self. See help(type(self)) for accurate signature.

`__le__` (*other*)
Automatically created by attrs.

`__lt__` (*other*)
Automatically created by attrs.

`__module__` = `'labgrid.resource.base'`

`__ne__` (*other*)
Check equality and either forward a NotImplemented or return the result negated.

`__repr__` ()
Automatically created by attrs.

class `labgrid.resource.base.SysfsGPIO` (*target, name, index=None*)
Bases: `labgrid.resource.common.Resource`

The basic SysfsGPIO contains an index

Parameters `index` (*int*) – index of target gpio line.

`__attrs_attrs__` = (`Attribute` (`name='target'`, `default=NOTHING`, `validator=None`, `repr=True`),)

`__init__` (*target, name, index=None*) → `None`
Initialize self. See help(type(self)) for accurate signature.

`__module__` = `'labgrid.resource.base'`

`__repr__` ()
Automatically created by attrs.

labgrid.resource.common module

class `labgrid.resource.common.Resource` (*target, name*)
Bases: `labgrid.binding.BindingMixin`

Represents a resource which is used by drivers. It only stores information and does not implement any actual functionality.

Resources can exist without a target, but they must be bound to one before use.

Life cycle:

- create
- bind (n times)

`__attrs_post_init__` ()

property `command_prefix`

property `parent`

get_managed_parent ()

For Resources which have been created at runtime, return the ManagedResource resource which created it.

Returns None otherwise.

`poll()`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.common'`

`__repr__()`

Automatically created by attrs.

class `labgrid.resource.common.NetworkResource(target, name, host)`

Bases: `labgrid.resource.common.Resource`

Represents a remote Resource available on another computer.

This stores a `command_prefix` to describe how to connect to the remote computer.

Parameters `host (str)` – remote host the resource is available on

property `command_prefix`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, host) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.common'`

`__repr__()`

Automatically created by attrs.

class `labgrid.resource.common.ResourceManager`

Bases: `object`

`instances = {}`

classmethod `get()`

`__attrs_post_init__()`

`on_resource_added(resource)`

`poll()`

`__attrs_attrs__ = ()`

`__dict__ = mappingproxy({'__module__': 'labgrid.resource.common', 'instances': {}, 'o`

`__init__() → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.common'`

`__repr__()`

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

class `labgrid.resource.common.ManagedResource(target, name)`

Bases: `labgrid.resource.common.Resource`

Represents a resource which can appear and disappear at runtime. Every `ManagedResource` has a corresponding `ResourceManager` which handles these events.

```
manager_cls
    alias of ResourceManager

__attrs_post_init__()

poll()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.common'

__repr__()
    Automatically created by attrs.

get_managed_parent()
    For Resources which have been created at runtime, return the ManagedResource resource which created
    it.

    Returns None otherwise.
```

labgrid.resource.docker module

Auxiliary classes that assist DockerDriver. Specifically, DockerDaemon and DockerManager will create the NetworkResource instance that is declared in the specification (e.g. yaml) of DockerDriver.

```
class labgrid.resource.docker.DockerConstants
    Bases: object

    Class constants for handling container cleanup

    DOCKER_LG_CLEANUP_LABEL = 'lg_cleanup'

    DOCKER_LG_CLEANUP_TYPE_AUTO = 'auto'

    __dict__ = mappingproxy({'__module__': 'labgrid.resource.docker', '__doc__': 'Class
    __module__ = 'labgrid.resource.docker'

    __weakref__
        list of weak references to the object (if defined)
```

```
class labgrid.resource.docker.DockerManager
    Bases: labgrid.resource.common.ResourceManager

    The DockerManager is responsible for cleaning up dangling containers and managing the managed Network-
    Service resources. Different docker daemons for different targets are allowed, but there has to be only one for
    each target.

    __attrs_post_init__()

    on_resource_added(resource)
        If the resource added is a DockerDaemon, make sure this is the only one added for this target. If it is,
        create a docker client to be used to communicate with the docker daemon.

    poll()
        Ask associated DockerDaemon resource to check if associated NetworkService has come up.

    __attrs_attrs__ = ()

    __init__() → None
        Initialize self. See help(type(self)) for accurate signature.
```



```
__module__ = 'labgrid.resource.docker'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.docker.DockerDaemon (target, name, docker_daemon_url)
```

Bases: *labgrid.resource.common.ManagedResource*

A resource identifying a docker daemon

```
docker_daemon_url = None
```

The docker network service is a managed resource mapping a container name to a network service.

```
manager_cls
```

alias of *DockerManager*

```
__attrs_post_init__ ()
```

```
on_client_bound (client)
```

Each time a docker driver binds to the DockerDaemon resource the docker driver network services list is iterated and for each network service defined a NetworkService resource instance is created with the parameters from the configuration file.

```
on_poll (docker_client)
```

Check if associated NetworkService has come up.

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, docker_daemon_url) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.docker'
```

```
__repr__ ()
```

Automatically created by attrs.

labgrid.resource.ethernetport module

```
class labgrid.resource.ethernetport.SNMPSwitch (hostname)
```

Bases: *object*

SNMPSwitch describes a switch accessible over SNMP. This class implements functions to query ports and the forwarding database.

```
__attrs_post_init__ ()
```

```
update ()
```

Update port status and forwarding database status

Returns *None*

```
__attrs_attrs__ = (Attribute(name='hostname', default=NOTHING, validator=<instance_of
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.resource.ethernetport', '__doc__': '
```

```
__eq__ (other)
```

Return self==value.

```
__ge__ (other)
```

Automatically created by attrs.

```
__gt__ (other)
```

Automatically created by attrs.

```
__hash__ = None
__init__ (hostname) → None
    Initialize self. See help(type(self)) for accurate signature.
__le__ (other)
    Automatically created by attrs.
__lt__ (other)
    Automatically created by attrs.
__module__ = 'labgrid.resource.ethernetport'
__ne__ (other)
    Check equality and either forward a NotImplemented or return the result negated.
__repr__ ()
    Automatically created by attrs.
__weakref__
    list of weak references to the object (if defined)
```

class labgrid.resource.ethernetport.**EthernetPortManager**

Bases: *labgrid.resource.common.ResourceManager*

The EthernetPortManager periodically polls the switch for new updates.

```
__attrs_post_init__ ()
```

```
on_resource_added (resource)
```

Handler to execute when the resource is added

Checks whether the resource can be managed by this Manager and starts the event loop.

Parameters **resource** (*Resource*) – resource to check against

Returns None

```
poll ()
```

Updates the state with new information from the event loop

Returns None

```
__attrs_attrs__ = ()
```

```
__eq__ (other)
```

Return self==value.

```
__ge__ (other)
```

Automatically created by attrs.

```
__gt__ (other)
```

Automatically created by attrs.

```
__hash__ = None
```

```
__init__ () → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__le__ (other)
```

Automatically created by attrs.

```
__lt__ (other)
```

Automatically created by attrs.

```
__module__ = 'labgrid.resource.ethernetport'
```

`__ne__` (*other*)

Check equality and either forward a NotImplemented or return the result negated.

`__repr__` ()

Automatically created by attrs.

class `labgrid.resource.ethernetport.SNMPEthernetPort` (*target, name, switch, interface*)

Bases: `labgrid.resource.common.ManagedResource`

SNMPEthernetPort describes an ethernet port which can be queried over SNMP.

Parameters

- **switch** (*str*) – hostname of the switch to query
- **interface** (*str*) – name of the interface to query

manager_cls

alias of `EthernetPortManager`

`__attrs_post_init__` ()

`__attrs_attrs__` = (`Attribute`(name='target', default=NOTHING, validator=None, repr=True

`__eq__` (*other*)

Return self==value.

`__ge__` (*other*)

Automatically created by attrs.

`__gt__` (*other*)

Automatically created by attrs.

`__hash__` = None

`__init__` (*target, name, switch, interface*) → None

Initialize self. See help(type(self)) for accurate signature.

`__le__` (*other*)

Automatically created by attrs.

`__lt__` (*other*)

Automatically created by attrs.

`__module__` = 'labgrid.resource.ethernetport'

`__ne__` (*other*)

Check equality and either forward a NotImplemented or return the result negated.

`__repr__` ()

Automatically created by attrs.

labgrid.resource.flashrom module

class `labgrid.resource.flashrom.Flashrom` (*target, name, programmer*)

Bases: `labgrid.resource.common.Resource`

Programmer is the programmer parameter described in man(8) of flashrom

`__attrs_attrs__` = (`Attribute`(name='target', default=NOTHING, validator=None, repr=True

`__init__` (*target, name, programmer*) → None

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.flashrom'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.flashrom.NetworkFlashrom(target, name, host, programmer)
```

Bases: *labgrid.resource.common.NetworkResource*

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, host, programmer) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.flashrom'
```

```
__repr__()
```

Automatically created by attrs.

labgrid.resource.modbus module

```
class labgrid.resource.modbus.ModbusTCPCoil(target, name, host, coil, invert=False)
```

Bases: *labgrid.resource.common.Resource*

This resource describes Modbus TCP coil.

Parameters

- **host** (*str*) – hostname of the Modbus TCP server e.g. “192.168.23.42:502”
- **coil** (*int*) – index of the coil e.g. 3
- **invert** (*bool*) – optional, whether the logic level is be inverted (active-low)

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, host, coil, invert=False) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.modbus'
```

```
__repr__()
```

Automatically created by attrs.

labgrid.resource.networkservice module

```
class labgrid.resource.networkservice.NetworkService(target, name, address, user-  
name, password=",", port=22)
```

Bases: *labgrid.resource.common.Resource*

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, address, username, password=",", port=22) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.networkservice'
```

```
__repr__()
```

Automatically created by attrs.

labgrid.resource.onewireport module

class labgrid.resource.onewireport.**OneWirePIO** (*target, name, host, path, invert=False*)

Bases: *labgrid.resource.common.Resource*

This resource describes a Onewire PIO Port.

Parameters

- **host** (*str*) – hostname of the owserver e.g. localhost:4304
- **path** (*str*) – path to the port on the owserver e.g. 29.7D6913000000/PIO.0
- **invert** (*bool*) – optional, whether the logic level is be inverted (active-low)

__attrs_attrs__ = (**Attribute**(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, host, path, invert=False*) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.onewireport'

__repr__ ()
Automatically created by attrs.

labgrid.resource.power module

class labgrid.resource.power.**NetworkPowerPort** (*target, name, model, host, index*)

Bases: *labgrid.resource.common.Resource*

The NetworkPowerPort describes a remotely switchable PowerPort

Parameters

- **model** (*str*) – model of the external power switch
- **host** (*str*) – host to connect to
- **index** (*str*) – index of the power port on the external switch

__attrs_attrs__ = (**Attribute**(name='target', default=NOTHING, validator=None, repr=True

__init__ (*target, name, model, host, index*) → None
Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.power'

__repr__ ()
Automatically created by attrs.

class labgrid.resource.power.**PDUDAemonPort** (*target, name, host, pdu, index*)

Bases: *labgrid.resource.common.Resource*

The PDUDAemonPort describes a port on a PDU accessible via PDUDAemon

Parameters

- **host** (*str*) – name of the host running the PDUDAemon
- **pdu** (*str*) – name of the PDU in the configuration file
- **index** (*int*) – index of the power port on the PDU

__attrs_attrs__ = (**Attribute**(name='target', default=NOTHING, validator=None, repr=True

```
__init__(target, name, host, pdu, index) → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.power'

__repr__()
    Automatically created by attrs.
```

labgrid.resource.remote module

```
class labgrid.resource.remote.RemotePlaceManager
    Bases: labgrid.resource.common.ResourceManager
```

```
__attrs_post_init__()

on_resource_added(resource)

poll()

__attrs_attrs__ = ()

__init__() → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.remote'

__repr__()
    Automatically created by attrs.
```

```
class labgrid.resource.remote.RemotePlace(target, name)
    Bases: labgrid.resource.common.ManagedResource
```

```
manager_cls
    alias of RemotePlaceManager

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__(target, name) → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.remote'

__repr__()
    Automatically created by attrs.
```

```
class labgrid.resource.remote.RemoteUSBResource(target, name, host, busnum, devnum,
                                                path, vendor_id, model_id)
    Bases: labgrid.resource.common.NetworkResource, labgrid.resource.common.
    ManagedResource
```

```
manager_cls
    alias of RemotePlaceManager

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.resource.remote'

__repr__()
    Automatically created by attrs.
```

```
class labgrid.resource.remote.NetworkAndroidFastboot (target, name, host, busnum,
                                                    devnum, path, vendor_id,
                                                    model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkIMXUSBLoader (target, name, host, busnum, devnum,
                                                    path, vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkMXSUSBLoader (target, name, host, busnum, devnum,
                                                    path, vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkRKUSBLoader (target, name, host, busnum, devnum,
                                                    path, vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkAlteraUSBBlaster (target, name, host, busnum,  
devnum, path, vendor_id,  
model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id) → None  
Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkSigrokUSBDevice (target, name, host, busnum,  
devnum, path, vendor_id,  
model_id, driver=None, chan-  
nels=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkSigrokUSBDevice describes a remotely accessible sigrok USB device

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id, driver=None, chan-  
nels=None) → None  
Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkSigrokUSBSerialDevice (target, name,  
host, busnum, de-  
vnum, path, ven-  
dor_id, model_id,  
driver=None, chan-  
nels=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkSigrokUSBSerialDevice describes a remotely accessible sigrok USB device

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id, driver=None, chan-  
nels=None) → None  
Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkUSBMassStorage (target, name, host, busnum,  
devnum, path, vendor_id,  
model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBMassStorage describes a remotely accessible USB storage device

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkUSBSDMuxDevice(target, name, host, busnum,
                                                    devnum, path, vendor_id,
                                                    model_id, control_path=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBSDMuxDevice describes a remotely accessible USBSDMux device

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, control_path=None) →
```

None

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkUSBPowerPort(target, name, host, busnum, de-
                                                    vnum, path, vendor_id, model_id,
                                                    index=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBPowerPort describes a remotely accessible USB hub port with power switching

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, index=None) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.remote.NetworkUSBVideo(target, name, host, busnum, devnum, path,
                                              vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBVideo describes a remotely accessible USB video device

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.resource.remote.NetworkUSBTMC (target, name, host, busnum, devnum, path,  
                                             vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBTMC describes a remotely accessible USB TMC device

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id) → None  
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.resource.remote.NetworkDeditecRelais8 (target, name, host, busnum,  
                                                    devnum, path, vendor_id,  
                                                    model_id, index=None, in-  
                                                    vert=False)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkDeditecRelais8 describes a remotely accessible USB relais port

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, busnum, devnum, path, vendor_id, model_id, index=None, invert=False)  
    → None  
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()  
    Automatically created by attrs.
```

```
class labgrid.resource.remote.NetworkSysfsGPIO (target, name, host, index)
```

Bases: *labgrid.resource.common.NetworkResource*, *labgrid.resource.common.ManagedResource*

```
manager_cls
```

The NetworkSysfsGPIO describes a remotely accessible gpio line

alias of *RemotePlaceManager*

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__attrs_post_init__ ()
```

```
__init__ (target, name, host, index) → None  
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__ ()  
    Automatically created by attrs.
```

labgrid.resource.serialport module

```
class labgrid.resource.serialport.RawSerialPort (target, name, port=None, speed=115200)
```

Bases: *labgrid.resource.base.SerialPort, labgrid.resource.common.Resource*

RawSerialPort describes a serialport which is available on the local computer.

```
__attrs_post_init__ ()
```

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, port=None, speed=115200) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.serialport'
```

```
__repr__ ()
```

Automatically created by attrs.

```
class labgrid.resource.serialport.NetworkSerialPort (target, name, host, port, speed=115200, protocol='rfc2217')
```

Bases: *labgrid.resource.common.NetworkResource*

A NetworkSerialPort is a remotely accessible serialport, usually accessed via rfc2217 or tcp raw.

Parameters

- **port** (*str*) – socket port to connect to
- **speed** (*int*) – speed of the port e.g. 9800
- **protocol** (*str*) – connection protocol: “raw” or “rfc2217”

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, host, port, speed=115200, protocol='rfc2217') → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.serialport'
```

```
__repr__ ()
```

Automatically created by attrs.

labgrid.resource.sigrok module

```
class labgrid.resource.sigrok.SigrokDevice (target, name, driver='demo', channels=None)
```

Bases: *labgrid.resource.common.Resource*

The SigrokDevice describes an attached sigrok device with driver and channel mapping

Parameters

- **driver** (*str*) – driver to use with sigrok
- **channels** (*str*) – a sigrok channel mapping as described in the sigrok-cli man page

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, driver='demo', channels=None) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.resource.sigrok'
```

```
__repr__ ()  
    Automatically created by attrs.
```

labgrid.resource.suggest module

```
class labgrid.resource.suggest.Suggester (args)  
    Bases: object  
  
    __init__ (args)  
        Initialize self. See help(type(self)) for accurate signature.  
  
    suggest_callback (resource, meta, suggestions)  
  
    run ()  
  
    __dict__ = mappingproxy({'__module__': 'labgrid.resource.suggest', '__init__': <func  
    __module__ = 'labgrid.resource.suggest'  
    __weakref__  
        list of weak references to the object (if defined)  
  
labgrid.resource.suggest.main ()
```

labgrid.resource.udev module

```
class labgrid.resource.udev.UdevManager  
    Bases: labgrid.resource.common.ResourceManager  
  
    __attrs_post_init__ ()  
  
    on_resource_added (resource)  
  
    poll ()  
  
    __attrs_attrs__ = ()  
  
    __init__ () → None  
        Initialize self. See help(type(self)) for accurate signature.  
  
    __module__ = 'labgrid.resource.udev'  
  
    __repr__ ()  
        Automatically created by attrs.  
  
class labgrid.resource.udev.USBResource (target, name, match=NOTHING, device=None,  
                                           suggest=False)  
    Bases: labgrid.resource.common.ManagedResource  
  
    manager_cls  
        alias of UdevManager  
  
    __attrs_post_init__ ()  
  
    filter_match (device)  
  
    suggest_match (device)  
  
    try_match (device)  
  
    update ()  
  
    property busnum
```

```

property devnum
property path
property vendor_id
property model_id
read_attr (attribute)
    read uncached attribute value from sysfs

    pyudev currently supports only cached access to attributes, so we read directly from sysfs.
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__ (target, name, match=NOTHING, device=None, suggest=False) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.USBSerialPort (target, name, match=NOTHING, device=None,
                                           suggest=False, port=None, speed=115200)
Bases: labgrid.resource.udev.USBResource, labgrid.resource.base.SerialPort
__attrs_post_init__ ()
update ()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__ (target, name, match=NOTHING, device=None, suggest=False, port=None, speed=115200)
    → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.USBMassStorage (target, name, match=NOTHING, de-
                                           vice=None, suggest=False)
Bases: labgrid.resource.udev.USBResource
__attrs_post_init__ ()
property avail
property path
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__ (target, name, match=NOTHING, device=None, suggest=False) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.IMXUSBLoader (target, name, match=NOTHING, device=None,
                                           suggest=False)
Bases: labgrid.resource.udev.USBResource
filter_match (device)

```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.RKUSBLoader(target, name, match=NOTHING, device=None,
                                       suggest=False)
    Bases: labgrid.resource.udev.USBResource
    filter_match(device)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.MXSUSBLoader(target, name, match=NOTHING, device=None,
                                       suggest=False)
    Bases: labgrid.resource.udev.USBResource
    filter_match(device)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.AndroidFastboot(target, name, match=NOTHING,
                                             device=None, suggest=False,
                                             usb_vendor_id='1d6b',
                                             usb_product_id='0104')
    Bases: labgrid.resource.udev.USBResource
    filter_match(device)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False, usb_vendor_id='1d6b',
         usb_product_id='0104') → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.udev'
__repr__ ()
    Automatically created by attrs.
class labgrid.resource.udev.USBEthernetInterface(target, name, match=NOTHING,
                                                  device=None, suggest=False, if-
                                                  name=None)
    Bases: labgrid.resource.udev.USBResource, labgrid.resource.base.
           EthernetInterface
```

```
__attrs_post_init__()
```

```
update()
```

```
property if_state
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, ifname=None) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.udev.AlteraUSBBlaster(target, name, match=NOTHING, de-
                                             vice=None, suggest=False)
```

Bases: *labgrid.resource.udev.USBResource*

```
filter_match(device)
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.udev.SigrokUSBDevice(target, name, match=NOTHING, de-
                                             vice=None, suggest=False, driver=None,
                                             channels=None)
```

Bases: *labgrid.resource.udev.USBResource*

The SigrokUSBDevice describes an attached sigrok device with driver and optional channel mapping, it is identified via usb using udev.

This is used for devices which communicate over a custom USB protocol.

Parameters

- **driver** (*str*) – driver to use with sigrok
- **channels** (*str*) – a sigrok channel mapping as described in the sigrok-cli man page

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, driver=None, chan-
         nels=None) → None
    Initialize self. See help(type(self)) for accurate signature.
```

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Automatically created by attrs.

```
class labgrid.resource.udev.SigrokUSBSerialDevice(target, name, match=NOTHING,
                                                  device=None, suggest=False,
                                                  driver=None, channels=None)
```

Bases: *labgrid.resource.udev.USBResource*

The SigrokUSBSerialDevice describes an attached sigrok device with driver and optional channel mapping, it is identified via usb using udev.

This is used for devices which communicate over an emulated serial device.

Parameters

- **driver** (*str*) – driver to use with sigrok
- **channels** (*str*) – a sigrok channel mapping as described in the sigrok-cli man page

`__attrs_post_init__()`

property path

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, match=NOTHING, device=None, suggest=False, driver=None, chan-`
`nels=None) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.udev'`

`__repr__()`

Automatically created by attrs.

```
class labgrid.resource.udev.USBSDMuxDevice(target, name, match=NOTHING,
                                           device=None, suggest=False, con-
                                           trol_path=None, disk_path=None)
```

Bases: `labgrid.resource.udev.USBResource`

The USBSDMuxDevice describes an attached USBSDMux device, it is identified via USB using udev

`__attrs_post_init__()`

property avail

`poll()`

property path

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, match=NOTHING, device=None, suggest=False, control_path=None,`
`disk_path=None) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.udev'`

`__repr__()`

Automatically created by attrs.

```
class labgrid.resource.udev.USBPowerPort(target, name, match=NOTHING, device=None,
                                          suggest=False, index=None)
```

Bases: `labgrid.resource.udev.USBResource`

The USBPowerPort describes a single port on an USB hub which supports power control.

Parameters **index** (*int*) – index of the downstream port on the USB hub

`__attrs_post_init__()`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, match=NOTHING, device=None, suggest=False, index=None) → None`

Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.udev'`

`__repr__()`
Automatically created by attrs.

class `labgrid.resource.udev.USBVideo` (*target, name, match=NOTHING, device=None, suggest=False*)

Bases: `labgrid.resource.udev.USBResource`

`__attrs_post_init__()`

property `path`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__` (*target, name, match=NOTHING, device=None, suggest=False*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.udev'`

`__repr__()`
Automatically created by attrs.

class `labgrid.resource.udev.USBTMC` (*target, name, match=NOTHING, device=None, suggest=False*)

Bases: `labgrid.resource.udev.USBResource`

`__attrs_post_init__()`

property `path`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__` (*target, name, match=NOTHING, device=None, suggest=False*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.udev'`

`__repr__()`
Automatically created by attrs.

class `labgrid.resource.udev.DeditecRelais8` (*target, name, match=NOTHING, device=None, suggest=False, index=None, invert=False*)

Bases: `labgrid.resource.udev.USBResource`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__attrs_post_init__()`

`__init__` (*target, name, match=NOTHING, device=None, suggest=False, index=None, invert=False*)
→ None
Initialize self. See help(type(self)) for accurate signature.

`__module__ = 'labgrid.resource.udev'`

`__repr__()`
Automatically created by attrs.

property `path`

labgrid.resource.xenamanager module

class `labgrid.resource.xenamanager.XenaManager` (*target, name, hostname*)

Bases: `labgrid.resource.common.Resource`

Hostname/IP identifying the manageent address of the xena tester

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, hostname) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.xenamanager'
__repr__ ()
    Automatically created by attrs.
```

labgrid.resource.ykushpowerport module

class labgrid.resource.ykushpowerport.YKUSHPowerPort (target, name, serial, index)

Bases: *labgrid.resource.common.Resource*

This resource describes a YEPKIT YKUSH switchable USB hub.

Parameters

- **serial** (*str*) – serial of the YKUSH device
- **index** (*int*) – port index

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, serial, index) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.resource.ykushpowerport'
__repr__ ()
    Automatically created by attrs.
```

labgrid.strategy package

Submodules

labgrid.strategy.bareboxstrategy module

class labgrid.strategy.bareboxstrategy.Status

Bases: *enum.Enum*

An enumeration.

unknown = 0

off = 1

barebox = 2

shell = 3

```
__module__ = 'labgrid.strategy.bareboxstrategy'
```

class labgrid.strategy.bareboxstrategy.BareboxStrategy (target, name, status=<Status.unknown: 0>)

Bases: *labgrid.strategy.common.Strategy*

BareboxStrategy - Strategy to switch to barebox or shell

```
bindings = {'barebox': <class 'labgrid.driver.bareboxdriver.BareboxDriver'>, 'power':
```

```

__attrs_post_init__ ()
transition (status, *, step)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__ (target, name, status=<Status.unknown: 0>) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.strategy.bareboxstrategy'
__repr__ ()
    Automatically created by attrs.

```

labgrid.strategy.common module

exception labgrid.strategy.common.StrategyError (*msg*)

Bases: Exception

```

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of valid
__init__ (msg) → None
    Initialize self. See help(type(self)) for accurate signature.
__module__ = 'labgrid.strategy.common'
__repr__ ()
    Automatically created by attrs.
__weakref__
    list of weak references to the object (if defined)

```

class labgrid.strategy.common.Strategy (*target*, *name*)

Bases: *labgrid.driver.common.Driver*

Represents a strategy which places a target into a requested state by calling specific drivers. A strategy usually needs to know some details of a given target.

Life cycle: - create - bind (n times) - usage

TODO: This might also be just a driver?

```

__attrs_post_init__ ()
on_client_bound (client)
    Called by the Target after a new client has been bound
on_activate ()
    Called by the Target when this object has been activated
on_deactivate ()
    Called by the Target when this object has been deactivated
resolve_conflicts (client)
    Called by the Target to allow this object to deactivate conflicting clients.
transition (status)
force (status)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__ (target, name) → None
    Initialize self. See help(type(self)) for accurate signature.

```

```
__module__ = 'labgrid.strategy.common'
__repr__ ()
    Automatically created by attrs.
```

labgrid.strategy.dockerstrategy module

```
class labgrid.strategy.dockerstrategy.Status
```

Bases: `enum.Enum`

The possible states of a docker container

```
unknown = 0
```

```
gone = 1
```

```
accessible = 2
```

```
__module__ = 'labgrid.strategy.dockerstrategy'
```

```
class labgrid.strategy.dockerstrategy.DockerStrategy (target, name, status=<Status.unknown: 0>)
```

Bases: `labgrid.strategy.common.Strategy`

DockerStrategy enables the user to directly transition to a state where a fresh docker container has been created and is ready for access (e.g. shell access via SSH if the docker image runs an SSH daemon).

```
bindings = {'docker_driver': <class 'labgrid.driver.dockerdriver.DockerDriver'>}
```

```
__attrs_post_init__ ()
```

```
transition (status)
```

```
__attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True
```

```
__init__ (target, name, status=<Status.unknown: 0>) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.strategy.dockerstrategy'
```

```
__repr__ ()
```

Automatically created by attrs.

labgrid.strategy.graphstrategy module

```
exception labgrid.strategy.graphstrategy.GraphStrategyError (msg)
```

Bases: `labgrid.strategy.common.StrategyError`

```
__module__ = 'labgrid.strategy.graphstrategy'
```

```
exception labgrid.strategy.graphstrategy.InvalidGraphStrategyError (msg)
```

Bases: `labgrid.strategy.graphstrategy.GraphStrategyError`

```
__module__ = 'labgrid.strategy.graphstrategy'
```

```
exception labgrid.strategy.graphstrategy.GraphStrategyRuntimeError (msg)
```

Bases: `labgrid.strategy.graphstrategy.GraphStrategyError`

```
__module__ = 'labgrid.strategy.graphstrategy'
```

```
class labgrid.strategy.graphstrategy.GraphStrategy (target, name)
```

Bases: `labgrid.strategy.common.Strategy`

```

__attrs_post_init__()
invalidate()
transition(state, via=None)
find_abs_path(state, via=None)
find_rel_path(path)
property graph
classmethod depends(*dependencies)
__module__ = 'labgrid.strategy.graphstrategy'

```

labgrid.strategy.shellstrategy module

```
class labgrid.strategy.shellstrategy.Status
```

Bases: `enum.Enum`

An enumeration.

```
unknown = 0
```

```
off = 1
```

```
shell = 2
```

```
__module__ = 'labgrid.strategy.shellstrategy'
```

```
class labgrid.strategy.shellstrategy.ShellStrategy(target, name, status=<Status.unknown: 0>)
```

Bases: `labgrid.strategy.common.Strategy`

ShellStrategy - Strategy to switch to shell

```
bindings = {'power': <class 'labgrid.protocol.powerprotocol.PowerProtocol'>, 'shell':
```

```
__attrs_post_init__()
```

```
transition(status, *, step)
```

```
force(status, *, step)
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, status=<Status.unknown: 0>) → None
```

Initialize self. See `help(type(self))` for accurate signature.

```
__module__ = 'labgrid.strategy.shellstrategy'
```

```
__repr__()
```

Automatically created by attrs.

labgrid.strategy.ubootstrategy module

```
class labgrid.strategy.ubootstrategy.Status
```

Bases: `enum.Enum`

An enumeration.

```
unknown = 0
```

```
off = 1
```

```
uboot = 2
shell = 3
__module__ = 'labgrid.strategy.ubootstrategy'
class labgrid.strategy.ubootstrategy.UBootStrategy (target, name, status=<Status.unknown: 0>)
    Bases: labgrid.strategy.common.Strategy
    UbootStrategy - Strategy to switch to uboot or shell
    bindings = {'power': <class 'labgrid.protocol.powerprotocol.PowerProtocol'>, 'shell':
    __attrs_post_init__ ()
    transition (status)
    __attrs_attrs__ = (Attribute (name='target', default=NOTHING, validator=None, repr=True)
    __init__ (target, name, status=<Status.unknown: 0>) → None
        Initialize self. See help(type(self)) for accurate signature.
    __module__ = 'labgrid.strategy.ubootstrategy'
    __repr__ ()
        Automatically created by attrs.
```

labgrid.util package

Subpackages

labgrid.util.agents package

Submodules

labgrid.util.agents.deditec_relais8 module

labgrid.util.agents.dummy module

labgrid.util.agents.dummy.**handle_neg** (value)

labgrid.util.agents.sysfsgpio module

This module implements switching GPIOs via sysfs GPIO kernel interface.

Takes an integer property 'index' which refers to the already exported GPIO device.

```
class labgrid.util.agents.sysfsgpio.GpioDigitalOutput (index)
    Bases: object
    __init__ (index)
        Initialize self. See help(type(self)) for accurate signature.
    __del__ ()
    get ()
    set (status)
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.util.agents.sysfsgpio', '_gpio_sysfs_'
__module__ = 'labgrid.util.agents.sysfsgpio'
__weakref__
    list of weak references to the object (if defined)
```

```
labgrid.util.agents.sysfsgpio.handle_set (index, status)
```

```
labgrid.util.agents.sysfsgpio.handle_get (index)
```

Submodules

labgrid.util.agent module

```
labgrid.util.agent.b2s (b)
```

```
labgrid.util.agent.s2b (s)
```

```
class labgrid.util.agent.Agent
```

```
    Bases: object
```

```
    __init__ ()
```

```
        Initialize self. See help(type(self)) for accurate signature.
```

```
    send (data)
```

```
    register (name, func)
```

```
    load (name, source)
```

```
    list ()
```

```
    run ()
```

```
    __dict__ = mappingproxy({'__module__': 'labgrid.util.agent', '__init__': <function A
```

```
    __module__ = 'labgrid.util.agent'
```

```
    __weakref__
```

```
        list of weak references to the object (if defined)
```

```
labgrid.util.agent.handle_test (*args, **kwargs)
```

```
labgrid.util.agent.handle_error (message)
```

```
labgrid.util.agent.handle_usbtmc (index, cmd, read=False)
```

```
labgrid.util.agent.main ()
```

labgrid.util.agentwrapper module

```
labgrid.util.agentwrapper.b2s (b)
```

```
labgrid.util.agentwrapper.s2b (s)
```

```
exception labgrid.util.agentwrapper.AgentError
```

```
    Bases: Exception
```

```
    __module__ = 'labgrid.util.agentwrapper'
```

```
    __weakref__
```

```
        list of weak references to the object (if defined)
```

exception labgrid.util.agentwrapper.**AgentException**

Bases: Exception

__module__ = 'labgrid.util.agentwrapper'

__weakref__

list of weak references to the object (if defined)

class labgrid.util.agentwrapper.**MethodProxy** (*wrapper, name*)

Bases: object

__init__ (*wrapper, name*)

Initialize self. See help(type(self)) for accurate signature.

__call__ (**args, **kwargs*)

Call self as a function.

__dict__ = mappingproxy({'__module__': 'labgrid.util.agentwrapper', '__init__': <fun

__module__ = 'labgrid.util.agentwrapper'

__weakref__

list of weak references to the object (if defined)

class labgrid.util.agentwrapper.**ModuleProxy** (*wrapper, name*)

Bases: object

__init__ (*wrapper, name*)

Initialize self. See help(type(self)) for accurate signature.

__getattr__ (*name*)

__dict__ = mappingproxy({'__module__': 'labgrid.util.agentwrapper', '__init__': <fun

__module__ = 'labgrid.util.agentwrapper'

__weakref__

list of weak references to the object (if defined)

class labgrid.util.agentwrapper.**AgentWrapper** (*host=None*)

Bases: object

__init__ (*host=None*)

Initialize self. See help(type(self)) for accurate signature.

__del__ ()

__getattr__ (*name*)

call (*method, *args, **kwargs*)

__dict__ = mappingproxy({'__module__': 'labgrid.util.agentwrapper', '__init__': <fun

__module__ = 'labgrid.util.agentwrapper'

__weakref__

list of weak references to the object (if defined)

load (*name*)

close ()

labgrid.util.atomic module

labgrid.util.atomic.**atomic_replace** (*filename, data*)

labgrid.util.dict module

This module contains helper functions for working with dictionaries.

`labgrid.util.dict.diff_dict` (*old, new*)

Compares old and new dictionaries, yielding for each difference (key, old_value, new_value). None is used for missing values.

`labgrid.util.dict.flat_dict` (*d*)

`labgrid.util.dict.filter_dict` (*d, cls, warn=False*)

Returns a copy a dictionary which only contains the attributes defined on an attrs class.

`labgrid.util.dict.find_dict` (*d, key*)

Recursively search for a key in a dictionary

Parameters

- **d** (*dict*) – The dictionary to recursively search through
- **key** (*str*) – The key to search for

labgrid.util.exceptions module

exception `labgrid.util.exceptions.NoValidDriverError` (*msg*)

Bases: `Exception`

`__attrs_attrs__` = (`Attribute`(name='msg', default=NOTHING, validator=<instance_of valid

`__init__` (*msg*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.util.exceptions'

`__repr__` ()

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

labgrid.util.expect module

class `labgrid.util.expect.PtxExpect` (*driver*)

Bases: `pexpect.pty_spawn.spawn`

labgrid Wrapper of the pexpect module.

This class provides pexpect functionality for the ConsoleProtocol classes. driver: ConsoleProtocol object to be passed in

`__init__` (*driver*)

Initializes a pexpect spawn instance with required configuration

`send` (*s*)

Write to underlying transport, return number of bytes written

`read_nonblocking` (*size=1, timeout=-1*)

Pexpts needs a nonblocking read function, simply use pycserial with a timeout of 0.

`__module__` = 'labgrid.util.expect'

labgrid.util.helper module

labgrid.util.helper.get_free_port ()

Helper function to always return an unused port.

labgrid.util.helper.get_user ()

Get the username of the current user.

class labgrid.util.helper.ProcessWrapper (callbacks=NOTHING)

Bases: object

check_output (command)

Run a command and supply the output to callback functions

register (callback)

Register a callback with the ProcessWrapper

unregister (callback)

Unregister a callback with the ProcessWrapper

enable_logging ()

Enables process output to the logging interface. Loglevel is logging.INFO.

enable_print ()

Enables process output to print.

__attrs_attrs__ = (Attribute(name='callbacks', default=Factory(factory=<class 'list'>,

__dict__ = mappingproxy({'__module__': 'labgrid.util.helper', 'check_output': <funct

__eq__ (other)

Return self==value.

__ge__ (other)

Automatically created by attrs.

__gt__ (other)

Automatically created by attrs.

__hash__ = None

__init__ (callbacks=NOTHING) → None

Initialize self. See help(type(self)) for accurate signature.

__le__ (other)

Automatically created by attrs.

__lt__ (other)

Automatically created by attrs.

__module__ = 'labgrid.util.helper'

__ne__ (other)

Check equality and either forward a NotImplemented or return the result negated.

__repr__ ()

Automatically created by attrs.

__weakref__

list of weak references to the object (if defined)

labgrid.util.managedfile module

class labgrid.util.managedfile.**ManagedFile** (*local_path, resource, detect_nfs=True*)

Bases: object

The ManagedFile allows the synchronisation of a file to a remote host. It has to be created with the to be synced file and the target resource as argument:

```
:: from labgrid.util.managedfile import ManagedFile
```

```
    ManagedFile("/tmp/examplefile", <your-resource>)
```

Synchronisation is done with the sync_to_resource method.

```
__attrs_post_init__ ()
```

```
sync_to_resource ()
```

sync the file to the host specified in a resource

Raises *ExecutionError* – if the SSH connection/copy fails

```
get_remote_path ()
```

Retrieve the remote file path

Returns path to the file on the remote host

Return type str

```
get_hash ()
```

Retrieve the hash of the file

Returns SHA256 hexdigest of the file

Return type str

```
__attrs_attrs__ = (Attribute(name='local_path', default=NOTHING, validator=<instance_o
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.util.managedfile', '__doc__': ' The
```

```
__eq__ (other)
```

Return self==value.

```
__ge__ (other)
```

Automatically created by attrs.

```
__gt__ (other)
```

Automatically created by attrs.

```
__hash__ = None
```

```
__init__ (local_path, resource, detect_nfs=True) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__le__ (other)
```

Automatically created by attrs.

```
__lt__ (other)
```

Automatically created by attrs.

```
__module__ = 'labgrid.util.managedfile'
```

```
__ne__ (other)
```

Check equality and either forward a NotImplemented or return the result negated.

```
__repr__ ()
```

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

labgrid.util.marker module

labgrid.util.marker.gen_marker()

labgrid.util.proxy module

labgrid.util.qmp module

class labgrid.util.qmp.QMPMonitor(*monitor_out*, *monitor_in*)

Bases: object

`__attrs_post_init__`()

`execute`(*command*)

`__attrs_attrs__` = (Attribute(name='monitor_out', default=NOTHING, validator=None, repr=)

`__dict__` = mappingproxy({'__module__': 'labgrid.util.qmp', '__attrs_post_init__': <f

`__init__`(*monitor_out*, *monitor_in*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.util.qmp'

`__repr__`()

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

exception labgrid.util.qmp.QMPError(*msg*)

Bases: Exception

`__attrs_attrs__` = (Attribute(name='msg', default=NOTHING, validator=<instance_of valid

`__init__`(*msg*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.util.qmp'

`__repr__`()

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

labgrid.util.ssh module

class labgrid.util.ssh.SSHConnection(*host*)

Bases: object

SSHConnections are individual connections to hosts managed by a control socket. In addition to command execution this class also provides an interface to manage port forwardings. These are used in the remote infrastructure to tunnel multiple connections over one SSH link.

A public identity infrastructure is assumed, no extra username or passwords are supported.

`__attrs_post_init__()`

`get_prefix()`

`run(command, *, codec='utf-8', decodeerrors='strict', force_tty=False, stderr_merge=False, stderr_loglevel=None, stdout_loglevel=None)`
Run a command over the SSHConnection

Parameters

- **command** (*string*) – The command to run
- **codec** (*string, optional*) – output encoding. Defaults to “utf-8”.
- **decodeerrors** (*string, optional*) – behavior on decode errors. Defaults to “strict”. Refer to stdtypes’ bytes.decode for details.
- **force_tty** (*bool, optional*) – force allocate a tty (ssh -tt). Defaults to False
- **stderr_merge** (*bool, optional*) – merge ssh subprocess stderr into stdout. Defaults to False.
- **stdout_loglevel** (*int, optional*) – log stdout with specific log level as well. Defaults to None, i.e. don’t log.
- **stderr_loglevel** (*int, optional*) – log stderr with specific log level as well. Defaults to None, i.e. don’t log.

Returns (stdout, stderr, returncode)

`run_check(command, *, codec='utf-8', decodeerrors='strict', force_tty=False, stderr_merge=False, stderr_loglevel=None, stdout_loglevel=None)`
Runs a command over the SSHConnection returns the output if successful, raises ExecutionError otherwise.

Except for the means of returning the value, this is equivalent to run.

Parameters

- **command** (*string*) – The command to run
- **codec** (*string, optional*) – output encoding. Defaults to “utf-8”.
- **decodeerrors** (*string, optional*) – behavior on decode errors. Defaults to “strict”. Refer to stdtypes’ bytes.decode for details.
- **force_tty** (*bool, optional*) – force allocate a tty (ssh -tt). Defaults to False
- **stderr_merge** (*bool, optional*) – merge ssh subprocess stderr into stdout. Defaults to False.
- **stdout_loglevel** (*int, optional*) – log stdout with specific log level as well. Defaults to None, i.e. don’t log.
- **stderr_loglevel** (*int, optional*) – log stderr with specific log level as well. Defaults to None, i.e. don’t log.

Returns

stdout of the executed command if successful and otherwise an ExecutionError Exception

Return type List[str]

`get_file(remote_file, local_file)`
Get a file from the remote host

put_file (*local_file*, *remote_path*)

Put a file onto the remote host

add_port_forward (*remote_host*, *remote_port*)

forward command

remove_port_forward (*remote_host*, *remote_port*)

cancel command

connect ()

disconnect ()

isconnected ()

__attrs_attrs__ = (Attribute(name='host', default=NOTHING, validator=<instance_of vali

__dict__ = mappingproxy({'__module__': 'labgrid.util.ssh', '__doc__': 'SSHConnection

__eq__ (*other*)

Return self==value.

__ge__ (*other*)

Automatically created by attrs.

__gt__ (*other*)

Automatically created by attrs.

__hash__ = None

__init__ (*host*) → None

Initialize self. See help(type(self)) for accurate signature.

__le__ (*other*)

Automatically created by attrs.

__lt__ (*other*)

Automatically created by attrs.

__module__ = 'labgrid.util.ssh'

__ne__ (*other*)

Check equality and either forward a NotImplemented or return the result negated.

__repr__ ()

Automatically created by attrs.

__weakref__

list of weak references to the object (if defined)

exception labgrid.util.ssh.**ForwardError** (*msg*)

Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of valid

__eq__ (*other*)

Return self==value.

__ge__ (*other*)

Automatically created by attrs.

__gt__ (*other*)

Automatically created by attrs.

__hash__ = None

```

__init__(msg) → None
    Initialize self. See help(type(self)) for accurate signature.

__le__(other)
    Automatically created by attrs.

__lt__(other)
    Automatically created by attrs.

__module__ = 'labgrid.util.ssh'

__ne__(other)
    Check equality and either forward a NotImplemented or return the result negated.

__repr__()
    Automatically created by attrs.

__weakref__
    list of weak references to the object (if defined)

```

labgrid.util.timeout module

```

class labgrid.util.timeout.Timeout(timeout=120.0)
    Bases: object

    Represents a timeout (as a deadline)

    __attrs_post_init__()

    property remaining
    property expired

    __attrs_attrs__ = (Attribute(name='timeout', default=120.0, validator=<instance_of val
    __dict__ = mappingproxy({'__module__': 'labgrid.util.timeout', '__doc__': 'Represents
    __init__(timeout=120.0) → None
        Initialize self. See help(type(self)) for accurate signature.

    __module__ = 'labgrid.util.timeout'

    __repr__()
        Automatically created by attrs.

    __weakref__
        list of weak references to the object (if defined)

```

labgrid.util.yaml module

This module contains the custom YAML load and dump functions and associated loader and dumper

```

class labgrid.util.yaml.Loader(stream)
    Bases: yaml.loader.SafeLoader

    __module__ = 'labgrid.util.yaml'

    yaml_constructors = {'tag:yaml.org,2002:null': <function SafeConstructor.construct_ya

```

```
class labgrid.util.yaml.Dumper (stream, default_style=None, default_flow_style=False, canonical=None, indent=None, width=None, allow_unicode=None, line_break=None, encoding=None, explicit_start=None, explicit_end=None, version=None, tags=None, sort_keys=True)
```

Bases: `yaml.dumper.SafeDumper`

```
__module__ = 'labgrid.util.yaml'
```

```
yaml_representers = {<class 'NoneType'>: <function SafeRepresenter.represent_none>, <
```

```
labgrid.util.yaml.load (stream)
```

Wrapper for yaml load function with custom loader.

```
labgrid.util.yaml.dump (data, stream=None)
```

Wrapper for yaml dump function with custom dumper.

```
labgrid.util.yaml.resolve_templates (data, mapping)
```

Iterate recursively over data and call substitute(mapping) on all Templates.

9.1.2 Submodules

9.1.3 labgrid.binding module

```
exception labgrid.binding.StateError (msg)
```

Bases: `Exception`

```
__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance of valid
```

```
__init__ (msg) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.binding'
```

```
__repr__ ()
```

Automatically created by attrs.

```
__weakref__
```

list of weak references to the object (if defined)

```
exception labgrid.binding.BindingError (msg)
```

Bases: `Exception`

```
__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance of valid
```

```
__init__ (msg) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.binding'
```

```
__repr__ ()
```

Automatically created by attrs.

```
__weakref__
```

list of weak references to the object (if defined)

```
class labgrid.binding.BindingState
```

Bases: `enum.Enum`

An enumeration.

```
error = -1
```

```
idle = 0
```



```
bound = 1
active = 2
__module__ = 'labgrid.binding'
```

```
class labgrid.binding.BindingMixin(target, name)
```

Bases: object

Handles the binding and activation of drivers and their supplying resources and drivers.

One client can be bound to many suppliers, and one supplier can be bound by many clients.

Conflicting access to one supplier can be avoided by deactivating conflicting clients before activation (using the `resolve_conflicts` callback).

```
bindings = {}
```

```
__attrs_post_init__()
```

```
property display_name
```

```
on_supplier_bound(supplier)
```

Called by the Target after a new supplier has been bound

```
on_client_bound(client)
```

Called by the Target after a new client has been bound

```
on_activate()
```

Called by the Target when this object has been activated

```
on_deactivate()
```

Called by the Target when this object has been deactivated

```
resolve_conflicts(client)
```

Called by the Target to allow this object to deactivate conflicting clients.

```
classmethod check_active(func)
```

```
class NamedBinding(value)
```

Bases: object

Marks a binding (or binding set) as requiring an explicit name.

```
__init__(value)
```

Initialize self. See `help(type(self))` for accurate signature.

```
__repr__()
```

Return `repr(self)`.

```
__dict__ = mappingproxy({'__module__': 'labgrid.binding', '__doc__': '\n Marks a
```

```
__module__ = 'labgrid.binding'
```

```
__weakref__
```

list of weak references to the object (if defined)

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.binding', '__doc__': '\n Handles the
```

```
__init__(target, name) → None
```

Initialize self. See `help(type(self))` for accurate signature.

```
__module__ = 'labgrid.binding'
```

`__repr__()`
Automatically created by attrs.

`__weakref__`
list of weak references to the object (if defined)

9.1.4 labgrid.config module

Config convenience class

This class encapsulates access functions to the environment configuration

```
class labgrid.config.Config (filename)
```

Bases: object

```
__attrs_post_init__ ()
```

```
resolve_path (path)
```

Resolve an absolute path

Parameters `path` (*str*) – path to resolve

Returns the absolute path

Return type str

```
resolve_path_str_or_list (path)
```

Resolves a single path or multiple paths. Always returns a list (containing a single or multiple resolved paths).

Parameters `path` (*str*, *list*) – path(s) to resolve

Returns absolute path(s)

Return type list

Raises **TypeError** – if input is neither str nor list

```
get_tool (tool)
```

Retrieve an entry from the tools subkey

Parameters `tool` (*str*) – the tool to retrieve the path for

Returns path to the requested tools

Return type str

```
get_image_path (kind)
```

Retrieve an entry from the images subkey

Parameters `kind` (*str*) – the kind of the image to retrieve the path for

Returns path to the image

Return type str

Raises **KeyError** – if the requested image can not be found in the configuration

```
get_path (kind)
```

Retrieve an entry from the paths subkey

Parameters `kind` (*str*) – the type of path to retrieve the path for

Returns path to the path

Return type str

Raises `KeyError` – if the requested image can not be found in the configuration

`get_option` (*name*, *default=None*)

Retrieve an entry from the options subkey

Parameters

- **name** (*str*) – name of the option
- **default** (*str*) – A default parameter in case the option can not be found

Returns value of the option or default parameter

Return type str

Raises `KeyError` – if the requested image can not be found in the configuration

`set_option` (*name*, *value*)

Set an entry in the options subkey

Parameters

- **name** (*str*) – name of the option
- **value** (*str*) – the new value

`get_targets` ()

`get_imports` ()

Helper function that returns the list of all imports

Returns List of files which should be imported

Return type List

`get_paths` ()

Helper function that returns the subdict of all paths

Returns Dictionary containing all path definitions

Return type Dict

`get_images` ()

Helper function that returns the subdict of all images

Returns Dictionary containing all image definitions

Return type Dict

`get_features` ()

```
__attrs_attrs__ = (Attribute(name='filename', default=NOTHING, validator=<instance_of
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.config', '__attrs_post_init__': <fun
```

```
__init__ (filename) → None
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.config'
```

```
__repr__ ()
```

Automatically created by attrs.

```
__weakref__
```

list of weak references to the object (if defined)

9.1.5 labgrid.consoleloggingreporter module

class labgrid.consoleloggingreporter.**ConsoleLoggingReporter** (*logpath*)

Bases: object

ConsoleLoggingReporter - Reporter that writes console log files

Parameters **logpath** (*str*) – path to store the logfiles in

instance = None

classmethod **start** (*path*)

starts the ConsoleLoggingReporter

classmethod **stop** ()

stops the ConsoleLoggingReporter

__init__ (*logpath*)

Initialize self. See help(type(self)) for accurate signature.

get_logfile (*event*)

Returns the correct file handle from cache or creates a new file handle

notify (*event*)

This is the callback function for steps

__dict__ = **mappingproxy**({'__module__': 'labgrid.consoleloggingreporter', '__doc__':

__module__ = 'labgrid.consoleloggingreporter'

__weakref__

list of weak references to the object (if defined)

9.1.6 labgrid.environment module

class labgrid.environment.**Environment** (*config_file='config.yaml', interact=<built-in function input>*)

Bases: object

An environment encapsulates targets.

__attrs_post_init__ ()

get_target (*role: str = 'main'*) → labgrid.target.Target

Returns the specified target or None if not found.

Each target is initialized as needed.

get_features ()

get_target_features ()

cleanup ()

__attrs_attrs__ = (**Attribute**(name='config_file', default='config.yaml', validator=<ins

__dict__ = **mappingproxy**({'__module__': 'labgrid.environment', '__doc__': 'An environ

__init__ (*config_file='config.yaml', interact=<built-in function input>*) → None

Initialize self. See help(type(self)) for accurate signature.

__module__ = 'labgrid.environment'

__repr__ ()

Automatically created by attrs.

`__weakref__`
list of weak references to the object (if defined)

9.1.7 labgrid.exceptions module

exception `labgrid.exceptions.NoConfigFoundError` (*msg*)

Bases: `Exception`

`__attrs_attrs__` = (`Attribute`(name='msg', default=NOTHING, validator=<instance_of valid

`__init__` (*msg*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.exceptions'

`__repr__` ()
Automatically created by attrs.

`__weakref__`
list of weak references to the object (if defined)

exception `labgrid.exceptions.NoSupplierFoundError` (*msg*, *filter=None*)

Bases: `Exception`

`__attrs_attrs__` = (`Attribute`(name='msg', default=NOTHING, validator=<instance_of valid

`__init__` (*msg*, *filter=None*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.exceptions'

`__repr__` ()
Automatically created by attrs.

`__weakref__`
list of weak references to the object (if defined)

exception `labgrid.exceptions.InvalidConfigError` (*msg*)

Bases: `Exception`

`__attrs_attrs__` = (`Attribute`(name='msg', default=NOTHING, validator=<instance_of valid

`__init__` (*msg*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.exceptions'

`__repr__` ()
Automatically created by attrs.

`__weakref__`
list of weak references to the object (if defined)

exception `labgrid.exceptions.NoDriverFoundError` (*msg*, *filter=None*)

Bases: `labgrid.exceptions.NoSupplierFoundError`

`__attrs_attrs__` = (`Attribute`(name='msg', default=NOTHING, validator=<instance_of valid

`__init__` (*msg*, *filter=None*) → None
Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.exceptions'

`__repr__()`

Automatically created by attrs.

exception `labgrid.exceptions.NoResourceFoundError` (*msg, filter=None*)

Bases: `labgrid.exceptions.NoSupplierFoundError`

`__attrs_attrs__` = (`Attribute`(name='msg', default=NOTHING, validator=<instance of valid

`__init__` (*msg, filter=None*) → None

Initialize self. See help(type(self)) for accurate signature.

`__module__` = 'labgrid.exceptions'

`__repr__()`

Automatically created by attrs.

9.1.8 labgrid.factory module

class `labgrid.factory.TargetFactory`

Bases: `object`

`__init__()`

Initialize self. See help(type(self)) for accurate signature.

reg_resource (*cls*)

Register a resource with the factory.

Returns the class to allow using it as a decorator.

reg_driver (*cls*)

Register a driver with the factory.

Returns the class to allow using it as a decorator.

static normalize_config (*config*)

make_resource (*target, resource, name, args*)

make_driver (*target, driver, name, args*)

make_target (*name, config, *, env=None*)

class_from_string (*string: str*)

`__dict__` = `mappingproxy`({'__module__': 'labgrid.factory', '__init__': <function Target

`__module__` = 'labgrid.factory'

`__weakref__`

list of weak references to the object (if defined)

`labgrid.factory.target_factory` = <labgrid.factory.TargetFactory object>

Global TargetFactory instance

This instance is used to register Resource and Driver classes so that Targets can be created automatically from YAML files.

9.1.9 labgrid.step module

class `labgrid.step.Steps`

Bases: `object`

```

__init__()
    Initialize self. See help(type(self)) for accurate signature.

get_current()

get_new(title, tag, source)

push(step)

pop(step)

subscribe(callback)

unsubscribe(callback)

notify(event)

__dict__ = mappingproxy({'__module__': 'labgrid.step', '__init__': <function Steps.
__module__ = 'labgrid.step'

__weakref__
    list of weak references to the object (if defined)

class labgrid.step.StepEvent(step, data, *, resource=None, stream=False)
    Bases: object

    __init__(step, data, *, resource=None, stream=False)
        Initialize self. See help(type(self)) for accurate signature.

    __str__()
        Return str(self).

    __setitem__(k, v)

    merge(other)

    property age

    __dict__ = mappingproxy({'__module__': 'labgrid.step', '__init__': <function StepEve
    __module__ = 'labgrid.step'

    __weakref__
        list of weak references to the object (if defined)

class labgrid.step.Step(title, level, tag, source)
    Bases: object

    __init__(title, level, tag, source)
        Initialize self. See help(type(self)) for accurate signature.

    __repr__()
        Return repr(self).

    __str__()
        Return str(self).

    property duration

    property status

    property is_active

    property is_done

    start()

```

```
skip(reason)
stop()
__del__()
__dict__ = mappingproxy({'__module__': 'labgrid.step', '__init__': <function Step.__init__>})
__module__ = 'labgrid.step'
__weakref__
    list of weak references to the object (if defined)
```

```
labgrid.step.step(*, title=None, args=[], result=False, tag=None)
```

9.1.10 labgrid.stepreporter module

```
class labgrid.stepreporter.StepReporter
    Bases: object

    instance = None

    classmethod start()
        starts the StepReporter

    classmethod stop()
        stops the StepReporter

    __init__()
        Initialize self. See help(type(self)) for accurate signature.

    static notify(event)

    __dict__ = mappingproxy({'__module__': 'labgrid.stepreporter', 'instance': None, 'start': <function StepReporter.start()>, 'stop': <function StepReporter.stop()>})
    __module__ = 'labgrid.stepreporter'
    __weakref__
        list of weak references to the object (if defined)
```

9.1.11 labgrid.target module

```
class labgrid.target.Target(name, env=None)
    Bases: object

    __attrs_post_init__()

    interact(msg)

    update_resources()
        Iterate over all relevant resources and deactivate any active but unavailable resources.

    await_resources(resources, timeout=None, avail=True)
        Poll the given resources and wait until they are (un-)available.
```

Parameters

- **resources** (*List*) – the resources to poll
- **timeout** (*float*) – optional timeout
- **avail** (*bool*) – optionally wait until the resources are unavailable with `avail=False`

get_resource (*cls*, *, *name=None*, *wait_avail=True*)

Helper function to get a resource of the target. Returns the first valid resource found, otherwise a `NoResourceFoundError` is raised.

Arguments: *cls* – resource-class to return as a resource name – optional name to use as a filter *wait_avail* – wait for the resource to become available (default `True`)

get_active_driver (*cls*, *, *name=None*)

Helper function to get the active driver of the target. Returns the active driver found, otherwise `None`.

Arguments: *cls* – driver-class to return as a resource name – optional name to use as a filter

get_driver (*cls*, *, *name=None*, *activate=True*)

Helper function to get a driver of the target. Returns the first valid driver found, otherwise `None`.

Arguments: *cls* – driver-class to return as a resource name – optional name to use as a filter *activate* – activate the driver (default `True`)

__getitem__ (*key*)

Syntactic sugar to access drivers by class (optionally filtered by name).

```
>>> target = Target('main')
>>> console = FakeConsoleDriver(target, 'console')
>>> target.activate(console)
>>> target[FakeConsoleDriver]
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
>>> target[FakeConsoleDriver, 'console']
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
```

set_binding_map (*mapping*)

Configure the binding name mapping for the next driver only.

bind_resource (*resource*)

Bind the resource to this target.

bind_driver (*client*)

Bind the driver to all suppliers (resources and other drivers).

Currently, we only support binding all suppliers at once.

bind (*bindable*)

activate (*client*)

Activate the client by activating all bound suppliers. This may require deactivating other clients.

deactivate (*client*)

Recursively deactivate the client's clients and itself.

This is needed to ensure that no client has an inactive supplier.

deactivate_all_drivers ()

Deactivates all drivers in reversed order they were activated

cleanup ()

Clean up connected drivers and resources in reversed order

__attrs_attrs__ = (**Attribute**(name='name', default=NOTHING, validator=<instance of vali

__dict__ = **mappingproxy**({'__module__': 'labgrid.target', '__attrs_post_init__': <fun

__init__ (*name*, *env=None*) → None

Initialize self. See `help(type(self))` for accurate signature.

__module__ = 'labgrid.target'

`__repr__()`

Automatically created by attrs.

`__weakref__`

list of weak references to the object (if defined)

INDICES AND TABLES

- genindex
- modindex
- search

PYTHON MODULE INDEX

|
labgrid, 89
labgrid.autoinstall, 89
labgrid.autoinstall.main, 89
labgrid.binding, 172
labgrid.config, 174
labgrid.consoleloggingreporter, 176
labgrid.driver, 90
labgrid.driver.bareboxdriver, 91
labgrid.driver.commandmixin, 93
labgrid.driver.common, 93
labgrid.driver.consoleexpectmixin, 94
labgrid.driver.deditecrelaisdriver, 94
labgrid.driver.dockerdriver, 95
labgrid.driver.exception, 96
labgrid.driver.externalconsoledriver, 97
labgrid.driver.fake, 97
labgrid.driver.fastbootdriver, 99
labgrid.driver.filedigitaloutput, 99
labgrid.driver.flashromdriver, 100
labgrid.driver.gpiodriver, 100
labgrid.driver.modbusdriver, 101
labgrid.driver.onewiredriver, 102
labgrid.driver.openocddriver, 102
labgrid.driver.power, 90
labgrid.driver.power.apc, 90
labgrid.driver.power.digipower, 90
labgrid.driver.power.gude, 90
labgrid.driver.power.gude24, 90
labgrid.driver.power.gude8316, 90
labgrid.driver.power.netio, 90
labgrid.driver.power.netio_kshell, 90
labgrid.driver.power.sentry, 91
labgrid.driver.power.simplerest, 91
labgrid.driver.powerdriver, 103
labgrid.driver.qemudriver, 106
labgrid.driver.quartushpsdriver, 107
labgrid.driver.resetdriver, 108
labgrid.driver.serialdigitaloutput, 108
labgrid.driver.serialdriver, 109
labgrid.driver.shelldriver, 109
labgrid.driver.sigrokdriver, 111
labgrid.driver.smallubootdriver, 113
labgrid.driver.sshdriver, 114
labgrid.driver.ubootdriver, 114
labgrid.driver.usbloader, 116
labgrid.driver.usbsdmuxdriver, 117
labgrid.driver.usbstoragedriver, 118
labgrid.driver.usbtmc, 91
labgrid.driver.usbtmc.keysight_dsox2000, 91
labgrid.driver.usbtmc.tektronix_tds2000, 91
labgrid.driver.usbtmcdriver, 119
labgrid.driver.usbvideodriver, 120
labgrid.driver.xenadriver, 120
labgrid.environment, 176
labgrid.exceptions, 177
labgrid.factory, 178
labgrid.protocol, 120
labgrid.protocol.bootstrapprotocol, 121
labgrid.protocol.commandprotocol, 121
labgrid.protocol.consoleprotocol, 121
labgrid.protocol.digitaloutputprotocol, 122
labgrid.protocol.filesystemprotocol, 122
labgrid.protocol.filetransferprotocol, 123
labgrid.protocol.infoprotocol, 123
labgrid.protocol.linuxbootprotocol, 123
labgrid.protocol.mmioprotocol, 124
labgrid.protocol.powerprotocol, 124
labgrid.protocol.resetprotocol, 124
labgrid.provider, 125
labgrid.provider.fileprovider, 125
labgrid.provider.mediafileprovider, 125
labgrid.pytestplugin, 125
labgrid.pytestplugin.fixtures, 125
labgrid.pytestplugin.hooks, 126
labgrid.pytestplugin.reporter, 126
labgrid.remote, 126
labgrid.remote.authenticator, 126
labgrid.remote.client, 127

- labgrid.remote.common, 127
- labgrid.remote.config, 130
- labgrid.remote.coordinator, 130
- labgrid.remote.exporter, 132
- labgrid.remote.scheduler, 136
- labgrid.resource, 137
 - labgrid.resource.base, 137
 - labgrid.resource.common, 138
 - labgrid.resource.docker, 140
 - labgrid.resource.ethernetport, 141
 - labgrid.resource.flashrom, 143
 - labgrid.resource.modbus, 144
 - labgrid.resource.networkservice, 144
 - labgrid.resource.onewireport, 145
 - labgrid.resource.power, 145
 - labgrid.resource.remote, 146
 - labgrid.resource.serialport, 151
 - labgrid.resource.sigrok, 151
 - labgrid.resource.suggest, 152
 - labgrid.resource.udev, 152
 - labgrid.resource.xenamanager, 157
 - labgrid.resource.ykushpowerport, 158
- labgrid.step, 178
- labgrid.stepreporter, 180
- labgrid.strategy, 158
 - labgrid.strategy.bareboxstrategy, 158
 - labgrid.strategy.common, 159
 - labgrid.strategy.dockerstrategy, 160
 - labgrid.strategy.graphstrategy, 160
 - labgrid.strategy.shellstrategy, 161
 - labgrid.strategy.ubootstrategy, 161
- labgrid.target, 180
- labgrid.util, 162
 - labgrid.util.agent, 163
 - labgrid.util.agents, 162
 - labgrid.util.agents.dummy, 162
 - labgrid.util.agents.sysfsgpio, 162
 - labgrid.util.agentwrapper, 163
 - labgrid.util.atomic, 164
 - labgrid.util.dict, 165
 - labgrid.util.exceptions, 165
 - labgrid.util.expect, 165
 - labgrid.util.helper, 166
 - labgrid.util.managedfile, 167
 - labgrid.util.marker, 168
 - labgrid.util.proxy, 168
 - labgrid.util.qmp, 168
 - labgrid.util.ssh, 168
 - labgrid.util.timeout, 171
 - labgrid.util.yaml, 171

Symbols

<code>__abstractmethods__</code> <i>grid.driver.bareboxdriver.BareboxDriver</i> attribute), 92	(lab-	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.DigitalOutputPowerDriver</i> attribute), 104	(lab-
<code>__abstractmethods__</code> <i>grid.driver.deditecrelaisdriver.DeditecRelaisDriver</i> attribute), 95	(lab-	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.ExternalPowerDriver</i> attribute), 103	(lab-
<code>__abstractmethods__</code> <i>grid.driver.dockerdriver.DockerDriver</i> tribute), 96	(lab- at-	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.ManualPowerDriver</i> attribute), 103	(lab-
<code>__abstractmethods__</code> <i>grid.driver.externalconsoledriver.ExternalConsoleDriver</i> attribute), 97	(lab-	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.NetworkPowerDriver</i> attribute), 104	(lab-
<code>__abstractmethods__</code> <i>grid.driver.fake.FakeCommandDriver</i> tribute), 98	(lab- at-	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.PDUDaemonDriver</i> attribute), 106	(lab-
<code>__abstractmethods__</code> <i>grid.driver.fake.FakeConsoleDriver</i> 97	(lab- attribute),	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.PowerResetMixin</i> attribute), 103	(lab-
<code>__abstractmethods__</code> <i>grid.driver.fake.FakeFileTransferDriver</i> tribute), 98	(lab- at-	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.USBPowerDriver</i> attribute), 105	(lab-
<code>__abstractmethods__</code> <i>grid.driver.fake.FakePowerDriver</i> 98	(lab- attribute),	<code>__abstractmethods__</code> <i>grid.driver.powerdriver.YKUSHPowerDriver</i> attribute), 105	(lab-
<code>__abstractmethods__</code> <i>grid.driver.filedigitaloutput.FileDigitalOutputDriver</i> attribute), 100	(lab-	<code>__abstractmethods__</code> <i>grid.driver.qemudriver.QEMUDriver</i> tribute), 107	(lab- at-
<code>__abstractmethods__</code> <i>grid.driver.flashromdriver.FlashromDriver</i> attribute), 100	(lab-	<code>__abstractmethods__</code> <i>grid.driver.resetdriver.DigitalOutputResetDriver</i> attribute), 108	(lab-
<code>__abstractmethods__</code> <i>grid.driver.gpiodriver.GpioDigitalOutputDriver</i> attribute), 101	(lab-	<code>__abstractmethods__</code> <i>grid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver</i> attribute), 108	(lab-
<code>__abstractmethods__</code> <i>grid.driver.modbusdriver.ModbusCoilDriver</i> attribute), 101	(lab-	<code>__abstractmethods__</code> <i>grid.driver.serialdriver.SerialDriver</i> 109	(lab- attribute),
<code>__abstractmethods__</code> <i>grid.driver.onewiredriver.OneWirePIODriver</i> attribute), 102	(lab-	<code>__abstractmethods__</code> <i>grid.driver.shelldriver.ShellDriver</i> 111	(lab- attribute),
<code>__abstractmethods__</code> <i>grid.driver.openocddriver.OpenOCDDriver</i>	(lab-	<code>__abstractmethods__</code> <i>grid.driver.sigrokdriver.SigrokPowerDriver</i>	(lab-

<code>__abstractmethods__</code> (lab-grid.driver.smallubootdriver.SmallUBootDriver attribute), 112	<code>__abstractmethods__</code> (lab-grid.provider.fileprovider.FileProvider attribute), 124
<code>__abstractmethods__</code> (lab-grid.driver.sshdriver.SSHDriver attribute), 113	<code>__abstractmethods__</code> (lab-grid.provider.mediafileprovider.MediaFileProvider attribute), 125
<code>__abstractmethods__</code> (lab-grid.driver.ubootdriver.UBootDriver attribute), 114	<code>__attrs_attrs__</code> (labgrid.binding.BindingError attribute), 172
<code>__abstractmethods__</code> (lab-grid.driver.usbloader.IMXUSBDriver attribute), 116	<code>__attrs_attrs__</code> (labgrid.binding.BindingMixin attribute), 173
<code>__abstractmethods__</code> (lab-grid.driver.usbloader.MXSUSBDriver attribute), 117	<code>__attrs_attrs__</code> (labgrid.binding.StateError attribute), 172
<code>__abstractmethods__</code> (lab-grid.driver.usbloader.RKUSBDriver attribute), 117	<code>__attrs_attrs__</code> (labgrid.config.Config attribute), 175
<code>__abstractmethods__</code> (lab-grid.protocol.bootstrapprotocol.BootstrapProtocol attribute), 121	<code>__attrs_attrs__</code> (lab-grid.driver.bareboxdriver.BareboxDriver attribute), 92
<code>__abstractmethods__</code> (lab-grid.protocol.commandprotocol.CommandProtocol attribute), 121	<code>__attrs_attrs__</code> (labgrid.driver.common.Driver attribute), 94
<code>__abstractmethods__</code> (lab-grid.protocol.consoleprotocol.ConsoleProtocol attribute), 122	<code>__attrs_attrs__</code> (lab-grid.driver.deditecrelaisdriver.DeditecRelaisDriver attribute), 95
<code>__abstractmethods__</code> (lab-grid.protocol.consoleprotocol.ConsoleProtocol.Client attribute), 122	<code>__attrs_attrs__</code> (lab-grid.driver.dockerdriver.DockerDriver attribute), 96
<code>__abstractmethods__</code> (lab-grid.protocol.digitaloutputprotocol.DigitalOutputProtocol attribute), 122	<code>__attrs_attrs__</code> (lab-grid.driver.exception.CleanUpError attribute), 96
<code>__abstractmethods__</code> (lab-grid.protocol.filesystemprotocol.FileSystemProtocol attribute), 122	<code>__attrs_attrs__</code> (lab-grid.driver.exception.ExecutionError attribute), 96
<code>__abstractmethods__</code> (lab-grid.protocol.filetransferprotocol.FileTransferProtocol attribute), 123	<code>__attrs_attrs__</code> (lab-grid.driver.externalconsoledriver.ExternalConsoleDriver attribute), 97
<code>__abstractmethods__</code> (lab-grid.protocol.infoprotocol.InfoProtocol attribute), 123	<code>__attrs_attrs__</code> (lab-grid.driver.fake.FakeCommandDriver attribute), 98
<code>__abstractmethods__</code> (lab-grid.protocol.linuxbootprotocol.LinuxBootProtocol attribute), 123	<code>__attrs_attrs__</code> (lab-grid.driver.fake.FakeConsoleDriver attribute), 97
<code>__abstractmethods__</code> (lab-grid.protocol.mmioprotocol.MMIOProtocol attribute), 124	<code>__attrs_attrs__</code> (lab-grid.driver.fake.FakeFileTransferDriver attribute), 98
<code>__abstractmethods__</code> (lab-grid.protocol.powerprotocol.PowerProtocol attribute), 124	<code>__attrs_attrs__</code> (lab-grid.driver.fake.FakePowerDriver attribute), 98
<code>__abstractmethods__</code> (lab-grid.protocol.resetprotocol.ResetProtocol attribute), 124	<code>__attrs_attrs__</code> (lab-grid.driver.fastbootdriver.AndroidFastbootDriver attribute), 99
	<code>__attrs_attrs__</code> (lab-grid.driver.filedigitaloutput.FileDigitalOutputDriver attribute), 100
	<code>__attrs_attrs__</code> (lab-grid.driver.exception.CleanUpError attribute), 96

<code>grid.driver.flashromdriver.FlashromDriver</code> (attribute), 100	<code>grid.driver.shelldriver.ShellDriver</code> (attribute), 111
<code>__attrs_attrs__</code> (lab- <code>grid.driver.gpiodriver.GpioDigitalOutputDriver</code> (attribute), 101	<code>__attrs_attrs__</code> (lab- <code>grid.driver.sigrokdriver.SigrokCommon</code> (attribute), 111
<code>__attrs_attrs__</code> (lab- <code>grid.driver.modbusdriver.ModbusCoilDriver</code> (attribute), 101	<code>__attrs_attrs__</code> (lab- <code>grid.driver.sigrokdriver.SigrokDriver</code> (attribute), 112
<code>__attrs_attrs__</code> (lab- <code>grid.driver.onewiredriver.OneWirePIODriver</code> (attribute), 102	<code>__attrs_attrs__</code> (lab- <code>grid.driver.sigrokdriver.SigrokPowerDriver</code> (attribute), 112
<code>__attrs_attrs__</code> (lab- <code>grid.driver.openocddriver.OpenOCDDriver</code> (attribute), 102	<code>__attrs_attrs__</code> (lab- <code>grid.driver.smallubootdriver.SmallUBootDriver</code> (attribute), 113
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.DigitalOutputPowerDriver</code> (attribute), 104	<code>__attrs_attrs__</code> (lab- <code>grid.driver.sshdriver.SSHDriver</code> (attribute), 114
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.ExternalPowerDriver</code> (attribute), 103	<code>__attrs_attrs__</code> (lab- <code>grid.driver.ubootdriver.UBootDriver</code> (attribute), 116
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.ManualPowerDriver</code> (attribute), 103	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbloader.IMXUSBDriver</code> (attribute), 117
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.NetworkPowerDriver</code> (attribute), 104	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbloader.MXSUSBDriver</code> (attribute), 116
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.PDUDaemonDriver</code> (attribute), 106	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbloader.RKUSBDriver</code> (attribute), 117
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.PowerResetMixin</code> (attribute), 103	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbsdmuxdriver.USBSDMuxDriver</code> (attribute), 117
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.USBPowerDriver</code> (attribute), 105	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbstoredriver.NetworkUSBStorageDriver</code> (attribute), 119
<code>__attrs_attrs__</code> (lab- <code>grid.driver.powerdriver.YKUSHPowerDriver</code> (attribute), 105	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbstoredriver.USBStorageDriver</code> (attribute), 118
<code>__attrs_attrs__</code> (lab- <code>grid.driver.qemudriver.QEMUDriver</code> (attribute), 107	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbtmcdriver.USBTMCDriver</code> (attribute), 119
<code>__attrs_attrs__</code> (lab- <code>grid.driver.quartushpsdriver.QuartusHPSDriver</code> (attribute), 107	<code>__attrs_attrs__</code> (lab- <code>grid.driver.usbvideodriver.USBVideoDriver</code> (attribute), 120
<code>__attrs_attrs__</code> (lab- <code>grid.driver.resetdriver.DigitalOutputResetDriver</code> (attribute), 108	<code>__attrs_attrs__</code> (lab- <code>grid.driver.xenadriver.XenaDriver</code> (attribute), 120
<code>__attrs_attrs__</code> (lab- <code>grid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver</code> (attribute), 108	<code>__attrs_attrs__</code> (lab- <code>grid.environment.Environment</code> (attribute), 176
<code>__attrs_attrs__</code> (lab- <code>grid.driver.serialdriver.SerialDriver</code> (attribute), 109	<code>__attrs_attrs__</code> (lab- <code>grid.exceptions.InvalidConfigError</code> (attribute), 177
<code>__attrs_attrs__</code> (lab-	<code>__attrs_attrs__</code> (lab- <code>grid.exceptions.NoConfigFoundError</code> (attribute)

<i>tribute</i>), 177		<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.USBDeDitecRelaisExport</i> attribute), 134
<code>__attrs_attrs__</code>	(<i>lab-grid.exceptions.NoDriverFoundError</i> attribute), 177	<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.USBEthernetExport</i> attribute), 133
<code>__attrs_attrs__</code>	(<i>lab-grid.exceptions.NoResourceFoundError</i> attribute), 178	<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.USBGenericExport</i> attribute), 133
<code>__attrs_attrs__</code>	(<i>lab-grid.exceptions.NoSupplierFoundError</i> attribute), 177	<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.USBPowerPortExport</i> attribute), 134
<code>__attrs_attrs__</code>	(<i>lab-grid.provider.mediafileprovider.MediaFileProvider</i> attribute), 125	<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.USBSDMuxExport</i> attribute), 134
<code>__attrs_attrs__</code>	(<i>labgrid.remote.common.Place</i> attribute), 129	<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.USBSigrokExport</i> attribute), 133
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.common.Reservation</i> attribute), 129	<code>__attrs_attrs__</code>	(<i>lab-grid.remote.scheduler.TagSet</i> attribute), 136
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.common.ResourceEntry</i> attribute), 127	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.base.EthernetInterface</i> attribute), 137
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.common.ResourceMatch</i> attribute), 128	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.base.EthernetPort</i> attribute), 137
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.config.ResourceConfig</i> attribute), 130	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.base.SerialPort</i> attribute), 137
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.coordinator.ClientSession</i> attribute), 131	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.base.SysfsGPIO</i> attribute), 138
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.coordinator.ExporterSession</i> attribute), 131	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.common.ManagedResource</i> attribute), 140
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.coordinator.RemoteSession</i> attribute), 131	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.common.NetworkResource</i> attribute), 139
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.coordinator.ResourceImport</i> attribute), 131	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.common.Resource</i> attribute), 139
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.EthernetPortExport</i> attribute), 135	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.common.ResourceManager</i> attribute), 139
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.GPIOGenericExport</i> attribute), 135	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.docker.DockerDaemon</i> attribute), 141
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.NetworkServiceExport</i> attribute), 136	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.docker.DockerManager</i> attribute), 140
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.ResourceExport</i> attribute), 132	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.ethernetport.EthernetPortManager</i> attribute), 142
<code>__attrs_attrs__</code>	(<i>lab-grid.remote.exporter.SerialPortExport</i> attribute), 132	<code>__attrs_attrs__</code>	(<i>lab-grid.resource.ethernetport.SNMPETHERNETPORT</i> attribute), 143

<code>__attrs_attrs__</code> <i>grid.resource.ethernetport.SNMPSwitch</i> attribute), 141	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkUSBPowerPort</i> attribute), 149	(lab-
<code>__attrs_attrs__</code> <i>grid.resource.flashrom.Flashrom</i> 143	(lab- attribute),	<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkUSBSDMuxDevice</i> attribute), 149	(lab-
<code>__attrs_attrs__</code> <i>grid.resource.flashrom.NetworkFlashrom</i> attribute), 144	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkUSBTMC</i> attribute), 150	(lab- at-
<code>__attrs_attrs__</code> <i>grid.resource.modbus.ModbusTCPCoil</i> attribute), 144	(lab- at-	<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkUSBVideo</i> attribute), 149	(lab-
<code>__attrs_attrs__</code> <i>grid.resource.networkservice.NetworkService</i> attribute), 144	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.remote.RemotePlace</i> 146	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.onewireport.OneWirePIO</i> attribute), 145	(lab- at-	<code>__attrs_attrs__</code> <i>grid.resource.remote.RemotePlaceManager</i> attribute), 146	(lab-
<code>__attrs_attrs__</code> <i>grid.resource.power.NetworkPowerPort</i> attribute), 145	(lab- at-	<code>__attrs_attrs__</code> <i>grid.resource.remote.RemoteUSBResource</i> attribute), 146	(lab-
<code>__attrs_attrs__</code> <i>grid.resource.power.PDUDaemonPort</i> attribute), 145	(lab- at-	<code>__attrs_attrs__</code> <i>grid.resource.serialport.NetworkSerialPort</i> attribute), 151	(lab-
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkAlteraUSBBlaster</i> attribute), 148	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.serialport.RawSerialPort</i> attribute), 151	(lab- at-
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkAndroidFastboot</i> attribute), 147	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.sigrok.SigrokDevice</i> 151	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkDeditecRelais8</i> attribute), 150	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.AlteraUSBBlaster</i> attribute), 155	(lab- at-
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkIMXUSBLoader</i> attribute), 147	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.AndroidFastboot</i> 154	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkMXSUSBLoader</i> attribute), 147	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.DeditecRelais8</i> 157	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkRKUSBLoader</i> attribute), 147	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.IMXUSBLoader</i> 153	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkSigrokUSBDevice</i> attribute), 148	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.MXSUSBLoader</i> 154	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkSigrokUSBSerialDevice</i> attribute), 148	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.RKUSBLoader</i> 154	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkSysfsGPIO</i> attribute), 150	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.SigrokUSBDevice</i> 155	(lab- attribute),
<code>__attrs_attrs__</code> <i>grid.resource.remote.NetworkUSBMassStorage</i> attribute), 149	(lab-	<code>__attrs_attrs__</code> <i>grid.resource.udev.SigrokUSBSerialDevice</i> attribute), 156	(lab-

<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.USBEthernetInterface</i> attribute), 155	<code>__attrs_attrs__</code> (<i>lab-grid.util.helper.ProcessWrapper</i> attribute), 166
<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.USBMassStorage</i> attribute), 153	<code>__attrs_attrs__</code> (<i>lab-grid.util.managedfile.ManagedFile</i> attribute), 167
<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.USBPowerPort</i> attribute), 156	<code>__attrs_attrs__</code> (<i>labgrid.util.qmp.QMPError</i> attribute), 168
<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.USBResource</i> attribute), 153	<code>__attrs_attrs__</code> (<i>labgrid.util.qmp.QMPMonitor</i> attribute), 168
<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.USBSDMuxDevice</i> attribute), 156	<code>__attrs_attrs__</code> (<i>labgrid.util.ssh.ForwardError</i> attribute), 170
<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.USBSerialPort</i> attribute), 153	<code>__attrs_attrs__</code> (<i>labgrid.util.ssh.SSHConnection</i> attribute), 170
<code>__attrs_attrs__</code> (<i>labgrid.resource.udev.USBTMC</i> attribute), 157	<code>__attrs_attrs__</code> (<i>labgrid.util.timeout.Timeout</i> attribute), 171
<code>__attrs_attrs__</code> (<i>labgrid.resource.udev.USBVideo</i> attribute), 157	<code>__attrs_post_init__()</code> (<i>lab-grid.binding.BindingMixin</i> method), 173
<code>__attrs_attrs__</code> (<i>lab-grid.resource.udev.UdevManager</i> attribute), 152	<code>__attrs_post_init__()</code> (<i>labgrid.config.Config</i> method), 174
<code>__attrs_attrs__</code> (<i>lab-grid.resource.xenamanager.XenaManager</i> attribute), 157	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.bareboxdriver.BareboxDriver</i> method), 92
<code>__attrs_attrs__</code> (<i>lab-grid.resource.ykushpowerport.YKUSHPowerPort</i> attribute), 158	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.commandmixin.CommandMixin</i> method), 93
<code>__attrs_attrs__</code> (<i>lab-grid.strategy.bareboxstrategy.BareboxStrategy</i> attribute), 159	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.common.Driver</i> method), 94
<code>__attrs_attrs__</code> (<i>lab-grid.strategy.common.Strategy</i> attribute), 159	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.consoleexpectmixin.ConsoleExpectMixin</i> method), 94
<code>__attrs_attrs__</code> (<i>lab-grid.strategy.common.StrategyError</i> attribute), 159	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.deditecrelaisdriver.DeditecRelaisDriver</i> method), 95
<code>__attrs_attrs__</code> (<i>lab-grid.strategy.dockerstrategy.DockerStrategy</i> attribute), 160	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.dockerdriver.DockerDriver</i> method), 95
<code>__attrs_attrs__</code> (<i>lab-grid.strategy.shellstrategy.ShellStrategy</i> attribute), 161	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.externalconsoledriver.ExternalConsoleDriver</i> method), 97
<code>__attrs_attrs__</code> (<i>lab-grid.strategy.ubootstrategy.UBootStrategy</i> attribute), 162	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.fake.FakeConsoleDriver</i> method), 97
<code>__attrs_attrs__</code> (<i>labgrid.target.Target</i> attribute), 181	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.fastbootdriver.AndroidFastbootDriver</i> method), 99
<code>__attrs_attrs__</code> (<i>lab-grid.util.exceptions.NoValidDriverError</i> attribute), 165	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.filedigitaloutput.FileDigitalOutputDriver</i> method), 99
	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.flashromdriver.FlashromDriver</i> method), 100
	<code>__attrs_post_init__()</code> (<i>lab-grid.driver.gpiodriver.GpioDigitalOutputDriver</i> method), 100

<i>method</i>), 101		115	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.modbusdriver.ModbusCoilDriver method</i>), 101		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbloader.IMXUSBDriver method</i>), 116	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.onewiredriver.OneWirePIODriver method</i>), 102		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbloader.MXSUSBDriver method</i>), 116	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.openocddriver.OpenOCDDriver method</i>), 102		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbloader.RKUSBDriver method</i>), 117	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.powerdriver.DigitalOutputPowerDriver method</i>), 104		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbsdmuxdriver.USBSDMuxDriver method</i>), 117	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.powerdriver.NetworkPowerDriver method</i>), 104		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbstoredriver.NetworkUSBStorageDriver method</i>), 119	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.powerdriver.PDUDaemonDriver method</i>), 106		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbstoredriver.USBStorageDriver method</i>), 118	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.powerdriver.PowerResetMixin method</i>), 103		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.usbtmcdriver.USBTMCDriver method</i>), 119	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.powerdriver.USBPowerDriver method</i>), 105		<code>__attrs_post_init__()</code> (<i>lab-grid.driver.xenadriver.XenaDriver method</i>), 120	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.powerdriver.YKUSHPowerDriver method</i>), 105		<code>__attrs_post_init__()</code> (<i>lab-grid.environment.Environment method</i>), 176	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.qemudriver.QEMUDriver method</i>), 107		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.common.ResourceEntry method</i>), 127	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.quartushpsdriver.QuartusHPSDriver method</i>), 107		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.config.ResourceConfig method</i>), 130	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.resetdriver.DigitalOutputResetDriver method</i>), 108		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.EthernetPortExport method</i>), 135	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver method</i>), 108		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.GPIOGenericExport method</i>), 135	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.serialdriver.SerialDriver method</i>), 109		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.NetworkServiceExport method</i>), 136	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.shelldriver.ShellDriver method</i>), 110		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.ResourceExport method</i>), 132	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.sigrokdriver.SigrokCommon method</i>), 111		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.SerialPortExport method</i>), 132	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.sshdriver.SSHDriver method</i>), 114		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.USBDeitecRelaisExport method</i>), 134	
<code>__attrs_post_init__()</code> (<i>lab-grid.driver.ubootdriver.UBootDriver method</i>),		<code>__attrs_post_init__()</code> (<i>lab-grid.remote.exporter.USBEthernetExport</i>	

method), 133
 __attrs_post_init__() (lab-grid.remote.exporter.USBGenericExport *method*), 133
 __attrs_post_init__() (lab-grid.remote.exporter.USBPowerPortExport *method*), 134
 __attrs_post_init__() (lab-grid.remote.exporter.USBSDMuxExport *method*), 134
 __attrs_post_init__() (lab-grid.remote.exporter.USBSigrokExport *method*), 133
 __attrs_post_init__() (lab-grid.resource.common.ManagedResource *method*), 140
 __attrs_post_init__() (lab-grid.resource.common.Resource *method*), 138
 __attrs_post_init__() (lab-grid.resource.common.ResourceManager *method*), 139
 __attrs_post_init__() (lab-grid.resource.docker.DockerDaemon *method*), 141
 __attrs_post_init__() (lab-grid.resource.docker.DockerManager *method*), 140
 __attrs_post_init__() (lab-grid.resource.ethernetport.EthernetPortManager *method*), 142
 __attrs_post_init__() (lab-grid.resource.ethernetport.SNMPEthernetPort *method*), 143
 __attrs_post_init__() (lab-grid.resource.ethernetport.SNMPSwitch *method*), 141
 __attrs_post_init__() (lab-grid.resource.remote.NetworkAlteraUSBBlaster *method*), 148
 __attrs_post_init__() (lab-grid.resource.remote.NetworkAndroidFastboot *method*), 147
 __attrs_post_init__() (lab-grid.resource.remote.NetworkDeditecRelais8 *method*), 150
 __attrs_post_init__() (lab-grid.resource.remote.NetworkIMXUSBLoader *method*), 147
 __attrs_post_init__() (lab-grid.resource.remote.NetworkMXSUSBLoader *method*), 147
 __attrs_post_init__() (lab-grid.resource.remote.NetworkRKUSBLoader *method*), 147
 __attrs_post_init__() (lab-grid.resource.remote.NetworkSigrokUSBDevice *method*), 148
 __attrs_post_init__() (lab-grid.resource.remote.NetworkSigrokUSBSerialDevice *method*), 148
 __attrs_post_init__() (lab-grid.resource.remote.NetworkSysfsGPIO *method*), 150
 __attrs_post_init__() (lab-grid.resource.remote.NetworkUSBMassStorage *method*), 149
 __attrs_post_init__() (lab-grid.resource.remote.NetworkUSBPowerPort *method*), 149
 __attrs_post_init__() (lab-grid.resource.remote.NetworkUSBSDMuxDevice *method*), 149
 __attrs_post_init__() (lab-grid.resource.remote.NetworkUSBTMC *method*), 150
 __attrs_post_init__() (lab-grid.resource.remote.NetworkUSBVideo *method*), 149
 __attrs_post_init__() (lab-grid.resource.remote.RemotePlace *method*), 146
 __attrs_post_init__() (lab-grid.resource.remote.RemotePlaceManager *method*), 146
 __attrs_post_init__() (lab-grid.resource.serialport.RawSerialPort *method*), 151
 __attrs_post_init__() (lab-grid.resource.udev.DeditecRelais8 *method*), 157
 __attrs_post_init__() (lab-grid.resource.udev.SigrokUSBDevice *method*), 155
 __attrs_post_init__() (lab-grid.resource.udev.SigrokUSBSerialDevice *method*), 156
 __attrs_post_init__() (lab-grid.resource.udev.USBEthernetInterface *method*), 154
 __attrs_post_init__() (lab-grid.resource.udev.USBMassStorage *method*), 153
 __attrs_post_init__() (lab-grid.resource.udev.USBPowerPort *method*), 156
 __attrs_post_init__() (lab-grid.resource.udev.USBResource *method*),

- 152
- `__attrs_post_init__()` (*labgrid.resource.udev.USBSDMuxDevice* method), 156
- `__attrs_post_init__()` (*labgrid.resource.udev.USBSerialPort* method), 153
- `__attrs_post_init__()` (*labgrid.resource.udev.USBTMC* method), 157
- `__attrs_post_init__()` (*labgrid.resource.udev.USBVideo* method), 157
- `__attrs_post_init__()` (*labgrid.resource.udev.UdevManager* method), 152
- `__attrs_post_init__()` (*labgrid.strategy.bareboxstrategy.BareboxStrategy* method), 158
- `__attrs_post_init__()` (*labgrid.strategy.common.Strategy* method), 159
- `__attrs_post_init__()` (*labgrid.strategy.dockerstrategy.DockerStrategy* method), 160
- `__attrs_post_init__()` (*labgrid.strategy.graphstrategy.GraphStrategy* method), 160
- `__attrs_post_init__()` (*labgrid.strategy.shellstrategy.ShellStrategy* method), 161
- `__attrs_post_init__()` (*labgrid.strategy.ubootstrategy.UBootStrategy* method), 162
- `__attrs_post_init__()` (*labgrid.target.Target* method), 180
- `__attrs_post_init__()` (*labgrid.util.managedfile.ManagedFile* method), 167
- `__attrs_post_init__()` (*labgrid.util.qmp.QMPMonitor* method), 168
- `__attrs_post_init__()` (*labgrid.util.ssh.SSHConnection* method), 168
- `__attrs_post_init__()` (*labgrid.util.timeout.Timeout* method), 171
- `__call__()` (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
- `__call__()` (*labgrid.driver.flashromdriver.FlashromDriver* method), 100
- `__call__()` (*labgrid.util.agentwrapper.MethodProxy* method), 164
- `__del__()` (*labgrid.remote.exporter.SerialPortExport* method), 132
- `__del__()` (*labgrid.step.Step* method), 180
- `__del__()` (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput* method), 162
- `__del__()` (*labgrid.util.agentwrapper.AgentWrapper* method), 164
- `__dict__` (*labgrid.autoinstall.main.Manager* attribute), 89
- `__dict__` (*labgrid.binding.BindingMixin* attribute), 173
- `__dict__` (*labgrid.binding.BindingMixin.NamedBinding* attribute), 173
- `__dict__` (*labgrid.config.Config* attribute), 175
- `__dict__` (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* attribute), 176
- `__dict__` (*labgrid.driver.commandmixin.CommandMixin* attribute), 93
- `__dict__` (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin* attribute), 94
- `__dict__` (*labgrid.environment.Environment* attribute), 176
- `__dict__` (*labgrid.factory.TargetFactory* attribute), 178
- `__dict__` (*labgrid.protocol.bootstrapprotocol.BootstrapProtocol* attribute), 121
- `__dict__` (*labgrid.protocol.commandprotocol.CommandProtocol* attribute), 121
- `__dict__` (*labgrid.protocol.consoleprotocol.ConsoleProtocol* attribute), 122
- `__dict__` (*labgrid.protocol.consoleprotocol.ConsoleProtocol.Client* attribute), 122
- `__dict__` (*labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol* attribute), 122
- `__dict__` (*labgrid.protocol.filesystemprotocol.FileSystemProtocol* attribute), 122
- `__dict__` (*labgrid.protocol.filetransferprotocol.FileTransferProtocol* attribute), 123
- `__dict__` (*labgrid.protocol.infoprotocol.InfoProtocol* attribute), 123
- `__dict__` (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol* attribute), 123
- `__dict__` (*labgrid.protocol.mmioprotocol.MMIOProtocol* attribute), 124
- `__dict__` (*labgrid.protocol.powerprotocol.PowerProtocol* attribute), 124
- `__dict__` (*labgrid.protocol.resetprotocol.ResetProtocol* attribute), 124
- `__dict__` (*labgrid.provider.fileprovider.FileProvider* attribute), 125
- `__dict__` (*labgrid.pytestplugin.reporter.StepReporter* attribute), 126
- `__dict__` (*labgrid.remote.common.Place* attribute), 129
- `__dict__` (*labgrid.remote.common.Reservation* attribute), 129
- `__dict__` (*labgrid.remote.common.ResourceEntry* attribute), 127
- `__dict__` (*labgrid.remote.common.ResourceMatch* at-

- `tribute`), 128
- `__dict__` (*labgrid.remote.config.ResourceConfig* attribute), 130
- `__dict__` (*labgrid.remote.coordinator.RemoteSession* attribute), 131
- `__dict__` (*labgrid.remote.scheduler.TagSet* attribute), 136
- `__dict__` (*labgrid.resource.common.ResourceManager* attribute), 139
- `__dict__` (*labgrid.resource.docker.DockerConstants* attribute), 140
- `__dict__` (*labgrid.resource.ethernetport.SNMPSwitch* attribute), 141
- `__dict__` (*labgrid.resource.suggest.Suggester* attribute), 152
- `__dict__` (*labgrid.step.Step* attribute), 180
- `__dict__` (*labgrid.step.StepEvent* attribute), 179
- `__dict__` (*labgrid.step.Steps* attribute), 179
- `__dict__` (*labgrid.stepreporter.StepReporter* attribute), 180
- `__dict__` (*labgrid.target.Target* attribute), 181
- `__dict__` (*labgrid.util.agent.Agent* attribute), 163
- `__dict__` (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput* attribute), 162
- `__dict__` (*labgrid.util.agentwrapper.AgentWrapper* attribute), 164
- `__dict__` (*labgrid.util.agentwrapper.MethodProxy* attribute), 164
- `__dict__` (*labgrid.util.agentwrapper.ModuleProxy* attribute), 164
- `__dict__` (*labgrid.util.helper.ProcessWrapper* attribute), 166
- `__dict__` (*labgrid.util.managedfile.ManagedFile* attribute), 167
- `__dict__` (*labgrid.util.qmp.QMPMonitor* attribute), 168
- `__dict__` (*labgrid.util.ssh.SSHConnection* attribute), 170
- `__dict__` (*labgrid.util.timeout.Timeout* attribute), 171
- `__eq__` () (*labgrid.remote.common.ResourceMatch* method), 128
- `__eq__` () (*labgrid.remote.exporter.EthernetPortExport* method), 135
- `__eq__` () (*labgrid.remote.exporter.NetworkServiceExport* method), 136
- `__eq__` () (*labgrid.resource.base.EthernetPort* method), 137
- `__eq__` () (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
- `__eq__` () (*labgrid.resource.ethernetport.SNMPEthernetPort* method), 143
- `__eq__` () (*labgrid.resource.ethernetport.SNMPSwitch* method), 141
- `__eq__` () (*labgrid.util.helper.ProcessWrapper* method), 166
- `__eq__` () (*labgrid.util.managedfile.ManagedFile* method), 167
- `__eq__` () (*labgrid.util.ssh.ForwardError* method), 170
- `__eq__` () (*labgrid.util.ssh.SSHConnection* method), 170
- `__ge__` () (*labgrid.remote.common.ResourceMatch* method), 128
- `__ge__` () (*labgrid.remote.exporter.EthernetPortExport* method), 135
- `__ge__` () (*labgrid.remote.exporter.NetworkServiceExport* method), 136
- `__ge__` () (*labgrid.resource.base.EthernetPort* method), 137
- `__ge__` () (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
- `__ge__` () (*labgrid.resource.ethernetport.SNMPEthernetPort* method), 143
- `__ge__` () (*labgrid.resource.ethernetport.SNMPSwitch* method), 141
- `__ge__` () (*labgrid.util.helper.ProcessWrapper* method), 166
- `__ge__` () (*labgrid.util.managedfile.ManagedFile* method), 167
- `__ge__` () (*labgrid.util.ssh.ForwardError* method), 170
- `__ge__` () (*labgrid.util.ssh.SSHConnection* method), 170
- `__getattr__` () (*labgrid.util.agentwrapper.AgentWrapper* method), 164
- `__getattr__` () (*labgrid.util.agentwrapper.ModuleProxy* method), 164
- `__getitem__` () (*labgrid.target.Target* method), 181
- `__gt__` () (*labgrid.remote.common.ResourceMatch* method), 128
- `__gt__` () (*labgrid.remote.exporter.EthernetPortExport* method), 135
- `__gt__` () (*labgrid.remote.exporter.NetworkServiceExport* method), 136
- `__gt__` () (*labgrid.resource.base.EthernetPort* method), 137
- `__gt__` () (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
- `__gt__` () (*labgrid.resource.ethernetport.SNMPEthernetPort* method), 143
- `__gt__` () (*labgrid.resource.ethernetport.SNMPSwitch* method), 141
- `__gt__` () (*labgrid.util.helper.ProcessWrapper* method), 166
- `__gt__` () (*labgrid.util.managedfile.ManagedFile* method), 167
- `__gt__` () (*labgrid.util.ssh.ForwardError* method), 170
- `__gt__` () (*labgrid.util.ssh.SSHConnection* method), 170

170

`__hash__` (*labgrid.remote.common.ResourceMatch* attribute), 128

`__hash__` (*labgrid.remote.exporter.EthernetPortExport* attribute), 135

`__hash__` (*labgrid.remote.exporter.NetworkServiceExport* attribute), 136

`__hash__` (*labgrid.resource.base.EthernetPort* attribute), 138

`__hash__` (*labgrid.resource.ethernetport.EthernetPortManager* attribute), 142

`__hash__` (*labgrid.resource.ethernetport.SNMPEthernetPort* attribute), 143

`__hash__` (*labgrid.resource.ethernetport.SNMPSwitch* attribute), 141

`__hash__` (*labgrid.util.helper.ProcessWrapper* attribute), 166

`__hash__` (*labgrid.util.managedfile.ManagedFile* attribute), 167

`__hash__` (*labgrid.util.ssh.ForwardError* attribute), 170

`__hash__` (*labgrid.util.ssh.SSHConnection* attribute), 170

`__init__` () (*labgrid.autoinstall.main.Handler* method), 89

`__init__` () (*labgrid.autoinstall.main.Manager* method), 89

`__init__` () (*labgrid.binding.BindingError* method), 172

`__init__` () (*labgrid.binding.BindingMixin* method), 173

`__init__` () (*labgrid.binding.BindingMixin.NamedBinding* method), 173

`__init__` () (*labgrid.binding.StateError* method), 172

`__init__` () (*labgrid.config.Config* method), 175

`__init__` () (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* method), 176

`__init__` () (*labgrid.driver.bareboxdriver.BareboxDriver* method), 92

`__init__` () (*labgrid.driver.common.Driver* method), 94

`__init__` () (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver* method), 95

`__init__` () (*labgrid.driver.dockerdriver.DockerDriver* method), 96

`__init__` () (*labgrid.driver.exception.CleanUpError* method), 96

`__init__` () (*labgrid.driver.exception.ExecutionError* method), 96

`__init__` () (*labgrid.driver.externalconsoledriver.ExternalConsoleDriver* method), 97

`__init__` () (*labgrid.driver.fake.FakeCommandDriver* method), 98

`__init__` () (*labgrid.driver.fake.FakeConsoleDriver* method), 97

`__init__` () (*labgrid.driver.fake.FakeFileTransferDriver* method), 98

`__init__` () (*labgrid.driver.fake.FakePowerDriver* method), 98

`__init__` () (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99

`__init__` () (*labgrid.driver.filedigitaloutput.FileDigitalOutputDriver* method), 100

`__init__` () (*labgrid.driver.flashromdriver.FlashromDriver* method), 100

`__init__` () (*labgrid.driver.gpiodriver.GpioDigitalOutputDriver* method), 101

`__init__` () (*labgrid.driver.modbusdriver.ModbusCoilDriver* method), 101

`__init__` () (*labgrid.driver.onewiredriver.OneWirePIODriver* method), 102

`__init__` () (*labgrid.driver.openocddriver.OpenOCDDriver* method), 102

`__init__` () (*labgrid.driver.powerdriver.DigitalOutputPowerDriver* method), 104

`__init__` () (*labgrid.driver.powerdriver.ExternalPowerDriver* method), 103

`__init__` () (*labgrid.driver.powerdriver.ManualPowerDriver* method), 103

`__init__` () (*labgrid.driver.powerdriver.NetworkPowerDriver* method), 104

`__init__` () (*labgrid.driver.powerdriver.PDUDaemonDriver* method), 106

`__init__` () (*labgrid.driver.powerdriver.PowerResetMixin* method), 103

`__init__` () (*labgrid.driver.powerdriver.USBPowerDriver* method), 105

`__init__` () (*labgrid.driver.powerdriver.YKUSHPowerDriver* method), 105

`__init__` () (*labgrid.driver.qemudriver.QEMUDriver* method), 107

`__init__` () (*labgrid.driver.quartushpsdriver.QuartusHPSDriver* method), 107

`__init__` () (*labgrid.driver.resetdriver.DigitalOutputResetDriver* method), 108

`__init__` () (*labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver* method), 108

`__init__` () (*labgrid.driver.serialdriver.SerialDriver* method), 109

`__init__` () (*labgrid.driver.shelldriver.ShellDriver* method), 111

`__init__` () (*labgrid.driver.sigrokdriver.SigrokCommon* method), 112

`__init__` () (*labgrid.driver.sigrokdriver.SigrokDriver* method), 112

`__init__` () (*labgrid.driver.sigrokdriver.SigrokPowerDriver* method), 112

`__init__` () (*labgrid.driver.smallubootdriver.SmallUBootDriver* method), 112

method), 113
`__init__()` (*labgrid.driver.sshdriver.SSHDriver* *method*), 114
`__init__()` (*labgrid.driver.ubootdriver.UBootDriver* *method*), 116
`__init__()` (*labgrid.driver.usbloader.IMXUSBDriver* *method*), 117
`__init__()` (*labgrid.driver.usbloader.MXSUSBDriver* *method*), 116
`__init__()` (*labgrid.driver.usbloader.RKUSBDriver* *method*), 117
`__init__()` (*labgrid.driver.usbsdmuxdriver.USBSDMuxDriver* *method*), 118
`__init__()` (*labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver* *method*), 119
`__init__()` (*labgrid.driver.usbstoragedriver.USBStorageDriver* *method*), 118
`__init__()` (*labgrid.driver.usbtmcdriver.USBTMCDriver* *method*), 119
`__init__()` (*labgrid.driver.usbvideodriver.USBVideoDriver* *method*), 120
`__init__()` (*labgrid.driver.xenadriver.XenaDriver* *method*), 120
`__init__()` (*labgrid.environment.Environment* *method*), 176
`__init__()` (*labgrid.exceptions.InvalidConfigError* *method*), 177
`__init__()` (*labgrid.exceptions.NoConfigFoundError* *method*), 177
`__init__()` (*labgrid.exceptions.NoDriverFoundError* *method*), 177
`__init__()` (*labgrid.exceptions.NoResourceFoundError* *method*), 178
`__init__()` (*labgrid.exceptions.NoSupplierFoundError* *method*), 177
`__init__()` (*labgrid.factory.TargetFactory* *method*), 178
`__init__()` (*labgrid.provider.mediafileprovider.MediaFileProvider* *method*), 125
`__init__()` (*labgrid.pytestplugin.reporter.ColoredStepReporter* *method*), 126
`__init__()` (*labgrid.pytestplugin.reporter.StepReporter* *method*), 126
`__init__()` (*labgrid.remote.common.Place* *method*), 129
`__init__()` (*labgrid.remote.common.Reservation* *method*), 129
`__init__()` (*labgrid.remote.common.ResourceEntry* *method*), 127
`__init__()` (*labgrid.remote.common.ResourceMatch* *method*), 128
`__init__()` (*labgrid.remote.config.ResourceConfig* *method*), 130
`__init__()` (*labgrid.remote.coordinator.ClientSession* *method*), 131
`__init__()` (*labgrid.remote.coordinator.ExporterSession* *method*), 131
`__init__()` (*labgrid.remote.coordinator.ResourceImport* *method*), 131
`__init__()` (*labgrid.remote.exporter.EthernetPortExport* *method*), 135
`__init__()` (*labgrid.remote.exporter.GPIOGenericExport* *method*), 135
`__init__()` (*labgrid.remote.exporter.NetworkServiceExport* *method*), 136
`__init__()` (*labgrid.remote.exporter.ResourceExport* *method*), 132
`__init__()` (*labgrid.remote.exporter.SerialPortExport* *method*), 132
`__init__()` (*labgrid.remote.exporter.USBDeditecRelaisExport* *method*), 134
`__init__()` (*labgrid.remote.exporter.USBEthernetExport* *method*), 133
`__init__()` (*labgrid.remote.exporter.USBGenericExport* *method*), 133
`__init__()` (*labgrid.remote.exporter.USBPowerPortExport* *method*), 134
`__init__()` (*labgrid.remote.exporter.USBSDMuxExport* *method*), 134
`__init__()` (*labgrid.remote.exporter.USBSigrokExport* *method*), 133
`__init__()` (*labgrid.remote.scheduler.TagSet* *method*), 136
`__init__()` (*labgrid.resource.base.EthernetInterface* *method*), 137
`__init__()` (*labgrid.resource.base.EthernetPort* *method*), 138
`__init__()` (*labgrid.resource.base.SerialPort* *method*), 137
`__init__()` (*labgrid.resource.base.SysfsGPIO* *method*), 138
`__init__()` (*labgrid.resource.common.ManagedResource* *method*), 140
`__init__()` (*labgrid.resource.common.NetworkResource* *method*), 139
`__init__()` (*labgrid.resource.common.Resource* *method*), 139
`__init__()` (*labgrid.resource.common.ResourceManager* *method*), 139
`__init__()` (*labgrid.resource.docker.DockerDaemon* *method*), 141
`__init__()` (*labgrid.resource.docker.DockerManager* *method*), 140
`__init__()` (*labgrid.resource.ethernetport.EthernetPortManager* *method*), 142
`__init__()` (*labgrid.resource.ethernetport.SNMPEthernetPort* *method*), 143
`__init__()` (*labgrid.resource.ethernetport.SNMPSwitch*

method), 142
`__init__()` (*labgrid.resource.flashrom.Flashrom* *method*), 143
`__init__()` (*labgrid.resource.flashrom.NetworkFlashrom* *method*), 144
`__init__()` (*labgrid.resource.modbus.ModbusTCPCoil* *method*), 144
`__init__()` (*labgrid.resource.networkservice.NetworkService* *method*), 144
`__init__()` (*labgrid.resource.onewirereport.OneWirePIO* *method*), 145
`__init__()` (*labgrid.resource.power.NetworkPowerPort* *method*), 145
`__init__()` (*labgrid.resource.power.PDUDaemonPort* *method*), 145
`__init__()` (*labgrid.resource.remote.NetworkAlteraUSBBlaster* *method*), 148
`__init__()` (*labgrid.resource.remote.NetworkAndroidFastboot* *method*), 147
`__init__()` (*labgrid.resource.remote.NetworkDeditecRelais8* *method*), 150
`__init__()` (*labgrid.resource.remote.NetworkIMXUSBLoader* *method*), 147
`__init__()` (*labgrid.resource.remote.NetworkMXSUSBLoader* *method*), 147
`__init__()` (*labgrid.resource.remote.NetworkRKUSBLoader* *method*), 147
`__init__()` (*labgrid.resource.remote.NetworkSigrokUSBDevice* *method*), 148
`__init__()` (*labgrid.resource.remote.NetworkSigrokUSBSerialDevice* *method*), 148
`__init__()` (*labgrid.resource.remote.NetworkSysfsGPIO* *method*), 150
`__init__()` (*labgrid.resource.remote.NetworkUSBMassStorage* *method*), 149
`__init__()` (*labgrid.resource.remote.NetworkUSBPowerPort* *method*), 149
`__init__()` (*labgrid.resource.remote.NetworkUSBSDMuxDevice* *method*), 149
`__init__()` (*labgrid.resource.remote.NetworkUSBTMC* *method*), 150
`__init__()` (*labgrid.resource.remote.NetworkUSBVideo* *method*), 149
`__init__()` (*labgrid.resource.remote.RemotePlace* *method*), 146
`__init__()` (*labgrid.resource.remote.RemotePlaceManager* *method*), 146
`__init__()` (*labgrid.resource.remote.RemoteUSBResource* *method*), 146
`__init__()` (*labgrid.resource.serialport.NetworkSerialPort* *method*), 151
`__init__()` (*labgrid.resource.serialport.RawSerialPort* *method*), 151
`__init__()` (*labgrid.resource.sigrok.SigrokDevice* *method*), 151
`__init__()` (*labgrid.resource.suggest.Suggester* *method*), 152
`__init__()` (*labgrid.resource.udev.AlteraUSBBlaster* *method*), 155
`__init__()` (*labgrid.resource.udev.AndroidFastboot* *method*), 154
`__init__()` (*labgrid.resource.udev.DeditecRelais8* *method*), 157
`__init__()` (*labgrid.resource.udev.IMXUSBLoader* *method*), 154
`__init__()` (*labgrid.resource.udev.MXSUSBLoader* *method*), 154
`__init__()` (*labgrid.resource.udev.RKUSBLoader* *method*), 154
`__init__()` (*labgrid.resource.udev.SigrokUSBDevice* *method*), 155
`__init__()` (*labgrid.resource.udev.SigrokUSBSerialDevice* *method*), 156
`__init__()` (*labgrid.resource.udev.USBEthernetInterface* *method*), 155
`__init__()` (*labgrid.resource.udev.USBMassStorage* *method*), 153
`__init__()` (*labgrid.resource.udev.USBPowerPort* *method*), 156
`__init__()` (*labgrid.resource.udev.USBResource* *method*), 153
`__init__()` (*labgrid.resource.udev.USBSDMuxDevice* *method*), 156
`__init__()` (*labgrid.resource.udev.USBSerialPort* *method*), 153
`__init__()` (*labgrid.resource.udev.USBTMC* *method*), 157
`__init__()` (*labgrid.resource.udev.USBVideo* *method*), 157
`__init__()` (*labgrid.resource.udev.UdevManager* *method*), 152
`__init__()` (*labgrid.resource.xenamanager.XenaManager* *method*), 158
`__init__()` (*labgrid.resource.ykushpowerport.YKUSHPowerPort* *method*), 158
`__init__()` (*labgrid.step.Step* *method*), 179
`__init__()` (*labgrid.step.StepEvent* *method*), 179
`__init__()` (*labgrid.step.Steps* *method*), 178
`__init__()` (*labgrid.stepreporter.StepReporter* *method*), 180
`__init__()` (*labgrid.strategy.bareboxstrategy.BareboxStrategy* *method*), 159
`__init__()` (*labgrid.strategy.common.Strategy* *method*), 159
`__init__()` (*labgrid.strategy.common.StrategyError* *method*), 159
`__init__()` (*labgrid.strategy.dockerstrategy.DockerStrategy* *method*), 160

`__init__()` (*labgrid.strategy.shellstrategy.ShellStrategy* method), 128
`__init__()` (*labgrid.strategy.ubootstrategy.UBootStrategy* method), 161
`__init__()` (*labgrid.target.Target* method), 181
`__init__()` (*labgrid.util.agent.Agent* method), 163
`__init__()` (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput* method), 162
`__init__()` (*labgrid.util.agentwrapper.AgentWrapper* method), 164
`__init__()` (*labgrid.util.agentwrapper.MethodProxy* method), 164
`__init__()` (*labgrid.util.agentwrapper.ModuleProxy* method), 164
`__init__()` (*labgrid.util.exceptions.NoValidDriverError* method), 165
`__init__()` (*labgrid.util.expect.PtxExpect* method), 165
`__init__()` (*labgrid.util.helper.ProcessWrapper* method), 166
`__init__()` (*labgrid.util.managedfile.ManagedFile* method), 167
`__init__()` (*labgrid.util.qmp.QMPErrror* method), 168
`__init__()` (*labgrid.util.qmp.QMPMonitor* method), 168
`__init__()` (*labgrid.util.ssh.ForwardError* method), 170
`__init__()` (*labgrid.util.ssh.SSHConnection* method), 170
`__init__()` (*labgrid.util.timeout.Timeout* method), 171
`__le__()` (*labgrid.remote.common.ResourceMatch* method), 128
`__le__()` (*labgrid.remote.exporter.EthernetPortExport* method), 135
`__le__()` (*labgrid.remote.exporter.NetworkServiceExport* method), 136
`__le__()` (*labgrid.resource.base.EthernetPort* method), 138
`__le__()` (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
`__le__()` (*labgrid.resource.ethernetport.SNMPEthernetPort* method), 143
`__le__()` (*labgrid.resource.ethernetport.SNMPSwitch* method), 142
`__le__()` (*labgrid.util.helper.ProcessWrapper* method), 166
`__le__()` (*labgrid.util.managedfile.ManagedFile* method), 167
`__le__()` (*labgrid.util.ssh.ForwardError* method), 171
`__le__()` (*labgrid.util.ssh.SSHConnection* method), 170
`__lt__()` (*labgrid.remote.common.ResourceMatch* method), 128
`__lt__()` (*labgrid.remote.exporter.EthernetPortExport* method), 135
`__lt__()` (*labgrid.remote.exporter.NetworkServiceExport* method), 136
`__lt__()` (*labgrid.resource.base.EthernetPort* method), 138
`__lt__()` (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
`__lt__()` (*labgrid.resource.ethernetport.SNMPEthernetPort* method), 143
`__lt__()` (*labgrid.resource.ethernetport.SNMPSwitch* method), 142
`__lt__()` (*labgrid.util.helper.ProcessWrapper* method), 166
`__lt__()` (*labgrid.util.managedfile.ManagedFile* method), 167
`__lt__()` (*labgrid.util.ssh.ForwardError* method), 171
`__lt__()` (*labgrid.util.ssh.SSHConnection* method), 170
`__module__` (*labgrid.autoinstall.main.Handler* attribute), 89
`__module__` (*labgrid.autoinstall.main.Manager* attribute), 89
`__module__` (*labgrid.binding.BindingError* attribute), 172
`__module__` (*labgrid.binding.BindingMixin* attribute), 173
`__module__` (*labgrid.binding.BindingMixin.NamedBinding* attribute), 173
`__module__` (*labgrid.binding.BindingState* attribute), 173
`__module__` (*labgrid.binding.StateError* attribute), 172
`__module__` (*labgrid.config.Config* attribute), 175
`__module__` (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* attribute), 176
`__module__` (*labgrid.driver.bareboxdriver.BareboxDriver* attribute), 92
`__module__` (*labgrid.driver.commandmixin.CommandMixin* attribute), 93
`__module__` (*labgrid.driver.common.Driver* attribute), 94
`__module__` (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin* attribute), 94
`__module__` (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver* attribute), 95
`__module__` (*labgrid.driver.dockerdriver.DockerDriver* attribute), 96
`__module__` (*labgrid.driver.exception.CleanUpError* attribute), 96
`__module__` (*labgrid.driver.exception.ExecutionError* attribute), 96
`__module__` (*labgrid.driver.externalconsoledriver.ExternalConsoleDrive*

- `__module__` (`labgrid.driver.fake.FakeCommandDriver` attribute), 97
- `__module__` (`labgrid.driver.fake.FakeConsoleDriver` attribute), 97
- `__module__` (`labgrid.driver.fake.FakeFileTransferDriver` attribute), 98
- `__module__` (`labgrid.driver.fake.FakePowerDriver` attribute), 98
- `__module__` (`labgrid.driver.fastbootdriver.AndroidFastbootDriver` attribute), 99
- `__module__` (`labgrid.driver.filedigitaloutput.FileDigitalOutputDriver` attribute), 100
- `__module__` (`labgrid.driver.flashromdriver.FlashromDriver` attribute), 100
- `__module__` (`labgrid.driver.gpiodriver.GpioDigitalOutputDriver` attribute), 101
- `__module__` (`labgrid.driver.modbusdriver.ModbusCoilDriver` attribute), 101
- `__module__` (`labgrid.driver.onewiredriver.OneWirePIODriver` attribute), 102
- `__module__` (`labgrid.driver.openocddriver.OpenOCDDriver` attribute), 102
- `__module__` (`labgrid.driver.powerdriver.DigitalOutputPowerDriver` attribute), 104
- `__module__` (`labgrid.driver.powerdriver.ExternalPowerDriver` attribute), 104
- `__module__` (`labgrid.driver.powerdriver.ManualPowerDriver` attribute), 103
- `__module__` (`labgrid.driver.powerdriver.NetworkPowerDriver` attribute), 104
- `__module__` (`labgrid.driver.powerdriver.PDUDaemonDriver` attribute), 106
- `__module__` (`labgrid.driver.powerdriver.PowerResetMixin` attribute), 103
- `__module__` (`labgrid.driver.powerdriver.USBPowerDriver` attribute), 105
- `__module__` (`labgrid.driver.powerdriver.YKUSHPowerDriver` attribute), 105
- `__module__` (`labgrid.driver.qemudriver.QEMUDriver` attribute), 107
- `__module__` (`labgrid.driver.quartushpsdriver.QuartusHPSDriver` attribute), 107
- `__module__` (`labgrid.driver.resetdriver.DigitalOutputResetDriver` attribute), 108
- `__module__` (`labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver` attribute), 108
- `__module__` (`labgrid.driver.serialdriver.SerialDriver` attribute), 109
- `__module__` (`labgrid.driver.shelldriver.ShellDriver` attribute), 111
- `__module__` (`labgrid.driver.sigrokdriver.SigrokCommon` attribute), 112
- `__module__` (`labgrid.driver.sigrokdriver.SigrokDriver` attribute), 112
- `__module__` (`labgrid.driver.sigrokdriver.SigrokPowerDriver` attribute), 112
- `__module__` (`labgrid.driver.smallubootdriver.SmallUBootDriver` attribute), 113
- `__module__` (`labgrid.driver.sshdriver.SSHDriver` attribute), 114
- `__module__` (`labgrid.driver.ubootdriver.UBootDriver` attribute), 116
- `__module__` (`labgrid.driver.usbloader.IMXUSBDriver` attribute), 117
- `__module__` (`labgrid.driver.usbloader.MXSUSBDriver` attribute), 116
- `__module__` (`labgrid.driver.usbloader.RKUSBDriver` attribute), 117
- `__module__` (`labgrid.driver.usbsdmuxdriver.USBSDMuxDriver` attribute), 118
- `__module__` (`labgrid.driver.usbstoragedriver.Mode` attribute), 118
- `__module__` (`labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver` attribute), 119
- `__module__` (`labgrid.driver.usbstoragedriver.USBStorageDriver` attribute), 118
- `__module__` (`labgrid.driver.usbtmcdriver.USBTMCDriver` attribute), 119
- `__module__` (`labgrid.driver.usbvideodriver.USBVideoDriver` attribute), 120
- `__module__` (`labgrid.driver.xenadriver.XenaDriver` attribute), 120
- `__module__` (`labgrid.environment.Environment` attribute), 176
- `__module__` (`labgrid.exceptions.InvalidConfigError` attribute), 177
- `__module__` (`labgrid.exceptions.NoConfigFoundError` attribute), 177
- `__module__` (`labgrid.exceptions.NoDriverFoundError` attribute), 177
- `__module__` (`labgrid.exceptions.NoResourceFoundError` attribute), 178
- `__module__` (`labgrid.exceptions.NoSupplierFoundError` attribute), 177
- `__module__` (`labgrid.factory.TargetFactory` attribute), 178
- `__module__` (`labgrid.protocol.bootstrapprotocol.BootstrapProtocol` attribute), 121
- `__module__` (`labgrid.protocol.commandprotocol.CommandProtocol` attribute), 121
- `__module__` (`labgrid.protocol.consoleprotocol.ConsoleProtocol` attribute), 122
- `__module__` (`labgrid.protocol.consoleprotocol.ConsoleProtocol.Client` attribute), 122
- `__module__` (`labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol` attribute), 122
- `__module__` (`labgrid.protocol.filesystemprotocol.FileSystemProtocol` attribute), 122

`attribute`), 122

`__module__ (labgrid.protocol.filetransferprotocol.FileTransferProtocol`
`attribute)`, 123

`__module__ (labgrid.protocol.infoprotocol.InfoProtocol`
`attribute)`, 123

`__module__ (labgrid.protocol.linuxbootprotocol.LinuxBootProtocol`
`attribute)`, 124

`__module__ (labgrid.protocol.mmioprotocol.MMIOProtocol`
`attribute)`, 124

`__module__ (labgrid.protocol.powerprotocol.PowerProtocol`
`attribute)`, 124

`__module__ (labgrid.protocol.resetprotocol.ResetProtocol`
`attribute)`, 124

`__module__ (labgrid.provider.fileprovider.FileProvider`
`attribute)`, 125

`__module__ (labgrid.provider.mediafileprovider.MediaFileProvider`
`attribute)`, 125

`__module__ (labgrid.pytestplugin.reporter.ColoredStepReporter`
`attribute)`, 126

`__module__ (labgrid.pytestplugin.reporter.StepReporter`
`attribute)`, 126

`__module__ (labgrid.remote.client.Error` `attribute)`,
127

`__module__ (labgrid.remote.client.ServerError` `at-`
`tribute)`, 127

`__module__ (labgrid.remote.client.UserError` `at-`
`tribute)`, 127

`__module__ (labgrid.remote.common.Place` `attribute)`,
129

`__module__ (labgrid.remote.common.Reservation` `at-`
`tribute)`, 130

`__module__ (labgrid.remote.common.ReservationState`
`attribute)`, 129

`__module__ (labgrid.remote.common.ResourceEntry`
`attribute)`, 128

`__module__ (labgrid.remote.common.ResourceMatch`
`attribute)`, 128

`__module__ (labgrid.remote.config.ResourceConfig`
`attribute)`, 130

`__module__ (labgrid.remote.coordinator.Action`
`attribute)`, 130

`__module__ (labgrid.remote.coordinator.ClientSession`
`attribute)`, 131

`__module__ (labgrid.remote.coordinator.ExporterSession`
`attribute)`, 131

`__module__ (labgrid.remote.coordinator.RemoteSession`
`attribute)`, 131

`__module__ (labgrid.remote.coordinator.ResourceImport`
`attribute)`, 131

`__module__ (labgrid.remote.exporter.BrokenResourceError`
`attribute)`, 132

`__module__ (labgrid.remote.exporter.EthernetPortExport`
`attribute)`, 135

`__module__ (labgrid.remote.exporter.ExporterError`
`attribute)`, 132

`__module__ (labgrid.remote.exporter.GPIOGenericExport`
`attribute)`, 135

`__module__ (labgrid.remote.exporter.NetworkServiceExport`
`attribute)`, 136

`__module__ (labgrid.remote.exporter.ResourceExport`
`attribute)`, 132

`__module__ (labgrid.remote.exporter.SerialPortExport`
`attribute)`, 133

`__module__ (labgrid.remote.exporter.USBDeditecRelaisExport`
`attribute)`, 134

`__module__ (labgrid.remote.exporter.USBEthernetExport`
`attribute)`, 133

`__module__ (labgrid.remote.exporter.USBGenericExport`
`attribute)`, 133

`__module__ (labgrid.remote.exporter.USBPowerPortExport`
`attribute)`, 134

`__module__ (labgrid.remote.exporter.USBSDMuxExport`
`attribute)`, 134

`__module__ (labgrid.remote.exporter.USBSigrokExport`
`attribute)`, 133

`__module__ (labgrid.remote.scheduler.TagSet` `at-`
`tribute)`, 136

`__module__ (labgrid.resource.base.EthernetInterface`
`attribute)`, 137

`__module__ (labgrid.resource.base.EthernetPort` `at-`
`tribute)`, 138

`__module__ (labgrid.resource.base.SerialPort` `at-`
`tribute)`, 137

`__module__ (labgrid.resource.base.SysfsGPIO` `at-`
`tribute)`, 138

`__module__ (labgrid.resource.common.ManagedResource`
`attribute)`, 140

`__module__ (labgrid.resource.common.NetworkResource`
`attribute)`, 139

`__module__ (labgrid.resource.common.Resource` `at-`
`tribute)`, 139

`__module__ (labgrid.resource.common.ResourceManager`
`attribute)`, 139

`__module__ (labgrid.resource.docker.DockerConstants`
`attribute)`, 140

`__module__ (labgrid.resource.docker.DockerDaemon`
`attribute)`, 141

`__module__ (labgrid.resource.docker.DockerManager`
`attribute)`, 140

`__module__ (labgrid.resource.ethernetport.EthernetPortManager`
`attribute)`, 142

`__module__ (labgrid.resource.ethernetport.SNMPEthernetPort`
`attribute)`, 143

`__module__ (labgrid.resource.ethernetport.SNMPSwitch`
`attribute)`, 142

`__module__ (labgrid.resource.flashrom.Flashrom` `at-`
`tribute)`, 143

`__module__ (labgrid.resource.flashrom.NetworkFlashrom`

- `__module__ (labgrid.resource.modbus.ModbusTCPCoil attribute), 144`
- `__module__ (labgrid.resource.networkservice.NetworkService attribute), 144`
- `__module__ (labgrid.resource.onewirereport.OneWirePIO attribute), 145`
- `__module__ (labgrid.resource.power.NetworkPowerPort attribute), 145`
- `__module__ (labgrid.resource.power.PDUDaemonPort attribute), 146`
- `__module__ (labgrid.resource.remote.NetworkAlteraUSBBlaster attribute), 148`
- `__module__ (labgrid.resource.remote.NetworkAndroidFastboot attribute), 147`
- `__module__ (labgrid.resource.remote.NetworkDeditecRelais8 attribute), 150`
- `__module__ (labgrid.resource.remote.NetworkIMXUSBLoader attribute), 147`
- `__module__ (labgrid.resource.remote.NetworkMXSUSBLoader attribute), 147`
- `__module__ (labgrid.resource.remote.NetworkRKUSBLoader attribute), 147`
- `__module__ (labgrid.resource.remote.NetworkSigrokUSBDevice attribute), 148`
- `__module__ (labgrid.resource.remote.NetworkSigrokUSBSerialDevice attribute), 148`
- `__module__ (labgrid.resource.remote.NetworkSysfsGPIO attribute), 150`
- `__module__ (labgrid.resource.remote.NetworkUSBMassStorage attribute), 149`
- `__module__ (labgrid.resource.remote.NetworkUSBPowerPort attribute), 149`
- `__module__ (labgrid.resource.remote.NetworkUSBSDMuxDevice attribute), 149`
- `__module__ (labgrid.resource.remote.NetworkUSBTMC attribute), 150`
- `__module__ (labgrid.resource.remote.NetworkUSBVideo attribute), 149`
- `__module__ (labgrid.resource.remote.RemotePlace attribute), 146`
- `__module__ (labgrid.resource.remote.RemotePlaceManager attribute), 146`
- `__module__ (labgrid.resource.remote.RemoteUSBResource attribute), 146`
- `__module__ (labgrid.resource.serialport.NetworkSerialPort attribute), 151`
- `__module__ (labgrid.resource.serialport.RawSerialPort attribute), 151`
- `__module__ (labgrid.resource.sigrok.SigrokDevice attribute), 151`
- `__module__ (labgrid.resource.suggest.Suggester attribute), 152`
- `__module__ (labgrid.resource.udev.AlteraUSBBlaster attribute), 155`
- `__module__ (labgrid.resource.udev.AndroidFastboot attribute), 154`
- `__module__ (labgrid.resource.udev.DeditecRelais8 attribute), 157`
- `__module__ (labgrid.resource.udev.IMXUSBLoader attribute), 154`
- `__module__ (labgrid.resource.udev.MXSUSBLoader attribute), 154`
- `__module__ (labgrid.resource.udev.RKUSBLoader attribute), 154`
- `__module__ (labgrid.resource.udev.SigrokUSBDevice attribute), 155`
- `__module__ (labgrid.resource.udev.SigrokUSBSerialDevice attribute), 156`
- `__module__ (labgrid.resource.udev.USBEthernetInterface attribute), 155`
- `__module__ (labgrid.resource.udev.USBMassStorage attribute), 153`
- `__module__ (labgrid.resource.udev.USBPowerPort attribute), 156`
- `__module__ (labgrid.resource.udev.USBResource attribute), 153`
- `__module__ (labgrid.resource.udev.USBSDMuxDevice attribute), 156`
- `__module__ (labgrid.resource.udev.USBSerialPort attribute), 153`
- `__module__ (labgrid.resource.udev.USBTMC attribute), 157`
- `__module__ (labgrid.resource.udev.USBVideo attribute), 157`
- `__module__ (labgrid.resource.udev.UdevManager attribute), 152`
- `__module__ (labgrid.resource.xenamananager.XenaManager attribute), 158`
- `__module__ (labgrid.resource.ykushpowerport.YKUSHPowerPort attribute), 158`
- `__module__ (labgrid.step.Step attribute), 180`
- `__module__ (labgrid.step.StepEvent attribute), 179`
- `__module__ (labgrid.step.Steps attribute), 179`
- `__module__ (labgrid.stepreporter.StepReporter attribute), 180`
- `__module__ (labgrid.strategy.bareboxstrategy.BareboxStrategy attribute), 159`
- `__module__ (labgrid.strategy.bareboxstrategy.Status attribute), 158`
- `__module__ (labgrid.strategy.common.Strategy attribute), 159`
- `__module__ (labgrid.strategy.common.StrategyError attribute), 159`
- `__module__ (labgrid.strategy.dockerstrategy.DockerStrategy attribute), 160`
- `__module__ (labgrid.strategy.dockerstrategy.Status attribute), 160`

`__module__` (*labgrid.strategy.graphstrategy.GraphStrategy* `__ne__` attribute), 161 (*labgrid.remote.exporter.NetworkServiceExport* method), 136
`__module__` (*labgrid.strategy.graphstrategy.GraphStrategyError* attribute), 160 (*labgrid.resource.base.EthernetPort* method), 138
`__module__` (*labgrid.strategy.graphstrategy.GraphStrategyRuntimeError* attribute), 160 (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
`__module__` (*labgrid.strategy.graphstrategy.InvalidGraphStrategyError* attribute), 160 (*labgrid.resource.ethernetport.SNMPEthernetPort* method), 143
`__module__` (*labgrid.strategy.shellstrategy.ShellStrategy* `__ne__` attribute), 161 (*labgrid.resource.ethernetport.SNMPSwitch* method), 142
`__module__` (*labgrid.strategy.shellstrategy.Status* `__ne__` attribute), 161 (*labgrid.util.helper.ProcessWrapper* method), 166
`__module__` (*labgrid.strategy.ubootstrategy.Status* `__ne__` attribute), 162 (*labgrid.util.managedfile.ManagedFile* method), 167
`__module__` (*labgrid.strategy.ubootstrategy.UBootStrategy* `__ne__` attribute), 162 (*labgrid.util.ssh.ForwardError* method), 171
`__module__` (*labgrid.target.Target* attribute), 181 (*labgrid.util.ssh.SSHConnection* method), 170
`__module__` (*labgrid.util.agent.Agent* attribute), 163 `__repr__` (*labgrid.binding.BindingError* method),
`__module__` (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput* attribute), 163 172
`__module__` (*labgrid.util.agentwrapper.AgentError* `__repr__` attribute), 163 (*labgrid.binding.BindingMixin* method),
`__module__` (*labgrid.util.agentwrapper.AgentException* `__repr__` attribute), 164 (*labgrid.binding.BindingMixin.NamedBinding* method), 173
`__module__` (*labgrid.util.agentwrapper.AgentWrapper* `__repr__` attribute), 164 (*labgrid.binding.StateError* method), 172
`__module__` (*labgrid.util.agentwrapper.MethodProxy* `__repr__` attribute), 164 (*labgrid.config.Config* method), 175
`__module__` (*labgrid.util.agentwrapper.ModuleProxy* `__repr__` attribute), 164 (*labgrid.driver.bareboxdriver.BareboxDriver* method), 92
`__module__` (*labgrid.util.exceptions.NoValidDriverError* `__repr__` attribute), 165 (*labgrid.driver.common.Driver* method),
`__module__` (*labgrid.util.expect.PtxExpect* attribute), 165 94
`__module__` (*labgrid.util.helper.ProcessWrapper* `__repr__` attribute), 166 (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver* method), 95
`__module__` (*labgrid.util.managedfile.ManagedFile* `__repr__` attribute), 167 (*labgrid.driver.dockerdriver.DockerDriver* method), 96
`__module__` (*labgrid.util.qmp.QMPError* attribute), 168 (*labgrid.driver.exception.CleanUpError* method), 96
`__module__` (*labgrid.util.qmp.QMPMonitor* attribute), 168 (*labgrid.driver.exception.ExecutionError* method), 96
`__module__` (*labgrid.util.ssh.ForwardError* attribute), 171 (*labgrid.driver.externalconsoledriver.ExternalConsoleDriver* method), 97
`__module__` (*labgrid.util.ssh.SSHConnection* `__repr__` attribute), 170 (*labgrid.driver.fake.FakeCommandDriver* method), 98
`__module__` (*labgrid.util.timeout.Timeout* attribute), 171 (*labgrid.driver.fake.FakeConsoleDriver* method), 97
`__module__` (*labgrid.util.yaml.Dumper* attribute), 172 (*labgrid.driver.fake.FakeFileTransferDriver* method), 98
`__module__` (*labgrid.util.yaml.Loader* attribute), 171 (*labgrid.driver.fake.FakePowerDriver* method), 98
`__ne__` (*labgrid.remote.common.ResourceMatch* `__repr__` method), 128 (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
`__ne__` (*labgrid.remote.exporter.EthernetPortExport* `__repr__` method), 135 (*labgrid.driver.filedigitaloutput.FileDigitalOutputDriver* method), 100
(*labgrid.driver.flashromdriver.FlashromDriver* `__repr__` method), 100
(*labgrid.driver.gpiodriver.GpioDigitalOutputDriver* `__repr__` method), 100

method), 101
 __repr__ () (labgrid.driver.modbusdriver.ModbusCoilDriver method), 101
 __repr__ () (labgrid.driver.onewiredriver.OneWirePIODriver method), 102
 __repr__ () (labgrid.driver.openocddriver.OpenOCDDriver method), 102
 __repr__ () (labgrid.driver.powerdriver.DigitalOutputPowerDriver method), 104
 __repr__ () (labgrid.driver.powerdriver.ExternalPowerDriver method), 104
 __repr__ () (labgrid.driver.powerdriver.ManualPowerDriver method), 103
 __repr__ () (labgrid.driver.powerdriver.NetworkPowerDriver method), 104
 __repr__ () (labgrid.driver.powerdriver.PDUDaemonDriver method), 106
 __repr__ () (labgrid.driver.powerdriver.PowerResetMixin method), 103
 __repr__ () (labgrid.driver.powerdriver.USBPowerDriver method), 105
 __repr__ () (labgrid.driver.powerdriver.YKUSHPowerDriver method), 105
 __repr__ () (labgrid.driver.qemudriver.QEMUDriver method), 107
 __repr__ () (labgrid.driver.quartushpsdriver.QuartusHPSDriver method), 107
 __repr__ () (labgrid.driver.resetdriver.DigitalOutputResetDriver method), 108
 __repr__ () (labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver method), 109
 __repr__ () (labgrid.driver.serialdriver.SerialDriver method), 109
 __repr__ () (labgrid.driver.shelldriver.ShellDriver method), 111
 __repr__ () (labgrid.driver.sigrokdriver.SigrokCommon method), 112
 __repr__ () (labgrid.driver.sigrokdriver.SigrokDriver method), 112
 __repr__ () (labgrid.driver.sigrokdriver.SigrokPowerDriver method), 112
 __repr__ () (labgrid.driver.smallubootdriver.SmallUBootDriver method), 113
 __repr__ () (labgrid.driver.sshdriver.SSHDriver method), 114
 __repr__ () (labgrid.driver.ubootdriver.UBootDriver method), 116
 __repr__ () (labgrid.driver.usbloader.IMXUSBDriver method), 117
 __repr__ () (labgrid.driver.usbloader.MXSUSBDriver method), 116
 __repr__ () (labgrid.driver.usbloader.RKUSBDriver method), 117
 __repr__ () (labgrid.driver.usbsdmuxdriver.USBSDMuxDriver method), 118
 __repr__ () (labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver method), 119
 __repr__ () (labgrid.driver.usbstoragedriver.USBStorageDriver method), 118
 __repr__ () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 119
 __repr__ () (labgrid.driver.usbvideodriver.USBVideoDriver method), 120
 __repr__ () (labgrid.driver.xenadriver.XenaDriver method), 120
 __repr__ () (labgrid.environment.Environment method), 176
 __repr__ () (labgrid.exceptions.InvalidConfigError method), 177
 __repr__ () (labgrid.exceptions.NoConfigFoundError method), 177
 __repr__ () (labgrid.exceptions.NoDriverFoundError method), 177
 __repr__ () (labgrid.exceptions.NoResourceFoundError method), 178
 __repr__ () (labgrid.exceptions.NoSupplierFoundError method), 177
 __repr__ () (labgrid.provider.mediafileprovider.MediaFileProvider method), 125
 __repr__ () (labgrid.remote.common.Place method), 129
 __repr__ () (labgrid.remote.common.Reservation method), 130
 __repr__ () (labgrid.remote.common.ResourceEntry method), 128
 __repr__ () (labgrid.remote.common.ResourceMatch method), 128
 __repr__ () (labgrid.remote.config.ResourceConfig method), 130
 __repr__ () (labgrid.remote.coordinator.ClientSession method), 131
 __repr__ () (labgrid.remote.coordinator.ExporterSession method), 131
 __repr__ () (labgrid.remote.coordinator.RemoteSession method), 131
 __repr__ () (labgrid.remote.coordinator.ResourceImport method), 131
 __repr__ () (labgrid.remote.exporter.EthernetPortExport method), 135
 __repr__ () (labgrid.remote.exporter.GPIOGenericExport method), 135
 __repr__ () (labgrid.remote.exporter.NetworkServiceExport method), 136
 __repr__ () (labgrid.remote.exporter.ResourceExport method), 132
 __repr__ () (labgrid.remote.exporter.SerialPortExport method), 133
 __repr__ () (labgrid.remote.exporter.USBDeditecRelaisExport method), 133

method), 134
 __repr__ () (*labgrid.remote.exporter.USBEthernetExport*
method), 133
 __repr__ () (*labgrid.remote.exporter.USBGenericExport*
method), 133
 __repr__ () (*labgrid.remote.exporter.USBPowerPortExport*
method), 134
 __repr__ () (*labgrid.remote.exporter.USBSDMuxExport*
method), 134
 __repr__ () (*labgrid.remote.exporter.USBSigrokExport*
method), 133
 __repr__ () (*labgrid.remote.scheduler.TagSet*
method), 136
 __repr__ () (*labgrid.resource.base.EthernetInterface*
method), 137
 __repr__ () (*labgrid.resource.base.EthernetPort*
method), 138
 __repr__ () (*labgrid.resource.base.SerialPort*
method), 137
 __repr__ () (*labgrid.resource.base.SysfsGPIO*
method), 138
 __repr__ () (*labgrid.resource.common.ManagedResource*
method), 140
 __repr__ () (*labgrid.resource.common.NetworkResource*
method), 139
 __repr__ () (*labgrid.resource.common.Resource*
method), 139
 __repr__ () (*labgrid.resource.common.ResourceManager*
method), 139
 __repr__ () (*labgrid.resource.docker.DockerDaemon*
method), 141
 __repr__ () (*labgrid.resource.docker.DockerManager*
method), 141
 __repr__ () (*labgrid.resource.ethernetport.EthernetPortManager*
method), 143
 __repr__ () (*labgrid.resource.ethernetport.SNMPEthernetPort*
method), 143
 __repr__ () (*labgrid.resource.ethernetport.SNMPSwitch*
method), 142
 __repr__ () (*labgrid.resource.flashrom.Flashrom*
method), 144
 __repr__ () (*labgrid.resource.flashrom.NetworkFlashrom*
method), 144
 __repr__ () (*labgrid.resource.modbus.ModbusTCPCoil*
method), 144
 __repr__ () (*labgrid.resource.networkservice.NetworkService*
method), 144
 __repr__ () (*labgrid.resource.onewireport.OneWirePIO*
method), 145
 __repr__ () (*labgrid.resource.power.NetworkPowerPort*
method), 145
 __repr__ () (*labgrid.resource.power.PDUDAemonPort*
method), 146
 __repr__ () (*labgrid.resource.remote.NetworkAlteraUSBBlaster*
method), 148
 __repr__ () (*labgrid.resource.remote.NetworkAndroidFastboot*
method), 147
 __repr__ () (*labgrid.resource.remote.NetworkDeditecRelais8*
method), 150
 __repr__ () (*labgrid.resource.remote.NetworkIMXUSBLoader*
method), 147
 __repr__ () (*labgrid.resource.remote.NetworkMXSUSBLoader*
method), 147
 __repr__ () (*labgrid.resource.remote.NetworkRKUSBLoader*
method), 147
 __repr__ () (*labgrid.resource.remote.NetworkSigrokUSBDevice*
method), 148
 __repr__ () (*labgrid.resource.remote.NetworkSigrokUSBSerialDevice*
method), 148
 __repr__ () (*labgrid.resource.remote.NetworkSysfsGPIO*
method), 150
 __repr__ () (*labgrid.resource.remote.NetworkUSBMassStorage*
method), 149
 __repr__ () (*labgrid.resource.remote.NetworkUSBPowerPort*
method), 149
 __repr__ () (*labgrid.resource.remote.NetworkUSBSDMuxDevice*
method), 149
 __repr__ () (*labgrid.resource.remote.NetworkUSBTMC*
method), 150
 __repr__ () (*labgrid.resource.remote.NetworkUSBVideo*
method), 149
 __repr__ () (*labgrid.resource.remote.RemotePlace*
method), 146
 __repr__ () (*labgrid.resource.remote.RemotePlaceManager*
method), 146
 __repr__ () (*labgrid.resource.remote.RemoteUSBResource*
method), 146
 __repr__ () (*labgrid.resource.serialport.NetworkSerialPort*
method), 151
 __repr__ () (*labgrid.resource.serialport.RawSerialPort*
method), 151
 __repr__ () (*labgrid.resource.sigrok.SigrokDevice*
method), 151
 __repr__ () (*labgrid.resource.udev.AlteraUSBBlaster*
method), 155
 __repr__ () (*labgrid.resource.udev.AndroidFastboot*
method), 154
 __repr__ () (*labgrid.resource.udev.DeditecRelais8*
method), 157
 __repr__ () (*labgrid.resource.udev.IMXUSBLoader*
method), 154
 __repr__ () (*labgrid.resource.udev.MXSUSBLoader*
method), 154
 __repr__ () (*labgrid.resource.udev.RKUSBLoader*
method), 154
 __repr__ () (*labgrid.resource.udev.SigrokUSBDevice*
method), 155
 __repr__ () (*labgrid.resource.udev.SigrokUSBSerialDevice*
method), 155

method), 156
 __repr__ () (*labgrid.resource.udev.USBEthernetInterface method*), 155
 __repr__ () (*labgrid.resource.udev.USBMassStorage method*), 153
 __repr__ () (*labgrid.resource.udev.USBPowerPort method*), 156
 __repr__ () (*labgrid.resource.udev.USBResource method*), 153
 __repr__ () (*labgrid.resource.udev.USBSDMuxDevice method*), 156
 __repr__ () (*labgrid.resource.udev.USBSerialPort method*), 153
 __repr__ () (*labgrid.resource.udev.USBTMC method*), 157
 __repr__ () (*labgrid.resource.udev.USBVideo method*), 157
 __repr__ () (*labgrid.resource.udev.UdevManager method*), 152
 __repr__ () (*labgrid.resource.xenamanager.XenaManager method*), 158
 __repr__ () (*labgrid.resource.ykushpowerport.YKUSHPowerPort method*), 158
 __repr__ () (*labgrid.step.Step method*), 179
 __repr__ () (*labgrid.strategy.bareboxstrategy.BareboxStrategy method*), 159
 __repr__ () (*labgrid.strategy.common.Strategy method*), 160
 __repr__ () (*labgrid.strategy.common.StrategyError method*), 159
 __repr__ () (*labgrid.strategy.dockerstrategy.DockerStrategy method*), 160
 __repr__ () (*labgrid.strategy.shellstrategy.ShellStrategy method*), 161
 __repr__ () (*labgrid.strategy.ubootstrategy.UBootStrategy method*), 162
 __repr__ () (*labgrid.target.Target method*), 181
 __repr__ () (*labgrid.util.exceptions.NoValidDriverError method*), 165
 __repr__ () (*labgrid.util.helper.ProcessWrapper method*), 166
 __repr__ () (*labgrid.util.managedfile.ManagedFile method*), 167
 __repr__ () (*labgrid.util.qmp.QMPError method*), 168
 __repr__ () (*labgrid.util.qmp.QMPMonitor method*), 168
 __repr__ () (*labgrid.util.ssh.ForwardError method*), 171
 __repr__ () (*labgrid.util.ssh.SSHConnection method*), 170
 __repr__ () (*labgrid.util.timeout.Timeout method*), 171
 __setitem__ () (*labgrid.step.StepEvent method*), 179
 __str__ () (*labgrid.remote.common.ResourceMatch method*), 128
 __str__ () (*labgrid.step.Step method*), 179
 __str__ () (*labgrid.step.StepEvent method*), 179
 __weakref__ (*labgrid.autoinstall.main.Manager attribute*), 89
 __weakref__ (*labgrid.binding.BindingError attribute*), 172
 __weakref__ (*labgrid.binding.BindingMixin attribute*), 174
 __weakref__ (*labgrid.binding.BindingMixin.NamedBinding attribute*), 173
 __weakref__ (*labgrid.binding.StateError attribute*), 172
 __weakref__ (*labgrid.config.Config attribute*), 175
 __weakref__ (*labgrid.consoleloggingreporter.ConsoleLoggingReporter attribute*), 176
 __weakref__ (*labgrid.driver.commandmixin.CommandMixin attribute*), 93
 __weakref__ (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin attribute*), 94
 __weakref__ (*labgrid.driver.exception.CleanUpError attribute*), 96
 __weakref__ (*labgrid.driver.exception.ExecutionError attribute*), 96
 __weakref__ (*labgrid.environment.Environment attribute*), 177
 __weakref__ (*labgrid.exceptions.InvalidConfigError attribute*), 177
 __weakref__ (*labgrid.exceptions.NoConfigFoundError attribute*), 177
 __weakref__ (*labgrid.exceptions.NoSupplierFoundError attribute*), 177
 __weakref__ (*labgrid.factory.TargetFactory attribute*), 178
 __weakref__ (*labgrid.protocol.bootstrapprotocol.BootstrapProtocol attribute*), 121
 __weakref__ (*labgrid.protocol.commandprotocol.CommandProtocol attribute*), 121
 __weakref__ (*labgrid.protocol.consoleprotocol.ConsoleProtocol attribute*), 122
 __weakref__ (*labgrid.protocol.consoleprotocol.ConsoleProtocol.Client attribute*), 122
 __weakref__ (*labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol attribute*), 122
 __weakref__ (*labgrid.protocol.filesystemprotocol.FileSystemProtocol attribute*), 123
 __weakref__ (*labgrid.protocol.filetransferprotocol.FileTransferProtocol attribute*), 123
 __weakref__ (*labgrid.protocol.infoprotocol.InfoProtocol attribute*), 123
 __weakref__ (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol attribute*), 124
 __weakref__ (*labgrid.protocol.mmioprotocol.MMIOProtocol attribute*), 124

- `attribute`), 124
 - `__weakref__` (*labgrid.protocol.powerprotocol.PowerProtocol attribute*), 124
 - `__weakref__` (*labgrid.protocol.resetprotocol.ResetProtocol attribute*), 124
 - `__weakref__` (*labgrid.provider.fileprovider.FileProvider attribute*), 125
 - `__weakref__` (*labgrid.pytestplugin.reporter.StepReporter attribute*), 126
 - `__weakref__` (*labgrid.remote.client.Error attribute*), 127
 - `__weakref__` (*labgrid.remote.common.Place attribute*), 129
 - `__weakref__` (*labgrid.remote.common.Reservation attribute*), 130
 - `__weakref__` (*labgrid.remote.common.ResourceEntry attribute*), 128
 - `__weakref__` (*labgrid.remote.common.ResourceMatch attribute*), 128
 - `__weakref__` (*labgrid.remote.config.ResourceConfig attribute*), 130
 - `__weakref__` (*labgrid.remote.coordinator.RemoteSession attribute*), 131
 - `__weakref__` (*labgrid.remote.exporter.ExporterError attribute*), 132
 - `__weakref__` (*labgrid.remote.scheduler.TagSet attribute*), 136
 - `__weakref__` (*labgrid.resource.common.ResourceManager attribute*), 139
 - `__weakref__` (*labgrid.resource.docker.DockerConstants attribute*), 140
 - `__weakref__` (*labgrid.resource.ethernetport.SNMPSwitch attribute*), 142
 - `__weakref__` (*labgrid.resource.suggest.Suggester attribute*), 152
 - `__weakref__` (*labgrid.step.Step attribute*), 180
 - `__weakref__` (*labgrid.step.StepEvent attribute*), 179
 - `__weakref__` (*labgrid.step.Steps attribute*), 179
 - `__weakref__` (*labgrid.stepreporter.StepReporter attribute*), 180
 - `__weakref__` (*labgrid.strategy.common.StrategyError attribute*), 159
 - `__weakref__` (*labgrid.target.Target attribute*), 182
 - `__weakref__` (*labgrid.util.agent.Agent attribute*), 163
 - `__weakref__` (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput attribute*), 163
 - `__weakref__` (*labgrid.util.agentwrapper.AgentError attribute*), 163
 - `__weakref__` (*labgrid.util.agentwrapper.AgentException attribute*), 164
 - `__weakref__` (*labgrid.util.agentwrapper.AgentWrapper attribute*), 164
 - `__weakref__` (*labgrid.util.agentwrapper.MethodProxy attribute*), 164
 - `__weakref__` (*labgrid.util.agentwrapper.ModuleProxy attribute*), 164
 - `__weakref__` (*labgrid.util.exceptions.NoValidDriverError attribute*), 165
 - `__weakref__` (*labgrid.util.helper.ProcessWrapper attribute*), 166
 - `__weakref__` (*labgrid.util.managedfile.ManagedFile attribute*), 167
 - `__weakref__` (*labgrid.util.qmp.QMPErrors attribute*), 168
 - `__weakref__` (*labgrid.util.qmp.QMPMonitor attribute*), 168
 - `__weakref__` (*labgrid.util.ssh.ForwardError attribute*), 171
 - `__weakref__` (*labgrid.util.ssh.SSHConnection attribute*), 170
 - `__weakref__` (*labgrid.util.timeout.Timeout attribute*), 171
- ## A
- `accessible` (*labgrid.strategy.dockerstrategy.Status attribute*), 160
 - `acquire()` (*labgrid.remote.common.ResourceEntry method*), 127
 - `acquire()` (*labgrid.remote.exporter.ResourceExport method*), 132
 - `acquired` (*labgrid.remote.common.ReservationState attribute*), 129
 - `acquired()` (*labgrid.remote.common.ResourceEntry property*), 127
 - `Action` (*class in labgrid.remote.coordinator*), 130
 - `activate()` (*labgrid.target.Target method*), 181
 - `active` (*labgrid.binding.BindingState attribute*), 173
 - `ADD` (*labgrid.remote.coordinator.Action attribute*), 130
 - `add_port_forward()` (*labgrid.util.ssh.SSHConnection method*), 170
 - `age()` (*labgrid.step.StepEvent property*), 179
 - `Agent` (*class in labgrid.util.agent*), 163
 - `AgentError`, 163
 - `AgentException`, 163
 - `AgentWrapper` (*class in labgrid.util.agentwrapper*), 164
 - `allocated` (*labgrid.remote.common.ReservationState attribute*), 129
 - `AlteraUSBBlaster` (*class in labgrid.resource.udev*), 155
 - `analyze()` (*labgrid.driver.sigrokdriver.SigrokDriver method*), 112
 - `AndroidFastboot` (*class in labgrid.resource.udev*), 154
 - `AndroidFastbootDriver` (*class in labgrid.driver.fastbootdriver*), 99
 - `args()` (*labgrid.remote.common.ResourceEntry property*), 127

- asdict() (*labgrid.remote.common.Place method*), 128
 asdict() (*labgrid.remote.common.Reservation method*), 129
 asdict() (*labgrid.remote.common.ResourceEntry method*), 127
 atomic_replace() (*in module labgrid.util.atomic*), 164
 avail() (*labgrid.remote.common.ResourceEntry property*), 127
 avail() (*labgrid.resource.udev.USBMassStorage property*), 153
 avail() (*labgrid.resource.udev.USBSDMuxDevice property*), 156
 await_boot() (*labgrid.driver.bareboxdriver.BareboxDriver method*), 92
 await_boot() (*labgrid.driver.ubootdriver.UBootDriver method*), 116
 await_boot() (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol method*), 123
 await_resources() (*labgrid.target.Target method*), 180
- ## B
- b2s() (*in module labgrid.util.agent*), 163
 b2s() (*in module labgrid.util.agentwrapper*), 163
 barebox (*labgrid.strategy.bareboxstrategy.Status attribute*), 158
 BareboxDriver (*class in labgrid.driver.bareboxdriver*), 91
 BareboxStrategy (*class in labgrid.strategy.bareboxstrategy*), 158
 bind() (*labgrid.target.Target method*), 181
 bind_driver() (*labgrid.target.Target method*), 181
 bind_resource() (*labgrid.target.Target method*), 181
 BindingError, 172
 BindingMixin (*class in labgrid.binding*), 173
 BindingMixin.NamedBinding (*class in labgrid.binding*), 173
 bindings (*labgrid.binding.BindingMixin attribute*), 173
 bindings (*labgrid.driver.bareboxdriver.BareboxDriver attribute*), 92
 bindings (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver attribute*), 94
 bindings (*labgrid.driver.dockerdriver.DockerDriver attribute*), 95
 bindings (*labgrid.driver.fastbootdriver.AndroidFastbootDriver attribute*), 99
 bindings (*labgrid.driver.filedigitaloutput.FileDigitalOutputDriver attribute*), 99
 bindings (*labgrid.driver.flashromdriver.FlashromDriver attribute*), 100
 bindings (*labgrid.driver.gpiodriver.GpioDigitalOutputDriver attribute*), 100
 bindings (*labgrid.driver.modbusdriver.ModbusCoilDriver attribute*), 101
 bindings (*labgrid.driver.onewiredriver.OneWirePIODriver attribute*), 102
 bindings (*labgrid.driver.openocddriver.OpenOCDDriver attribute*), 102
 bindings (*labgrid.driver.powerdriver.DigitalOutputPowerDriver attribute*), 104
 bindings (*labgrid.driver.powerdriver.NetworkPowerDriver attribute*), 104
 bindings (*labgrid.driver.powerdriver.PDUDaemonDriver attribute*), 106
 bindings (*labgrid.driver.powerdriver.USBPowerDriver attribute*), 105
 bindings (*labgrid.driver.powerdriver.YKUSHPowerDriver attribute*), 105
 bindings (*labgrid.driver.quartushpsdriver.QuartusHPSDriver attribute*), 107
 bindings (*labgrid.driver.resetdriver.DigitalOutputResetDriver attribute*), 108
 bindings (*labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver attribute*), 108
 bindings (*labgrid.driver.serialdriver.SerialDriver attribute*), 109
 bindings (*labgrid.driver.shelldriver.ShellDriver attribute*), 110
 bindings (*labgrid.driver.sigrokdriver.SigrokDriver attribute*), 112
 bindings (*labgrid.driver.sigrokdriver.SigrokPowerDriver attribute*), 112
 bindings (*labgrid.driver.sshdriver.SSHDriver attribute*), 114
 bindings (*labgrid.driver.ubootdriver.UBootDriver attribute*), 115
 bindings (*labgrid.driver.usbloader.IMXUSBDriver attribute*), 116
 bindings (*labgrid.driver.usbloader.MXSUSBDriver attribute*), 116
 bindings (*labgrid.driver.usbloader.RKUSBDriver attribute*), 117
 bindings (*labgrid.driver.usbsdmuxdriver.USBSDMuxDriver attribute*), 117
 bindings (*labgrid.driver.usbstoragedriver.USBStorageDriver attribute*), 118
 bindings (*labgrid.driver.usbtmcdriver.USBTMCDriver attribute*), 119
 bindings (*labgrid.driver.usbvideodriver.USBVideoDriver attribute*), 120
 bindings (*labgrid.driver.xenadriver.XenaDriver attribute*), 120

- bindings (*labgrid.strategy.bareboxstrategy.BareboxStrategy* attribute), 158
 - bindings (*labgrid.strategy.dockerstrategy.DockerStrategy* attribute), 160
 - bindings (*labgrid.strategy.shellstrategy.ShellStrategy* attribute), 161
 - bindings (*labgrid.strategy.ubootstrategy.UBootStrategy* attribute), 162
 - BindingState (class in *labgrid.binding*), 172
 - BMAPTOOL (*labgrid.driver.usbstoragedriver.Mode* attribute), 118
 - boot () (*labgrid.driver.bareboxdriver.BareboxDriver* method), 92
 - boot () (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
 - boot () (*labgrid.driver.smallubootdriver.SmallUBootDriver* method), 113
 - boot () (*labgrid.driver.ubootdriver.UBootDriver* method), 116
 - boot () (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol* method), 123
 - BootstrapProtocol (class in *labgrid.protocol.bootstrapprotocol*), 121
 - bound (*labgrid.binding.BindingState* attribute), 172
 - broken () (*labgrid.remote.exporter.ResourceExport* property), 132
 - BrokenResourceError, 132
 - busnum () (*labgrid.resource.udev.USBResource* property), 152
- ## C
- call () (*labgrid.util.agentwrapper.AgentWrapper* method), 164
 - capture () (*labgrid.driver.sigrokdriver.SigrokDriver* method), 112
 - check_active () (*labgrid.binding.BindingMixin* class method), 173
 - check_file () (in module *labgrid.driver.common*), 94
 - check_output () (*labgrid.util.helper.ProcessWrapper* method), 166
 - class_from_string () (*labgrid.factory.TargetFactory* method), 178
 - cleanup () (*labgrid.environment.Environment* method), 176
 - cleanup () (*labgrid.target.Target* method), 181
 - CleanupError, 96
 - ClientSession (class in *labgrid.remote.coordinator*), 131
 - close () (*labgrid.driver.externalconsoledriver.ExternalConsoleDriver* method), 97
 - close () (*labgrid.driver.fake.FakeConsoleDriver* method), 97
 - close () (*labgrid.driver.serialdriver.SerialDriver* method), 109
 - close () (*labgrid.util.agentwrapper.AgentWrapper* method), 164
 - cls () (*labgrid.remote.common.ResourceEntry* property), 127
 - ColoredStepReporter (class in *labgrid.pytestplugin.reporter*), 126
 - command () (*labgrid.driver.usbtmcdriver.USBTMCDriver* method), 119
 - command_prefix () (*labgrid.resource.common.NetworkResource* property), 139
 - command_prefix () (*labgrid.resource.common.Resource* property), 138
 - CommandMixin (class in *labgrid.driver.commandmixin*), 93
 - CommandProtocol (class in *labgrid.protocol.commandprotocol*), 121
 - Config (class in *labgrid.config*), 174
 - configure () (*labgrid.autoinstall.main.Manager* method), 89
 - connect () (*labgrid.util.ssh.SSHConnection* method), 170
 - ConsoleExpectMixin (class in *labgrid.driver.consoleexpectmixin*), 94
 - ConsoleLoggingReporter (class in *labgrid.consoleloggingreporter*), 176
 - ConsoleProtocol (class in *labgrid.protocol.consoleprotocol*), 121
 - ConsoleProtocol.Client (class in *labgrid.protocol.consoleprotocol*), 122
 - continue_boot () (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
 - cycle () (*labgrid.driver.dockerdriver.DockerDriver* method), 96
 - cycle () (*labgrid.driver.fake.FakePowerDriver* method), 98
 - cycle () (*labgrid.driver.powerdriver.DigitalOutputPowerDriver* method), 104
 - cycle () (*labgrid.driver.powerdriver.ExternalPowerDriver* method), 103
 - cycle () (*labgrid.driver.powerdriver.ManualPowerDriver* method), 103
 - cycle () (*labgrid.driver.powerdriver.NetworkPowerDriver* method), 104
 - cycle () (*labgrid.driver.powerdriver.PDUDaemonDriver* method), 106
 - cycle () (*labgrid.driver.powerdriver.USBPowerDriver* method), 105
 - cycle () (*labgrid.driver.powerdriver.YKUSHPowerDriver* method), 105

cycle() (*labgrid.driver.qemudriver.QEMUDriver method*), 107
 cycle() (*labgrid.driver.sigrokdriver.SigrokPowerDriver method*), 112
 cycle() (*labgrid.protocol.powerprotocol.PowerProtocol method*), 124

D

DD (*labgrid.driver.usbstoragedriver.Mode attribute*), 118
 deactivate() (*labgrid.target.Target method*), 181
 deactivate_all_drivers() (*labgrid.target.Target method*), 181
 DeditecRelais8 (*class in labgrid.resource.udev*), 157
 DeditecRelaisDriver (*class in labgrid.driver.deditecrelaisdriver*), 94
 DEL (*labgrid.remote.coordinator.Action attribute*), 130
 depends() (*labgrid.strategy.graphstrategy.GraphStrategy class method*), 161
 devnum() (*labgrid.resource.udev.USBResource property*), 152
 diff_dict() (*in module labgrid.util.dict*), 165
 DigitalOutputPowerDriver (*class in labgrid.driver.powerdriver*), 104
 DigitalOutputProtocol (*class in labgrid.protocol.digitaloutputprotocol*), 122
 DigitalOutputResetDriver (*class in labgrid.driver.resetdriver*), 108
 disconnect() (*labgrid.util.ssh.SSHConnection method*), 170
 display_name() (*labgrid.binding.BindingMixin property*), 173
 docker_daemon_url (*labgrid.resource.docker.DockerDaemon attribute*), 141
 DOCKER_LG_CLEANUP_LABEL (*labgrid.resource.docker.DockerConstants attribute*), 140
 DOCKER_LG_CLEANUP_TYPE_AUTO (*labgrid.resource.docker.DockerConstants attribute*), 140
 DockerConstants (*class in labgrid.resource.docker*), 140
 DockerDaemon (*class in labgrid.resource.docker*), 141
 DockerDriver (*class in labgrid.driver.dockerdriver*), 95
 DockerManager (*class in labgrid.resource.docker*), 140
 DockerStrategy (*class in labgrid.strategy.dockerstrategy*), 160
 Driver (*class in labgrid.driver.common*), 93
 dump() (*in module labgrid.util.yaml*), 172
 Dumper (*class in labgrid.util.yaml*), 171
 duration() (*labgrid.step.Step property*), 179

E

enable_logging() (*labgrid.util.helper.ProcessWrapper method*), 166
 enable_print() (*labgrid.util.helper.ProcessWrapper method*), 166
 enable_tcp_nodelay() (*in module labgrid.remote.common*), 130
 env() (*in module labgrid.pytestplugin.fixtures*), 125
 Environment (*class in labgrid.environment*), 176
 Error, 127
 error (*labgrid.binding.BindingState attribute*), 172
 EthernetInterface (*class in labgrid.resource.base*), 137
 EthernetPort (*class in labgrid.resource.base*), 137
 EthernetPortExport (*class in labgrid.remote.exporter*), 134
 EthernetPortManager (*class in labgrid.resource.ethernetport*), 142
 EVENT_COLORS_DARK (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 126
 EVENT_COLORS_LIGHT (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 126
 execute() (*labgrid.driver.openocddriver.OpenOCDDriver method*), 102
 execute() (*labgrid.util.qmp.QMPMonitor method*), 168
 ExecutionError, 96
 expect() (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin method*), 94
 expect() (*labgrid.protocol.consoleprotocol.ConsoleProtocol method*), 122
 expired (*labgrid.remote.common.ReservationState attribute*), 129
 expired() (*labgrid.remote.common.Reservation property*), 129
 expired() (*labgrid.util.timeout.Timeout property*), 171
 ExporterError, 132
 ExporterSession (*class in labgrid.remote.coordinator*), 131
 ExternalConsoleDriver (*class in labgrid.driver.externalconsoledriver*), 97
 ExternalPowerDriver (*class in labgrid.driver.powerdriver*), 103
 extra() (*labgrid.remote.common.ResourceEntry property*), 127

F

FakeCommandDriver (*class in labgrid.driver.fake*), 97

- FakeConsoleDriver (class in *labgrid.driver.fake*), 97
- FakeFileTransferDriver (class in *labgrid.driver.fake*), 98
- FakePowerDriver (class in *labgrid.driver.fake*), 98
- FileDigitalOutputDriver (class in *labgrid.driver.filedigitaloutput*), 99
- FileProvider (class in *labgrid.provider.fileprovider*), 125
- FileSystemProtocol (class in *labgrid.protocol.filesystemprotocol*), 122
- FileTransferProtocol (class in *labgrid.protocol.filetransferprotocol*), 123
- filter_dict() (in module *labgrid.util.dict*), 165
- filter_match() (*labgrid.resource.udev.AlteraUSBBlaster* method), 155
- filter_match() (*labgrid.resource.udev.AndroidFastboot* method), 154
- filter_match() (*labgrid.resource.udev.IMXUSBLoader* method), 153
- filter_match() (*labgrid.resource.udev.MXSUSBLoader* method), 154
- filter_match() (*labgrid.resource.udev.RKUSBLoader* method), 154
- filter_match() (*labgrid.resource.udev.USBResource* method), 152
- find_abs_path() (*labgrid.strategy.graphstrategy.GraphStrategy* method), 161
- find_any_role_with_place() (in module *labgrid.remote.client*), 127
- find_dict() (in module *labgrid.util.dict*), 165
- find_rel_path() (*labgrid.strategy.graphstrategy.GraphStrategy* method), 161
- find_role_by_place() (in module *labgrid.remote.client*), 127
- flash() (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
- flash() (*labgrid.driver.quartushpsdriver.QuartusHPSDriver* method), 107
- Flashrom (class in *labgrid.resource.flashrom*), 143
- FlashromDriver (class in *labgrid.driver.flashromdriver*), 100
- flat_dict() (in module *labgrid.util.dict*), 165
- force() (*labgrid.strategy.common.Strategy* method), 159
- force() (*labgrid.strategy.shellstrategy.ShellStrategy* method), 161
- ForwardError, 170
- fromstr() (*labgrid.remote.common.ResourceMatch* class method), 128
- ## G
- gen_marker() (in module *labgrid.util.marker*), 168
- get() (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver* method), 95
- get() (*labgrid.driver.fake.FakeFileTransferDriver* method), 98
- get() (*labgrid.driver.filedigitaloutput.FileDigitalOutputDriver* method), 99
- get() (*labgrid.driver.gpiodriver.GpioDigitalOutputDriver* method), 101
- get() (*labgrid.driver.modbusdriver.ModbusCoilDriver* method), 101
- get() (*labgrid.driver.onewiredriver.OneWirePIODriver* method), 102
- get() (*labgrid.driver.powerdriver.DigitalOutputPowerDriver* method), 104
- get() (*labgrid.driver.powerdriver.NetworkPowerDriver* method), 104
- get() (*labgrid.driver.powerdriver.PDUDaemonDriver* method), 106
- get() (*labgrid.driver.powerdriver.USBPowerDriver* method), 105
- get() (*labgrid.driver.powerdriver.YKUSHPowerDriver* method), 105
- get() (*labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver* method), 108
- get() (*labgrid.driver.shelldriver.ShellDriver* method), 110
- get() (*labgrid.driver.sigrokdriver.SigrokPowerDriver* method), 112
- get() (*labgrid.driver.sshdriver.SSHDriver* method), 114
- get() (*labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol* method), 122
- get() (*labgrid.protocol.filetransferprotocol.FileTransferProtocol* method), 123
- get() (*labgrid.provider.fileprovider.FileProvider* method), 125
- get() (*labgrid.provider.mediafileprovider.MediaFileProvider* method), 125
- get() (*labgrid.resource.common.ResourceManager* class method), 139
- get() (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput* method), 162
- get_active_driver() (*labgrid.target.Target* method), 181
- get_bool() (*labgrid.driver.usbtmcdriver.USBTMCDriver* method), 119

`get_bytes()` (*labgrid.driver.shelldriver.ShellDriver method*), 110
`get_caps()` (*labgrid.driver.usbvideodriver.USBVideoDriver method*), 120
`get_channel_info()` (in module *labgrid.driver.usbtmc.keysight_dsox2000*), 91
`get_channel_info()` (in module *labgrid.driver.usbtmc.tektronix_tds2000*), 91
`get_channel_info()` (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
`get_channel_values()` (in module *labgrid.driver.usbtmc.keysight_dsox2000*), 91
`get_channel_values()` (in module *labgrid.driver.usbtmc.tektronix_tds2000*), 91
`get_channel_values()` (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
`get_console_matches()` (*labgrid.protocol.consoleprotocol.ConsoleProtocol.Client method*), 122
`get_current()` (*labgrid.step.Steps method*), 179
`get_decimal()` (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
`get_driver()` (*labgrid.target.Target method*), 181
`get_features()` (*labgrid.config.Config method*), 175
`get_features()` (*labgrid.environment.Environment method*), 176
`get_file()` (*labgrid.util.ssh.SSHConnection method*), 169
`get_free_port()` (in module *labgrid.util.helper*), 166
`get_hash()` (*labgrid.util.managedfile.ManagedFile method*), 167
`get_hostname()` (*labgrid.protocol.infoprotocol.InfoProtocol method*), 123
`get_image_path()` (*labgrid.config.Config method*), 174
`get_images()` (*labgrid.config.Config method*), 175
`get_imports()` (*labgrid.config.Config method*), 175
`get_int()` (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
`get_ip()` (*labgrid.protocol.infoprotocol.InfoProtocol method*), 123
`get_logfile()` (*labgrid.consoleloggingreporter.ConsoleLoggingReporter method*), 176
`get_managed_parent()` (*labgrid.resource.common.ManagedResource method*), 140
`get_managed_parent()` (*labgrid.resource.common.Resource method*), 138
`get_new()` (*labgrid.step.Steps method*), 179
`get_option()` (*labgrid.config.Config method*), 175
`get_path()` (*labgrid.config.Config method*), 174
`get_paths()` (*labgrid.config.Config method*), 175
`get_pipeline()` (*labgrid.driver.usbvideodriver.USBVideoDriver method*), 120
`get_prefix()` (*labgrid.util.ssh.SSHConnection method*), 169
`get_priority()` (*labgrid.driver.common.Driver method*), 94
`get_remote_path()` (*labgrid.util.managedfile.ManagedFile method*), 167
`get_resource()` (*labgrid.target.Target method*), 180
`get_resources()` (*labgrid.remote.coordinator.ExporterSession method*), 131
`get_screenshot()` (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
`get_screenshot_png()` (in module *labgrid.driver.usbtmc.keysight_dsox2000*), 91
`get_screenshot_tiff()` (in module *labgrid.driver.usbtmc.tektronix_tds2000*), 91
`get_service_status()` (*labgrid.protocol.infoprotocol.InfoProtocol method*), 123
`get_session()` (*labgrid.driver.xenadriver.XenaDriver method*), 120
`get_size()` (*labgrid.driver.usbstoragedriver.USBStorageDriver method*), 118
`get_status()` (*labgrid.driver.bareboxdriver.BareboxDriver method*), 92
`get_status()` (*labgrid.driver.fake.FakeCommandDriver method*), 98
`get_status()` (*labgrid.driver.shelldriver.ShellDriver method*), 110
`get_status()` (*labgrid.driver.sshdriver.SSHDriver method*), 114
`get_status()` (*labgrid.driver.ubootdriver.UBootDriver method*), 115
`get_status()` (*labgrid.protocol.commandprotocol.CommandProtocol method*), 121
`get_str()` (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
`get_target()` (*labgrid.environment.Environment method*), 176

- [get_target_features\(\)](#) (*labgrid.environment.Environment* method), 176
[get_targets\(\)](#) (*labgrid.config.Config* method), 175
[get_tool\(\)](#) (*labgrid.config.Config* method), 174
[get_user\(\)](#) (*in module labgrid.util.helper*), 166
[getmatch\(\)](#) (*labgrid.remote.common.Place* method), 129
[getvar\(\)](#) (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
[gone](#) (*labgrid.strategy.dockerstrategy.Status* attribute), 160
[GpioDigitalOutput](#) (*class in labgrid.util.agents.sysfsgpio*), 162
[GpioDigitalOutputDriver](#) (*class in labgrid.driver.gpiodriver*), 100
[GPIOGenericExport](#) (*class in labgrid.remote.exporter*), 135
[graph\(\)](#) (*labgrid.strategy.graphstrategy.GraphStrategy* property), 161
[GraphStrategy](#) (*class in labgrid.strategy.graphstrategy*), 160
[GraphStrategyError](#), 160
[GraphStrategyRuntimeError](#), 160
- ## H
- [handle_error\(\)](#) (*in module labgrid.util.agent*), 163
[handle_get\(\)](#) (*in module labgrid.util.agents.sysfsgpio*), 163
[handle_neg\(\)](#) (*in module labgrid.util.agents.dummy*), 162
[handle_set\(\)](#) (*in module labgrid.util.agents.sysfsgpio*), 163
[handle_test\(\)](#) (*in module labgrid.util.agent*), 163
[handle_usbtmc\(\)](#) (*in module labgrid.util.agent*), 163
[Handler](#) (*class in labgrid.autoinstall.main*), 89
[hasmatch\(\)](#) (*labgrid.remote.common.Place* method), 129
- ## I
- [identify\(\)](#) (*labgrid.driver.usbtmcdriver.USBTMCDriver* method), 119
[idle](#) (*labgrid.binding.BindingState* attribute), 172
[if_state\(\)](#) (*labgrid.resource.udev.USBEthernetInterface* property), 155
[IMXUSBDriver](#) (*class in labgrid.driver.usbloader*), 116
[IMXUSBLoader](#) (*class in labgrid.resource.udev*), 153
[InfoProtocol](#) (*class in labgrid.protocol.infoprotocol*), 123
[instance](#) (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* attribute), 176
[instance](#) (*labgrid.stepreporter.StepReporter* attribute), 180
[instances](#) (*labgrid.resource.common.ResourceManager* attribute), 139
[interact\(\)](#) (*labgrid.driver.sshdriver.SSHDriver* method), 114
[interact\(\)](#) (*labgrid.target.Target* method), 180
[invalid](#) (*labgrid.remote.common.ReservationState* attribute), 129
[invalidate\(\)](#) (*labgrid.strategy.graphstrategy.GraphStrategy* method), 161
[InvalidConfigError](#), 177
[InvalidGraphStrategyError](#), 160
[is_active\(\)](#) (*labgrid.step.Step* property), 179
[is_done\(\)](#) (*labgrid.step.Step* property), 179
[isconnected\(\)](#) (*labgrid.util.ssh.SSHConnection* method), 170
[ismatch\(\)](#) (*labgrid.remote.common.ResourceMatch* method), 128
- ## J
- [join\(\)](#) (*labgrid.autoinstall.main.Manager* method), 89
- ## K
- [key\(\)](#) (*labgrid.remote.coordinator.RemoteSession* property), 130
- ## L
- [labgrid](#) (*module*), 89
[labgrid.autoinstall](#) (*module*), 89
[labgrid.autoinstall.main](#) (*module*), 89
[labgrid.binding](#) (*module*), 172
[labgrid.config](#) (*module*), 174
[labgrid.consoleloggingreporter](#) (*module*), 176
[labgrid.driver](#) (*module*), 90
[labgrid.driver.bareboxdriver](#) (*module*), 91
[labgrid.driver.commandmixin](#) (*module*), 93
[labgrid.driver.common](#) (*module*), 93
[labgrid.driver.consoleexpectmixin](#) (*module*), 94
[labgrid.driver.deditecrelaisdriver](#) (*module*), 94
[labgrid.driver.dockerdriver](#) (*module*), 95
[labgrid.driver.exception](#) (*module*), 96
[labgrid.driver.externalconsoledriver](#) (*module*), 97
[labgrid.driver.fake](#) (*module*), 97
[labgrid.driver.fastbootdriver](#) (*module*), 99
[labgrid.driver.filedigitaloutput](#) (*module*), 99
[labgrid.driver.flashromdriver](#) (*module*), 100
[labgrid.driver.gpiodriver](#) (*module*), 100
[labgrid.driver.modbusdriver](#) (*module*), 101

- labgrid.driver.onewiredriver (*module*), 102
- labgrid.driver.openocddriver (*module*), 102
- labgrid.driver.power (*module*), 90
- labgrid.driver.power.apc (*module*), 90
- labgrid.driver.power.digipower (*module*), 90
- labgrid.driver.power.gude (*module*), 90
- labgrid.driver.power.gude24 (*module*), 90
- labgrid.driver.power.gude8316 (*module*), 90
- labgrid.driver.power.netio (*module*), 90
- labgrid.driver.power.netio_kshell (*module*), 90
- labgrid.driver.power.sentry (*module*), 91
- labgrid.driver.power.simplerest (*module*), 91
- labgrid.driver.powerdriver (*module*), 103
- labgrid.driver.qemudriver (*module*), 106
- labgrid.driver.quartushpsdriver (*module*), 107
- labgrid.driver.resetdriver (*module*), 108
- labgrid.driver.serialdigitaloutput (*module*), 108
- labgrid.driver.serialdriver (*module*), 109
- labgrid.driver.shelldriver (*module*), 109
- labgrid.driver.sigrokdriver (*module*), 111
- labgrid.driver.smallubootdriver (*module*), 113
- labgrid.driver.sshdriver (*module*), 114
- labgrid.driver.ubootdriver (*module*), 114
- labgrid.driver.usbloader (*module*), 116
- labgrid.driver.usbsdmuxdriver (*module*), 117
- labgrid.driver.usbstoragedriver (*module*), 118
- labgrid.driver.usbtmc (*module*), 91
- labgrid.driver.usbtmc.keysight_dsox2000 (*module*), 91
- labgrid.driver.usbtmc.tektronix_tds2000 (*module*), 91
- labgrid.driver.usbtmcdriver (*module*), 119
- labgrid.driver.usbvideodriver (*module*), 120
- labgrid.driver.xenadriver (*module*), 120
- labgrid.environment (*module*), 176
- labgrid.exceptions (*module*), 177
- labgrid.factory (*module*), 178
- labgrid.protocol (*module*), 120
- labgrid.protocol.bootstrapprotocol (*module*), 121
- labgrid.protocol.commandprotocol (*module*), 121
- labgrid.protocol.consoleprotocol (*module*), 121
- labgrid.protocol.digitaloutputprotocol (*module*), 122
- labgrid.protocol.filesystemprotocol (*module*), 122
- labgrid.protocol.filetransferprotocol (*module*), 123
- labgrid.protocol.infoprotocol (*module*), 123
- labgrid.protocol.linuxbootprotocol (*module*), 123
- labgrid.protocol.mmioprotocol (*module*), 124
- labgrid.protocol.powerprotocol (*module*), 124
- labgrid.protocol.resetprotocol (*module*), 124
- labgrid.provider (*module*), 125
- labgrid.provider.fileprovider (*module*), 125
- labgrid.provider.mediafileprovider (*module*), 125
- labgrid.pytestplugin (*module*), 125
- labgrid.pytestplugin.fixtures (*module*), 125
- labgrid.pytestplugin.hooks (*module*), 126
- labgrid.pytestplugin.reporter (*module*), 126
- labgrid.remote (*module*), 126
- labgrid.remote.authenticator (*module*), 126
- labgrid.remote.client (*module*), 127
- labgrid.remote.common (*module*), 127
- labgrid.remote.config (*module*), 130
- labgrid.remote.coordinator (*module*), 130
- labgrid.remote.exporter (*module*), 132
- labgrid.remote.scheduler (*module*), 136
- labgrid.resource (*module*), 137
- labgrid.resource.base (*module*), 137
- labgrid.resource.common (*module*), 138
- labgrid.resource.docker (*module*), 140
- labgrid.resource.ethernetport (*module*), 141
- labgrid.resource.flashrom (*module*), 143
- labgrid.resource.modbus (*module*), 144
- labgrid.resource.networkservice (*module*), 144
- labgrid.resource.onewireport (*module*), 145
- labgrid.resource.power (*module*), 145
- labgrid.resource.remote (*module*), 146
- labgrid.resource.serialport (*module*), 151
- labgrid.resource.sigrok (*module*), 151
- labgrid.resource.suggest (*module*), 152
- labgrid.resource.udev (*module*), 152
- labgrid.resource.xenamanager (*module*), 157

- labgrid.resource.ykushpowerport (module), 158
 - labgrid.step (module), 178
 - labgrid.stepreporter (module), 180
 - labgrid.strategy (module), 158
 - labgrid.strategy.bareboxstrategy (module), 158
 - labgrid.strategy.common (module), 159
 - labgrid.strategy.dockerstrategy (module), 160
 - labgrid.strategy.graphstrategy (module), 160
 - labgrid.strategy.shellstrategy (module), 161
 - labgrid.strategy.ubootstrategy (module), 161
 - labgrid.target (module), 180
 - labgrid.util (module), 162
 - labgrid.util.agent (module), 163
 - labgrid.util.agents (module), 162
 - labgrid.util.agents.dummy (module), 162
 - labgrid.util.agents.sysfsgpio (module), 162
 - labgrid.util.agentwrapper (module), 163
 - labgrid.util.atomic (module), 164
 - labgrid.util.dict (module), 165
 - labgrid.util.exceptions (module), 165
 - labgrid.util.expect (module), 165
 - labgrid.util.helper (module), 166
 - labgrid.util.managedfile (module), 167
 - labgrid.util.marker (module), 168
 - labgrid.util.proxy (module), 168
 - labgrid.util.qmp (module), 168
 - labgrid.util.ssh (module), 168
 - labgrid.util.timeout (module), 171
 - labgrid.util.yaml (module), 171
 - LinuxBootProtocol (class in labgrid.protocol.linuxbootprotocol), 123
 - list() (labgrid.provider.fileprovider.FileProvider method), 125
 - list() (labgrid.provider.mediafileprovider.MediaFileProvider method), 125
 - list() (labgrid.util.agent.Agent method), 163
 - load() (in module labgrid.util.yaml), 172
 - load() (labgrid.driver.flashromdriver.FlashromDriver method), 100
 - load() (labgrid.driver.openocddriver.OpenOCDDriver method), 102
 - load() (labgrid.driver.usbloader.IMXUSBDriver method), 117
 - load() (labgrid.driver.usbloader.MXSUSBDriver method), 116
 - load() (labgrid.driver.usbloader.RKUSBDriver method), 117
 - load() (labgrid.protocol.bootstrapprotocol.BootstrapProtocol method), 121
 - load() (labgrid.util.agent.Agent method), 163
 - load() (labgrid.util.agentwrapper.AgentWrapper method), 164
 - Loader (class in labgrid.util.yaml), 171
 - locked() (in module labgrid.remote.coordinator), 131
 - log_subprocess_kernel_stack() (in module labgrid.remote.exporter), 132
- ## M
- main() (in module labgrid.autoinstall.main), 89
 - main() (in module labgrid.remote.client), 127
 - main() (in module labgrid.remote.exporter), 136
 - main() (in module labgrid.resource.suggest), 152
 - main() (in module labgrid.util.agent), 163
 - make_driver() (labgrid.factory.TargetFactory method), 178
 - make_resource() (labgrid.factory.TargetFactory method), 178
 - make_target() (labgrid.factory.TargetFactory method), 178
 - ManagedFile (class in labgrid.util.managedfile), 167
 - ManagedResource (class in labgrid.resource.common), 139
 - Manager (class in labgrid.autoinstall.main), 89
 - manager_cls (labgrid.resource.common.ManagedResource attribute), 139
 - manager_cls (labgrid.resource.docker.DockerDaemon attribute), 141
 - manager_cls (labgrid.resource.ethernetport.SNMPEthernetPort attribute), 143
 - manager_cls (labgrid.resource.remote.NetworkSysfsGPIO attribute), 150
 - manager_cls (labgrid.resource.remote.RemotePlace attribute), 146
 - manager_cls (labgrid.resource.remote.RemoteUSBResource attribute), 146
 - manager_cls (labgrid.resource.udev.USBResource attribute), 152
 - ManualPowerDriver (class in labgrid.driver.powerdriver), 103
 - measure() (labgrid.driver.sigrokdriver.SigrokPowerDriver method), 112
 - MediaFileProvider (class in labgrid.provider.mediafileprovider), 125
 - merge() (labgrid.step.StepEvent method), 179
 - message (labgrid.driver.serialdriver.SerialDriver attribute), 109
 - MethodProxy (class in labgrid.util.agentwrapper), 164
 - MMIOProtocol (class in labgrid.protocol.mmioprotocol), 124
 - ModbusCoilDriver (class in labgrid.driver.modbusdriver), 101

- ModbusTCPCoil (class in *labgrid.resource.modbus*), 144
- Mode (class in *labgrid.driver.usbstoragedriver*), 118
- model_id() (*labgrid.resource.udev.USBResource* property), 153
- ModuleProxy (class in *labgrid.util.agentwrapper*), 164
- monitor_command() (*labgrid.driver.qemudriver.QEMUDriver* method), 107
- MXSUSBDriver (class in *labgrid.driver.usbloader*), 116
- MXSUSBLoader (class in *labgrid.resource.udev*), 154
- ## N
- name() (*labgrid.remote.coordinator.RemoteSession* property), 130
- NetworkAlteraUSBBlaster (class in *labgrid.resource.remote*), 147
- NetworkAndroidFastboot (class in *labgrid.resource.remote*), 146
- NetworkDeditecRelais8 (class in *labgrid.resource.remote*), 150
- NetworkFlashrom (class in *labgrid.resource.flashrom*), 144
- NetworkIMXUSBLoader (class in *labgrid.resource.remote*), 147
- NetworkMXSUSBLoader (class in *labgrid.resource.remote*), 147
- NetworkPowerDriver (class in *labgrid.driver.powerdriver*), 104
- NetworkPowerPort (class in *labgrid.resource.power*), 145
- NetworkResource (class in *labgrid.resource.common*), 139
- NetworkRKUSBLoader (class in *labgrid.resource.remote*), 147
- NetworkSerialPort (class in *labgrid.resource.serialport*), 151
- NetworkService (class in *labgrid.resource.networkservice*), 144
- NetworkServiceExport (class in *labgrid.remote.exporter*), 135
- NetworkSigrokUSBDevice (class in *labgrid.resource.remote*), 148
- NetworkSigrokUSBSerialDevice (class in *labgrid.resource.remote*), 148
- NetworkSysfsGPIO (class in *labgrid.resource.remote*), 150
- NetworkUSBMassStorage (class in *labgrid.resource.remote*), 148
- NetworkUSBPowerPort (class in *labgrid.resource.remote*), 149
- NetworkUSBSDMuxDevice (class in *labgrid.resource.remote*), 149
- NetworkUSBStorageDriver (class in *labgrid.driver.usbstoragedriver*), 118
- NetworkUSBTMC (class in *labgrid.resource.remote*), 150
- NetworkUSBVideo (class in *labgrid.resource.remote*), 149
- NoConfigFoundError, 177
- NoDriverFoundError, 177
- NoResourceFoundError, 178
- normalize_config() (*labgrid.factory.TargetFactory* static method), 178
- NoSupplierFoundError, 177
- notify() (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* method), 176
- notify() (*labgrid.pytestplugin.reporter.StepReporter* method), 126
- notify() (*labgrid.step.Steps* method), 179
- notify() (*labgrid.stepreporter.StepReporter* static method), 180
- notify_console_match() (*labgrid.protocol.consoleprotocol.ConsoleProtocol.Client* method), 122
- NoValidDriverError, 165
- ## O
- oem_getenv() (*labgrid.driver.fastbootdriver.AndroidFastbootDriver* method), 99
- off (*labgrid.strategy.bareboxstrategy.Status* attribute), 158
- off (*labgrid.strategy.shellstrategy.Status* attribute), 161
- off (*labgrid.strategy.ubootstrategy.Status* attribute), 161
- off() (*labgrid.driver.dockerdriver.DockerDriver* method), 96
- off() (*labgrid.driver.fake.FakePowerDriver* method), 98
- off() (*labgrid.driver.powerdriver.DigitalOutputPowerDriver* method), 104
- off() (*labgrid.driver.powerdriver.ExternalPowerDriver* method), 103
- off() (*labgrid.driver.powerdriver.ManualPowerDriver* method), 103
- off() (*labgrid.driver.powerdriver.NetworkPowerDriver* method), 104
- off() (*labgrid.driver.powerdriver.PDUDaemonDriver* method), 106
- off() (*labgrid.driver.powerdriver.USBPowerDriver* method), 105
- off() (*labgrid.driver.powerdriver.YKUSHPowerDriver* method), 105
- off() (*labgrid.driver.qemudriver.QEMUDriver* method), 107

<code>off()</code>	(<i>labgrid.driver.sigrokdriver.SigrokPowerDriver method</i>), 112	<i>grid.driver.powerdriver.NetworkPowerDriver method</i>), 104
<code>off()</code>	(<i>labgrid.protocol.powerprotocol.PowerProtocol method</i>), 124	<code>on_activate()</code>
<code>on()</code>	(<i>labgrid.driver.dockerdriver.DockerDriver method</i>), 96	<i>grid.driver.powerdriver.PDUDaemonDriver method</i>), 106
<code>on()</code>	(<i>labgrid.driver.fake.FakePowerDriver method</i>), 98	<code>on_activate()</code>
<code>on()</code>	(<i>labgrid.driver.powerdriver.DigitalOutputPowerDriver method</i>), 104	<i>grid.driver.qemudriver.QEMUDriver method</i>), 107
<code>on()</code>	(<i>labgrid.driver.powerdriver.ExternalPowerDriver method</i>), 103	<code>on_activate()</code>
<code>on()</code>	(<i>labgrid.driver.powerdriver.ManualPowerDriver method</i>), 103	<i>grid.driver.serialdriver.SerialDriver method</i>), 109
<code>on()</code>	(<i>labgrid.driver.powerdriver.NetworkPowerDriver method</i>), 104	<code>on_activate()</code>
<code>on()</code>	(<i>labgrid.driver.powerdriver.PDUDaemonDriver method</i>), 106	<i>grid.driver.shelldriver.ShellDriver method</i>), 110
<code>on()</code>	(<i>labgrid.driver.powerdriver.USBPowerDriver method</i>), 105	<code>on_activate()</code>
<code>on()</code>	(<i>labgrid.driver.powerdriver.YKUSHPowerDriver method</i>), 105	<i>grid.driver.sigrokdriver.SigrokCommon method</i>), 111
<code>on()</code>	(<i>labgrid.driver.qemudriver.QEMUDriver method</i>), 107	<code>on_activate()</code>
<code>on()</code>	(<i>labgrid.driver.sigrokdriver.SigrokPowerDriver method</i>), 112	<i>labgrid.driver.sshdriver.SSHDriver method</i>), 114
<code>on()</code>	(<i>labgrid.protocol.powerprotocol.PowerProtocol method</i>), 124	<code>on_activate()</code>
<code>on_activate()</code>	(<i>labgrid.binding.BindingMixin method</i>), 173	<i>grid.driver.ubootdriver.UBootDriver method</i>), 115
<code>on_activate()</code>	(<i>lab-grid.driver.bareboxdriver.BareboxDriver method</i>), 92	<code>on_activate()</code>
<code>on_activate()</code>	(<i>lab-grid.driver.deditecrelaisdriver.DeditecRelaisDriver method</i>), 95	<i>grid.driver.usbloader.IMXUSBDriver method</i>), 116
<code>on_activate()</code>	(<i>lab-grid.driver.dockerdriver.DockerDriver method</i>), 95	<code>on_activate()</code>
<code>on_activate()</code>	(<i>lab-grid.driver.fastbootdriver.AndroidFastbootDriver method</i>), 99	<i>grid.driver.usbloader.MXSUSBDriver method</i>), 116
<code>on_activate()</code>	(<i>lab-grid.driver.flashromdriver.FlashromDriver method</i>), 100	<code>on_activate()</code>
<code>on_activate()</code>	(<i>lab-grid.driver.gpiodriver.GpioDigitalOutputDriver method</i>), 101	<i>grid.driver.usbloader.RKUSBDriver method</i>), 117
<code>on_activate()</code>	(<i>lab-grid.driver.modbusdriver.ModbusCoilDriver method</i>), 101	<code>on_activate()</code>
<code>on_activate()</code>	(<i>lab-grid.driver.onewiredriver.OneWirePIODriver method</i>), 102	<i>grid.driver.usbstoredriver.USBStorageDriver method</i>), 118
<code>on_activate()</code>	(<i>lab-grid.driver.powerdriver.NetworkPowerDriver method</i>), 104	<code>on_activate()</code>
		<i>grid.driver.usbtmcdriver.USBTMCDriver method</i>), 119
		<code>on_activate()</code>
		<i>grid.driver.xenadriver.XenaDriver method</i>), 120
		<code>on_activate()</code>
		(<i>labgrid.strategy.common.Strategy method</i>), 159
		<code>on_client_bound()</code>
		(<i>labgrid.binding.BindingMixin method</i>), 173
		<code>on_client_bound()</code>
		(<i>lab-grid.driver.bareboxdriver.BareboxDriver method</i>), 92
		<code>on_client_bound()</code>
		(<i>lab-grid.driver.docker.DockerDaemon method</i>), 141
		<code>on_client_bound()</code>
		(<i>lab-grid.strategy.common.Strategy method</i>), 159
		<code>on_deactivate()</code>
		(<i>labgrid.binding.BindingMixin method</i>), 173
		<code>on_deactivate()</code>
		(<i>lab-grid.driver.bareboxdriver.BareboxDriver method</i>), 92

- method), 92
- on_deactivate() (labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver method), 95
- on_deactivate() (labgrid.driver.dockerdriver.DockerDriver method), 96
- on_deactivate() (labgrid.driver.externalconsoledriver.ExternalConsoleDriver method), 97
- on_deactivate() (labgrid.driver.fastbootdriver.AndroidFastbootDriver method), 99
- on_deactivate() (labgrid.driver.flashromdriver.FlashromDriver method), 100
- on_deactivate() (labgrid.driver.gpiodriver.GpioDigitalOutputDriver method), 101
- on_deactivate() (labgrid.driver.modbusdriver.ModbusCoilDriver method), 101
- on_deactivate() (labgrid.driver.onewiredriver.OneWirePIODriver method), 102
- on_deactivate() (labgrid.driver.qemudriver.QEMUDriver method), 107
- on_deactivate() (labgrid.driver.serialdriver.SerialDriver method), 109
- on_deactivate() (labgrid.driver.shelldriver.ShellDriver method), 110
- on_deactivate() (labgrid.driver.sigrokdriver.SigrokCommon method), 111
- on_deactivate() (labgrid.driver.sshdriver.SSHDriver method), 114
- on_deactivate() (labgrid.driver.ubootdriver.UBootDriver method), 115
- on_deactivate() (labgrid.driver.usbloader.IMXUSBDriver method), 117
- on_deactivate() (labgrid.driver.usbloader.MXSUSBDriver method), 116
- on_deactivate() (labgrid.driver.usbloader.RKUSBDriver method), 117
- on_deactivate() (labgrid.driver.usbstoredriver.USBStorageDriver method), 118
- on_deactivate() (labgrid.driver.usbtmcdriver.USBTMCDriver method), 119
- on_deactivate() (labgrid.driver.xenadriver.XenaDriver method), 120
- on_deactivate() (labgrid.strategy.common.Strategy method), 159
- on_poll() (labgrid.resource.docker.DockerDaemon method), 141
- on_resource_added() (labgrid.resource.common.ResourceManager method), 139
- on_resource_added() (labgrid.resource.docker.DockerManager method), 140
- on_resource_added() (labgrid.resource.ethernetport.EthernetPortManager method), 142
- on_resource_added() (labgrid.resource.remote.RemotePlaceManager method), 146
- on_resource_added() (labgrid.resource.udev.UdevManager method), 152
- on_supplier_bound() (labgrid.binding.BindingMixin method), 173
- OneWirePIO (class in labgrid.resource.onewirereport), 145
- OneWirePIODriver (class in labgrid.driver.onewiredriver), 102
- open() (labgrid.driver.externalconsoledriver.ExternalConsoleDriver method), 97
- open() (labgrid.driver.fake.FakeConsoleDriver method), 97
- open() (labgrid.driver.serialdriver.SerialDriver method), 109
- OpenOCDDriver (class in labgrid.driver.openocddriver), 102

P

- params() (labgrid.remote.common.ResourceEntry property), 127
- parent() (labgrid.resource.common.Resource property), 138
- path() (labgrid.resource.udev.DeditecRelais8 property), 157
- path() (labgrid.resource.udev.SigrokUSBSerialDevice property), 156
- path() (labgrid.resource.udev.USBMassStorage property), 153

- `path()` (*labgrid.resource.udev.USBResource* property), 153
- `path()` (*labgrid.resource.udev.USBSDMuxDevice* property), 156
- `path()` (*labgrid.resource.udev.USBTMC* property), 157
- `path()` (*labgrid.resource.udev.USBVideo* property), 157
- `PDUDaemonDriver` (class in *labgrid.driver.powerdriver*), 105
- `PDUDaemonPort` (class in *labgrid.resource.power*), 145
- `Place` (class in *labgrid.remote.common*), 128
- `poll()` (*labgrid.remote.exporter.ResourceExport* method), 132
- `poll()` (*labgrid.resource.common.ManagedResource* method), 140
- `poll()` (*labgrid.resource.common.Resource* method), 139
- `poll()` (*labgrid.resource.common.ResourceManager* method), 139
- `poll()` (*labgrid.resource.docker.DockerManager* method), 140
- `poll()` (*labgrid.resource.ethernetport.EthernetPortManager* method), 142
- `poll()` (*labgrid.resource.remote.RemotePlaceManager* method), 146
- `poll()` (*labgrid.resource.udev.UdevManager* method), 152
- `poll()` (*labgrid.resource.udev.USBSDMuxDevice* method), 156
- `poll_until_success()` (*labgrid.driver.commandmixin.CommandMixin* method), 93
- `poll_until_success()` (*labgrid.protocol.commandprotocol.CommandProtocol* method), 121
- `pop()` (*labgrid.step.Steps* method), 179
- `power_get()` (in module *labgrid.driver.power.apc*), 90
- `power_get()` (in module *labgrid.driver.power.digipower*), 90
- `power_get()` (in module *labgrid.driver.power.gude*), 90
- `power_get()` (in module *labgrid.driver.power.gude24*), 90
- `power_get()` (in module *labgrid.driver.power.gude8316*), 90
- `power_get()` (in module *labgrid.driver.power.netio*), 90
- `power_get()` (in module *labgrid.driver.power.netio_kshell*), 90
- `power_get()` (in module *labgrid.driver.power.sentry*), 91
- `power_get()` (in module *labgrid.driver.power.simplerest*), 91
- `power_set()` (in module *labgrid.driver.power.apc*), 90
- `power_set()` (in module *labgrid.driver.power.digipower*), 90
- `power_set()` (in module *labgrid.driver.power.gude*), 90
- `power_set()` (in module *labgrid.driver.power.gude24*), 90
- `power_set()` (in module *labgrid.driver.power.gude8316*), 90
- `power_set()` (in module *labgrid.driver.power.netio*), 90
- `power_set()` (in module *labgrid.driver.power.netio_kshell*), 90
- `power_set()` (in module *labgrid.driver.power.sentry*), 91
- `power_set()` (in module *labgrid.driver.power.simplerest*), 91
- `PowerProtocol` (class in *labgrid.protocol.powerprotocol*), 124
- `PowerResetMixin` (class in *labgrid.driver.powerdriver*), 103
- `priorities` (*labgrid.driver.powerdriver.PowerResetMixin* attribute), 103
- `priorities` (*labgrid.driver.sshdriver.SSHDriver* attribute), 114
- `ProcessWrapper` (class in *labgrid.util.helper*), 166
- `PtxExpect` (class in *labgrid.util.expect*), 165
- `push()` (*labgrid.step.Steps* method), 179
- `put()` (*labgrid.driver.fake.FakeFileTransferDriver* method), 98
- `put()` (*labgrid.driver.shelldriver.ShellDriver* method), 110
- `put()` (*labgrid.driver.sshdriver.SSHDriver* method), 114
- `put()` (*labgrid.protocol.filetransferprotocol.FileTransferProtocol* method), 123
- `put_bytes()` (*labgrid.driver.shelldriver.ShellDriver* method), 110
- `put_file()` (*labgrid.util.ssh.SSHConnection* method), 169
- `put_ssh_key()` (*labgrid.driver.shelldriver.ShellDriver* method), 110
- `pytest_adoption()` (in module *labgrid.pytestplugin.fixtures*), 125
- `pytest_collection_modifyitems()` (in module *labgrid.pytestplugin.hooks*), 126
- `pytest_configure()` (in module *labgrid.pytestplugin.hooks*), 126
- `pytest_runttest_logreport()` (*labgrid.pytestplugin.reporter.StepReporter* method), 126
- `pytest_runttest_logstart()` (*labgrid.pytestplugin.reporter.StepReporter* method), 126

- method*), 126
- Python Enhancement Proposals
PEP 8, 79
- ## Q
- QEMUDriver (*class in labgrid.driver.qemudriver*), 106
- QMPErrror, 168
- QMPMonitor (*class in labgrid.util.qmp*), 168
- QuartusHPSDriver (*class in labgrid.driver.quartushpsdriver*), 107
- query() (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 119
- ## R
- RawSerialPort (*class in labgrid.resource.serialport*), 151
- read() (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin method*), 94
- read() (*labgrid.protocol.consoleprotocol.ConsoleProtocol method*), 121
- read() (*labgrid.protocol.filesystemprotocol.FileSystemProtocol method*), 122
- read() (*labgrid.protocol.mmioprotocol.MMIOProtocol method*), 124
- read_attr() (*labgrid.resource.udev.USBResource method*), 153
- read_nonblocking() (*labgrid.util.expect.PtxExpect method*), 165
- refresh() (*labgrid.remote.common.Reservation method*), 129
- reg_driver() (*labgrid.factory.TargetFactory method*), 178
- reg_resource() (*labgrid.factory.TargetFactory method*), 178
- register() (*labgrid.util.agent.Agent method*), 163
- register() (*labgrid.util.helper.ProcessWrapper method*), 166
- release() (*labgrid.remote.common.ResourceEntry method*), 127
- release() (*labgrid.remote.exporter.ResourceExport method*), 132
- remaining() (*labgrid.util.timeout.Timeout property*), 171
- RemotePlace (*class in labgrid.resource.remote*), 146
- RemotePlaceManager (*class in labgrid.resource.remote*), 146
- RemoteSession (*class in labgrid.remote.coordinator*), 130
- RemoteUSBResource (*class in labgrid.resource.remote*), 146
- remove_port_forward() (*labgrid.util.ssh.SSHConnection method*), 170
- Reservation (*class in labgrid.remote.common*), 129
- ReservationState (*class in labgrid.remote.common*), 129
- reset() (*labgrid.driver.bareboxdriver.BareboxDriver method*), 92
- reset() (*labgrid.driver.powerdriver.PowerResetMixin method*), 103
- reset() (*labgrid.driver.resetdriver.DigitalOutputResetDriver method*), 108
- reset() (*labgrid.driver.ubootdriver.UBootDriver method*), 115
- reset() (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol method*), 123
- reset() (*labgrid.protocol.resetprotocol.ResetProtocol method*), 124
- ResetProtocol (*class in labgrid.protocol.resetprotocol*), 124
- resolve_conflicts() (*labgrid.binding.BindingMixin method*), 173
- resolve_conflicts() (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin method*), 94
- resolve_conflicts() (*labgrid.strategy.common.Strategy method*), 159
- resolve_path() (*labgrid.config.Config method*), 174
- resolve_path_str_or_list() (*labgrid.config.Config method*), 174
- resolve_templates() (*in module labgrid.util.yaml*), 172
- Resource (*class in labgrid.resource.common*), 138
- ResourceConfig (*class in labgrid.remote.config*), 130
- ResourceEntry (*class in labgrid.remote.common*), 127
- ResourceExport (*class in labgrid.remote.exporter*), 132
- ResourceImport (*class in labgrid.remote.coordinator*), 131
- ResourceManager (*class in labgrid.resource.common*), 139
- ResourceMatch (*class in labgrid.remote.common*), 128
- RKUSBDriver (*class in labgrid.driver.usbloder*), 117
- RKUSBLoader (*class in labgrid.resource.udev*), 154
- rsync() (*labgrid.driver.sshdriver.SSHDriver method*), 114
- run() (*labgrid.autoinstall.main.Handler method*), 89
- run() (*labgrid.driver.bareboxdriver.BareboxDriver method*), 92
- run() (*labgrid.driver.fake.FakeCommandDriver method*), 97
- run() (*labgrid.driver.fastbootdriver.AndroidFastbootDriver method*), 99
- run() (*labgrid.driver.shelldriver.ShellDriver method*), 110

[run\(\)](#) (*labgrid.driver.sshdriver.SSHDriver* method), 114
[run\(\)](#) (*labgrid.driver.ubootdriver.UBootDriver* method), 115
[run\(\)](#) (*labgrid.protocol.commandprotocol.CommandProtocol* method), 121
[run\(\)](#) (*labgrid.resource.suggest.Suggester* method), 152
[run\(\)](#) (*labgrid.util.agent.Agent* method), 163
[run\(\)](#) (*labgrid.util.ssh.SSHConnection* method), 169
[run_check\(\)](#) (*labgrid.driver.commandmixin.CommandMixin* method), 93
[run_check\(\)](#) (*labgrid.driver.fake.FakeCommandDriver* method), 97
[run_check\(\)](#) (*labgrid.protocol.commandprotocol.CommandProtocol* method), 121
[run_check\(\)](#) (*labgrid.util.ssh.SSHConnection* method), 169
[run_once\(\)](#) (*labgrid.autoinstall.main.Handler* method), 89
[run_script\(\)](#) (*labgrid.driver.shelldriver.ShellDriver* method), 111
[run_script_file\(\)](#) (*labgrid.driver.shelldriver.ShellDriver* method), 111

S

[s2b\(\)](#) (*in module labgrid.util.agent*), 163
[s2b\(\)](#) (*in module labgrid.util.agentwrapper*), 163
[schedule\(\)](#) (*in module labgrid.remote.scheduler*), 136
[schedule_overlaps\(\)](#) (*in module labgrid.remote.scheduler*), 136
[schedule_step\(\)](#) (*in module labgrid.remote.scheduler*), 136
[scp\(\)](#) (*labgrid.driver.sshdriver.SSHDriver* method), 114
[select_caps\(\)](#) (*labgrid.driver.usbvideodriver.USBVideoDriver* method), 120
[send\(\)](#) (*labgrid.util.agent.Agent* method), 163
[send\(\)](#) (*labgrid.util.expect.PtxExpect* method), 165
[sendcontrol\(\)](#) (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin* method), 94
[sendcontrol\(\)](#) (*labgrid.protocol.consoleprotocol.ConsoleProtocol* method), 121
[sendline\(\)](#) (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin* method), 94
[sendline\(\)](#) (*labgrid.protocol.consoleprotocol.ConsoleProtocol* method), 121
[SerialDriver](#) (*class in labgrid.driver.serialdriver*), 109
[SerialPort](#) (*class in labgrid.resource.base*), 137
[SerialPortDigitalOutputDriver](#) (*class in labgrid.driver.serialdigitaloutput*), 108
[SerialPortExport](#) (*class in labgrid.remote.exporter*), 132
[ServerError](#), 127
[set\(\)](#) (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver* method), 95
[set\(\)](#) (*labgrid.driver.filedigitaloutput.FileDigitalOutputDriver* method), 100
[set\(\)](#) (*labgrid.driver.gpiodriver.GpioDigitalOutputDriver* method), 101
[set\(\)](#) (*labgrid.driver.modbusdriver.ModbusCoilDriver* method), 101
[set\(\)](#) (*labgrid.driver.onewiredriver.OneWirePIODriver* method), 102
[set\(\)](#) (*labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver* method), 108
[set\(\)](#) (*labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol* method), 122
[set\(\)](#) (*labgrid.util.agents.sysfsgpio.GpioDigitalOutput* method), 162
[set_binding_map\(\)](#) (*labgrid.target.Target* method), 181
[set_current_limit\(\)](#) (*labgrid.driver.sigrokdriver.SigrokPowerDriver* method), 112
[set_mode\(\)](#) (*labgrid.driver.usbsdmuxdriver.USBSDMuxDriver* method), 117
[set_option\(\)](#) (*labgrid.config.Config* method), 175
[set_resource\(\)](#) (*labgrid.remote.coordinator.ExporterSession* method), 131
[set_voltage_target\(\)](#) (*labgrid.driver.sigrokdriver.SigrokPowerDriver* method), 112
[shell](#) (*labgrid.strategy.bareboxstrategy.Status* attribute), 158
[shell](#) (*labgrid.strategy.shellstrategy.Status* attribute), 161
[shell](#) (*labgrid.strategy.ubootstrategy.Status* attribute), 162
[ShellDriver](#) (*class in labgrid.driver.shelldriver*), 109
[ShellStrategy](#) (*class in labgrid.strategy.shellstrategy*), 161
[show\(\)](#) (*labgrid.remote.common.Place* method), 129
[show\(\)](#) (*labgrid.remote.common.Reservation* method), 129
[SigrokCommon](#) (*class in labgrid.driver.sigrokdriver*), 111
[SigrokDevice](#) (*class in labgrid.resource.sigrok*), 151
[SigrokDriver](#) (*class in labgrid.driver.sigrokdriver*), 112
[SigrokPowerDriver](#) (*class in labgrid.driver.sigrokdriver*), 112

- SigrokUSBDevice (class in *labgrid.resource.udev*), 155
- SigrokUSBSerialDevice (class in *labgrid.resource.udev*), 155
- skip() (*labgrid.step.Step* method), 179
- SmallUBootDriver (class in *labgrid.driver.smallubootdriver*), 113
- SNMPEthernetPort (class in *labgrid.resource.ethernetport*), 143
- SNMPSwitch (class in *labgrid.resource.ethernetport*), 141
- SSHConnection (class in *labgrid.util.ssh*), 168
- SSHDriver (class in *labgrid.driver.sshdriver*), 114
- sshfs() (*labgrid.driver.sshdriver.SSHDriver* method), 114
- start() (*labgrid.autoinstall.main.Manager* method), 89
- start() (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* class method), 176
- start() (*labgrid.remote.exporter.ResourceExport* method), 132
- start() (*labgrid.step.Step* method), 179
- start() (*labgrid.stepreporter.StepReporter* class method), 180
- start_session() (in module *labgrid.remote.client*), 127
- StateError, 172
- Status (class in *labgrid.strategy.bareboxstrategy*), 158
- Status (class in *labgrid.strategy.dockerstrategy*), 160
- Status (class in *labgrid.strategy.shellstrategy*), 161
- Status (class in *labgrid.strategy.ubootstrategy*), 161
- status() (*labgrid.step.Step* property), 179
- Step (class in *labgrid.step*), 179
- step() (in module *labgrid.step*), 180
- StepEvent (class in *labgrid.step*), 179
- StepReporter (class in *labgrid.pytestplugin.reporter*), 126
- StepReporter (class in *labgrid.stepreporter*), 180
- Steps (class in *labgrid.step*), 178
- stop() (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* class method), 176
- stop() (*labgrid.driver.sigrokdriver.SigrokDriver* method), 112
- stop() (*labgrid.remote.exporter.ResourceExport* method), 132
- stop() (*labgrid.step.Step* method), 180
- stop() (*labgrid.stepreporter.StepReporter* class method), 180
- Strategy (class in *labgrid.strategy.common*), 159
- strategy() (in module *labgrid.pytestplugin.fixtures*), 126
- StrategyError, 159
- stream() (*labgrid.driver.usbvideodriver.USBVideoDriver* method), 120
- subscribe() (*labgrid.step.Steps* method), 179
- suggest_callback() (*labgrid.resource.suggest.Suggester* method), 152
- suggest_match() (*labgrid.resource.udev.USBResource* method), 152
- Suggester (class in *labgrid.resource.suggest*), 152
- sync_to_resource() (*labgrid.util.managedfile.ManagedFile* method), 167
- SysfsGPIO (class in *labgrid.resource.base*), 138
- ## T
- TagSet (class in *labgrid.remote.scheduler*), 136
- Target (class in *labgrid.target*), 180
- target() (in module *labgrid.pytestplugin.fixtures*), 126
- target_factory (in module *labgrid.factory*), 178
- TargetFactory (class in *labgrid.factory*), 178
- Timeout (class in *labgrid.util.timeout*), 171
- touch() (*labgrid.remote.common.Place* method), 129
- transition() (*labgrid.strategy.bareboxstrategy.BareboxStrategy* method), 159
- transition() (*labgrid.strategy.common.Strategy* method), 159
- transition() (*labgrid.strategy.dockerstrategy.DockerStrategy* method), 160
- transition() (*labgrid.strategy.graphstrategy.GraphStrategy* method), 161
- transition() (*labgrid.strategy.shellstrategy.ShellStrategy* method), 161
- transition() (*labgrid.strategy.ubootstrategy.UBootStrategy* method), 162
- try_match() (*labgrid.resource.udev.USBResource* method), 152
- ## U
- uboot (*labgrid.strategy.ubootstrategy.Status* attribute), 161
- UBootDriver (class in *labgrid.driver.ubootdriver*), 114
- UBootStrategy (class in *labgrid.strategy.ubootstrategy*), 162
- UdevManager (class in *labgrid.resource.udev*), 152
- unknown (*labgrid.strategy.bareboxstrategy.Status* attribute), 158
- unknown (*labgrid.strategy.dockerstrategy.Status* attribute), 160

- unknown (*labgrid.strategy.shellstrategy.Status* attribute), 161
 - unknown (*labgrid.strategy.ubootstrategy.Status* attribute), 161
 - unregister() (*labgrid.util.helper.ProcessWrapper* method), 166
 - unsubscribe() (*labgrid.step.Steps* method), 179
 - UPD (*labgrid.remote.coordinator.Action* attribute), 130
 - update() (*labgrid.remote.common.Place* method), 128
 - update() (*labgrid.remote.common.ResourceEntry* method), 127
 - update() (*labgrid.resource.ethernetport.SNMPSwitch* method), 141
 - update() (*labgrid.resource.udev.USBEthernetInterface* method), 155
 - update() (*labgrid.resource.udev.USBResource* method), 152
 - update() (*labgrid.resource.udev.USBSerialPort* method), 153
 - update_resources() (*labgrid.target.Target* method), 180
 - USBDeitecRelaisExport (class in *labgrid.remote.exporter*), 134
 - USBEthernetExport (class in *labgrid.remote.exporter*), 133
 - USBEthernetInterface (class in *labgrid.resource.udev*), 154
 - USBGenericExport (class in *labgrid.remote.exporter*), 133
 - USBMassStorage (class in *labgrid.resource.udev*), 153
 - USBPowerDriver (class in *labgrid.driver.powerdriver*), 105
 - USBPowerPort (class in *labgrid.resource.udev*), 156
 - USBPowerPortExport (class in *labgrid.remote.exporter*), 134
 - USBResource (class in *labgrid.resource.udev*), 152
 - USBSDMuxDevice (class in *labgrid.resource.udev*), 156
 - USBSDMuxDriver (class in *labgrid.driver.usbsdmuxdriver*), 117
 - USBSDMuxExport (class in *labgrid.remote.exporter*), 134
 - USBSerialPort (class in *labgrid.resource.udev*), 153
 - USBSigrokExport (class in *labgrid.remote.exporter*), 133
 - USBStorageDriver (class in *labgrid.driver.usbstoragedriver*), 118
 - USBTMC (class in *labgrid.resource.udev*), 157
 - USBTMCDriver (class in *labgrid.driver.usbtmcdriver*), 119
 - USBVideo (class in *labgrid.resource.udev*), 157
 - USBVideoDriver (class in *labgrid.driver.usbvideodriver*), 120
 - UserError, 127
- ## V
- vendor_id() (*labgrid.resource.udev.USBResource* property), 153
- ## W
- wait_for() (*labgrid.driver.commandmixin.CommandMixin* method), 93
 - wait_for() (*labgrid.protocol.commandprotocol.CommandProtocol* method), 121
 - waiting (*labgrid.remote.common.ReservationState* attribute), 129
 - write() (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin* method), 94
 - write() (*labgrid.protocol.consoleprotocol.ConsoleProtocol* method), 121
 - write() (*labgrid.protocol.filesystemprotocol.FileSystemProtocol* method), 122
 - write() (*labgrid.protocol.mmioprotocol.MMIOProtocol* method), 124
 - write_image() (*labgrid.driver.usbstoragedriver.USBStorageDriver* method), 118
- ## X
- XenaDriver (class in *labgrid.driver.xenadriver*), 120
 - XenaManager (class in *labgrid.resource.xenamanager*), 157
- ## Y
- yaml_constructors (*labgrid.util.yaml.Loader* attribute), 171
 - yaml_representers (*labgrid.util.yaml.Dumper* attribute), 172
 - YKUSHPowerDriver (class in *labgrid.driver.powerdriver*), 105
 - YKUSHPowerPort (class in *labgrid.resource.ykushpowerport*), 158