
labgrid Documentation

Release 0.4.1

Jan Luebbe, Rouven Czerwinski

Nov 26, 2021

CONTENTS

1 Getting Started	3
1.1 Installation	3
1.2 Running Your First Test	4
1.3 Setting Up the Distributed Infrastructure	5
1.4 udev Matching	8
1.5 Using a Strategy	9
2 Overview	11
2.1 Architecture	11
2.2 Remote Resources and Places	13
3 Usage	17
3.1 Remote Access	17
3.2 Library	19
3.3 pytest Plugin	22
3.4 Command-Line	27
4 Manual Pages	29
4.1 labgrid-client	29
4.2 labgrid-device-config	33
4.3 labgrid-exporter	35
5 Configuration	39
5.1 Resources	39
5.2 Drivers	57
5.3 Strategies	79
5.4 Reporters	81
5.5 Environment Configuration	82
5.6 Exporter Configuration	84
6 Development	87
6.1 Installation	87
6.2 Writing a Driver	87
6.3 Writing a Resource	89
6.4 Writing a Strategy	90
6.5 Tips for Writing and Debugging Tests	91
6.6 Graph Strategies	92
6.7 SSHManager	96
6.8 ManagedFile	97
6.9 ProxyManager	97
6.10 Contributing	97

6.11 Ideas	99
7 Design Decisions	101
7.1 Out of Scope	101
7.2 In Scope	101
7.3 Further Goals	102
8 Changes	103
8.1 Release 0.4.1 (unreleased)	103
8.2 Release 0.4.0 (unreleased)	103
8.3 Release 0.3.0 (released Jan 22, 2021)	104
8.4 Release 0.2.0 (released Jan 4, 2019)	106
8.5 Release 0.1.0 (released May 11, 2017)	110
9 Modules	111
9.1 labgrid package	111
10 Indices and Tables	231
Python Module Index	233
Index	235

labgrid is a embedded board control python library with a focus on testing, development and general automation. It includes a remote control layer to control boards connected to other hosts.

The idea behind labgrid is to create an abstraction of the hardware control layer needed for testing of embedded systems, automatic software installation and automation during development. labgrid itself is *not* a testing framework, but is intended to be combined with [pytest](#) (and additional pytest plugins). Please see [Design Decisions](#) for more background information.

It currently supports:

- pytest plugin to write tests for embedded systems connecting serial console or SSH
- remote client-exporter-coordinator infrastructure to make boards available from different computers on a network
- power/reset management via drivers for power switches or onewire PIOs
- upload of binaries via USB: imxusbloader/mxsusbloader (bootloader) or fastboot (kernel)
- functions to control external services such as emulated USB-Sticks and the [hawkBit](#) deployment service

While labgrid is currently used for daily development on embedded boards and for automated testing, several planned features are not yet implemented and the APIs may be changed as more use-cases appear. We appreciate code contributions and feedback on using labgrid on other environments (see [Contributing](#) for details). Please consider contacting us (via a GitHub issue) before starting larger changes, so we can discuss design trade-offs early and avoid redundant work. You can also look at [Ideas](#) for enhancements which are not yet implemented.

GETTING STARTED

This section of the manual contains introductory tutorials for installing labgrid, running your first test and setting up the distributed infrastructure. For an overview about the basic design and components of *labgrid*, read the [Overview](#) first.

1.1 Installation

Depending on your distribution you need some dependencies. On Debian stretch and buster these usually are:

```
$ apt-get install python3 python3-virtualenv python3-pip python3-setuptools virtualenv
```

In many cases, the easiest way is to install labgrid into a virtualenv:

```
$ virtualenv -p python3 labgrid-venv
$ source labgrid-venv/bin/activate
```

Start installing labgrid by cloning the repository and installing the requirements from the *requirements.txt* file:

```
labgrid-venv $ git clone https://github.com/labgrid-project/labgrid
labgrid-venv $ cd labgrid && pip install -r requirements.txt
labgrid-venv $ python3 setup.py install
```

Note: Previous documentation recommended the installation as via pip (*pip3 install labgrid*). This lead to broken installations due to unexpected incompatibilities with new releases of the dependencies. Consequently we now recommend using pinned versions from the *requirements.txt* file for most use cases.

labgrid also supports the installation as a library via pip, but we only test against library versions specified in the *requirements.txt* file. Thus when installing directly from pip you have to test compatibility yourself.

Note: If you are installing via pip and intend to use Serial over IP (RFC2217), it is highly recommended to uninstall pyserial after installation and replace it with the pyserial version from the labgrid project:

```
$ pip uninstall pyserial
$ pip install https://github.com/labgrid-project/pyserial/archive/v3.4.0.1.
  ↵zip#egg=pyserial
```

This pyserial version has two fixes for an issue we found with Serial over IP multiplexers. Additionally it reduces the Serial over IP traffic considerably since the port is not reconfigured when labgrid changes the timeout (which is done inside the library a lot).

Test your installation by running:

```
labgrid-venv $ labgrid-client --help
usage: labgrid-client [-h] [-x URL] [-c CONFIG] [-p PLACE] [-d] COMMAND ...
...
```

If the help for labgrid-client does not show up, open an [Issue](#). If everything was successful so far, proceed to the next section:

1.1.1 Optional Requirements

labgrid provides optional features which are not included in the default *requirements.txt*. The tested library version for each feature is included in a separate requirements file. An example for snmp support is:

```
labgrid-venv $ pip install -r snmp-requirements.txt
```

Onewire

Onewire support requires the *libow* library with headers, installable on debian via the *libow-dev* package. Use the *onewire-requirements.txt* file to install the correct onewire library version in addition to the normal installation.

SNMP

SNMP support requires additional packages, *pysnmp* and *pysnmpmibs*. They are included in the *snmp-requirements.txt* file.

Modbus

Modbus support requires an additional package *pyModbusTCP*. It is included in the *modbus-requirements.txt* file.

1.2 Running Your First Test

Start by copying the initial example:

```
$ mkdir .../first_test/
$ cp examples/shell/* .../first_test/
$ cd .../first_test/
```

Connect your embedded board (raspberry pi, riotboard, ...) to your computer and adjust the *port* parameter of the *RawSerialPort* resource and *username* and *password* of the *ShellDriver* driver in *local.yaml*:

```
targets:
  main:
    resources:
      RawSerialPort:
        port: "/dev/ttyUSB0"
    drivers:
      ManualPowerDriver:
        name: "example"
      SerialDriver: {}
```

(continues on next page)

(continued from previous page)

```
ShellDriver:
    prompt: 'root@\w+:[^ ]+ '
    login_prompt: ' login: '
    username: 'root'
```

You can check which device name gets assigned to your USB-Serial converter by unplugging the converter, running `dmesg -w` and plugging it back in. Boot up your board (manually) and run your first test:

```
labgrid-venv $ pytest --lg-env local.yaml test_shell.py
```

It should return successfully, in case it does not, open an Issue.

1.3 Setting Up the Distributed Infrastructure

The labgrid *distributed infrastructure* consists of three components:

1. *Coordinator*
2. *Exporter*
3. *Client*

The system needs at least one coordinator and exporter, these can run on the same machine. The client is used to access functionality provided by an exporter. Over the course of this tutorial we will set up a coordinator and exporter, and learn how to access the exporter via the client.

1.3.1 Coordinator

To start the coordinator, we will download the labgrid repository, create an extra virtualenv and install the dependencies via the requirements file.

```
$ sudo apt install libsnappy-dev
$ virtualenv -p python3 crossbar-venv
$ source crossbar-venv/bin/activate
crossbar-venv $ git clone https://github.com/labgrid-project/labgrid
crossbar-venv $ cd labgrid && pip install -r crossbar-requirements.txt
crossbar-venv $ python setup.py install
```

All necessary dependencies should be installed now, we can start the coordinator by running `crossbar start` inside of the repository.

Note: This is possible because the labgrid repository contains the crossbar configuration the coordinator in the `.crossbar` folder. crossbar is a network messaging framework for building distributed applications, which labgrid plugs into.

Note: For long running deployments, you should copy and customize the `.crossbar/config.yaml` file for your use case. This includes setting a different `workdir` and may include changing the running port.

1.3.2 Exporter

The exporter needs a configuration file written in YAML syntax, listing the resources to be exported from the local machine. The config file contains one or more named resource groups. Each group contains one or more resource declarations and optionally a location string (see the [configuration reference](#) for details).

For example, to export a USBSerialPort with ID_SERIAL_SHORT of ID23421JLK, the group name *example-group* and the location *example-location*:

```
example-group:  
  location: example-location  
  USBSerialPort:  
    ID_SERIAL_SHORT: ID23421JLK
```

Note: Use labgrid-suggest to generate the YAML snippets for most exportable resources.

The exporter can now be started by running:

```
labgrid-venv $ labgrid-exporter configuration.yaml
```

Additional groups and resources can be added:

```
example-group:  
  location: example-location  
  USBSerialPort:  
    match:  
      'ID_SERIAL_SHORT': 'P-00-00682'  
      speed: 115200  
  NetworkPowerPort:  
    model: netio  
    host: netiol  
    index: 3  
example-group-2:  
  USBSerialPort:  
    ID_SERIAL_SHORT: KSLAH2341J
```

Restart the exporter to activate the new configuration.

Attention: The *ManagedFile* will create temporary uploads in the exporters /var/cache/labgrid directory. This directory needs to be created manually and should allow write access for users. The /contrib directory in the labgrid-project contains a tmpfiles configuration example to automatically create and clean the directory. It is also highly recommended to enable fs.protected_regular=1 and fs.protected_fifos=1 for kernels >= 4.19, to protect the users from opening files not owned by them in world writeable sticky directories. For more information see [this kernel commit](#).

1.3.3 Client

Finally we can test the client functionality, run:

```
labgrid-venv $ labgrid-client resources  
kiwi/example-group/NetworkPowerPort  
kiwi/example-group/NetworkSerialPort  
kiwi/example-group-2/NetworkSerialPort
```

You can see the available resources listed by the coordinator. The groups *example-group* and *example-group-2* should be available there.

To show more details on the exported resources, use `-v` (or `-vv`):

```
labgrid-venv $ labgrid-client -v resources
Exporter 'kiwi':
  Group 'example-group' (kiwi/example-group/*):
    Resource 'NetworkPowerPort' (kiwi/example-group/NetworkPowerPort[/
    ↵NetworkPowerPort]):
      {'acquired': None,
       'avail': True,
       'cls': 'NetworkPowerPort',
       'params': {'host': 'netio1', 'index': 3, 'model': 'netio'}}}
...
```

You can now add a place with:

```
labgrid-venv $ labgrid-client --place example-place create
```

And add resources to this place (`-p` is short for `--place`):

```
labgrid-venv $ labgrid-client -p example-place add-match */example-group/*
```

Which adds the previously defined resource from the exporter to the place. To interact with this place, it needs to be acquired first, this is done by

```
labgrid-venv $ labgrid-client -p example-place acquire
```

Now we can connect to the serial console:

```
labgrid-venv $ labgrid-client -p example-place console
```

Note: Using remote connection requires `microcom` installed on the host where the `labgrid-client` is called.

See [Remote Access](#) for some more advanced features. For a complete reference have a look at the [`labgrid-client\(1\)`](#) man page.

1.3.4 Systemd files

Labgrid comes with several systemd files in `contrib/systemd`:

- service files for coordinator and exporter
- `tmpfiles.d` file to regularly remove files uploaded to the exporter in `/var/cache/labgrid`
- `sysusers.d` file to create the `labgrid` user and group, enabling members of the `labgrid` group to upload files to the exporter in `/var/cache/labgrid`

Follow these instructions to install the systemd files on your machine(s):

1. Copy the service, `tmpfiles.d` and `sysusers.d` files to the respective installation paths of your distribution.
2. Adapt the `ExecStart` paths of the service files to the respective Python virtual environments of the coordinator and exporter.

3. Create the coordinator configuration file referenced in the ExecStart option of the `systemd-coordinator.service` file by using `.crossbar/config.yaml` as a starting point. You most likely want to make sure that the `workdir` option matches the path given via the `--cbdир` option in the service file; see [Coordinator](#) for further information.
4. Adjust the `SupplementaryGroups` option in the `labgrid-exporter.service` file to your distribution so that the exporter gains read and write access on TTY devices (for `ser2net`); most often, this group is called `dialout` or `tty`.
5. Set the coordinator URL the exporter should connect to by overriding the exporter service file; i.e. execute `systemctl edit labgrid-exporter.service` and add the following snippet:

```
[Service]
Environment="LG_CROSSBAR=ws://<your-host>:<your-port>/ws"
```

6. Create the `labgrid` user and group:

```
# systemd-sysusers
```

7. Reload the system manager configuration:

```
# systemctl daemon-reload
```

8. Start the coordinator, if applicable:

```
# systemctl start labgrid-coordinator
```

9. After creating the exporter configuration file referenced in the ExecStart option of the `systemd-exporter.service` file, start the exporter:

```
# systemctl start labgrid-exporter
```

10. Optionally, for users being able to upload files to the exporter, add them to the `labgrid` group on the exporter machine:

```
# usermod -a -G labgrid <user>
```

1.4 udev Matching

labgrid allows the exporter (or the client-side environment) to match resources via udev rules. The udev resources become available to the test/exporter as soon as they are plugged into the computer, e.g. allowing an exporter to export all USB ports on a specific hub and making a `NetworkSerialPort` available as soon as it is plugged into one of the hub's ports. labgrid also provides a small utility called `labgrid-suggest` which will output the proper YAML formatted snippets for you. The information udev has on a device can be viewed by executing:

```
$ udevadm info /dev/ttyUSB0
...
E: ID_MODEL_FROM_DATABASE=CP210x UART Bridge / myAVR mySmartUSB light
E: ID_MODEL_ID=ea60
E: ID_PATH=pci-0000:00:14.0-usb-0:5:1.0
E: ID_PATH_TAG=pci-0000_00_14_0-usb-0_5_1_0
E: ID_REVISION=0100
E: ID_SERIAL=Silicon_Labs_CP2102_USB_to_UART_Bridge_Controller_P-00-00682
E: ID_SERIAL_SHORT=P-00-00682
```

(continues on next page)

(continued from previous page)

```
E: ID_TYPE=generic
...

```

In this case the device has an `ID_SERIAL_SHORT` key with a unique ID embedded in the USB-serial converter. The resource match configuration for this USB serial converter is:

```
USBSerialPort:
  match:
    'ID_SERIAL_SHORT': 'P-00-00682'
```

This section can now be added under the resource key in an environment configuration or under its own entry in an exporter configuration file.

As the USB bus number can change depending on the kernel driver initialization order, it is better to use the `@ID_PATH` instead of `@sys_name` for USB devices. In the default udev configuration, the path is not available for all USB devices, but that can be changed by creating a udev rules file:

```
SUBSYSTEMS=="usb", IMPORT{builtin}=="path_id"
```

1.5 Using a Strategy

Strategies allow the labgrid library to automatically bring the board into a defined state, e.g. boot through the bootloader into the Linux kernel and log in to a shell. They have a few requirements:

- A driver implementing the `PowerProtocol`, if no controllable infrastructure is available a `ManualPowerDriver` can be used.
- A driver implementing the `LinuxBootProtocol`, usually a specific driver for the board's bootloader
- A driver implementing the `CommandProtocol`, usually a `ShellDriver` with a `SerialDriver` below it.

labgrid ships with two builtin strategies, `BareboxStrategy` and `UBootStrategy`. These can be used as a reference example for simple strategies, more complex tests usually require the implementation of your own strategies.

To use a strategy, add it and its dependencies to your configuration YAML, retrieve it in your test and call the `transition(status)` function.

```
>>> strategy = target.get_driver("Strategy")
>>> strategy.transition("barebox")
```

An example using the pytest plugin is provided under `examples/strategy`.

OVERVIEW

2.1 Architecture

labgrid can be used in several ways:

- on the command line to control individual embedded systems during development (“board farm”)
- via a pytest plugin to automate testing of embedded systems
- as a python library in other programs

In the labgrid library, a controllable embedded system is represented as a *Target*. *Targets* normally have several *Resource* and *Driver* objects, which are used to store the board-specific information and to implement actions on different abstraction levels. For cases where a board needs to be transitioned to specific states (such as *off*, *in bootloader*, *in Linux shell*), a *Strategy* (a special kind of *Driver*) can be added to the *Target*.

While labgrid comes with implementations for some resources, drivers and strategies, custom implementations for these can be registered at runtime. It is expected that for complex use-cases, the user would implement and register a custom *Strategy* and possibly some higher-level *Drivers*.

2.1.1 Resources

Resources are passive and only store the information to access the corresponding part of the *Target*. Typical examples of resources are *RawSerialPort*, *NetworkPowerPort* and *AndroidFastboot*.

An important type of *Resources* are *ManagedResources*. While normal *Resources* are always considered available for use and have fixed properties (such as the /dev/ttyUSB0 device name for a *RawSerialPort*), the *ManagedResources* are used to represent interfaces which are discoverable in some way. They can appear/disappear at runtime and have different properties each time they are discovered. The most common examples of *ManagedResources* are the various USB resources discovered using udev, such as *USBSerialPort*, *IMXUSBLoader* or *AndroidFastboot*.

2.1.2 Drivers and Protocols

A labgrid *Driver* uses one (or more) *Resources* and/or other, lower-level *Drivers* to perform a set of actions on a *Target*. For example, the *NetworkPowerDriver* uses a *NetworkPowerPort* resource to control the *Target*'s power supply. In this case, the actions are “on”, “off”, “cycle” and “get”.

As another example, the *ShellDriver* uses any driver implementing the *ConsoleProtocol* (such as a *SerialDriver*, see below). The *ConsoleProtocol* allows the *ShellDriver* to work with any specific method of accessing the board's console (locally via USB, over the network using a console server or even an external program). At the *ConsoleProtocol* level, characters are sent to and received from the target, but they are not yet interpreted as specific commands or their output.

The *ShellDriver* implements the higher-level *CommandProtocol*, providing actions such as “run” or “run_check”. Internally, it interacts with the Linux shell on the target board. For example, it:

- waits for the login prompt
- enters user name and password
- runs the requested shell command (delimited by marker strings)
- parses the output
- retrieves the exit status

Other drivers, such as the *SSHDriver*, also implement the *CommandProtocol*. This way, higher-level code (such as a test suite), can be independent of the concrete control method on a given board.

2.1.3 Binding and Activation

When a *Target* is configured, each driver is “bound” to the resources (or other drivers) required by it. Each *Driver* class has a “bindings” attribute, which declares which *Resources* or *Protocols* it needs and under which name they should be available to the *Driver* instance. The binding resolution is handled by the *Target* during the initial configuration and results in a directed, acyclic graph of resources and drivers. During the lifetime of a *Target*, the bindings are considered static.

In most non-trivial target configurations, some drivers are mutually exclusive. For example, a *Target* may have both a *ShellDriver* and a *BareboxDriver*. Both bind to a driver implementing the *ConsoleProtocol* and provide the *CommandProtocol*. Obviously, the board cannot be in the bootloader and in Linux at the same time, which is represented in labgrid via the *BindingState* (*bound/active*). If, during activation of a driver, any other driver in its bindings is not active, they will be activated as well.

Activating and deactivating *Drivers* is also used to handle *ManagedResources* becoming available/unavailable at runtime. If some resources bound to by the activating drivers are currently unavailable, the *Target* will wait for them to appear (with a per resource timeout). A realistic sequence of activation might look like this:

- enable power (*PowerProtocol.on*)
- activate the *IMXUSBDriver* driver on the target (this will wait for the *IMXUSBLoader* resource to be available)
- load the bootloader (*BootstrapProtocol.load*)
- activate the *AndroidFastbootDriver* driver on the target (this will wait for the *AndroidFastboot* resource to be available)
- boot the kernel (*AndroidFastbootDriver.boot*)
- activate the *ShellDriver* driver on the target (this will wait for the *USBSerialPort* resource to be available and log in)

Any *ManagedResources* which become unavailable at runtime will automatically deactivate the dependent drivers.

2.1.4 Multiple Drivers and Names

Each driver and resource can have an optional name. This parameter is required for all manual creations of drivers and resources. To manually bind to a specific driver set a binding mapping before creating the driver:

```
>>> t = Target("Test")
>>> SerialPort(t, "First")
SerialPort(target=Target(name='Test', env=None), name='First', state=<BindingState.
˓→bound: 1>, avail=True, port=None, speed=115200)
```

(continues on next page)

(continued from previous page)

```
>>> SerialPort(t, "Second")
SerialPort(target=Target(name='Test', env=None), name='Second', state=<BindingState.
    ↵bound: 1>, avail=True, port=None, speed=115200)
>>> t.set_binding_map({'port': "Second"})
>>> sd = SerialDriver(t, "Driver")
>>> sd
SerialDriver(target=Target(name='Test', env=None), name='Driver', state=<BindingState.
    ↵bound: 1>, txdelay=0.0)
>>> sd.port
SerialPort(target=Target(name='Test', env=None), name='Second', state=<BindingState.
    ↵bound: 1>, avail=True, port=None, speed=115200)
```

2.1.5 Priorities

Each driver supports a `priorities` class variable. This allows drivers which implement the same protocol to add a priority option to each of their protocols. This way a `NetworkPowerDriver` can implement the `ResetProtocol`, but if another `ResetProtocol` driver with a higher protocol is available, it will be selected instead.

Note: Priority resolution only takes place if you have multiple drivers which implement the same protocol and you are not fetching them by name.

The target resolves the driver priority via the Method Resolution Order (MRO) of the driver's base classes. If a base class has a `priorities` dictionary which contains the requested Protocol as a key, that priority is used. Otherwise, 0 is returned as the default priority.

To set the priority of a protocol for a driver, add a class variable with the name `priorities`, e.g.

```
@attr.s
class NetworkPowerDriver(Driver, PowerProtocol, ResetProtocol):
    priorities: {PowerProtocol: -10}
```

2.1.6 Strategies

Especially when using labgrid from pytest, explicitly controlling the board's boot process can distract from the individual test case. Each `Strategy` implements the board- or project-specific actions necessary to transition from one state to another. labgrid includes the `BareboxStrategy` and the `UBootStrategy`, which can be used as-is for simple cases or serve as an example for implementing a custom strategy.

`Strategies` themselves are not activated/deactivated. Instead, they control the states of the other drivers explicitly and execute actions to bring the target into the requested state.

See the strategy example (`examples/strategy`) and the included strategies in `labgrid/strategy` for some more information.

For more information on the reasons behind labgrid's architecture, see `Design Decisions`.

2.2 Remote Resources and Places

labgrid contains components for accessing resources which are not directly accessible on the local machine. The main parts of this are:

labgrid-coordinator (crossbar component) Clients and exporters connect to the coordinator to publish resources, manage place configuration and handle mutual exclusion.

labgrid-exporter (CLI) Exports explicitly configured local resources to the coordinator and monitors these for changes in availability or parameters.

labgrid-client (CLI) Configures places (consisting of exported resources) and allows command line access to some actions (such as power control, bootstrap, fastboot and the console).

RemotePlace (managed resource) When used in a *Target*, the RemotePlace expands to the resources configured for the named places.

These components communicate over the [WAMP](#) implementation [Autobahn](#) and the [Crossbar](#) WAMP router.

The following sections describe the responsibilities of each component. See [Remote Access](#) for usage information.

2.2.1 Coordinator

The *Coordinator* is implemented as a Crossbar component and is started by the router. It provides separate RPC methods for the exporters and clients.

The coordinator keeps a list of all resources for clients and notifies them of changes as they occur. The resource access from clients does not pass through the coordinator, but is instead done directly from client to exporter, avoiding the need to specify new interfaces for each resource type.

The coordinator also manages the registry of “places”. These are used to configure which resources belong together from the user’s point of view. A *place* can be a generic rack location, where different boards are connected to a static set of interfaces (resources such as power, network, serial console, …).

Alternatively, a *place* can also be created for a specific board, for example when special interfaces such as GPIO buttons need to be controlled and they are not available in the generic locations.

Each place can have aliases to simplify accessing a specific board (which might be moved between generic places). It also has a comment, which is used to store a short description of the connected board.

To support selecting a specific place from a group containing similar or identical hardware, key-value tags can be added to places and used for scheduling.

Finally, a place is configured with one or more *resource matches*. A resource match pattern has the format `<exporter>/<group>/<class>/<name>`, where each component may be replaced with the wildcard `*`. The `/<name>` part is optional and can be left out to match all resources of a class.

Some commonly used match patterns are:

/1001/ Matches all resources in groups named 1001 from all exporters.

***/1001/NetworkPowerPort** Matches only the NetworkPowerPort resource in groups named 1001 from all exporters. This is useful to exclude a NetworkSerialPort in group 1001 in cases where the serial console is connected somewhere else (such as via USB on a different exporter).

exporter1/hub1-port1/* Matches all resources exported from exporter1 in the group hub1-port1. This is an easy way to match several USB resources related to the same board (such as a USB ROM-Loader interface, Android fastboot and a USB serial gadget in Linux).

To avoid conflicting access to the same resources, a place must be *acquired* before it is used and the coordinator also keeps track of which user on which client host has currently acquired the place. The resource matches are only evaluated while a place is being acquired and cannot be changed until it is *released* again.

2.2.2 Exporter

An exporter registers all its configured resources when it connects to the router and updates the resource parameters when they change (such as (dis-)connection of USB devices). Internally, the exporter uses the normal [Resource](#) (and [ManagedResource](#)) classes as the rest of labgrid. By using [ManagedResources](#), availability and parameters for resources such as USB serial ports are tracked and sent to the coordinator.

For some specific resources (such as [USBSerialPorts](#)), the exporter uses external tools to allow access by clients (`ser2net` in the serial port case).

Resources which do not need explicit support in the exporter, are just published as declared in the configuration file. This is useful to register externally configured resources such as network power switches or serial port servers with a labgrid coordinator.

2.2.3 Client

The client requests the current lists of resources and places from the coordinator when it connects to it and then registers for change events. Most of its functionality is exposed via the [labgrid-client](#) CLI tool. It is also used by the [RemotePlace](#) resource (see below).

Besides viewing the list of *resources*, the client is used to configure and access *places* on the coordinator. For more information on using the CLI, see the manual page for [labgrid-client](#).

2.2.4 RemotePlace

To use the resources configured for a *place* to control the corresponding board (whether in pytest or directly with the labgrid library), the [RemotePlace](#) resource should be used. When a *RemotePlace* is configured for a *Target*, it will create a client connection to the coordinator, create additional resource objects for those configured for that place and keep them updated at runtime.

The additional resource objects can be bound to by drivers as normal and the drivers do not need to be aware that they were provided by the coordinator. For resource types which do not have an existing, network-transparent protocol (such as USB ROM loaders or JTAG interfaces), the driver needs to be aware of the mapping done by the exporter.

For generic USB resources, the exporter for example maps a [AndroidFastboot](#) resource to a [NetworkAndroidFastboot](#) resource and adds a hostname property which needs to be used by the client to connect to the exporter. To avoid the need for additional remote access protocols and authentication, labgrid currently expects that the hosts are accessible via SSH and that any file names refer to a shared filesystem (such as NFS or SMB).

Note: Using SSH's session sharing (`ControlMaster auto, ControlPersist, ...`) makes *RemotePlaces* easy to use even for exporters with require passwords or more complex login procedures.

For exporters which are not directly accessible via SSH, add the host to your `.ssh/config` file, with a `ProxyCommand` when need.

2.2.5 Proxy Mechanism

Both client and exporter support the proxy mechanism which uses SSH to tunnel connections to a remote host. To enable and force proxy mode on the exporter use the `-i` or `--isolated` command line option. This indicates to clients that all connections to remote resources made available by this exporter need to be tunneled using a SSH connection.

On the other hand, clients may need to access the remote coordinator infrastrucure using a SSH tunnel. In this case the `LG_PROXY` environment variable needs to be set to the remote host which should tunnel the connection to the coordinator. The client then forwards all network traffic - client-to-coordinator and client-to-exporter - through SSH, via their respective proxies. This means that with `LG_PROXY` and `LG_CROSSBAR` labgrid can be used fully remotely with only a SSH connection as a requirement.

Note: Labgrid prefers to connect to an exporter-defined proxy over using the `LG_PROXY` variable. This means that a correct entry for the exporter needs to be set up in the `~/.ssh/config` file. You can view exporter proxies with `labgrid-client -v resources`.

One remaining issue here is the forward of UDP connections, which is currently not possible. UDP connections are used by some of the power backends in the form of SNMP.

3.1 Remote Access

As described in [Remote Resources and Places](#), one of labgrid's main features is granting access to boards connected to other hosts transparent for the client. To get started with remote access, take a look at [Setting Up the Distributed Infrastructure](#).

3.1.1 Place Scheduling

When sharing places between developers or with CI jobs, it soon becomes necessary to manage who can access which places. Developers often just need any place which has one of a group of identical devices, while CI jobs should wait until the necessary place is free instead of failing.

To support these use-cases, the coordinator has support for reserving places by using a tag filter and an optional priority. First, the places have to be tagged with the relevant key-value pairs:

```
$ labgrid-client -p board-1 set-tags board=imx6-foo
$ labgrid-client -p board-2 set-tags board=imx6-foo
$ labgrid-client -p board-3 set-tags board=imx8m-bar
$ labgrid-client -v places
Place 'board-1':
tags: bar=baz, board=imx6-foo, jlu=2, rcz=1
matches:
  rl-test/Testport1/NetworkSerialPort
...
Place 'board-2':
tags: board=imx6-foo
matches:
  rl-test/Testport2/NetworkSerialPort
...
Place 'board-3':
tags: board=imx8m-bar
matches:
  rl-test/Testport3/NetworkSerialPort
...
```

Now, if you want to access any `imx6-foo` board, you could find that all are already in use by someone else:

```
$ labgrid-client who
User      Host      Place      Changed
rcz      dude      board-1    2019-08-06 12:14:38.446201
jenkins  worker1   board-2    2019-08-06 12:52:44.762131
```

In this case, you can create a reservation. You can specify any custom tags as part of the filter, as well as name=<place-name> to select only a specific place (even if it has no custom tags).

```
$ labgrid-client reserve board=imx6-foo
Reservation 'SP37P5OQRU':
  owner: rettich/jlu
  token: SP37P5OQRU
  state: waiting
  filters:
    main: board=imx6-foo
  created: 2019-08-06 12:56:49.779982
  timeout: 2019-08-06 12:57:49.779983
```

As soon as any matching place becomes free, the reservation state will change from `waiting` to `allocated`. Then, you can use the reservation token prefixed by `+` to refer to the allocated place for locking and usage. While a place is allocated for a reservation, only the owner of the reservation can lock that place.

```
$ labgrid-client wait SP37P5OQRU
owner: rettich/jlu
token: SP37P5OQRU
state: waiting
filters:
  main: board=imx6-foo
created: 2019-08-06 12:56:49.779982
timeout: 2019-08-06 12:58:14.900621
...
owner: rettich/jlu
token: SP37P5OQRU
state: allocated
filters:
  main: board=imx6-foo
allocations:
  main: board-2
created: 2019-08-06 12:56:49.779982
timeout: 2019-08-06 12:58:46.145851
$ labgrid-client -p +SP37P5OQRU lock
acquired place board-2
$ labgrid-client reservations
Reservation 'SP37P5OQRU':
  owner: rettich/jlu
  token: SP37P5OQRU
  state: acquired
  filters:
    main: board=imx6-foo
  allocations:
    main: board-2
  created: 2019-08-06 12:56:49.779982
  timeout: 2019-08-06 12:59:11.840780
$ labgrid-client -p +SP37P5OQRU console
```

When using reservation in a CI job or to save some typing, the `labgrid-client reserve` command supports a `--shell` command to print code for evaluating in the shell. This sets the `LG_TOKEN` environment variable, which is then automatically used by `wait` and expanded via `-p +`.

```
$ eval `labgrid-client reserve --shell board=imx6-foo`
$ echo $LG_TOKEN
ZDMZJZNLF
$ labgrid-client wait
```

(continues on next page)

(continued from previous page)

```

owner: rettich/jlu
token: ZDMZJZNLF
state: waiting
filters:
    main: board=imx6-foo
created: 2019-08-06 13:05:30.987072
timeout: 2019-08-06 13:06:44.629736
...
owner: rettich/jlu
token: ZDMZJZNLF
state: allocated
filters:
    main: board=imx6-foo
allocations:
    main: board-1
created: 2019-08-06 13:05:30.987072
timeout: 2019-08-06 13:06:56.196684
$ labgrid-client -p + lock
acquired place board-1
$ labgrid-client -p + show
Place 'board-1':
tags: bar=baz, board=imx6-foo, jlu=2, rcz=1
matches:
    rettich/Testport1/NetworkSerialPort
acquired: rettich/jlu
acquired resources:
created: 2019-07-29 16:11:52.006269
changed: 2019-08-06 13:06:09.667682
reservation: ZDMZJZNLF

```

Finally, to avoid calling the `wait` command explicitly, you can add `--wait` to the `reserve` command, so it waits until the reservation is allocated before returning.

A reservation will time out after a short time, if it is neither refreshed nor used by locked places.

3.2 Library

labgrid can be used directly as a Python library, without the infrastructure provided by the pytest plugin.

The labgrid library provides two ways to configure targets with resources and drivers: either create the `Target` directly or use `Environment` to load a configuration file.

Note: On exit of your script/application, labgrid will call `cleanup()` on the targets using the python `atexit` module.

3.2.1 Targets

Note: In most cases it is easier to *use a complete environment from a YAML file* instead of manually creating and activating objects. Nevertheless, we explain this in the following to clarify the underlying concepts, and how to work with targets on a lower level, e.g. in strategies.

At the lower level, a `Target` can be created directly:

```
>>> from labgrid import Target
>>> t = Target('example')
```

Next, any required *Resource* objects can be created, which each represent a piece of hardware to be used with labgrid:

```
>>> from labgrid.resource import RawSerialPort
>>> rsp = RawSerialPort(t, name=None, port='/dev/ttyUSB0')
```

Note: Since we support multiple drivers of the same type, resources and drivers have a required name attribute. If you don't use multiple drivers of the same type, you can set the name to None.

Further on, a *Driver* encapsulates logic how to work with resources. Drivers need to be created on the *Target*:

```
>>> from labgrid.driver import SerialDriver
>>> sd = SerialDriver(t, name=None)
```

As the *SerialDriver* declares a binding to a *SerialPort*, the target binds it to the resource object created above:

```
>>> sd.port
RawSerialPort(target=Target(name='example', env=None), name=None, state=<BindingState.
    ↪bound: 1>, avail=True, port='/dev/ttyUSB0', speed=115200)
>>> sd.port is rsp
True
```

Driver Activation

Before a bound driver can be used, it needs to be activated. During activation, the driver makes sure that all hardware represented by the resources it is bound to can be used, and, if necessary, it acquires the underlying hardware on the OS level. For example, activating a *SerialDriver* makes sure that the hardware represented by its bound *RawSerialPort* object (e.g. something like `/dev/ttyUSB0`) is available, and that it can only be used labgrid and not by other applications while the *SerialDriver* is activated.

If we use a car analogy here, binding is the process of screwing the car parts together, and activation is igniting the engine.

After activation, we can use the driver to do our work:

```
>>> t.activate(sd)
>>> sd.write(b'test')
```

If an underlying hardware resource is not available (or not available after a certain timeout, depending on the driver), the activation step will raise an exception, e.g.:

```
>>> t.activate(sd)
Traceback (most recent call last):
  File "/usr/lib/python3.8/site-packages/serial/serialposix.py", line 288, in open
    self.fd = os.open(self.portstr, os.O_RDWR | os.O_NOCTTY | os.O_NONBLOCK)
FileNotFoundError: [Errno 2] No such file or directory: '/dev/ttyUSB0'
```

Active drivers can be accessed by class (any *Driver* or *Protocol*) using some syntactic sugar:

```
>>> target = Target('main')
>>> console = FakeConsoleDriver(target, 'console')
>>> target.activate(console)
>>> target[FakeConsoleDriver]
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
>>> target[FakeConsoleDriver, 'console']
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
```

Driver Deactivation

Driver deactivation works in a similar manner:

```
>>> t.deactivate(sd)
```

Drivers need to be deactivated in the following cases:

- Some drivers have internal logic depending on the state of the target. For example, the `ShellDriver` remembers whether it has already logged in to the shell. If the target reboots, e.g. through a hardware watchdog timeout, a power cycle, or by issuing a `reboot` command on the shell, the `ShellDriver`'s internal state becomes outdated, and the `ShellDriver` needs to be deactivated and re-activated.
- One of the driver's bound resources is required by another driver which is to be activated. For example, the `ShellDriver` and the `BareboxDriver` both require access to a `SerialPort` resource. If both drivers are bound to the same resource object, labgrid will automatically deactivate the `BareboxDriver` when activating the `ShellDriver`.

Target Cleanup

After you are done with the target, optionally call the `cleanup` method on your target. While labgrid registers an `atexit` handler to cleanup targets, this has the advantage that exceptions can be handled by your application:

```
>>> try:
>>>     target.cleanup()
>>> except Exception as e:
>>>     <your code here>
```

3.2.2 Environments

In practice, it is often useful to separate the `Target` configuration from the code which needs to control the board (such as a test case or installation script). For this use-case, labgrid can construct targets from a configuration file in YAML format:

```
targets:
  example:
    resources:
      RawSerialPort:
        port: '/dev/ttyUSB0'
    drivers:
      SerialDriver: {}
```

To parse this configuration file, use the `Environment` class:

```
>>> from labgrid import Environment
>>> env = Environment('example-env.yaml')
```

Using `Environment.get_target`, the configured *Targets* can be retrieved by name. Without an argument, `get_target` would default to ‘main’:

```
>>> t = env.get_target('example')
```

To access the target’s console, the correct driver object can be found by using `Target.get_driver`:

```
>>> cp = t.get_driver('ConsoleProtocol')
>>> cp
SerialDriver(target=Target(name='example', env=Environment(config_file='example.yaml
˓→')), name=None, state=<BindingState.active: 2>, txdelay=0.0)
>>> cp.write(b'test')
```

When using the `get_driver` method, the driver is automatically activated. The driver activation will also wait for unavailable resources when needed.

For more information on the environment configuration files and the usage of multiple drivers, see *Environment Configuration*.

3.3 pytest Plugin

labgrid includes a `pytest` plugin to simplify writing tests which involve embedded boards. The plugin is configured by providing an environment config file (via the `-lg-env` `pytest` option, or the `LG_ENV` environment variable) and automatically creates the targets described in the environment.

These `pytest fixtures` are provided:

env (session scope) Used to access the `Environment` object created from the configuration file. This is mostly used for defining custom fixtures at the test suite level.

target (session scope) Used to access the ‘main’ `Target` defined in the configuration file.

strategy (session scope) Used to access the `Strategy` configured in the ‘main’ `Target`.

3.3.1 Command-Line Options

The `pytest` plugin also supports the `verbosity` argument of `pytest`:

- `-vv`: activates the step reporting feature, showing function parameters and/or results
- `-vvv`: activates debug logging

This allows debugging during the writing of tests and inspection during test runs.

Other labgrid-related `pytest` plugin options are:

--lg-env=LG_ENV (was --env-config=ENV_CONFIG) Specify a labgrid environment config file. This is equivalent to labgrid-client’s `-c/--config`.

--lg-coordinator=CROSSBAR_URL Specify labgrid coordinator websocket URL. Defaults to `ws://127.0.0.1:20408/ws`. This is equivalent to labgrid-client’s `-x/--crossbar`.

--lg-log=[path to logfiles] Path to store console log file. If option is specified without path the current working directory is used.

--lg-colored-steps Enables the ColoredStepReporter. Different events have different colors. The more colorful, the more important. In order to make less important output “blend into the background” different color schemes are available. See [LG_COLOR_SCHEME](#).

pytest --help shows these options in a separate *labgrid* section.

3.3.2 Environment Variables

LG_ENV

Behaves like LG_ENV for *labgrid-client*.

LG_COLOR_SCHEME

Influences the color scheme used for the Colored Step Reporter. dark is meant for dark terminal background. light is optimized for light terminal background. dark-256color and light-256color are respective variants for terminals that support 256 colors. By default, dark or dark-256color (depending on the terminal) are used.

Takes effect only when used with --lg-colored-steps.

LG_PROXY

Specifies a SSH proxy host to be used for port forwards to access the coordinator. Network resources made available by the exporter will prefer their own proxy, and only fallback to LG_PROXY.

See also [Proxy Mechanism](#).

3.3.3 Simple Example

As a minimal example, we have a target connected via a USB serial converter ('/dev/ttyUSB0') and booted to the Linux shell. The following environment config file (`shell-example.yaml`) describes how to access this board:

```
targets:
  main:
    resources:
      RawSerialPort:
        port: '/dev/ttyUSB0'
    drivers:
      SerialDriver: {}
      ShellDriver:
        prompt: 'root@\w+:[^ ]+ '
        login_prompt: ' login: '
        username: 'root'
```

We then add the following test in a file called `test_example.py`:

```
def test_echo(target):
    command = target.get_driver('CommandProtocol')
    result = command.run_check('echo OK')
    assert 'OK' in result
```

To run this test, we simply execute pytest in the same directory with the environment config:

```
$ pytest --lg-env shell-example.yaml --verbose
=====
platform linux -- Python 3.5.3, pytest-3.0.6, py-1.4.32, pluggy-0.4.0
...
collected 1 items

test_example.py::test_echo PASSED
=====
1 passed in 0.51 seconds =====
```

pytest has automatically found the test case and executed it on the target.

3.3.4 Custom Fixture Example

When writing many test cases which use the same driver, we can get rid of some common code by wrapping the *CommandProtocol* in a fixture. As pytest always executes the `conftest.py` file in the test suite directory, we can define additional fixtures there:

```
import pytest

@pytest.fixture(scope='session')
def command(target):
    return target.get_driver('CommandProtocol')
```

With this fixture, we can simplify the `test_example.py` file to:

```
def test_echo(command):
    result = command.run_check('echo OK')
    assert 'OK' in result
```

3.3.5 Strategy Fixture Example

When using a *Strategy* to transition the target between states, it is useful to define a function scope fixture per state in `conftest.py`:

```
import pytest

@pytest.fixture(scope='function')
def switch_off(target, strategy, capsys):
    with capsys.disabled():
        strategy.transition('off')

@pytest.fixture(scope='function')
def bootloader_command(target, strategy, capsys):
    with capsys.disabled():
        strategy.transition('barebox')
    return target.get_active_driver('CommandProtocol')

@pytest.fixture(scope='function')
def shell_command(target, strategy, capsys):
    with capsys.disabled():
        strategy.transition('shell')
    return target.get_active_driver('CommandProtocol')
```

Note: The `capsys.disabled()` context manager is only needed when using the `ManualPowerDriver`, as it will not be able to access the console otherwise. See the corresponding `pytest` documentation for details.

With the fixtures defined above, switching between bootloader and Linux shells is easy:

```
def test_barebox_initial(bootloader_command):
    stdout = bootloader_command.run_check('version')
    assert 'barebox' in '\n'.join(stdout)

def test_shell(shell_command):
    stdout = shell_command.run_check('cat /proc/version')
    assert 'Linux' in stdout[0]

def test_barebox_after_reboot(bootloader_command):
    bootloader_command.run_check('true')
```

Note: The `bootloader_command` and `shell_command` fixtures use `Target.get_active_driver` to get the currently active `CommandProtocol` driver (either `BareboxDriver` or `ShellDriver`). Activation and deactivation of drivers is handled by the `BareboxStrategy` in this example.

The `Strategy` needs additional drivers to control the target. Adapt the following environment config file (`strategy-example.yaml`) to your setup:

```
targets:
  main:
    resources:
      RawSerialPort:
        port: '/dev/ttyUSB0'
    drivers:
      ManualPowerDriver:
        name: 'example-board'
      SerialDriver: {}
      BareboxDriver:
        prompt: 'barebox@[^\n]+:[^\n]+\n'
      ShellDriver:
        prompt: 'root@\w+:[^\n]+\n'
        login_prompt: ' login: '
        username: 'root'
      BareboxStrategy: {}
```

For this example, you should get a report similar to this:

```
$ pytest --lg-env strategy-example.yaml -v
=====
test session starts =====
platform linux -- Python 3.5.3, pytest-3.0.6, py-1.4.32, pluggy-0.4.0
...
collected 3 items

test_strategy.py::test_barebox_initial
main: CYCLE the target example-board and press enter
PASSED
test_strategy.py::test_shell PASSED
test_strategy.py::test_barebox_after_reboot
main: CYCLE the target example-board and press enter
```

(continues on next page)

(continued from previous page)

```
PASSED
```

```
===== 3 passed in 29.77 seconds =====
```

3.3.6 Feature Flags

labgrid includes support for feature flags on a global and target scope. Adding a `@pytest.mark.lg_feature` decorator to a test ensures it is only executed if the desired feature is available:

```
import pytest

@pytest.mark.lg_feature("camera")
def test_camera(target):
    [...]
```

Here's an example environment configuration:

```
targets:
  main:
    features:
      - camera
    resources: {}
    drivers: {}
```

This would run the above test, however the following configuration would skip the test because of the missing feature:

```
targets:
  main:
    features:
      - console
    resources: {}
    drivers: {}
```

pytest will record the missing feature as the skip reason.

For tests with multiple required features, pass them as a list to pytest:

```
import pytest

@pytest.mark.lg_feature(["camera", "console"])
def test_camera(target):
    [...]
```

Features do not have to be set per target, they can also be set via the global features key:

```
features:
  - camera
targets:
  main:
    features:
      - console
    resources: {}
    drivers: {}
```

This YAML configuration would combine both the global and the target features.

3.3.7 Test Reports

pytest-html

With the [pytest-html plugin](#), the test results can be converted directly to a single-page HTML report:

```
$ pip install pytest-html
$ pytest --lg-env shell-example.yaml --html=report.html
```

JUnit XML

JUnit XML reports can be generated directly by pytest and are especially useful for use in CI systems such as Jenkins with the [JUnit Plugin](#).

They can also be converted to other formats, such as HTML with [junit2html tool](#):

```
$ pip install junit2html
$ pytest --lg-env shell-example.yaml --junit-xml=report.xml
$ junit2html report.xml
```

labgrid adds additional xml properties to a test run, these are:

- ENV_CONFIG: Name of the configuration file
- TARGETS: List of target names
- TARGET_{NAME}_REMOTE: optional, if the target uses a RemotePlace resource, its name is recorded here
- PATH_{NAME}: optional, labgrid records the name and path
- PATH_{NAME}_GIT_COMMIT: optional, labgrid tries to record git sha1 values for every path
- IMAGE_{NAME}: optional, labgrid records the name and path to the image
- IMAGE_{NAME}_GIT_COMMIT: optional, labgrid tries to record git sha1 values for every image

3.4 Command-Line

labgrid contains some command line tools which are used for remote access to resources. See [labgrid-client](#), [labgrid-device-config](#) and [labgrid-exporter](#) for more information.

MANUAL PAGES

4.1 labgrid-client

4.1.1 labgrid-client interface to control boards

Author Rouven Czerwinski <r.czerwinski@pengutronix.de>

organization Labgrid-Project

Date 2017-04-15

Copyright Copyright (C) 2016-2017 Pengutronix. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

Version 0.0.1

Manual section 1

Manual group embedded testing

SYNOPSIS

```
labgrid-client --help
labgrid-client -p <place> <command>
labgrid-client places|resources
```

DESCRIPTION

Labgrid is a scalable infrastructure and test architecture for embedded (linux) systems.

This is the client to control a boards status and interface with it on remote machines.

OPTIONS

- h, --help** display command line help
- p PLACE, --place PLACE** specify the place to operate on
- x, --crossbar-url** the crossbar url of the coordinator, defaults to ws://127.0.0.1:20408/ws
- c CONFIG, --config CONFIG** set the configuration file

-s STATE, --state STATE set an initial state before executing a command, requires a configuration file and strategy

-d, --debug enable debugging

-v, --verbose increase verbosity

-P PROXY, --proxy PROXY proxy connections over ssh

CONFIGURATION FILE

The configuration file follows the description in `labgrid-device-config(5)`.

ENVIRONMENT VARIABLES

Various labgrid-client commands use the following environment variable:

LG_PLACE

This variable can be used to specify a place without using the `-p` option, the `-p` option overrides it.

LG_TOKEN

This variable can be used to specify a reservation for the `wait` command and for the `+` place expansion.

LG_STATE

This variable can be used to specify a state which the device transitions into before executing a command. Requires a configuration file and a Strategy specified for the device.

LG_ENV

This variable can be used to specify the configuration file to use without using the `--config` option, the `--config` option overrides it.

LG_CROSSBAR

This variable can be used to set the default crossbar URL (instead of using the `-x` option).

LG_CROSSBAR_REALM

This variable can be used to set the default crossbar realm to use instead of `realm1`.

LG_PROXY

This variable can be used to specify a SSH proxy hostname which should be used to connect to the coordinator and any resources which are normally accessed directly.

LG_HOSTNAME

Override the hostname used when accessing a resource. Typically only useful for CI pipelines where the hostname may not be consistent between pipeline stages.

LG_USERNAME

Override the username used when accessing a resource. Typically only useful for CI pipelines where the username may not be consistent between pipeline stages.

MATCHES

Match patterns are used to assign a resource to a specific place. The format is: exporter/group/cls/name, exporter is the name of the exporting machine, group is a name defined within the exporter, cls is the class of the exported resource and name is its name. Wild cards in match patterns are explicitly allowed, * matches anything.

LABGRID-CLIENT COMMANDS

```
monitor Monitor events from the coordinator
resources (r) List available resources
places (p) List available places
who List acquired places by user
show Show a place and related resources
create Add a new place (name supplied by -p parameter)
delete Delete an existing place
add-alias alias Add an alias to a place
del-alias alias Delete an alias from a place
set-comment comment Update or set the place comment
set-tags comment Set place tags (key=value)
add-match match Add one (or multiple) match pattern(s) to a place, see MATCHES
del-match match Delete one (or multiple) match pattern(s) from a place, see MATCHES
add-named-match match name Add one match pattern with a name to a place
acquire (lock) Acquire a place
allow user Allow another user to access a place
release (unlock) Release a place
env Generate a labgrid environment file for a place
power (pw) action Change (or get) a place's power status, where action is one of get, on, off, status
io action Interact with GPIO (OneWire, relays, ...) devices, where action is one of high, low, get
console (con) Connect to the console
fastboot arg Run fastboot with argument
```

bootstrap filename Start a bootloader
sd-mux action Switch USB SD Muxer, where action is one of dut (device-under-test), host, off
ssh Connect via SSH
scp Transfer file via scp (use ‘:dir/file’ for the remote side)
rsync Transfer files via rsync (use ‘:dir/file’ for the remote side)
sshfs Mount a remote path via sshfs
telnet Connect via telnet
video Start a video stream
tmc command Control a USB TMC device
write-image Write images onto block devices (USBSDMux, USB Sticks, …)
reserve filter Create a reservation
cancel-reservation token Cancel a pending reservation
wait token Wait for a reservation to be allocated
reservations List current reservations

ADDING NAMED RESOURCES

If a target contains multiple Resources of the same type, named matches need to be used to address the individual resources. In addition to the *match* taken by *add-match*, *add-named-match* also takes a name for the resource. The other client commands support the name as an optional parameter and will inform the user that a name is required if multiple resources are found, but no name is given.

EXAMPLES

To retrieve a list of places run:

```
$ labgrid-client places
```

To access a place, it needs to be acquired first, this can be done by running the `acquire` command and passing the placename as a -p parameter:

```
$ labgrid-client -p <placename> acquire
```

Open a console to the acquired place:

```
$ labgrid-client -p <placename> console
```

Add all resources with the group “example-group” to the place example-place:

```
$ labgrid-client -p example-place add-match */example-group/*/*
```

SEE ALSO

`labgrid-exporter(1)`

4.2 labgrid-device-config

4.2.1 labgrid test configuration files

Author Rouven Czerwinski <r.czerwinski@pengutronix.de>

organization Labgrid-Project

Date 2017-04-15

Copyright Copyright (C) 2016-2017 Pengutronix. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

Version 0.0.1

Manual section 5

Manual group embedded testing

SYNOPSIS

*.yaml

DESCRIPTION

To integrate a device into a labgrid test, labgrid needs to have a description of the device and how to access it.

This manual page is divided into section, each describing one top-level yaml key.

TARGETS

The `targets`: top key configures a target, it's drivers and resources.

The top level key is the name of the target, it needs both a `resources` and `drivers` subkey. The order of instantiated `resources` and `drivers` is important, since they are parsed as an ordered dictionary and may depend on a previous driver.

For a list of available resources and drivers refer to <https://labgrid.readthedocs.io/en/latest/configuration.html>.

OPTIONS

The `options`: top key configures various options such as the `crossbar_url`.

OPTIONS KEYS

`crossbar_url` takes as parameter the URL of the crossbar (coordinator) to connect to. Defaults to 'ws://127.0.0.1:20408'.

`crossbar_realm` takes as parameter the realm of the crossbar (coordinator) to connect to. Defaults to 'realm1'.

IMAGES

The `images`: top key provides paths to access preconfigured images to flash onto the board. The image paths can be either relative to the YAML file or absolute.

IMAGE KEYS

The subkeys consist of image names as keys and their paths as values. The corresponding name can than be used with the appropriate tool found under TOOLS.

IMAGE EXAMPLE

Two configured images, one for the root filesystem, one for the bootloader:

```
images:  
    root: "platform-v7a/images/root.img"  
    boot: "platform-v7a/images/barebox.img"
```

TOOLS

The `tools`: top key provides paths to binaries such as fastboot.

TOOLS KEYS

fastboot Path to the fastboot binary
mxs-usb-loader Path to the mxs-usb-loader binary
imx-usb-loader Path to the imx-usb-loader binary

TOOLS EXAMPLE

Configure the tool path for imx-usb-loader:

```
tools:  
    imx-usb-loader: "/opt/labgrid-helper/imx-usb-loader"
```

IMPORTS

The `imports` key is a list of files or python modules which are imported by the environment after loading the configuration. Paths relative to the configuration file are also supported. This is useful to load drivers and strategy which are contained in your testsuite, since the import is done before instantiating the targets.

IMPORTS EXAMPLE

Import a local `myfunctions.py` file:

```
imports:
- myfunctions.py
```

EXAMPLES

A sample configuration with one *main* target, accessible via SerialPort */dev/ttyUSB0*, allowing usage of the ShellDriver:

```
targets:
main:
resources:
RawSerialPort:
port: "/dev/ttyUSB0"
drivers:
SerialDriver: {}
ShellDriver:
prompt: 'root@\w+:[^ ]+ '
login_prompt: ' login: '
username: 'root'
```

A sample configuration with *RemotePlace*, using the tools configuration and importing the local *mystrategy.py* file. The *MyStrategy* strategy is contained in the loaded local python file:

```
targets:
main:
resources:
RemotePlace:
name: test-place
drivers:
SerialDriver: {}
ShellDriver:
prompt: 'root@\w+:[^ ]+ '
login_prompt: ' login: '
username: 'root'
MyStrategy: {}
IMXUSBLoader: {}
tools:
imx-usb-loader: "/opt/lg-tools/imx-usb-loader"
imports:
- mystrategy.py
```

SEE ALSO

`labgrid-client(1)`, `labgrid-exporter(1)`

4.3 labgrid-exporter

4.3.1 labgrid-exporter interface to control boards

Author Rouven Czerwinski <r.czerwinski@pengutronix.de>

organization Labgrid-Project

Date 2017-04-15

Copyright Copyright (C) 2016-2017 Pengutronix. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

Version 0.0.1

Manual section 1

Manual group embedded testing

SYNOPSIS

```
labgrid-exporter --help  
labgrid-exporter *.yaml
```

DESCRIPTION

Labgrid is a scalable infrastructure and test architecture for embedded (linux) systems.

This is the man page for the exporter, supporting the export of serial ports, USB devices and various other controllers.

OPTIONS

-h, --help	display command line help
-x, --crossbar-url	the crossbar url of the coordinator
-i, --isolated	enable isolated mode (always request SSH forwards)
-n, --name	the public name of the exporter
--hostname	hostname (or IP) published for accessing resources
-d, --debug	enable debug mode

-i / --isolated

This option enables isolated mode, which causes all exported resources being marked as requiring SSH connection forwarding. Isolated mode is useful when resources (such as NetworkSerialPorts) are not directly accessible from the clients. The client will then use SSH to create a port forward to the resource when needed.

-n / --name

This option is used to configure the exporter name under which resources are registered with the coordinator, which is useful when running multiple exporters on the same host. It defaults to the system hostname.

--hostname

For resources like USBSerialPort, USBGenericExport or USBSigrokExport, the exporter needs to provide a host name to set the exported value of the “host” key. If the system hostname is not resolvable via DNS, this option can be used to override this default with another name (or an IP address).

CONFIGURATION

The exporter uses a YAML configuration file which defines groups of related resources. See <<https://labgrid.readthedocs.io/en/latest/configuration.html#exporter-configuration>> for more information.

ENVIRONMENT VARIABLES

The following environment variable can be used to configure labgrid-exporter.

LG_CROSSBAR

This variable can be used to set the default crossbar URL (instead of using the `-x` option).

LG_CROSSBAR_REALM

This variable can be used to set the default crossbar realm to use instead of `realm1`.

EXAMPLES

Start the exporter with the configuration file `my-config.yaml`:

```
$ labgrid-exporter my-config.yaml
```

Same as above, but with name `myname`:

```
$ labgrid-exporter -n myname my-config.yaml
```

SEE ALSO

`labgrid-client(1)`, `labgrid-device-config(5)`

CONFIGURATION

This chapter describes the individual drivers and resources used in a device configuration. Drivers can depend on resources or other drivers, whereas resources have no dependencies.

Here the resource *RawSerialPort* provides the information for the *SerialDriver*, which in turn is needed by the *ShellDriver*. Driver dependency resolution is done by searching for the driver which implements the dependent protocol, all drivers implement one or more protocols.

5.1 Resources

5.1.1 Serial Ports

RawSerialPort

A RawSerialPort is a serial port which is identified via the device path on the local computer. Take note that re-plugging USB serial converters can result in a different enumeration order.

```
RawSerialPort:
  port: /dev/ttyUSB0
  speed: 115200
```

The example would access the serial port /dev/ttyUSB0 on the local computer with a baud rate of 115200.

- **port** (str): path to the serial device
- **speed** (int, default=115200): desired baud rate

Used by:

- *SerialDriver*

NetworkSerialPort

A NetworkSerialPort describes a serial port which is exported over the network, usually using RFC2217 or raw tcp.

```
NetworkSerialPort:
  host: remote.example.computer
  port: 53867
  speed: 115200
```

The example would access the serial port on computer `remote.example.computer` via port 53867 and use a baud rate of 115200 with the RFC2217 protocol.

- host (str): hostname of the remote host
- port (str): TCP port on the remote host to connect to
- speed (int, default=115200): baud rate of the serial port
- protocol (str, default="rfc2217"): protocol used for connection: raw or rfc2217

Used by:

- *SerialDriver*

USBSerialPort

A USBSerialPort describes a serial port which is connected via USB and is identified by matching udev properties. This allows identification through hot-plugging or rebooting.

```
USBSerialPort:  
  match:  
    'ID_SERIAL_SHORT': 'P-00-00682'  
  speed: 115200
```

The example would search for a USB serial converter with the key `ID_SERIAL_SHORT` and the value `P-00-00682` and use it with a baud rate of 115200.

- match (str): key and value for a udev match, see [udev Matching](#)
- speed (int, default=115200): baud rate of the serial port

Used by:

- *SerialDriver*

5.1.2 Power Ports

NetworkPowerPort

A NetworkPowerPort describes a remotely switchable power port.

```
NetworkPowerPort:  
  model: gude  
  host: powerswitch.example.computer  
  index: 0
```

The example describes port 0 on the remote power switch `powerswitch.example.computer`, which is a `gude` model.

- model (str): model of the power switch
- host (str): hostname of the power switch
- index (int): number of the port to switch

The `model` property selects one of several [backend implementations](#). Currently available are:

apc Controls an APC PDU via SNMP.

digipower Controls a DigiPower PDU via a simple HTTP API.

gude Controls a Gude PDU via a simple HTTP API.

gude24 Controls a Gude Expert Power Control 8008 PDU via a simple HTTP API.

gude8031 Controls a Gude Expert Power Control 8031 PDU via a simple HTTP API.

gude8316 Controls a Gude Expert Power Control 8316 PDU via a simple HTTP API.

netio Controls a NETIO 4-Port PDU via a simple HTTP API.

netio_kshell Controls a NETIO 4C PDU via a Telnet interface.

rest This is a generic backend for PDU implementations which can be controlled via HTTP PUT and GET requests.
See the [docstring in the module](#) for details.

senty Controls a Sentry PDU via SNMP using Sentry3-MIB. It was tested on CW-24VDD and 4805-XLS-16.

siglent Controls Siglent SPD3000X series modules via the [vxi11 Python module](#).

simplesrest This is a generic backend for PDU implementations which can be controlled via HTTP GET requests
(both set and get). See the [docstring in the module](#) for details.

Used by:

- *NetworkPowerDriver*

PDUDaemonPort

A PDUDaemonPort describes a PDU port accessible via [PDUDaemon](#). As one PDUDaemon instance can control many PDUs, the instance name from the PDUDaemon configuration file needs to be specified.

```
PDUDaemonPort:
  host: pduserver
  pdu: apc-snmpv3-noauth
  index: 1
```

The example describes port 1 on the PDU configured as *apc-snmpv3-noauth*, with PDUDaemon running on the host *pduserver*.

- host (str): name of the host running the PDUDaemon
- pdu (str): name of the PDU in the configuration file
- index (int): index of the power port on the PDU

Used by:

- *PDUDaemonDriver*

YKUSHPowerPort

A YKUSHPowerPort describes a YEPKIT YKUSH USB (HID) switchable USB hub.

```
YKUSHPowerPort:
  serial: YK12345
  index: 1
```

The example describes port 1 on the YKUSH USB hub with the serial “YK12345”. (use “pykush -l” to get your serial...)

- serial (str): serial number of the YKUSH hub
- index (int): number of the port to switch

Used by:

- *YKUSHPowerDriver*

USBPowerPort

A USBPowerPort describes a generic switchable USB hub as supported by `uhubctl`.

```
USBPowerPort:  
  match:  
    ID_PATH: pci-0000:00:14.0-usb-0:2:1.0  
    index: 1
```

The example describes port 1 on the hub with the ID_PATH “pci-0000:00:14.0-usb-0:2:1.0”. (use `udevadm info /sys/bus/usb/devices/...` to find the ID_PATH value)

- index (int): number of the port to switch
- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- *USBPowerDriver*

Note: Labgrid requires that the interface is contained in the ID_PATH. This usually means that the ID_PATH should end with :1.0. Only this first interface is registered with the hub driver labgrid is looking for, paths without the interface will fail to match since they use the `usb` driver.

SiSPMPowerPort

A SiSPMPowerPort describes a GEMBIRD SiS-PM as supported by `sispctl`.

```
SiSPMPowerPort:  
  match:  
    ID_PATH: platform-1c1a400.usb-usb-0:2  
    index: 1
```

The example describes port 1 on the hub with the ID_PATH “platform-1c1a400.usb-usb-0:2”.

- index (int): number of the port to switch
- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- *SiSPMPowerDriver*

TasmotaPowerPort

A `TasmotaPowerPort` resource describes a switchable Tasmora power outlet accessed over MQTT.

```
TasmotaPowerPort:  
  host: this.is.an.example.host.com  
  status_topic: stat/tasmota_575A2B/POWER  
  power_topic: cmnd/tasmota_575A2B/POWER  
  avail_topic: tele/tasmota_575A2B/LWT
```

The example uses a mosquitto server at “this.is.an.example.host.com” and has the topics setup for a tasmota power port that has the ID 575A2B.

- host (str): hostname of the MQTT server
- status_topic (str): topic that signals the current status as “ON” or “OFF”
- power_topic (str): topic that allows switching the status between “ON” and “OFF”
- avail_topic (str): topic that signals the availability of the Tasmota power outlet

Used by:

- *TasmotaPowerDriver*

5.1.3 Digital Outputs

ModbusTCPcoil

A ModbusTCPcoil describes a coil accessible via ModbusTCP.

```
ModbusTCPcoil:
  host: "192.168.23.42"
  coil: 1
```

The example describes the coil with the address 1 on the ModbusTCP device *192.168.23.42*.

- host (str): hostname of the Modbus TCP server e.g. “192.168.23.42:502”
- coil (int): index of the coil e.g. 3
- invert (bool, default=False): whether the logic level is inverted (active-low)

Used by:

- *ModbusCoilDriver*

DeditecRelais8

A DeditecRelais8 describes a Deditec USB GPO module with 8 relays.

```
DeditecRelais8:
  index: 1
  invert: false
```

- index (int): number of the relay to use
- invert (bool, default=False): whether the logic level is inverted (active-low)
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *DeditecRelaisDriver*

OneWirePIO

A OneWirePIO describes a onewire programmable I/O pin.

```
OneWirePIO:  
  host: example.computer  
  path: /29.7D6913000000/PIO.0  
  invert: false
```

The example describes a *PIO.0* at device address *29.7D6913000000* via the onewire server on *example.computer*.

- host (str): hostname of the remote system running the onewire server
- path (str): path on the server to the programmable I/O pin
- invert (bool, default=False): whether the logic level is inverted (active-low)

Used by:

- *OneWirePIODriver*

LXAIOBusPIO

An *LXAIOBusPIO* resource describes a single PIO pin on an LXAIOBusNode.

```
LXAIOBusPIO:  
  host: localhost:8080  
  node: IOMux-00000003  
  pin: OUT0  
  invert: False
```

The example uses an lxa-ibus-server running on localhost:8080, with node IOMux-00000003 and pin OUT0.

- host (str): hostname with port of the lxa-io-bus server
- node (str): name of the node to use
- pin (str): name of the pin to use
- invert (bool, default=False): whether to invert the pin

Used by:

- *LXAIOBusPIODriver*

NetworkLXAIOBusPIO

A NetworkLXAIOBusPIO describes an *LXAIOBusPIO* exported over the network.

HIDRelay

An *HIDRelay* resource describes a single output of a HID protocol based USB relays. It currently supports the widely used “dctech USBRelay”.

```
HIDRelay:  
  index: 2  
  invert: False
```

- index (int, default=1): number of the relay to use
- invert (bool, default=False): whether to invert the relay
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *HIDRelayDriver*

NetworkHIDRelay

A NetworkHIDRelay describes an *HIDRelay* exported over the network.

5.1.4 NetworkService

A NetworkService describes a remote SSH connection.

```
NetworkService:
  address: example.computer
  username: root
```

The example describes a remote SSH connection to the computer *example.computer* with the username *root*. Set the optional password password property to make SSH login with a password instead of the key file.

When used with `labgrid-exporter`, the address can contain a device scope suffix (such as `%eth1`), which is especially useful with overlapping address ranges or link-local IPv6 addresses. In that case, the SSH connection will be proxied via the exporter, using `socat` and the `labgrid-bound-connect` sudo helper. These and the sudo configuration needs to be prepared by the administrator.

- address (str): hostname of the remote system
- username (str): username used by SSH
- password (str, default=""): password used by SSH
- port (int, default=22): port used by SSH

Used by:

- *SSHDriver*

5.1.5 USBMassStorage

A USBMassStorage resource describes a USB memory stick or similar device.

```
USBMassStorage:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0-scsi-0:0:0:3'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *USBStorageDriver*

5.1.6 NetworkUSBMassStorage

A NetworkUSBMassStorage resource describes a USB memory stick or similar device available on a remote computer.

Used by:

- *USBStorageDriver*

The NetworkUSBMassStorage can be used in test cases by calling the *write_image()*, and *get_size()* functions.

5.1.7 SigrokDevice

A SigrokDevice resource describes a sigrok device. To select a specific device from all connected supported devices use the *SigrokUSBDevice*.

```
SigrokUSBDevice:
  driver: fx2lafw
  channel: "D0=CLK,D1=DATA"
```

- driver (str): name of the sigrok driver to use
- channel (str): optional, channel mapping as described in the sigrok-cli man page

Used by:

- *SigrokDriver*

5.1.8 IMXUSBLoader

An IMXUSBLoader resource describes a USB device in the imx loader state.

```
IMXUSBLoader:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *IMXUSBDriver*
- *UUUDriver*

5.1.9 MXSUSBLoader

An MXSUSBLoader resource describes a USB device in the mxs loader state.

```
MXSUSBLoader:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *MXSUSBDriver*
- *UUUDriver*

5.1.10 RKUSBLoader

An RKUSBLoader resource describes a USB device in the rockchip loader state.

```
RKUSBLoader:
  match:
    'sys_name': '1-3'
```

- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- *RKUSBDriver*

5.1.11 NetworkMXSUSBLoader

A NetworkMXSUSBLoader describes an *MXSUSBLoader* available on a remote computer.

5.1.12 NetworkIMXUSBLoader

A NetworkIMXUSBLoader describes an *IMXUSBLoader* available on a remote computer.

5.1.13 NetworkRKUSBLoader

A NetworkRKUSBLoader describes an *RKUSBLoader* available on a remote computer.

5.1.14 AndroidFastboot

An AndroidFastboot resource describes a USB device in the fastboot state.

```
AndroidFastboot:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- *AndroidFastbootDriver*

5.1.15 USBNetworkInterface

A USBNetworkInterface resource describes a USB network adapter (such as Ethernet or WiFi)

```
USBNetworkInterface:
  match:
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (str): key and value for a udev match, see [udev Matching](#)

5.1.16 RemoteNetworkInterface

A *RemoteNetworkInterface* resource describes a *USBNetworkInterface* resource available on a remote computer.

5.1.17 AlteraUSBBBlaster

An AlteraUSBBBlaster resource describes an Altera USB blaster.

```
AlteraUSBBBlaster:  
  match:  
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- match (dict): key and value for a udev match, see *udev Matching*

Used by:

- *OpenOCDDriver*
- *QuartusHPSDriver*

5.1.18 USBDebugger

An USBDebugger resource describes a JTAG USB adapter (for example an FTDI FT2232H).

```
USBDebugger:  
  match:  
    ID_PATH: 'pci-0000:00:10.0-usb-0:1.4'
```

- match (dict): key and value for a udev match, see *udev Matching*

Used by:

- *OpenOCDDriver*

5.1.19 SNMPEthernetPort

A SNMPEthernetPort resource describes a port on an Ethernet switch, which is accessible via SNMP.

```
SNMPEthernetPort:  
  switch: "switch-012"  
  interface: "17"
```

- switch (str): host name of the Ethernet switch
- interface (str): interface name

5.1.20 SigrokUSBDevice

A SigrokUSBDevice resource describes a sigrok USB device.

```
SigrokUSBDevice:  
  driver: fx2lafw  
  channel: "D0=CLK,D1=DATA"  
  match:  
    'ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
```

- driver (str): name of the sigrok driver to use
- channel (str): optional, channel mapping as described in the sigrok-cli man page
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *SigrokDriver*

5.1.21 NetworkSigrokUSBDevice

A NetworkSigrokUSBDevice resource describes a sigrok USB device connected to a host which is exported over the network. The SigrokDriver will access it via SSH.

```
NetworkSigrokUSBDevice:
  driver: fx2lafw
  channel: "D0=CLK,D1=DATA"
  match:
    '@ID_PATH': 'pci-0000:06:00.0-usb-0:1.3.2:1.0'
  host: remote.example.computer
```

- driver (str): name of the sigrok driver to use
- channel (str): optional, channel mapping as described in the sigrok-cli man page
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *SigrokDriver*

5.1.22 SigrokUSBSerialDevice

A SigrokUSBSerialDevice resource describes a sigrok device which communicates of a USB serial port instead of being a USB device itself (see *SigrokUSBDevice* for that case).

```
SigrokUSBSerialDevice:
  driver: manson-hcs-3xxx
  match:
    '@ID_SERIAL_SHORT': P-00-02389
```

- driver (str): name of the sigrok driver to use
- channels (str): optional, channel mapping as described in the sigrok-cli man page

Used by:

- *SigrokPowerDriver*

5.1.23 USBSDMuxDevice

A *USBSDMuxDevice* resource describes a Pengutronix **USB-SD-Mux** device.

```
USBSDMuxDevice:
  match:
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *USBSDMUXDriver*

5.1.24 NetworkUSBSDMuxDevice

A `NetworkUSBSDMuxDevice` resource describes a `USBSDMuxDevice` available on a remote computer.

5.1.25 LXAUSBMux

A `LXAUSBMux` resource describes a Linux Automation GmbH USB-Mux device.

```
LXAUSBMux:  
  match:  
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- `LXAUSBMuxDriver`

5.1.26 NetworkLXAUSBMux

A `NetworkLXAUSBMux` resource describes a `LXAUSBMux` available on a remote computer.

5.1.27 USBSDWireDevice

A `USBSDWireDevice` resource describes a Tizen SD Wire device device.

```
USBSDWireDevice:  
  match:  
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- `USBSDWireDriver`

5.1.28 NetworkUSBSDWireDevice

A `NetworkUSBSDWireDevice` resource describes a `USBSDWireDevice` available on a remote computer.

5.1.29 USBVideo

A `USBVideo` resource describes a USB video camera which is supported by a Video4Linux2 kernel driver.

```
USBVideo:  
  match:  
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

- match (str): key and value for a udev match, see [udev Matching](#)

Used by:

- `USBVideoDriver`

5.1.30 SysfsGPIO

A *SysfsGPIO* resource describes a GPIO line.

```
SysfsGPIO:
  index: 12
```

Used by:

- *GpioDigitalOutputDriver*

5.1.31 NetworkUSBVideo

A *NetworkUSBVideo* resource describes a *USBVideo* resource available on a remote computer.

5.1.32 USBAudioInput

A *USBAudioInput* resource describes a USB audio input which is supported by an ALSA kernel driver.

```
USBAudioInput:
  match:
    '@sys_name': '1-4'
```

- index (int, default=0): ALSA PCM device number (as in *hw:CARD=<card>,DEV=<index>*)
- match (str): key and value for a udev match, see *udev Matching*

Used by:

- *USBAudioInputDriver*

5.1.33 NetworkUSBAudioInput

A *NetworkUSBAudioInput* resource describes a *USBAudioInput* resource available on a remote computer.

5.1.34 USBTMC

A *USBTMC* resource describes an oscilloscope connected via the USB TMC protocol. The low-level communication is handled by the `usbtmc` kernel driver.

```
USBTMC:
  match:
    '@ID_PATH': 'pci-0000:00:14.0-usb-0:1.2'
```

- match (str): key and value for a udev match, see *udev Matching*

A udev rules file may be needed to allow access for non-root users:

```
DRIVERS=="usbtmc", MODE=="0660", GROUP=="plugdev"
```

Used by:

- *USBTMCDriver*

5.1.35 NetworkUSBTMC

A *NetworkUSBTMC* resource describes a *USBTMC* resource available on a remote computer.

5.1.36 Flashrom

A Flashrom resource is used to configure the parameters to a local installed flashrom instance. It is assumed that flashrom is installed on the host and the executable is configured in:

```
tools:  
  flashrom: '/usr/sbin/flashrom'
```

- programmer (str): programmer device as described in *-p, -programmer* in *man 8 flashrom*

The resource must configure which programmer to use and the parameters to the programmer. The programmer parameter is passed directly to the flashrom bin hence man(8) flashrom can be used for reference. Below an example where the local spidev is used.

```
Flashrom:  
  programmer: 'linux_spi:dev=/dev/spidev0.1,spispeed=30000'
```

Used by:

- *FlashromDriver*

5.1.37 NetworkFlashRom

A NetworkFlashrom describes a *Flashrom* available on a remote computer.

5.1.38 USBFlashableDevice

Represents an “opaque” USB device used by custom flashing programs. There is usually not anything useful that can be done with the interface other than running a flashing program with *FlashScriptDriver*.

Note: This resource is only intended to be used as a last resort when it is impossible or impractical to use a different resource

```
USBFlashableDevice:  
  match:  
    SUBSYSTEM: 'usb'  
    ID_SERIAL: '1234'
```

- match (str): key and value pairs for a udev match, see *udev Matching*

Used by:

- *FlashScriptDriver*

5.1.39 NetworkUSBFlashableDevice

A *NetworkUSBFlashableDevice* resource describes a *USBFlashableDevice* resource available on a remote computer

Used by:

- *FlashScriptDriver*

5.1.40 XenaManager

A XenaManager resource describes a Xena Manager instance which is the instance the *XenaDriver* must connect to in order to configure a Xena chassis.

```
XenaManager:
  hostname: "example.computer"
```

- hostname (str): hostname or IP of the management address of the Xena tester

Used by:

- *XenaDriver*

5.1.41 PyVISADevice

A PyVISADevice resource describes a test stimuli device controlled by PyVISA. Such device could be a signal generator.

```
PyVISADevice:
  type: "TCPIP"
  url: "192.168.110.11"
```

- type (str): device resource type following the pyVISA resource syntax, e.g. ASRL, TCPIP...
- url (str): device identifier on selected resource, e.g. <ip> for TCPIP resource

Used by:

- *PyVISADriver*

5.1.42 HTTPVideoStream

A *HTTPVideoStream* resource describes a IP video stream over HTTP or HTTPS.

```
HTTPVideoStream:
  url: 'http://192.168.110.11/0.ts'
```

- url (str): URI of the IP video stream

Used by:

- *HTTPVideoDriver*

5.1.43 Providers

Providers describe directories that are accessible by the target over a specific protocol. This is useful for software installation in the bootloader (via TFTP) or downloading update artifacts under Linux (via HTTP).

They are used with the ManagedFile helper, which ensures that the file is available on the server and then creates a symlink from the internal directory to the uploaded file. The path for the target is generated by replacing the internal prefix with the external prefix.

For now, the TFTP/NFS/HTTP server needs to be configured before using it from labgrid.

TFTPProvider / NFSProvider / HTTPProvider

```
TFTPProvider:
  internal: "/srv/tftp/board-23/"
  external: "board-23/"

HTTPProvider:
  internal: "/srv/www/board-23/"
  external: "http://192.168.1.1/board-23/"
```

- internal (str): path prefix to the local directory accessible by the target
- external (str): corresponding path prefix for use by the target

Used by:

- *TFTPProviderDriver*
- *NFSProviderDriver*
- *HTTPProviderDriver*

RemoteTFTPProvider / RemoteNFSProvider / RemoteHTTPProvider

These describe a *TFTPProvider*, *NFSProvider* or *HTTPProvider* resource available on a remote computer

Used by:

- *TFTPProviderDriver*
- *NFSProviderDriver*
- *HTTPProviderDriver*

5.1.44 RemotePlace

A RemotePlace describes a set of resources attached to a labgrid remote place.

```
RemotePlace:
  name: example-place
```

The example describes the remote place *example-place*. It will connect to the labgrid remote coordinator, wait until the resources become available and expose them to the internal environment.

- name (str): name or pattern of the remote place

Used by:

- potentially all drivers

5.1.45 DockerDaemon

A DockerDaemon describes where to contact a docker daemon process. DockerDaemon also participates in managing *NetworkService* instances created through interaction with that daemon.

```
DockerDaemon:
docker_daemon_url: 'unix://var/run/docker.sock'
```

The example describes a docker daemon accessible via the ‘/var/run/docker.sock’ unix socket. When used by a *DockerDriver*, the *DockerDriver* will first create a docker container which the DockerDaemon resource will subsequently use to create one/more *NetworkService* instances - as specified by *DockerDriver* configuration. Each *NetworkService* instance corresponds to a network service running inside the container.

Moreover, DockerDaemon will remove any hanging containers if DockerDaemon is used several times in a row - as is the case when executing test suites. Normally *DockerDriver* - when deactivated - cleans up the created docker container; programming errors, keyboard interrupts or unix kill signals may lead to hanging containers, however; therefore auto-cleanup is important.

- **docker_daemon_url** (str): The url of the daemon to use for this target.

Used by:

- *DockerDriver*

5.1.46 udev Matching

udev matching allows labgrid to identify resources via their udev properties. Any udev property key and value can be used, path matching USB devices is allowed as well. This allows exporting a specific USB hub port or the correct identification of a USB serial converter across computers.

The initial matching and monitoring for udev events is handled by the *UdevManager* class. This manager is automatically created when a resource derived from *USBResource* (such as *USBSerialPort*, *IMXUSBLoader* or *AndroidFastboot*) is instantiated.

To identify the kernel device which corresponds to a configured *USBResource*, each existing (and subsequently added) kernel device is matched against the configured resources. This is based on a list of *match entries* which must all be tested successfully against the potential kernel device. Match entries starting with an @ are checked against the device’s parents instead of itself; here one matching parent causes the check to be successful.

A given *USBResource* class has builtin match entries that are checked first, for example that the *SUBSYSTEM* is *tty* as in the case of the *USBSerialPort*. Only if these succeed, match entries provided by the user for the resource instance are considered.

In addition to the properties reported by `udevadm monitor --udev --property`, elements of the `ATTR(S) { }` dictionary (as shown by `udevadm info <device> -a`) are useable as match keys. Finally `sys_name` allows matching against the name of the directory in sysfs. All match entries must succeed for the device to be accepted.

The following examples show how to use the udev matches for some common use-cases.

Matching a USB Serial Converter on a Hub Port

This will match any USB serial converter connected below the hub port 1.2.5.5 on bus 1. The `sys_name` value corresponds to the hierarchy of buses and ports as shown with `lsusb -t` and is also usually displayed in the kernel log messages when new devices are detected.

```
USBSerialPort:
match:
  '@sys_name': '1-1.2.5.5'
```

Note the @ in the @sys_name match, which applies this match to the device's parents instead of directly to itself. This is necessary for the *USBSerialPort* because we actually want to find the `ttyUSB?` device below the USB serial converter device.

Matching an Android Fastboot Device

In this case, we want to match the USB device on that port directly, so we don't use a parent match.

```
AndroidFastboot:  
  match:  
    'sys_name': '1-1.2.3'
```

Matching a Specific UART in a Dual-Port Adapter

On this board, the serial console is connected to the second port of an on-board dual-port USB-UART. The board itself is connected to the bus 3 and port path 10.2.2.2. The correct value can be shown by running `udevadm info /dev/ttyUSB9` in our case:

```
$ udevadm info /dev/ttyUSB9  
P: /devices/pci0000:00/0000:00:14.0/usb3/3-10/3-10.2/3-10.2.2/3-10.2.2.2/3-10.2.2.2:1.  
  ↳1/ttyUSB9/tty/ttyUSB9  
N: ttyUSB9  
S: serial/by-id/usb-FTDI_Dual_RS232-HS-if01-port0  
S: serial/by-path/pci-0000:00:14.0-usb-0:10.2.2.2:1.1-port0  
E: DEVLINKS=/dev/serial/by-id/usb-FTDI_Dual_RS232-HS-if01-port0 /dev/serial/by-path/  
  ↳pci-0000:00:14.0-usb-0:10.2.2.2:1.1-port0  
E: DEVNAME=/dev/ttyUSB9  
E: DEVPATH=/devices/pci0000:00/0000:00:14.0/usb3/3-10/3-10.2/3-10.2.2/3-10.2.2.2/3-10.  
  ↳2.2.2:1.1/ttyUSB9/tty/ttyUSB9  
E: ID_BUS=usb  
E: ID_MODEL=Dual_RS232-HS  
E: ID_MODEL_ENC=Dual\x20RS232-HS  
E: ID_MODEL_FROM_DATABASE=FT2232C Dual USB-UART/FIFO IC  
E: ID_MODEL_ID=6010  
E: ID_PATH=pci-0000:00:14.0-usb-0:10.2.2.2:1.1  
E: ID_PATH_TAG=pci-0000_00_14_0-usb-0_10_2_2_2_1_1  
E: ID_REVISION=0700  
E: ID_SERIAL=FTDI_Dual_RS232-HS  
E: ID_TYPE=generic  
E: ID_USB_DRIVER=ftdi_sio  
E: ID_USB_INTERFACES=:ffff:ffff:  
E: ID_USB_INTERFACE_NUM=01  
E: ID_VENDOR=FTDI  
E: ID_VENDOR_ENC=FTDI  
E: ID_VENDOR_FROM_DATABASE=Future Technology Devices International, Ltd  
E: ID_VENDOR_ID=0403  
E: MAJOR=188  
E: MINOR=9  
E: SUBSYSTEM=tty  
E: TAGS=:systemd:  
E: USEC_INITIALIZED=9129609697
```

We use the `ID_USB_INTERFACE_NUM` to distinguish between the two ports:

```
USBSerialPort:
  match:
    '@sys_name': '3-10.2.2.2'
    'ID_USB_INTERFACE_NUM': '01'
```

Matching a USB UART by Serial Number

Most of the USB serial converters in our lab have been programmed with unique serial numbers. This makes it easy to always match the same one even if the USB topology changes or a board has been moved between host systems.

```
USBSerialPort:
  match:
    'ID_SERIAL_SHORT': 'P-00-00679'
```

To check if your device has a serial number, you can use udevadm info:

```
$ udevadm info /dev/ttyUSB5 | grep SERIAL_SHORT
E: ID_SERIAL_SHORT=P-00-00679
```

5.2 Drivers

5.2.1 SerialDriver

A SerialDriver connects to a serial port. It requires one of the serial port resources.

Binds to:

port:

- *NetworkSerialPort*
- *RawSerialPort*
- *USBSerialPort*

```
SerialDriver:
  txdelay: 0.05
```

Implements:

- *ConsoleProtocol*

Arguments:

- txdelay (float, default=0.0): time in seconds to wait before sending each byte
- timeout (float, default=3.0): time in seconds to wait for a network serial port before an error occurs

5.2.2 ShellDriver

A ShellDriver binds on top of a *ConsoleProtocol* and is designed to interact with a login prompt and a Linux shell.

Binds to:

console:

- *ConsoleProtocol*

Implements:

- *CommandProtocol*

ShellDriver:

```
prompt: 'root@\w+:[^ ]+ '
login_prompt: ' login: '
username: 'root'
```

Arguments:

- prompt (regex): shell prompt to match after logging in
- login_prompt (regex): match for the login prompt
- username (str): username to use during login
- password (str): optional, password to use during login
- keyfile (str): optional, keyfile to upload after login, making the *SSHDriver* usable
- login_timeout (int, default=60): timeout for login prompt detection in seconds
- await_login_timeout (int, default=2): time in seconds of silence that needs to pass before sending a newline to device.
- console_ready (regex): optional, pattern used by the kernel to inform the user that a console can be activated by pressing enter.
- post_login_settle_time (int, default=0): seconds of silence after logging in before check for a prompt. Useful when the console is interleaved with boot output which may interrupt prompt detection.

5.2.3 SSHDriver

A SSHDriver requires a *NetworkService* resource and allows the execution of commands and file upload via network. It uses SSH's *ServerAliveInterval* option to detect failed connections.

If a shared SSH connection to the target is already open, it will reuse it when running commands. In that case, *ServerAliveInterval* should be set outside of labgrid, as it cannot be enabled for an existing connection.

Binds to:**networkservice:**

- *NetworkService*

Implements:

- *CommandProtocol*
- *FileTransferProtocol*

SSHDriver:

```
keyfile: example.key
```

Arguments:

- keyfile (str): optional, filename of private key to login into the remote system (has precedence over *NetworkService*'s password)
- **stderr_merge (bool, default=False): set to True to make *run()* return stderr merged with stdout, and an empty list as second element.**

5.2.4 UBootDriver

A UBootDriver interfaces with a U-Boot bootloader via a *ConsoleProtocol*.

Binds to:

console:

- *ConsoleProtocol*

Implements:

- *CommandProtocol*

```
UBootDriver:
prompt: 'Uboot> '
```

Arguments:

- prompt (regex, default=""): U-Boot prompt to match
- autoboot (regex, default="stop autoboot"): autoboot message to match
- password (str): optional, U-Boot unlock password
- interrupt (str, default="\n"): string to interrupt autoboot (use "\x03" for CTRL-C)
- init_commands (tuple): optional, tuple of commands to execute after matching the prompt
- password_prompt (str): optional, regex to match the U-Boot password prompt, defaults to "enter Password:
"
- boot_expression (str, default="U-Boot 20\d+"): regex to match the U-Boot start string
- bootstrap (str): optional, regex to match on Linux Kernel boot
- boot_command (str, default="run bootcmd"): boot command for booting target
- login_timeout (int, default=30): timeout for login prompt detection in seconds
- boot_timeout (int, default=30): timeout for initial Linux Kernel version detection

5.2.5 SmallUBootDriver

A SmallUBootDriver interfaces with stripped-down U-Boot variants that are sometimes used in cheap consumer electronics.

SmallUBootDriver is meant as a driver for U-Boot with only little functionality compared to a standard U-Boot. Especially it copes with the following limitations:

- The U-Boot does not have a real password-prompt but can be activated by entering a "secret" after a message was displayed.
- The command line does not have a built-in echo command. Thus this driver uses 'Unknown Command' messages as marker before and after the output of a command.
- Since there is no echo we cannot return the exit code of the command. Commands will always return 0 unless the command was not found.

This driver needs the following features activated in U-Boot to work:

- The U-Boot must not have a real password prompt. Instead it must be keyword activated. For example it should be activated by a dialog like the following:
 - U-Boot: "Autobooting in 1s..."

- labgrid: “secret”
 - U-Boot: <switching to console>
- The U-Boot must be able to parse multiple commands in a single line separated by “;”.
 - The U-Boot must support the “bootm” command to boot from a memory location.

Binds to:

- *ConsoleProtocol* (see [SerialDriver](#))

Implements:

- *CommandProtocol*

```
SmallUBootDriver:
  prompt: 'ap143-2\.\.0> '
  boot_expression: 'Autobooting in 1 seconds'
  boot_secret: "tpl"
```

Arguments:

- boot_secret (str, default=“a”): secret used to unlock prompt
- login_timeout (int, default=60): timeout for password/login prompt detection
- for other arguments, see [UBootDriver](#)

5.2.6 BareboxDriver

A BareboxDriver interfaces with a barebox bootloader via a *ConsoleProtocol*.

Binds to:**console:**

- *ConsoleProtocol*

Implements:

- *CommandProtocol*

```
BareboxDriver:
  prompt: 'barebox@[^:]+:[^ ]+ '
```

Arguments:

- prompt (regex, default=“”): barebox prompt to match
- autoboot (regex, default=“stop autoboot”): autoboot message to match
- interrupt (str, default=“\\n”): string to interrupt autoboot (use “\\x03” for CTRL-C)
- bootstrap (regex, default=“Linux version \\d”): regex that indicating that the Linux Kernel is booting
- password (str): optional, password to use for access to the shell
- login_timeout (int, default=60): timeout for access to the shell

5.2.7 ExternalConsoleDriver

An ExternalConsoleDriver implements the *ConsoleProtocol* on top of a command executed on the local computer.

Implements:

- *ConsoleProtocol*

```
ExternalConsoleDriver:
  cmd: 'microcom /dev/ttyUSB2'
  txdelay: 0.05
```

Arguments:

- cmd (str): command to execute and then bind to.
- txdelay (float, default=0.0): time in seconds to wait before sending each byte

5.2.8 AndroidFastbootDriver

An AndroidFastbootDriver allows the upload of images to a device in the USB fastboot state.

Binds to:

fastboot:

- *AndroidFastboot*

Implements:

- None (yet)

```
AndroidFastbootDriver:
  image: mylocal.image
  sparse_size: 100M
```

Arguments:

- boot_image (str): image key referring to the image to boot
- flash_images (dict): partition to image key mapping referring to images to flash to the device
- sparse_size (str): optional, sparse files greater than given size (see fastboot manpage -S option for allowed size suffixes). The default is the same as the fastboot default, which is computed after querying the target's max-download-size variable.

5.2.9 OpenOCDDriver

An OpenOCDDriver controls OpenOCD to bootstrap a target with a bootloader.

Note that OpenOCD supports specifying USB paths since [a1b308ab](#) which was released with v0.11. The OpenOCD-Driver passes the resource's USB path. Depending on which OpenOCD version is installed it is either used correctly or a warning is displayed and the first resource seen is used, which might be the wrong USB device. Consider updating your OpenOCD version when using multiple USB Blasters.

Binds to:

interface:

- *AlteraUSBBBlaster*
- *USBDebugger*

Implements:

- *BootstrapProtocol*

```
OpenOCDDriver:  
    config: local-settings.cfg  
    image: bitstream  
    interface_config: ftdi/lambdaconcept_ecpix-5.cfg  
    board_config: lambdaconcept_ecpix-5.cfg  
    load_commands:  
        - "init"  
        - "svf -quiet {filename}"  
        - "exit"
```

Arguments:

- config (str/list): optional, OpenOCD configuration file(s)
- search (str): optional, include search path for scripts
- image (str): optional, name of the image to bootstrap onto the device
- interface_config (str): optional, interface config in the openocd/scripts/interface/ directory
- board_config (str): optional, board config in the openocd/scripts/board/ directory
- load_commands (list of str): optional, load commands to use instead of init, bootstrap {filename}, shutdown

5.2.10 QuartusHPSDriver

A QuartusHPSDriver controls the “Quartus Prime Programmer and Tools” to flash a target’s QSPI.

Binds to:

- *AlteraUSBBBlaster*

Implements:

- None

Arguments:

- image (str): optional, filename of image to write into QSPI flash

The driver can be used in test cases by calling the *flash* function. An example strategy is included in labgrid.

5.2.11 ManualPowerDriver

A ManualPowerDriver requires the user to control the target power states. This is required if a strategy is used with the target, but no automatic power control is available.

The driver’s name will be displayed during interaction.

Implements:

- *PowerProtocol*

```
ManualPowerDriver:  
    name: 'example-board'
```

Arguments:

- None

5.2.12 ExternalPowerDriver

An ExternalPowerDriver is used to control a target power state via an external command.

Implements:

- *PowerProtocol*

```
ExternalPowerDriver:
  cmd_on: example_command on
  cmd_off: example_command off
  cmd_cycle: example_command cycle
```

Arguments:

- cmd_on (str): command to turn power to the board on
- cmd_off (str): command to turn power to the board off
- cmd_cycle (str): optional command to switch the board off and on
- delay (float, default=2.0): delay in seconds between off and on, if cmd_cycle is not set

5.2.13 NetworkPowerDriver

A NetworkPowerDriver controls a *NetworkPowerPort*, allowing control of the target power state without user interaction.

Binds to:

port:

- *NetworkPowerPort*

Implements:

- *PowerProtocol*

```
NetworkPowerDriver:
  delay: 5.0
```

Arguments:

- delay (float, default=2.0): delay in seconds between off and on

5.2.14 PDUDaemonDriver

A PDUDaemonDriver controls a *PDUDaemonPort*, allowing control of the target power state without user interaction.

Note: PDUDaemon processes commands in the background, so the actual state change may happen several seconds after calls to PDUDaemonDriver return.

Binds to:

port:

- *PDU**DaemonPort*

Implements:

- *PowerProtocol*

```
PDUDaemonDriver:
```

```
  delay: 5.0
```

Arguments:

- delay (float, default=5.0): delay in seconds between off and on

5.2.15 YKUSHPowerDriver

A YKUSHPowerDriver controls a *YKUSHPowerPort*, allowing control of the target power state without user interaction.

Binds to:

port:

- *YKUSHPowerPort*

Implements:

- *PowerProtocol*

```
YKUSHPowerDriver:
```

```
  delay: 5.0
```

Arguments:

- delay (float, default=2.0): delay in seconds between off and on

5.2.16 DigitalOutputPowerDriver

A DigitalOutputPowerDriver can be used to control the power of a device using a DigitalOutputDriver.

Using this driver you probably want an external relay to switch the power of your DUT.

Binds to:

output:

- *DigitalOutputProtocol*

```
DigitalOutputPowerDriver:
```

```
  delay: 2.0
```

Arguments:

- delay (float, default=1.0): delay in seconds between off and on

5.2.17 USBPowerDriver

A USBPowerDriver controls a *USBPowerPort*, allowing control of the target power state without user interaction.

Binds to:

- *USBPowerPort*

Implements:

- *PowerProtocol*

USBPowerDriver:**delay:** 5.0**Arguments:**

- delay (float, default=2.0): delay in seconds between off and on

5.2.18 SiSPMPowerDriver

A SiSPMPowerDriver controls a *SiSPMPowerPort*, allowing control of the target power state without user interaction.

Binds to:

- *SiSPMPowerPort*

Implements:

- *PowerProtocol*

SiSPMPowerDriver:**delay:** 5.0**Arguments:**

- delay (float, default=2.0): delay in seconds between off and on

5.2.19 TasmotaPowerDriver

A TasmotaPowerDriver controls a *TasmotaPowerPort*, allowing the outlet to be switched on and off.

Binds to:

- *TasmotaPowerPort*

Implements:

- *PowerProtocol*

TasmotaPowerDriver:**delay:** 5.0**Arguments:**

- delay (float, default=2.0): delay in seconds between off and on

5.2.20 GpioDigitalOutputDriver

The GpioDigitalOutputDriver writes a digital signal to a GPIO line.

This driver configures GPIO lines via the *sysfs kernel interface* <<https://www.kernel.org/doc/html/latest/gpio/sysfs.html>>. While the driver automatically exports the GPIO, it does not configure it in any other way than as an output.

Binds to:

- *SysfsGPIO*

Implements:

- *DigitalOutputProtocol*

```
GpioDigitalOutputDriver: {}
```

Arguments:

- None

5.2.21 SerialPortDigitalOutputDriver

The SerialPortDigitalOutputDriver makes it possible to use a UART as a 1-Bit general-purpose digital output.

This driver acts on top of a SerialDriver and uses its pyserial port to control the flow control lines.

Implements:

- *DigitalOutputProtocol*

```
SerialPortDigitalOutputDriver:  
    signal: "dtr"  
    bindings: { serial : "nameOfSerial" }
```

Arguments:

- signal (str): control signal to use: “dtr” or “rts”
- bindings (dict): A named ressource of the type SerialDriver to bind against. This is only needed if you have multiple SerialDriver in your environment (what is likely to be the case if you are using this driver).
- invert (bool): whether to invert the signal

5.2.22 FileDigitalOutputDriver

The FileDigitalOutputDriver uses a file to write arbitrary string representations of booleans to a file and read from it.

The file is checked to exist at configuration time.

If the file’s content does not match any of the representations reading defaults to False.

A prime example for using this driver is Linux’s sysfs.

Implements:

- *DigitalOutputProtocol*

```
FileDigitalOutputDriver:  
    filepath: "/sys/class/leds/myled/brightness"
```

Arguments:

- filepath (str): file that is used for reads and writes.
- false_repr (str, default=“0\\n”): representation for False
- true_repr (str, default=“1\\n”): representation for True

5.2.23 DigitalOutputResetDriver

A DigitalOutputResetDriver uses a DigitalOutput to reset the target.

Binds to:

output:

- *DigitalOutputProtocol*

Implements:

- *ResetProtocol*

```
DigitalOutputResetDriver:
  delay: 2.0
```

Arguments:

- delay (float, default=1.0): delay in seconds between setting the output 0 and 1.

5.2.24 ModbusCoilDriver

A ModbusCoilDriver controls a *ModbusTCP-Coil* resource. It can set and get the current state of the resource.

Binds to:

coil:

- *ModbusTCP-Coil*

Implements:

- *DigitalOutputProtocol*

```
ModbusCoilDriver: {}
```

Arguments:

- None

5.2.25 HIDRelayDriver

A HIDRelayDriver controls a *HIDRelay* or *NetworkHIDRelay* resource. It can set and get the current state of the resource.

Binds to:

relay:

- *HIDRelay*
- *NetworkHIDRelay*

Implements:

- *DigitalOutputProtocol*

```
HIDRelayDriver: {}
```

Arguments:

- None

5.2.26 ManualSwitchDriver

A ManualSwitchDriver requires the user to control a switch or jumper on the target. This can be used if a driver binds to a *DigitalOutputProtocol*, but no automatic control is available.

Implements:

- *DigitalOutputProtocol*

```
ManualSwitchDriver:  
    description: 'Jumper 5'
```

Arguments:

- description (str): optional, description of the switch or jumper on the target

5.2.27 DeditecRelaisDriver

A DeditecRelaisDriver controls a Deditec relay resource. It can set and get the current state of the resource.

Binds to:

relais:

- *DeditecRelais8*

Implements:

- *DigitalOutputProtocol*

```
DeditecRelaisDriver: {}
```

Arguments:

- None

5.2.28 MXSUSBDriver

A MXSUSBDriver is used to upload an image into a device in the mxs USB loader state. This is useful to bootstrap a bootloader onto a device.

Binds to:

loader:

- *MXSUSBLoader*
- *NetworkMXSUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:  
    main:  
        drivers:  
            MXSUSBDriver:  
                image: mybootloaderkey  
  
images:  
    mybootloaderkey: path/to/mybootloader.img
```

Arguments:

- image (str): optional, key in *images* containing the path of an image to bootstrap onto the target

5.2.29 IMXUSBDriver

A IMXUSBDriver is used to upload an image into a device in the imx USB loader state. This is useful to bootstrap a bootloader onto a device. This driver uses the imx-usb-loader tool from barebox.

Binds to:**loader:**

- *IMXUSBLoader*
- *NetworkIMXUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:
  main:
    drivers:
      IMXUSBDriver:
        image: mybootloaderkey

images:
  mybootloaderkey: path/to/mybootloader.img
```

Arguments:

- image (str): optional, key in *images* containing the path of an image to bootstrap onto the target

5.2.30 BDIMXUSBDriver

The BDIMXUSBDriver is used to upload bootloader images into an i.MX device in the USB SDP mode. This driver uses the imx_usb tool by Boundary Devices. Compared to the IMXUSBLoader, it supports two-stage upload of U-Boot images. The images paths need to be specified from code instead of in the YAML environment, as the correct image depends on the system state.

Binds to:**loader:**

- *IMXUSBLoader*
- *NetworkIMXUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:
  main:
    drivers:
      BDIMXUSBDriver: {}
```

Arguments:

- None

5.2.31 RKUSBDriver

A RKUSBDriver is used to upload an image into a device in the rockchip USB loader state. This is useful to bootstrap a bootloader onto a device.

Binds to:

loader:

- *RKUSBLoader*
- *NetworkRKUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:
  main:
    drivers:
      RKUSBDriver:
        image: mybootloaderkey
        usb_loader: myloaderkey

  images:
    mybootloaderkey: path/to/mybootloader.img
    myloaderkey: path/to/myloader.bin
```

Arguments:

- image (str): optional, key in *images* containing the path of an image to bootstrap onto the target
- usb_loader (str): optional, key in *images* containing the path of a first-stage bootloader image to write

5.2.32 UUUDriver

A UUUDriver is used to upload an image into a device in the NXP USB loader state. This is useful to bootstrap a bootloader onto a device.

Binds to:

loader:

- *MXSUSBLoader*
- *NetworkMXSUSBLoader*
- *IMXUSBLoader*
- *NetworkIMXUSBLoader*

Implements:

- *BootstrapProtocol*

```
targets:
  main:
    drivers:
      UUUDriver:
        image: mybootloaderkey
        cmd: spl
```

(continues on next page)

(continued from previous page)

```
images:
  mybootloaderkey: path/to/mybootloader.img
```

Arguments:

- image (str): optional, key in *images* containing the path of an image to bootstrap onto the target
- cmd (str, default="spl"): single command used for mfgtool

5.2.33 USBStorageDriver

A USBStorageDriver allows access to a USB stick or similar local or remote device.

Binds to:

- *USBMassStorage*
- *NetworkUSBMassStorage*

Implements:

- None (yet)

```
USBStorageDriver:
  image: flashimage
```

```
images:
  flashimage: ../images/myusb.image
```

Arguments:

- image (str): optional, key in *images* containing the path of an image to write to the target

5.2.34 OneWirePIODriver

A OneWirePIODriver controls a *OneWirePIO* resource. It can set and get the current state of the resource.

Binds to:**port:**

- *OneWirePIO*

Implements:

- *DigitalOutputProtocol*

```
OneWirePIODriver: {}
```

Arguments:

- None

5.2.35 TFTPProviderDriver / NFSProviderDriver / HTTPProviderDriver

These drivers control their corresponding Provider resources, either locally or remotely.

Binds to:

provider:

- *TFTPPProvider*
- *RemoteTFTPPProvider*
- *NFSProvider*
- *RemoteNFSPProvider*
- *HTTPProvider*
- *RemoteHTTPProvider*

```
TFTPPProviderDriver: {}
```

Arguments:

- None

The driver can be used in test cases by calling the *stage()* function, which returns the path to be used by the target.

5.2.36 QEMUDriver

The QEMUDriver allows the usage of a QEMU instance as a target. It requires several arguments, listed below. The kernel, flash, rootfs and dtb arguments refer to images and paths declared in the environment configuration.

Binds to:

- None

```
QEMUDriver:  
  qemu_bin: qemu_arm  
  machine: vexpress-a9  
  cpu: cortex-a9  
  memory: 512M  
  boot_args: "root=/dev/root console=ttyAMA0,115200"  
  extra_args: ""  
  kernel: kernel  
  rootfs: rootfs  
  dtb: dtb
```

```
tools:  
  qemu_arm: /bin/qemu-system-arm  
paths:  
  rootfs: ../images/root  
images:  
  dtb: ../images/mydtb.dtb  
  kernel: ../images/vmlinuz
```

Implements:

- *ConsoleProtocol*
- *PowerProtocol*

Arguments:

- qemu_bin (str): reference to the tools key for the QEMU binary
- machine (str): QEMU machine type
- cpu (str): QEMU cpu type

- memory (str): QEMU memory size (ends with M or G)
- extra_args (str): extra QEMU arguments, they are passed directly to the QEMU binary
- boot_args (str): optional, additional kernel boot argument
- kernel (str): optional, reference to the images key for the kernel
- disk (str): optional, reference to the images key for the disk image
- flash (str): optional, reference to the images key for the flash image
- rootfs (str): optional, reference to the paths key for use as the virtio-9p filesystem
- dtb (str): optional, reference to the image key for the device tree
- bios (str): optional, reference to the image key for the bios image

The QEMUDriver also requires the specification of:

- a tool key, this contains the path to the QEMU binary
- an image key, the path to the kernel image and optionally the dtb key to specify the build device tree
- a path key, this is the path to the rootfs

5.2.37 SigrokDriver

The SigrokDriver uses a SigrokDevice resource to record samples and provides them during test runs.

Binds to:

sigrok:

- *SigrokUSBDevice*
- *SigrokDevice*
- *NetworkSigrokUSBDevice*

Implements:

- None yet

Arguments:

- None

The driver can be used in test cases by calling the *capture*, *stop* and *analyze* functions.

5.2.38 SigrokPowerDriver

The SigrokPowerDriver uses a *SigrokUSBSerialDevice* resource to control a programmable power supply.

Binds to:

sigrok:

- *SigrokUSBSerialDevice*
- *NetworkSigrokUSBSerialDevice*

Implements:

- *PowerProtocol*

```
SigrokPowerDriver:
  delay: 3.0
```

Arguments:

- `delay` (float, default=3.0): delay in seconds between off and on
- `max_voltage` (float): optional, maximum allowed voltage for protection against accidental damage (in volts)
- `max_current` (float): optional, maximum allowed current for protection against accidental damage

5.2.39 USBSDMuxDriver

The `USBSDMuxDriver` uses a `USBSDMuxDevice` resource to control a USB-SD-Mux device via `usbsdmux` tool.

Implements:

- None yet

Arguments:

- None

The driver can be used in test cases by calling the `set_mode()` function with argument being `dut`, `host`, `off`, or `client`.

5.2.40 LXAUSBMuxDriver

The `LXAUSBMuxDriver` uses a `LXAUSBMux` resource to control a USB-Mux device via the `usbmuxctl` tool.

Implements:

- None yet

Arguments:

- None

The driver can be used in test cases by calling the `set_links()` function with a list containing one or more of “`dut-device`”, “`host-dut`” and “`host-device`”. Not all combinations can be configured at the same time.

5.2.41 USBSDWireDriver

The `USBSDWireDriver` uses a `USBSDWireDevice` resource to control a USB-SD-Wire device via `sd-mux-ctrl` tool.

Implements:

- None yet

Arguments:

- None

The driver can be used in test cases by calling the `set_mode()` function with argument being `dut`, `host`, `off`, or `client`.

5.2.42 USBVideoDriver

The *USBVideoDriver* is used to show a video stream from a remote USB video camera in a local window. It uses the GStreamer command line utility `gst-launch` on both sides to stream the video via an SSH connection to the exporter.

Binds to:

video:

- *USBVideo*
- *NetworkUSBVideo*

Implements:

- *VideoProtocol*

Arguments:

- None

Although the driver can be used from Python code by calling the `stream()` method, it is currently mainly useful for the `video` subcommand of `labgrid-client`. It supports the *Logitech HD Pro Webcam C920* with the USB ID `046d:082d`, but other cameras can be added to `get_qualities()` in `labgrid/driver/usbvideodriver.py`.

5.2.43 USBAudioInputDriver

The *USBAudioInputDriver* is used to receive a audio stream from a local or remote USB audio input. It uses the GStreamer command line utility `gst-launch` on the sender side to stream the audio to the client. For remote resources, this is done via an SSH connection to the exporter. On the receiver, it either uses `gst-launch` for simple playback or `gst-python` for more complex cases (such as measuring the current volume level).

Binds to:

video:

- *USBAudioInput*
- *NetworkUSBAudioInput*

Implements:

- None yet

Arguments:

- None

5.2.44 USBTMCDriver

The *USBTMCDriver* is used to control a oscilloscope via the USB TMC protocol.

Binds to:

tmc:

- *USBTMC*
- *NetworkUSBTMC*

Implements:

- None yet

Arguments:

- None

Currently, it can be used by the labgrid-client tmc subcommands to show (and save) a screenshot, to show per channel measurements and to execute raw TMC commands. It only supports the *Keysight DSO-X 2000* series (with the USB ID 0957:1798), but more devices can be added by extending *on_activate()* in labgrid/driver/usbtmcdriver.py and writing a corresponding backend in labgrid/driver/usbtmc/.

5.2.45 FlashromDriver

The *FlashromDriver* is used to flash a rom, using the flashrom utility.

```
FlashromDriver:  
    image: 'foo'  
images:  
    foo: ../images/image_to_load.raw
```

Binds to:**flashrom_resource:**

- *Flashrom*
- *NetworkFlashrom*

Implements:

- *BootstrapProtocol*

Arguments:

- image (str): optional, key in *images* containing the path of an image to bootstrap onto the target

The FlashromDriver allows using the linux util “flashrom” to write directly to a ROM e.g. a NOR SPI flash. The assumption is that the device flashing the DUT e.g. an exporter is wired to the Flash to be flashed. The driver implements the bootstrap protocol. The driver uses tool configuration section and the key: flashrom to determine the path of the installed flashrom utility.

5.2.46 FlashScriptDriver

The *FlashScriptDriver* is used to run a custom script or program to flash a device.

Note: This driver is only intended to be used as a last resort when it is impossible or impractical to use a different driver.

```
FlashScriptDriver:  
    script: 'foo'  
    args:  
        - '{device.devnode}'  
images:  
    foo: ../images/flash_device.sh
```

Binds to:**flashabledevice_resource:**

- *USBFlashableDevice*

- *NetworkUSBFlashableDevice*

Implements:

- None (yet)

Arguments:

- image (str): optional, key in *images* containing the path of an image to bootstrap onto the target
- args (list): optional, list of arguments for flash script execution

The FlashScriptDriver allows running arbitrary programs to flash a device. Some SoC or devices may require custom, one-off, or proprietary programs to flash. A target image can be bundled with these programs using a tool like `makeself`, which can then be executed by labgrid to flash the device using this driver.

Additional arguments may be passed with the `args` parameter. These arguments will be expanded as `Python` format strings with the following keys:

5.2.47 HTTPVideoDriver

The `HTTPVideoDriver` is used to show a video stream over HTTP or HTTPS from a remote IP video source in a local window.

Binds to:**video:**

- *HTTPVideoStream*

Implements:

- *VideoProtocol*

Although the driver can be used from Python code by calling the `stream()` method, it is currently mainly useful for the `video` subcommand of `labgrid-client`.

Key	Description
device	The <i>Resource</i> bound to the driver
file	The <i>ManagedFile</i> used to track the flashable script

Properties of these keys can be selected using the Python format string syntax, e.g. `{device.devnode}` to select the device node path of `USBFlashableDevice`

5.2.48 XenaDriver

The XenaDriver allows to use Xena networking test equipment. Using the `xenavalkyrie` library a full API to control the tester is available.

Binds to:**xena_manager:**

- *XenaManager*

The driver is supposed to work with all Xena products from the “Valkyrie Layer 2-3 Test platform” Currently tested on a *XenaCompact* chassis equipped with a *1 GE test module*.

5.2.49 DockerDriver

A DockerDriver binds to a *DockerDaemon* and is used to create and control one docker container.

The driver uses the docker python module to interact with the docker daemon.

For more information on the parameters see:

<https://docker-py.readthedocs.io/en/stable/containers.html#container-objects>

Binds to:

docker_daemon:

- *DockerDaemon*

Implements:

- *PowerProtocol*

DockerDriver:

```
image_uri: "rastasheep/ubuntu-sshd:16.04"
container_name: "ubuntu-lg-example"
host_config: {"network_mode": "bridge"}
network_services: [{"port": 22, "username": "root", "password": "root"}]
```

Arguments:

- image_uri (str): identifier of the docker image to use (may have a tag suffix)
- command (str): command to run in the container (optional, depends on image)
- volumes (list): list to configure volumes mounted inside the container (optional)
- container_name (str): name of the container
- environment (list): list of environment variables (optional)
- host_config (dict): dictionary of host configurations
- network_services (list): dictionaries that describe individual *NetworkService* instances that come alive when the container is created. The “address” argument which *NetworkService* also requires will be derived automatically upon container creation.

5.2.50 LXAIOPiODriver

An LXAIOPiODriver binds to a single *LXAIOPiO* to toggle and read the PIO states.

Binds to:

pio:

- *LXAIOPiO*
- *NetworkLXAIOPiO*

LXAIOPiODriver: { }

Implements:

- *DigitalOutputProtocol*

Arguments:

- None

5.2.51 PyVISADriver

The PyVISADriver uses a PyVISADevice resource to control test equipment manageable by PyVISA.

Binds to:

pyvisa_resource:

- *PyVISADevice*

Implements:

- None yet

Arguments:

- None

5.2.52 NetworkInterfaceDriver

This driver allows controlling a network interface (such as Ethernet or WiFi) on the exporter using NetworkManager.

The configuration is based on dictionaries with contents similar to NM's connection files in INI-format. Currently basic wired and wireless configuration options have been tested.

To use it, [PyGObject](#) must be installed (on the same system as the network interface). For Debian, the necessary packages are *python3-gi* and *gir1.2-nm-1.0*.

It supports: - static and DHCP address configuration - WiFi client or AP - connection sharing (DHCP server with NAT) - listing DHCP leases (if the client has sufficient permissions)

Binds to:

iface:

- *USBNetworkInterface*
- *RemoteNetworkInterface*

Implements:

- None yet

Arguments:

- None

5.3 Strategies

Strategies are used to ensure that the device is in a certain state during a test. Such a state could be the bootloader or a booted Linux kernel with shell.

5.3.1 BareboxStrategy

A BareboxStrategy has four states:

- unknown
- off
- barebox
- shell

to transition to the shell state:

```
t = get_target("main")
s = BareboxStrategy(t)
s.transition("shell")
```

this command would transition from the bootloader into a Linux shell and activate the shelldriver.

5.3.2 ShellStrategy

A ShellStrategy has three states:

- unknown
- off
- shell

to transition to the shell state:

```
t = get_target("main")
s = ShellStrategy(t)
s.transition("shell")
```

this command would transition directly into a Linux shell and activate the shelldriver.

5.3.3 UBootStrategy

A UBootStrategy has four states:

- unknown
- off
- uboot
- shell

to transition to the shell state:

```
t = get_target("main")
s = UBootStrategy(t)
s.transition("shell")
```

this command would transition from the bootloader into a Linux shell and activate the shelldriver.

5.3.4 DockerShellStrategy

A DockerShellStrategy has three states:

- unknown
- off
- shell

To transition to the shell state:

```
t = get_target("main")
s = DockerShellStrategy(t)
s.transition("shell")
```

These commands would activate the docker driver which creates and starts a docker container. This will subsequently make *NetworkService* instance(s) available which can be used for e.g. SSH access.

Note: Transitioning to the “off” state will make any *NetworkService* instance(s) unresponsive - which may in turn invalidate SSH connection sharing. Therefore, during automated test suites, refrain from transitioning to the “off” state.

5.4 Reporters

5.4.1 StepReporter

The StepReporter outputs individual labgrid steps to *STDOUT*.

```
from labgrid.stepreporter import StepReporter
StepReporter.start()
```

The Reporter can be stopped with a call to the stop function:

```
from labgrid.stepreporter import StepReporter
StepReporter.stop()
```

Stopping the StepReporter if it has not been started will raise an `AssertionError`, as will starting an already started StepReporter.

5.4.2 ColoredStepReporter

The ColoredStepReporter inherits from the StepReporter. The output is colored using ANSI color code sequences.

5.4.3 ConsoleLoggingReporter

The ConsoleLoggingReporter outputs read calls from the console transports into files. It takes the path as a parameter.

```
from labgrid.consoleloggingreporter import ConsoleLoggingReporter
ConsoleLoggingReporter.start(".")
```

The Reporter can be stopped with a call to the stop function:

```
from labgrid.consoleloggingreporter import ConsoleLoggingReporter  
  
ConsoleLoggingReporter.stop()
```

Stopping the ConsoleLoggingReporter if it has not been started will raise an AssertionError, as will starting an already started StepReporter.

5.5 Environment Configuration

The environment configuration for a test environment consists of a YAML file which contains targets, drivers and resources.

Note: The order is important here: Objects are instantiated in the order they appear in the YAML file, so if drivers depend on other drivers or resources which are only instantiated later, loading the environment will fail.

The skeleton for an environment consists of:

```
targets:  
  <target-1>:  
    resources:  
      <resource-1>:  
        <resource-1 parameters>  
      <resource-2>:  
        <resource-2 parameters>  
    drivers:  
      <driver-1>:  
        <driver-1 parameters>  
      <driver-2>: {} # no parameters for driver-2  
    features:  
      - <target-feature-1>  
  <target-2>:  
    resources:  
      <resources>  
    drivers:  
      <drivers>  
    options:  
      <target-option-1-name>: <value for target-option-1>  
      <more target-options>  
    <more targets>  
options:  
  <option-1 name>: <value for option-1>  
  <more options>  
features:  
  - <global-feature-1>  
paths:  
  <path-1 name>: <absolute or relative path for path-1>  
  <more paths>  
images:  
  <image-1 name>: <absolute or relative path for image-1>  
  <more images>  
tools:  
  <tool-1 name>: <absolute or relative path for tool-1>  
  <more tools>
```

(continues on next page)

(continued from previous page)

```
imports:
- <import.py>
- <python module>
```

If you have a single target in your environment, name it “main”, as the `get_target` function defaults to “main”.

All the resources and drivers in this chapter have a YAML example snippet which can simply be added (at the correct indentation level, one level deeper) to the environment configuration.

If you want to use multiple drivers of the same type, the resources and drivers need to be lists, e.g:

```
resources:
  RawSerialPort:
    port: '/dev/ttys1'
drivers:
  SerialDriver: {}
```

becomes:

```
resources:
- RawSerialPort:
  port: '/dev/ttys1'
- RawSerialPort:
  port: '/dev/ttys2'
drivers:
- SerialDriver: {}
- SerialDriver: {}
```

This configuration doesn’t specify which `RawSerialPort` to use for each `SerialDriver`, so it will cause an exception when instantiating the `Target`. To bind the correct driver to the correct resource, explicit name and `bindings` properties are used:

```
resources:
- RawSerialPort:
  name: 'foo'
  port: '/dev/ttys1'
- RawSerialPort:
  name: 'bar'
  port: '/dev/ttys2'
drivers:
- SerialDriver:
  name: 'foo_driver'
  bindings:
    port: 'foo'
- SerialDriver:
  name: 'bar_driver'
  bindings:
    port: 'bar'
```

The property name for the binding (e.g. `port` in the example above) is documented for each individual driver in this chapter.

The YAML configuration file also supports templating for some substitutions, these are:

- `LG_*` variables, are replaced with their respective `LG_*` environment variable
- `BASE` is substituted with the base directory of the YAML file.

As an example:

```
targets:
  main:
    resources:
      RemotePlace:
        name: !template ${LG_PLACE}
  tools:
    qemu_bin: !template "${BASE}/bin/qemu-bin"
```

would resolve the `qemu_bin` path relative to the `BASE` dir of the YAML file and try to use the `RemotePlace` with the name set in the `LG_PLACE` environment variable.

See the [`labgrid-device-config`](#) man page for documentation on the top-level options, images, tools, and examples keys in the environment configuration.

5.6 Exporter Configuration

The exporter is configured by using a YAML file (with a syntax similar to the environment configs used for pytest) or by instantiating the [`Environment`](#) object. To configure the exporter, you need to define one or more *resource groups*, each containing one or more *resources*. The syntax for exported resource names is `<exporter>/<group>/<class>/<name>`, which allows the exporter to group resources for various usage scenarios, e.g. all resources of a specific place or for a specific test setup. For information on how the exporter fits into the rest of labgrid, see [`Remote Resources and Places`](#).

The `<exporter>` part can be specified on the [`labgrid-exporter`](#) command line, and defaults to the hostname of the exporter.

The basic structure of an exporter configuration file is:

```
<group-1>:
  <resource-name-1>:
    <params>
  <resource-name-2>:
    <params>
<group-2>:
  <resource-name-1>:
    <params>
```

By default, the class name is inferred from the resource name, and `<params>` will be passed to its constructor. For USB resources, you will most likely want to use [`udev Matching`](#) here.

As a simple example, here is one group called `usb-hub-in-rack12` containing a single [`USBSerialPort`](#) resource (using udev matching), which will be exported as `exportername/usb-hub-in-rack12/NetworkSerialPort/USBSerialPort`:

```
usb-hub-in-rack12:
  USBSerialPort:
    match:
      '@sys_name': '3-1.3'
```

To export multiple resources of the same class in the same group, you can choose a unique resource name, and then use the `cls` parameter to specify the class name instead (which will not be passed as a parameter to the class constructor). In this next example we will export one [`USBSerialPort`](#) as `exportername/usb-hub-in-rack12/NetworkSerialPort/console-main`, and another [`USBSerialPort`](#) as `exportername/usb-hub-in-rack12/NetworkSerialPort/console-secondary`:

```
usb-hub-in-rack12:
  console-main:
    cls: USBSerialPort
    match:
      '@sys_name': '3-1.3'
  console-secondary:
    cls: USBSerialPort
    match:
      '@sys_name': '3-1.4'
```

Note that you could also split the resources up into distinct groups instead to achieve the same effect:

```
usb-hub-in-rack12-port3:
  USBSerialPort:
    match:
      '@sys_name': '3-1.3'
usb-hub-in-rack12-port4:
  USBSerialPort:
    match:
      '@sys_name': '3-1.4'
```

5.6.1 Templating

To reduce the amount of repeated declarations when many similar resources need to be exported, the [Jinja2](#) template engine is used as a preprocessor for the configuration file:

```
## Iterate from group 1001 to 1016
# for idx in range(1, 17)
{{ 1000 + idx }}:
  NetworkSerialPort:
    {host: r11, port: {{ 4000 + idx }}}
  NetworkPowerPort:
    # if 1 <= idx <= 8
    {model: apc, host: apc1, index: {{ idx }}}
    # elif 9 <= idx <= 12
    {model: netio, host: netio4, index: {{ idx - 8 }}}
    # elif 13 <= idx <= 16
    {model: netio, host: netio5, index: {{ idx - 12 }}}
    # endif
# endfor
```

Use `#` for line statements (like the `for` loops in the example) and `##` for line comments. Statements like `{{ 4000 + idx }}` are expanded based on variables in the [Jinja2](#) template.

The template processing also supports use of OS environment variables, using something like `{{ env['FOOBAR'] }}` to insert the content of environment variable `FOOBAR`.

DEVELOPMENT

The first step is to install labgrid into a local virtualenv.

6.1 Installation

Clone the git repository:

```
git clone https://github.com/labgrid-project/labgrid && cd labgrid
```

Create and activate a virtualenv for labgrid:

```
virtualenv -p python3 venv  
source venv/bin/activate
```

Install required dependencies:

```
sudo apt install python3-dev libow-dev libsnappy-dev
```

Install the development requirements:

```
pip install -r dev-requirements.txt
```

Install labgrid into the virtualenv in editable mode:

```
pip install -e .
```

Tests can now be run via:

```
python -m pytest --lg-env <config>
```

6.2 Writing a Driver

To develop a new driver for labgrid, you need to decide which protocol to implement, or implement your own protocol. If you are unsure about a new protocol's API, just use the driver directly from the client code, as deciding on a good API will be much easier when another similar driver is added.

labgrid uses the `attrs` library for internal classes. First of all import attr, the protocol and the common driver class into your new driver file.

```
import attr

from labgrid.driver.common import Driver
from labgrid.protocol import ConsoleProtocol
```

Next, define your new class and list the protocols as subclasses of the new driver class. Try to avoid subclassing existing other drivers, as this limits the flexibility provided by connecting drivers and resources on a given target at runtime.

```
import attr

from labgrid.driver.common import Driver
from labgrid.protocol import ConsoleProtocol

@attr.s(eq=False)
class ExampleDriver(Driver, ConsoleProtocol):
    pass
```

The `ConsoleExpectMixin` is a mixin class to add expect functionality to any class supporting the `ConsoleProtocol` and has to be the first item in the subclass list. Using the mixin class allows sharing common code, which would otherwise need to be added into multiple drivers.

```
import attr

from labgrid.driver.common import Driver
from labgrid.driver.consoleexpectmixin import ConsoleExpectMixin
from labgrid.protocol import ConsoleProtocol

@attr.s(eq=False)
class ExampleDriver(ConsoleExpectMixin, Driver, ConsoleProtocol)
    pass
```

Additionally the driver needs to be registered with the `target_factory` and provide a bindings dictionary, so that the `Target` can resolve dependencies on other drivers or resources.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Driver
from labgrid.driver.consoleexpectmixin import ConsoleExpectMixin
from labgrid.protocol import ConsoleProtocol

@target_factory.reg_driver
@attr.s(eq=False)
class ExampleDriver(ConsoleExpectMixin, Driver, ConsoleProtocol)
    bindings = { "port": SerialPort }
    pass
```

The listed resource `SerialPort` will be bound to `self.port`, making it usable in the class. Checks are performed that the target which the driver binds to has a `SerialPort`, otherwise an error will be raised.

If your driver can support alternative resources, you can use a set of classes instead of a single class:

```
bindings = { "port": {SerialPort, NetworkSerialPort} }
```

Optional bindings can be declared by including `None` in the set:

```
bindings = { "port": {SerialPort, NetworkSerialPort, None} }
```

If you need to do something during instantiation, you need to add a `__attrs_post_init__` method (instead of the usual `__init__` used for non-attr-classes). The minimum requirement is a call to `super().__attrs_post_init__()`.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Driver
from labgrid.driver.consoleexpectmixin import ConsoleExpectMixin
from labgrid.protocol import ConsoleProtocol

@target_factory.reg_driver
@attr.s(eq=False)
class ExampleDriver(ConsoleExpectMixin, Driver, ConsoleProtocol):
    bindings = { "port": SerialPort }

    def __attrs_post_init__(self):
        super().__attrs_post_init__()
```

All that's left now is to implement the functionality described by the used protocol, by using the API of the bound drivers and resources.

6.3 Writing a Resource

To add a new resource to labgrid, we import attr into our new resource file. Additionally we need the `target_factory` and the common `Resource` class.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Resource
```

Next we add our own resource with the `Resource` parent class and register it with the `target_factory`.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Resource

@target_factory.reg_resource
@attr.s(eq=False)
class ExampleResource(Resource):
    pass
```

All that is left now is to add attributes via `attr.ib()` member variables.

```
import attr

from labgrid.factory import target_factory
from labgrid.driver.common import Resource

@target_factory.reg_resource
@attr.s(eq=False)
```

(continues on next page)

(continued from previous page)

```
class ExampleResource(Resource):
    examplevar1 = attr.ib()
    examplevar2 = attr.ib()
```

The `attr.ib()` style of member definition also supports defaults and validators, see the [attrs documentation](#).

6.4 Writing a Strategy

labgrid offers only basic strategies, for complex use cases a customized strategy is required. Start by creating a strategy skeleton:

```
import enum

import attr

from labgrid.step import step
from labgrid.driver import Strategy, StrategyError
from labgrid.factory import target_factory

class Status(enum.Enum):
    unknown = 0

@target_factory.reg_driver
class MyStrategy(Strategy):
    bindings = {}

    status = attr.ib(default=Status.unknown)

    @step()
    def transition(self, status, *, step):
        if not isinstance(status, Status):
            status = Status(status)
        if status == Status.unknown:
            raise StrategyError(f"can not transition to {status}")
        elif status == self.status:
            step.skip("nothing to do")
            return # nothing to do
        else:
            raise StrategyError(
                f"no transition found from {self.status} to {status}"
            )
        self.status = status
```

The `bindings` variable needs to declare the drivers necessary for the strategy, usually one for power, bootloader and shell. It is possible to reference drivers via their protocol, e.g. `ConsoleProtocol`. Note that drivers which implement multiple protocols must not be referenced multiple times via different protocols. The `Status` class needs to be extended to cover the states of your strategy, then for each state an `elif` entry in the `transition` function needs to be added.

Lets take a look at the builtin `BareboxStrategy`. The `Status` enum for the `BareboxStrategy`:

```
class Status(enum.Enum):
    unknown = 0
```

(continues on next page)

(continued from previous page)

```
off = 1
barebox = 2
shell = 3
```

defines 3 custom states and the *unknown* state as the start point. These three states are handled in the transition function:

```
elif status == Status.off:
    self.target.deactivate(self.barebox)
    self.target.deactivate(self.shell)
    self.target.activate(self.power)
    self.power.off()
elif status == Status.barebox:
    self.transition(Status.off)
    # cycle power
    self.power.cycle()
    # interrupt barebox
    self.target.activate(self.barebox)
elif status == Status.shell:
    # transition to barebox
    self.transition(Status.barebox)
    self.barebox.boot("")
    self.barebox.await_boot()
    self.target.activate(self.shell)
```

Here the *barebox* state simply cycles the board and activates the driver, while the *shell* state uses the barebox state to cycle the board and than boot the linux kernel. The *off* states switch the power off.

6.5 Tips for Writing and Debugging Tests

6.5.1 Live-Reading Console Output

When starting labgrid with `--lg-log` option, it will dump the input from the serial driver to a file in specified directory:

```
$ pytest .. --lg-log=logdir test-dir/
```

This can help understanding what happened and why it happened. However, when debugging tests, it might be more helpful to get a live impression of what is going on. For this, you can use `tail -f` to read the content written to the log file as if you would be connected to the devices serial console (except that it is read-only):

```
$ tail -f logdir/console_main # for the 'main' target
```

For getting information about timing, the `annotate-output` command turned out to be quite helpful. On Debian it comes with the `devscripts` package and you can install it with:

```
$ apt-get install devscripts
```

To use it, run:

```
$ annotate-output tail -f logdir/console_main
```

This will print your system time before each line, allowing you to both see relative delays between steps in your tests as well as absolute timing of things happening in your test environment.

6.5.2 Dealing With Kernel Log Verbosity

For testing your Linux system it can be quite annoying if the kernel outputs verbosely to the console you use for testing. Note that a too verbose kernel can break tests as kernel logs will pollute the expected command outputs making it unreadable for labgrid regular expressions.

However, as the shell driver and most of the tests will depend on seeing console output of what is going on during boot, we cannot turn off kernel logging completely.

Note: The labgrid ShellDriver itself attempts to disable console printing by calling `dmesg -n 1` as soon as having a logged-in shell. However, this may be too late for reliably capturing the initial login and shell prompt.

A proper point in time for disabling kernel output to the console is when systemd starts. To achieve this, make use of the `systemd-sysctl.service` that uses `/etc/sysctl.d/` to configure kernel parameters. This way, the kernel log level can be set to ‘error’ by the time of service execution with a config file like:

```
$ cat /etc/sysctl.d/20-quiet-printk.conf
kernel.printk = 3
```

If the *initial* kernel logging is still too high, one could also reduce this. But note that for the standard configuration of the labgrid barebox and uboot drivers, we need to catch the `Linux version . . .` line to detect we successfully left the bootloader (the `bootstrap` attribute). This line is only printed when having at least kernel log level 6 (notice) enabled:

```
loglevel=6
```

6.6 Graph Strategies

Warning: This feature is experimental and brings much complexity to your project.

GraphStrategies are made for more complex strategies, with multiple, on each other depending, states. A GraphStrategy graph has to be a directed graph with one root state.

Using a GraphStrategy makes only sense if you have board states that are reachable by different ways. In this case GraphStrategies reduce state duplication.

6.6.1 Example

Listing 1: conftest.py

```
from labgrid.strategy import GraphStrategy

class TestStrategy(GraphStrategy):
    def state_unknown(self):
        pass

    @GraphStrategy.depends('unknown')
    def state_boot_via_nand(self):
        pass
```

(continues on next page)

(continued from previous page)

```
@GraphStrategy.depends('unknown')
def state_boot_via_nfs(self):
    pass

@GraphStrategy.depends('boot_via_nand', 'boot_via_nfs')
def state_barebox(self):
    pass

@GraphStrategy.depends('barebox')
def state_linux_shell(self):
    pass
```

The class can also render a graph as PNG (using GraphViz):

Listing 2: test.yaml

```
targets:
  main:
    resources: {}
    drivers: {}
```

Listing 3: render_teststrategy.py

```
from labgrid.environment import Environment
from confest import TestStrategy
env = Environment('test.yaml')
strategy = TestStrategy(env.get_target(), "strategy name")

strategy.transition('barebox', via=['boot_via_nfs'])
# returned: ['unknown', 'boot_via_nfs', 'barebox']
strategy.graph.render("teststrategy-via-nfs")
# returned: 'teststrategy-via-nfs.png'

strategy.transition('barebox', via=['boot_via_nand'])
# returned: ['unknown', 'boot_via_nand', 'barebox']
strategy.graph.render("teststrategy-via-nand")
# returned: 'teststrategy-via-nand.png'
```

6.6.2 State

Every graph node describes a board state and how to reach it. A state has to be a class method following this prototype:
`def state_$_STATENAME(self) :`. A state may not call `transition()` in its state definition.

6.6.3 Dependency

Every state, but the root state, can depend on other States. If a state has multiple dependencies, not all of them, but one, have to be reached before running the current state. When no via is used during a transition the order of the given dependencies decides which one gets called, where the first one has the highest priority and the last one the lowest. Dependencies are represented by graph edges.

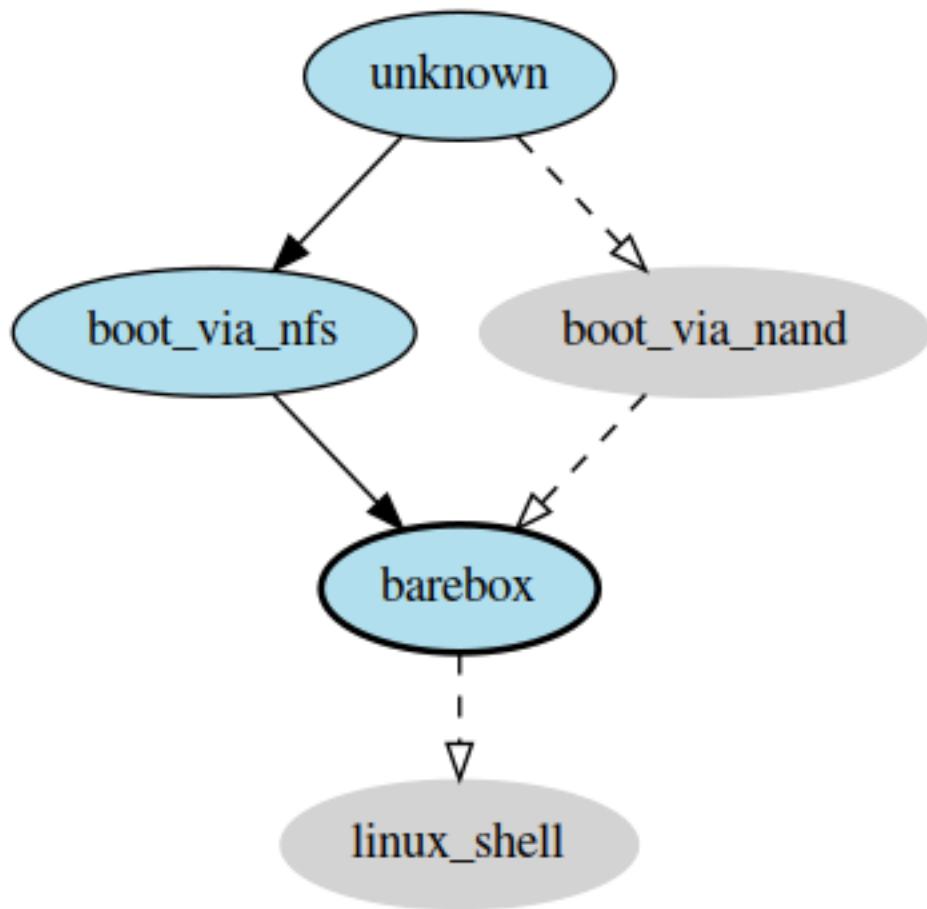


Fig. 1: TestStrategy transitioned to ‘barebox’ via ‘boot_via_nfs’

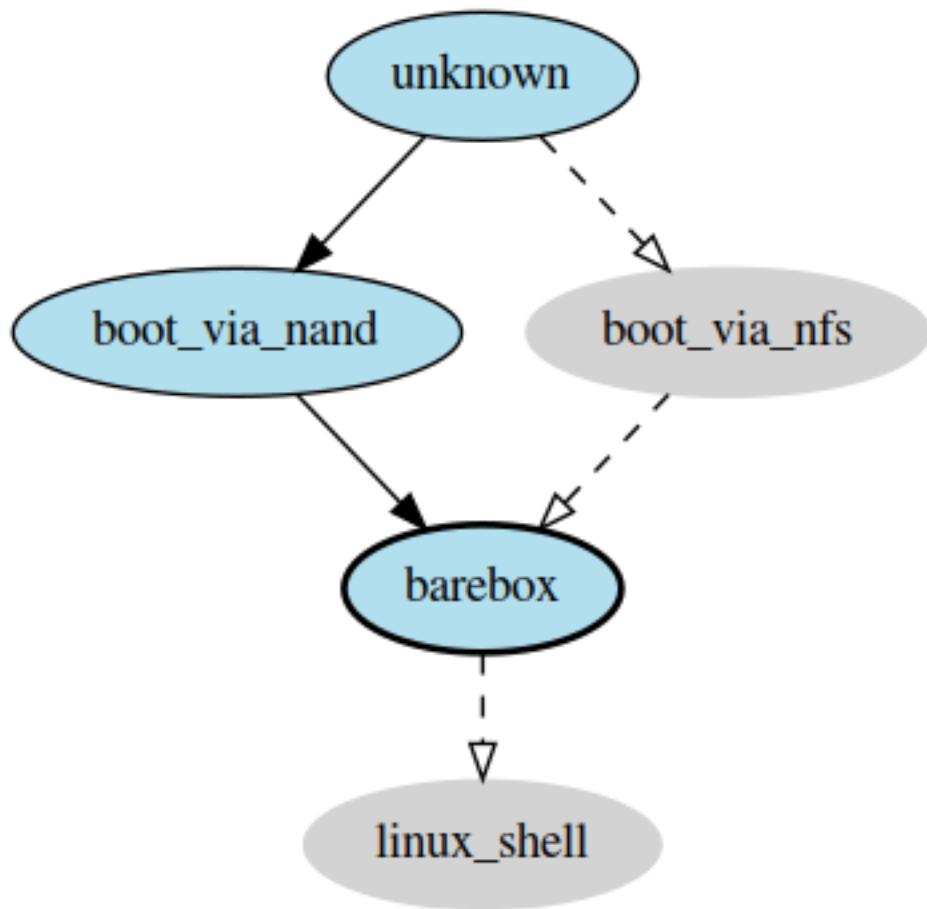


Fig. 2: TestStrategy transitioned to ‘barebox’ via ‘boot_via_nand’

6.6.4 Root State

Every GraphStrategy has to define exactly one root state. The root state defines the start of the graph and therefore the start of every transition. A state becomes a root state if it has no dependencies.

6.6.5 Transition

A transition describes a path, or a part of a path, through a GraphStrategy graph. Every State in the graph has a auto generated default path starting from the root state. So using the given example, the GraphStrategy would call the states *unknown*, *boot_via_nand*, *barebox*, and *linux_shell* in this order if `transition('linux_shell')` would be called. The GraphStrategy would prefer *boot_via_nand* over *boot_via_nfs* because *boot_via_nand* is mentioned before *boot_via_nfs* in the dependencies of *barebox*. If you want to reach via *boot_via_nfs* the call would look like this: `transition('linux_shell', via='boot_via_nfs')`.

A transition can be incremental. If we trigger a transition with `transition('barebox')` first, the states *unknown*, *boot_via_nand* and *barebox* will be called in this order. If we trigger a transition `transition('linux_shell')` afterwards only *linux_shell* gets called. This happens because *linux_shell* is reachable from *barebox* and the Strategy holds state of the last walked path. But there is a catch! The second, incremental path must be *fully* incremental to the previous path! For example: Lets say we reached *barebox* via *boot_via_nfs*, (`transition('barebox', via='boot_via_nfs')`). If we trigger `transition('linux_shell')` afterwards the GraphStrategy would compare the last path '*unknown*', '*boot_via_nfs*', '*barebox*' with the default path to *linux_shell* which would be '*unknown*', '*boot_via_nand*', '*barebox*', '*linux_shell*', and decides the path is not fully incremental and starts over by the root state. If we had given the second transition *boot_via_nfs* like in the first transition the paths had been incremental.

6.7 SSHManager

labgrid provides a SSHManager to allow connection reuse with control sockets. To use the SSHManager in your code, import it from `labgrid.util.ssh`:

```
from labgrid.util.ssh import sshmanager
```

you can now request or remove forwards:

```
from labgrid.util.ssh import sshmanager

localport = sshmanager.request_forward('somehost', 3000)

sshmanager.remove_forward('somehost', 3000)
```

or get and put files:

```
from labgrid.util.ssh import sshmanager

sshmanager.put_file('somehost', '/path/to/local/file', '/path/to/remote/file')
```

Note: The SSHManager will reuse existing Control Sockets and set up a keepalive loop to prevent timeouts of the socket during tests.

6.8 ManagedFile

While the `SSHManager` exposes a lower level interface to use SSH Connections, the `ManagedFile` provides a higher level interface for file upload to another host. It is meant to be used in conjunction with a remote resource, and store the file on the remote host with the following pattern:

```
/tmp/labgrid-<username>/<sha256sum>/<filename>
```

Additionally it provides `get_remote_path()` to retrieve the complete file path, to easily employ it for driver implementations. To use it in conjunction with a `Resource` and a file:

```
from labgrid.util.managedfile import ManagedFile

mf = ManagedFile(<your-file>, <your-resource>)
mf.sync_to_resource()
path = mf.get_remote_path()
```

Unless constructed with `ManagedFile(..., detect_nfs=False)`, `ManagedFile` employs the following heuristic to check if a file is stored on a NFS share available both locally and remotely via the same path:

- check if GNU coreutils stat(1) with option –format exists on local and remote system
- check if inode number, total size and birth/modification timestamps match on local and remote system

If this is the case the actual file transfer in `sync_to_resource` is skipped.

6.9 ProxyManager

The proxymanager is used to open connections across proxies via an attribute in the resource. This allows gated testing networks by always using the exporter as an SSH gateway to proxy the connections using SSH Forwarding. Currently this is used in the `SerialDriver` for proxy connections.

Usage:

```
from labgrid.util.proxy import proxymanager

proxymanager.get_host_and_port(<resource>)
```

6.10 Contributing

Thank you for thinking about contributing to labgrid! Some different backgrounds and use-cases are essential for making labgrid work well for all users.

The following should help you with submitting your changes, but don't let these guidelines keep you from opening a pull request. If in doubt, we'd prefer to see the code earlier as a work-in-progress PR and help you with the submission process.

6.10.1 Workflow

- Changes should be submitted via a [GitHub pull request](#).
- Try to limit each commit to a single conceptual change.

- Add a signed-off-by line to your commits according to the *Developer's Certificate of Origin* (see below).
- Check that the tests still work before submitting the pull request. Also check the CI's feedback on the pull request after submission.
- When adding new drivers or resources, please also add the corresponding documentation and test code.
- If your change affects backward compatibility, describe the necessary changes in the commit message and update the examples where needed.

6.10.2 Code

- Follow the [PEP 8](#) style.
- Use attr.ib attributes for public attributes of your drivers and resources.
- Use `isort` to sort the import statements.

6.10.3 Documentation

- Use semantic linefeeds in .rst files.

Building the documentation

When contributing to documentation it's practical to be able to build it also locally.

```
# Optional - install requirements in a virtualenv
virtualenv -p python3 labgrid-venv
source labgrid-venv/bin/activate

git clone https://github.com/labgrid-project/labgrid.git
cd labgrid
pip install -e .
pip install -r doc-requirements.txt
cd doc
make html
```

Once the build is done you can see the results with `firefox .build/html/index.html`.

If for whatever the reason you need to rebuild everything from scratch, use `make SPHINXOPTS="-a -E" html`.

6.10.4 Run Tests

```
$ tox -r
```

6.10.5 Developer's Certificate of Origin

labgrid uses the [Developer's Certificate of Origin 1.1](#) with the same process as used for the Linux kernel:

Developer's Certificate of Origin 1.1

By making a contribution to this project, I certify that:

- (a) The contribution was created in whole or in part by me and I have the right to submit it under the open source license indicated in the file; or

- (b) The contribution is based upon previous work that, to the best of my knowledge, is covered under an appropriate open source license and I have the right under that license to submit that work with modifications, whether created in whole or in part by me, under the same open source license (unless I am permitted to submit under a different license), as indicated in the file; or
- (c) The contribution was provided directly to me by some other person who certified (a), (b) or (c) and I have not modified it.
- (d) I understand and agree that this project and the contribution are public and that a record of the contribution (including all personal information I submit with it, including my sign-off) is maintained indefinitely and may be redistributed consistent with this project or the open source license(s) involved.

Then you just add a line (using `git commit -s`) saying:

Signed-off-by: Random J Developer <random@developer.example.org>

using your real name (sorry, no pseudonyms or anonymous contributions).

6.11 Ideas

6.11.1 Driver Preemption

To allow better handling of unexpected reboots or crashes, inactive Drivers could register callbacks on their providers (for example the BareboxDriver it's ConsoleProtocol). These callbacks would look for indications that the Target has changed state unexpectedly (by looking for the bootloader startup messages, in this case). The inactive Driver could then cause a preemption and would be activated. The current caller of the originally active driver would be notified via an exception.

6.11.2 Step Tracing

The Step infrastructure already collects timing and nesting information on executed commands, but is currently only used in the pytest plugin or via the standalone StepReporter. By writing these events to a file (or sqlite database) as a trace, we can collect data over multiple runs for later analysis. This would become more useful by passing recognized events (stack traces, crashes, ...) and benchmark results via the Step infrastructure.

6.11.3 CommandProtocol Support for Background Processes

Currently the CommandProtocol does not support long running processes well. An implementation should start a new process, return a handle and forbid running other processes in the foreground. The handle can be used to retrieve output from a command.

DESIGN DECISIONS

This document outlines the design decisions influencing the development of labgrid.

7.1 Out of Scope

Out of scope for labgrid are:

7.1.1 Integrated Build System

In contrast to some other tools, labgrid explicitly has no support for building target binaries or images.

Our reasons for this are:

- Several full-featured build systems already exist and work well.
- We want to test unmodified images produced by any build system (OE/Yocto, PTXdist, Buildroot, Debian, ...).

7.1.2 Test Infrastructure

labgrid does not include a test framework.

The main reason is that with `pytest` we already have a test framework which:

- makes it easy to write tests
- reduces boilerplate code with flexible fixtures
- is easy to extend and has many available plugins
- allows using any Python library for creating inputs or processing outputs
- supports test report generation

Furthermore, the hardware control functionality needed for testing is also very useful during development, provisioning and other areas, so we don't want to hide that behind another test framework.

7.2 In Scope

- usable as a library for hardware provisioning
- device control via:
 - serial console

- SSH
- file management
- power and reset
- emulation of external services:
 - USB stick emulation
 - external update services (Hawkbit)
- bootstrap services:
 - fastboot
 - imxusbloader

7.3 Further Goals

- tests should be equivalent for workstations and servers
- discoverability of available boards
- distributed board access

CHANGES

8.1 Release 0.4.1 (unreleased)

8.1.1 New Features in 0.4.1

8.1.2 Bug fixes in 0.4.1

- The exporter now exports sysfsgpios during place acquire/release, fixing a race in the sysfsgpio agent interface.
- Fixed a bug where using labgrid-client io get always returned low when reading a sysfsgpio.
- Fixed labgrid-client forward --remote/-R, which used either the LOCAL part of --local/-L accidentally (if specified) or raised an UnboundLocalError.
- Fix labgrid-client exit code on keyboard interrupt.

8.1.3 Known issues in 0.4.1

8.2 Release 0.4.0 (unreleased)

8.2.1 New Features in 0.4.0

- Duplicate bindings for the same driver are now allowed (see the QEMUDriver)
- The *NetworkPowerDriver* now additionally supports: - Siglent SPD3000X series power supplies
- Labgrid client lock now enforces that all matches need to be fulfilled.
- Support for USB HID relays has been added.
- UBootDriver now allows overriding of currently fixed await boot timeout via new `boot_timeout` argument.
- With `--lg-colored-steps`, two new dark and light color schemes which only use the standard 8 ANSI colors can be set in `LG_COLOR_SCHEME`. The existing color schemes have been renamed to `dark-256color` and `light-256color`. Also, the *ColoredStepReporter* now tries to autodetect whether the terminal supports 8 or 256 colors, and defaults to the respective dark variant. The 256-color schemes now use purple instead of green for the `run` lines to make them easier distinguishable from pytest's "PASSED" output.
- Network controlled relay providing GET/PUT based REST API
- The QEMUDriver gains support for -bios and qcow2 images.
- Support for audio input has been added.

- Usage of sshpass for SSH password input has been replaced with the SSH_ASKPASS environment variable.
- Labgrid supports the Linux Automation GmBH USB Mux now.
- NetworkManager control support on the exporter has been added. This allows control of bluetooth and wifi connected to the exporter.
- TFTP-/NFS-/HTTPProvider has been added, allowing easy staging of files for the DUT to later retrieve.
- Improved LG_PROXY documentation in docs/usage.rst.
- Exporter now checks /usr/sbin/ser2net for SerialPortExport
- Support for Tasmota-flashed power outlets controlled via MQTT has been added.
- The OpenOCDDriver has been reworked with new options and better output.
- A script to synchronize places to an external description was added.
- ShellDriver has regained the support to retrieve the active interface and IP addresses.
- Labgrid has gained support for HTTP Video streams.
- A settle time for the ShellDriver has been added to wait for chatty systems to settle before interacting with the shell.
- Support for Macrosilicon HDMI to USB (MJPEG) adapters was added.
- Console logfiles can now be created by the labgrid client command.
- A ManualSwitchDriver has been added to prompt the user to flip a switch or set a jumper.
- AndroidFastbootDriver now supports booting/flashing images preconfigured in the environment configuration.

8.2.2 Bug fixes in 0.4.0

- pytest --lg-log foobar now creates the folder foobar before trying to write the log into it, and error handling was improved so that all possible errors that can occur when opening the log file are reported to stderr.
- gstreamer log messages are now suppressed when using labgrid-client video.
- Travis CI has been dropped for Github Actions.

8.2.3 Breaking changes in 0.4.0

- EthernetInterface has been renamed to NetworkInterface.

8.2.4 Known issues in 0.4.0

- Some client commands return 0 even if the command failed.
- Currently empty passwords are not well supported by the ShellDriver

8.3 Release 0.3.0 (released Jan 22, 2021)

8.3.1 New Features in 0.3.0

- All *CommandProtocol* drivers support the poll_until_success method.

- The new *FileDigitalOutputDriver* respresents a digital signal with a file.
- The new *GpioDigitalOutputDriver* controls the state of a GPIO via the sysfs interface.
- Crossbar and autobahn have been updated to 19.3.3 and 19.3.5 respectively.
- The InfoDriver was removed. The functions have been integrated into the labgridhelper library, please use the library for the old functionality.
- labgrid-client write-image subcommand: labgrid client now has a write-image command to write images onto block devices.
- labgrid-client ssh now also uses port from NetworkService resource if available
- The PLACE and STATE variables used by labgrid-client are replaced by LG_PLACE and LG_STATE, the old variables are still supported for the time being.
- The SSHDriver's keyfile attribute is now specified relative to the config file just like the images are.
- The ShellDriver's keyfile attribute is now specified relative to the config file just like the images are.
- labgrid-client -P <PROXY> and the LG_PROXY enviroment variable can be used to access the coordinator and network resources via that SSH proxy host. Drivers which run commands via SSH to the exporter still connect directly, allowing custom configuration in the user's .ssh/config as needed. Note that not all drivers have been updated to use the ProxyManager yet.
- Deditec RELAIS8 devices are now supported by the *DeditecRelaisDriver*.
- The *RKUSBDriver* was added to support the rockchip serial download mode.
- The *USBStorageDriver* gained support for BMAP.
- Flashrom support added, by hard-wiring e.g. an exporter to the DUT, the ROM on the DUT can be written directly. The flashrom driver implements the bootstrap protocol.
- AndroidFastbootDriver now supports 'getvar' and 'oem getenv' subcommands.
- The coordinator now updates the resource acquired state at the exporter. Accordingly, the exporter now starts ser2net only when a resources is aquired. Furthermore, resource conflicts between places are now detected.
- Labgrid now uses the *ProcessWrapper* for externally called processes. This should include output from these calls better inside the test runs.
- The binding dictionary can now supports type name strings in addition to the types themselves, avoiding the need to import a specific protocol or driver in some cases.
- The remote infrastructure gained support for place reservations, for further information check the section in the documentation.
- The *SigrokDriver* gained support for the Manson HCS-2302, it allows enabling and disabling channels, measurement and setting the current and voltage limit.
- labgrid-client write-image gained new arguments: --partition, --skip, --seek.
- Support for Sentry PDUs has been added.
- Strategies now implement a force method, to force a strategy state irrespective of the current state.
- SSH Connections can now be proxied over the exporter, used by adding a device suffix to the *NetworkService* address.
- UBootDriver now allows overriding of default boot command (run bootcmd) via new boot_command argument.
- The config file supports per-target options, in addition to global options.
- Add power driver to support GEMBIRD SiS-PM implementing SiSPMPowerDriver.

- A cleanup of the cleanup functions was performed, labgrid should now clean up after itself and throws an error if the user needs to handle it himself.
- labgrid-client now respects the `LG_HOSTNAME` and `LG_USERNAME` environment variables to set the hostname and username when accessing resources.
- PyVISA support added, allowing to use PyVISA controlled test equipment from Labgrid.
- labgrid-client `write-image` gained a new argument `--mode` to specify which tool should be used to write the image (either `dd` or `bmaptool`)
- Exporter configuration file `exporter.yaml` now allows use of environment variables.

8.3.2 Breaking changes in 0.3.0

- `ManagedFile` now saves the files in a different directory on the exporter. Previously `/tmp` was used, labgrid now uses `/var/cache/labgrid`. A `tmpfiles` example configuration for `systemd` is provided in the `/contrib` directory. It is also highly recommended to enable `fs.protected_regular=1` and `fs.protected_fifos=1` for kernels ≥ 4.19 . This requires user intervention after the upgrade to create the directory and setup the cleanup job.
- `@attr.s(cmp=False)` is deprecated and all classes have been moved to `@attr.s(eq=False)`, this release requires attrs version 19.2.0
- Coordinator work dir is now set to the same dir as the crossbar configuration dir. Hence coordinator specific files like `places.yaml` and `resources.yaml` are now also stored in the crossbar configuration folder. Previously it would use ...
- The `HawkbittTestClient` and `USBStick` classes have been removed
- The original `USBStorageDriver` was removed, `NetworkUSBStorageDriver` was renamed to `USBStorageDriver`. A deprecated `NetworkUSBStorageDriver` exists temporarily for compatibility reasons.

8.3.3 Known issues in 0.3.0

- There are several reports of `sshpass` used within the `SSHDriver` not working in call cases or only on the first connection.
- Some client commands return 0 even if the command failed.
- Currently empty passwords are not well supported by the `ShellDriver`

8.4 Release 0.2.0 (released Jan 4, 2019)

8.4.1 New Features in 0.2.0

- A colored StepReporter was added and can be used with `pytest --lg-colored-steps`.
- labgrid-client can now use the last changed information to sort listed resources and places.
- labgrid-client `ssh` now uses ip/user/password from `NetworkService` resource if available
- The `pytest` plugin option `--lg-log` enables logging of the serial traffic into a file (see below).
- The environment files can contain feature flags which can be used to control which tests are run in `pytest`.
- `LG_*` variables from the OS environment can be used in the config file with the `!template` directive.

- The new “managed file” support takes a local file and synchronizes it to a resource on a remote host. If the resource is not a *NetworkResource*, the local file is used instead.
- ProxyManager: a class to automatically create ssh forwardings to proxy connections over the exporter
- SSHManager: a global manager to multiplex connections to different exporters
- The target now saves its attached drivers, resources and protocols in a lookup table, avoiding the need of importing many Drivers and Protocols (see *Syntactic sugar for Targets*)
- When multiple Drivers implement the same Protocol, the best one can be selected using a priority (see below).
- The new subcommand `labgrid-client monitor` shows resource or places changes as they happen, which is useful during development or debugging.
- The environment yaml file can now list Python files (under the ‘imports’ key). They are imported before constructing the Targets, which simplifies using custom Resources, Drivers or Strategies.
- The pytest plugin now stores metadata about the environment yaml file in the junit XML output.
- The `labgrid-client` tool now understands a `--state` option to transition to the provided state using a *Strategy*. This requires an environment yaml file with a *RemotePlace* Resources and matching Drivers.
- Resource matches for places configured in the coordinator can now have a name, allowing multiple resources with the same class.
- The new `Target.__getitem__` method makes writing using protocols less verbose.
- Experimental: The `labgrid-autoinstall` tool was added (see below).

8.4.2 New and Updated Drivers

- The new `DigitalOutputResetDriver` adapts a driver implementing the `DigitalOutputProtocol` to the `ResetProtocol`.
- The new `ModbusCoilDriver` support outputs on a ModbusTCP device.
- The new `NetworkUSBStorageDriver` allows writing to remote USB storage devices (such as SD cards or memory sticks connected to a mux).
- The new `QEMUDriver` runs a system image in QEmu and implements the `ConsoleProtocol` and `PowerProtocol`. This allows using labgrid without any real hardware.
- The new `QuartusHPSDriver` controls the “Quartus Prime Programmer and Tools” to flash a target’s QSPI.
- The new `SerialPortDigitalOutputDriver` controls the state of a GPIO using the control lines of a serial port.
- The new `SigrokDriver` uses a (local or remote) device supported by sigrok to record samples.
- The new `SmallUBootDriver` supports the extremely limited U-Boot found in cheap WiFi routers.
- The new `USBSDMuxDriver` controls a Pengutronix USB-SD-Mux device.
- The new `USBTMCDriver` can fetch measurements and screenshots from the “Keysight DSOX2000 series” and the “Tektronix TDS 2000 series”.
- The new `USBVideoDriver` can stream video from a remote H.264 UVC (USB Video Class) camera using gstreamer over SSH. Currently, configuration for the “Logitech HD Pro Webcam C920” exists.
- The new `XenaDriver` allows interacting with Xena network testing equipment.
- The new `YKUSHPowerDriver` and `USBPowerDriver` support software-controlled USB hubs.
- The bootloader drivers now have a `reset` method.

- The *BareboxDriver*'s boot string is now configurable, which allows it to work with the `quiet` Linux boot parameter.
- The *IMXUSBLoader* now recognizes more USB IDs.
- The *OpenOCDDriver* is now more flexible with loading configuration files.
- The *NetworkPowerDriver* now additionally supports:
 - 24 port “Gude Expert Power Control 8080”
 - 8 port “Gude Expert Power Control 8316”
 - NETIO 4 models (via telnet)
 - a simple REST interface
- The *SerialDriver* now supports using plain TCP instead of RFC 2217, which is needed from some console servers.
- The *ShellDriver* has been improved:
 - It supports configuring the various timeouts used during the login process.
 - It can use xmodem to transfer file from and to the target.

8.4.3 Incompatible Changes

- When using the coordinator, it must be upgrade together with the clients because of the newly introduce match names.
- Resources and Drivers now need to be created with an explicit name parameter. It can be `None` to keep the old behaviour. See below for details.
- Classes derived from *Resource* or *Driver* now need to use `@attr.s(cmp=False)` instead of `@attr.s` because of a change in the attrs module version 17.1.0.

8.4.4 Syntactic sugar for Targets

Targets are now able to retrieve requested drivers, resources or protocols by name instead of by class. This allows removing many imports, e.g.

```
from labgrid.driver import ShellDriver

shell = target.get_driver(ShellDriver)
```

becomes

```
shell = target.get_driver("ShellDriver")
```

Also take a look at the examples, they have been ported to the new syntax as well.

8.4.5 Multiple Driver Instances

For some Protocols, it is useful to allow multiple instances.

DigitalOutputProtocol: A board may have two jumpers to control the boot mode in addition to a reset GPIO. Previously, it was not possible to use these on a single target.

ConsoleProtocol: Some boards have multiple console interfaces or expose a login prompt via a USB serial gadget.

PowerProtocol: In some cases, multiple power ports need to be controlled for one Target.

To support these use cases, Resources and Drivers must be created with a name parameter. When updating your code to this version, you can either simply set the name to `None` to keep the previous behaviour. Alternatively, pass a string as the name.

Old:

```
>>> t = Target("MyTarget")
>>> SerialPort(t)
SerialPort(target=Target(name='MyTarget', env=None), state=<BindingState.bound: 1>, ↴
    avail=True, port=None, speed=115200)
>>> SerialDriver(t)
SerialDriver(target=Target(name='MyTarget', env=None), state=<BindingState.bound: 1>, ↴
    txdelay=0.0)
```

New (with `name=None`):

```
>>> t = Target("MyTarget")
>>> SerialPort(t, None)
SerialPort(target=Target(name='MyTarget', env=None), name=None, state=<BindingState. ↴
    bound: 1>, avail=True, port=None, speed=115200)
>>> SerialDriver(t, None)
SerialDriver(target=Target(name='MyTarget', env=None), name=None, state=<BindingState. ↴
    bound: 1>, txdelay=0.0)
```

New (with real names):

```
>>> t = Target("MyTarget")
>>> SerialPort(t, "MyPort")
SerialPort(target=Target(name='MyTarget', env=None), name='MyPort', state= ↴
    <BindingState.bound: 1>, avail=True, port=None, speed=115200)
>>> SerialDriver(t, "MyDriver")
SerialDriver(target=Target(name='MyTarget', env=None), name='MyDriver', state= ↴
    <BindingState.bound: 1>, txdelay=0.0)
```

8.4.6 Priorities

Each driver supports a `priorities` class variable. This allows drivers which implement the same protocol to add a priority option to each of their protocols. This way a `NetworkPowerDriver` can implement the `ResetProtocol`, but if another `ResetProtocol` driver with a higher protocol is available, it will be selected instead. See the documentation for details.

8.4.7 ConsoleLogging Reporter

The `ConsoleLoggingReporter` can be used with the `pytest` plugin or the library. It records the Data send from a DUT to the computer running `labgrid`. The logfile contains a header with the name of the device from the environment configuration and a timestamp.

When using the library, the reporter can be started with:

```
from labgrid.consoleloggingreporter import ConsoleLoggingReporter
ConsoleLoggingReporter.start(".")
```

where “.” is the output directory.

The pytest plugin accepts the `--lg-log` commandline option, either with or without an output path.

8.4.8 Auto-Installer Tool

To simplify using labgrid for provisioning several boards in parallel, the `labgrid-autoinstall` tool was added. It reads a YAML file defining several targets and a Python script to be run for each board. Internally, it spawns a child process for each target, which waits until a matching resource becomes available and then executes the script.

For example, this makes it simple to load a bootloader via the [*BootstrapProtocol*](#), use the [*AndroidFastbootDriver*](#) to upload a kernel with initramfs and then write the target’s eMMC over a USB Mass Storage gadget.

Note: `labgrid-autoinstall` is still experimental and no documentation has been written.

Contributions from: Ahmad Fatoum, Bastian Krause, Björn Lässig, Chris Fiege, Enrico Joerns, Esben Haabendal, Felix Lampe, Florian Scherf, Georg Hofmann, Jan Lübbe, Jan Remmet, Johannes Nau, Kasper Rebsch, Kjeld Flarup, Laurentiu Palcu, Oleksij Rempel, Roland Hieber, Rouven Czerwinski, Stanley Phoong Cheong Kwan, Steffen Trumtrar, Tobi Gschwendtner, Vincent Prince

8.5 Release 0.1.0 (released May 11, 2017)

This is the initial release of labgrid.

MODULES

9.1 labgrid package

9.1.1 Subpackages

labgrid.autoconfigure package

Submodules

labgrid.autoconfigure.main module

The autoinstall.main module runs an installation script automatically on multiple targets.

```
class labgrid.autoconfigure.main.Handler(env, args, name)
    Bases: multiprocessing.context.Process

    __init__(env, args, name)
        Initialize self. See help(type(self)) for accurate signature.

    run()
        Method to be run in sub-process; can be overridden in sub-class

    run_once()

    __module__ = 'labgrid.autoconfigure.main'

class labgrid.autoconfigure.main.Manager(env, args)
    Bases: object

    __init__(env, args)
        Initialize self. See help(type(self)) for accurate signature.

    configure()

    start()

    join()

    __dict__ = mappingproxy({'__module__': 'labgrid.autoconfigure.main', '__init__': <func>,
                           '__module__': 'labgrid.autoconfigure.main'}

    __weakref__
        list of weak references to the object (if defined)

labgrid.autoconfigure.main.main()
```

labgrid.driver package

Subpackages

labgrid.driver.power package

Submodules

labgrid.driver.power.apc module

```
labgrid.driver.power.apc.power_set (host, port, index, value)
```

```
labgrid.driver.power.apc.power_get (host, port, index)
```

labgrid.driver.power.digipower module

```
labgrid.driver.power.digipower.power_set (host, port, index, value)
```

```
labgrid.driver.power.digipower.power_get (host, port, index)
```

labgrid.driver.power.gude module

```
labgrid.driver.power.gude.power_set (host, port, index, value)
```

```
labgrid.driver.power.gude.power_get (host, port, index)
```

labgrid.driver.power.gude24 module

This driver implements a power port for Gude Power Switches with up to 24 ports. These switches differ in their API to the previous 8-port switches for set- and get-commands.

Driver has been tested with: * Gude Expert Power Control 8080

```
labgrid.driver.power.gude24.power_set (host, port, index, value)
```

The gude web-interface uses different pages for the three groups of switches. The web-interface always uses the ‘correct’ page to set a value. But commands for all pages are accepted on all pages.

```
labgrid.driver.power.gude24.power_get (host, port, index)
```

Get the status of a port.

```
labgrid.driver.power.gude24.get_state (request, index)
```

The status of the ports is made available via a html <meta>-tag using the following format: <meta http-equiv="powerstate" content="Power Port 1,0"> Again the status of all ports is made available on all pages.

labgrid.driver.power.gude8031 module

```
labgrid.driver.power.gude8031.power_set (host, port, index, value)
```

```
labgrid.driver.power.gude8031.power_get (host, port, index)
```

labgrid.driver.power.gude8316 module

```
labgrid.driver.power.gude8316.power_set (host, port, index, value)
labgrid.driver.power.gude8316.power_get (host, port, index)
```

labgrid.driver.power.netio module

```
labgrid.driver.power.netio.power_set (host, port, index, value)
labgrid.driver.power.netio.power_get (host, port, index)
```

labgrid.driver.power.netio_kshell module

tested with NETIO 4C, should be compatible with all NETIO 4-models

```
labgrid.driver.power.netio_kshell.power_set (host, port, index, value)
labgrid.driver.power.netio_kshell.power_get (host, port, index)
```

labgrid.driver.power.rest module

Rest interface for controlling power port, using PUT / GET on a URL.

NetworkPowerPort: model: rest host: '<http://192.168.0.42/relay/{index}/value>' index: 3

Will do a GET request to <http://192.168.0.42/relay/3/value> to get current relay state, expecting a response of either '0' (relay off) or '1' (relay on), and a PUT request to <http://192.168.0.42/relay/3/value> with request data of '0' or '1' to change relay state.

```
labgrid.driver.power.rest.power_set (host, port, index, value)
labgrid.driver.power.rest.power_get (host, port, index)
```

labgrid.driver.power.sentry module

This driver was tested on those models: CW-24VDD and 4805-XLS-16 but should be working on all devices implementing Sentry3-MIB

```
labgrid.driver.power.sentry.power_set (host, port, index, value)
labgrid.driver.power.sentry.power_get (host, port, index)
```

labgrid.driver.power.siglent module

labgrid.driver.power.simplerest module

Simple rest interface for Power Port. Used for ex. misc Raspberry Pi configs Author: Kjeld Flarup <kfa@deif.com>

The URL given in hosts in exporter.yaml must replace {value} with '0' or '1' It is optional whether to use {index} or not.

NetworkPowerPort: model: simplerest host: '<http://172.17.180.53:9999/relay/{index}/{value}>' index: 0

```
labgrid.driver.power.simplerest.power_set (host, port, index, value)
```

```
labgrid.driver.power.simplerest.power_get (host, port, index)
```

labgrid.driver.usbtmc package

Submodules

labgrid.driver.usbtmc.keysight_dsox2000 module

```
labgrid.driver.usbtmc.keysight_dsox2000.get_channel_info (driver, channel)
```

```
labgrid.driver.usbtmc.keysight_dsox2000.get_channel_values (driver, channel)
```

```
labgrid.driver.usbtmc.keysight_dsox2000.get_screenshot_png (driver)
```

labgrid.driver.usbtmc.tektronix_tds2000 module

```
labgrid.driver.usbtmc.tektronix_tds2000.get_channel_info (driver, channel)
```

```
labgrid.driver.usbtmc.tektronix_tds2000.get_channel_values (driver, channel)
```

```
labgrid.driver.usbtmc.tektronix_tds2000.get_screenshot_tiff (driver)
```

Submodules

labgrid.driver.bareboxdriver module

```
class labgrid.driver.bareboxdriver.BareboxDriver(target, name, prompt='', auto-boot='stop autoboot', interrupt='^', bootstring='Linux version \d', password='', login_timeout=60)
Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver, labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.linuxbootprotocol.LinuxBootProtocol
```

BareboxDriver - Driver to control barebox via the console. BareboxDriver binds on top of a ConsoleProtocol.

On activation, the BareboxDriver will look for the barebox prompt on the console, stopping any autoboot counters if necessary, and provide access to the barebox shell.

Parameters

- **prompt** (*str*) – barebox prompt to match
- **autoboot** (*regex*) – optional, autoboot message to match
- **interrupt** (*str*) – optional, string to interrupt autoboot (use “” for CTRL-C)
- **bootstring** (*regex*) – optional, regex indicating that the Linux Kernel is booting
- **password** (*str*) – optional, password to use for access to the shell
- **login_timeout** (*int*) – optional, timeout for access to the shell

```
bindings = {'console': <class 'labgrid.protocol.consoleprotocol.ConsoleProtocol'>}
```

```

__attrs_post_init__()

on_activate()
    Activate the BareboxDriver

    This function tries to login if not already active

on_deactivate()
    Deactivate the BareboxDriver

    Simply sets the internal status to 0

run(cmd: str, *, timeout: int = 30)
    Run a command

reset()
    Reset the board via a CPU reset

get_status()
    Retrieve status of the BareboxDriver 0 means inactive, 1 means active.

    Returns status of the driver

    Return type int

await_boot()
    Wait for the initial Linux version string to verify we successfully jumped into the kernel.

boot(name: str)
    Boot the default or a specific boot entry

    Parameters name(str) – name of the entry to boot

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name, prompt='', autoboot='stop autoboot', interrupt='\n', bootstring='Linux ver-
         sion \d', password='', login_timeout=60) → None
    Method generated by attrs for class BareboxDriver.

__module__ = 'labgrid.driver.bareboxdriver'

__repr__()
    Method generated by attrs for class BareboxDriver.

```

labgrid.driver.commandmixin module

```

class labgrid.driver.commandmixin.CommandMixin
Bases: object

CommandMixin implementing common functions for drivers which support the CommandProtocol

__attrs_post_init__()

wait_for(cmd, pattern, timeout=30.0, sleepduration=1)
    Wait until the pattern is detected in the output of cmd. Raises ExecutionError when the timeout expires.

```

Parameters

- cmd (str) – command to run on the shell
- pattern (str) – pattern as a string to look for in the output
- timeout (float) – timeout for the pattern detection

- **sleepduration** (*int*) – sleep time between the runs of the cmd

poll_until_success (*cmd*, *, *expected*=0, *tries*=*None*, *timeout*=30.0, *sleepduration*=1)

Poll a command until a specific exit code is detected. Takes a timeout and the number of tries to run the cmd. The sleepduration argument sets the duration between runs of the cmd.

Parameters

- **cmd** (*str*) – command to run on the shell
- **expected** (*int*) – exitcode to detect
- **tries** (*int*) – number of tries, can be *None* for infinite tries
- **timeout** (*float*) – timeout for the exitcode detection
- **sleepduration** (*int*) – sleep time between the runs of the cmd

Returns whether the command finally executed sucessfully

Return type bool

run_check (*cmd*: *str*, *, *timeout*=30, *codec*=’utf-8’, *decodeerrors*=’strict’)

External run_check function, only available if the driver is active. Runs the supplied command and returns the stdout, raises an ExecutionError otherwise.

Parameters **cmd** (*str*) – command to run on the shell

Returns stdout of the executed command

Return type List[*str*]

```
__dict__ = mappingproxy({ '__module__': 'labgrid.driver.commandMixin', '__doc__': '\n__module__ = 'labgrid.driver.commandMixin'\n__weakref__\n    list of weak references to the object (if defined)
```

labgrid.driver.common module

class labgrid.driver.common.Driver(*target*, *name*)
Bases: *labgrid.binding.BindingMixin*

Represents a driver which is used externally or by other drivers. It implements functionality based on directly accessing the Resource or by building on top of other Drivers.

Life cycle: - create - bind (n times) - activate - usage - deactivate

__attrs_post_init__()

get_priority (*protocol*)

Retrieve the priority for a given protocol

Arguments: protocol - protocol to search for in the MRO

Returns value of the priority if it is found, 0 otherwise.

Return type Int

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name) → None
```

Method generated by attrs for class Driver.

```
__module__ = 'labgrid.driver.common'
```

__repr__()

Method generated by attrs for class Driver.

```
labgrid.driver.common.check_file(filename, *, command_prefix=[])
```

labgrid.driver.consoleexpectmixin module

```
class labgrid.driver.consoleexpectmixin.ConsoleExpectMixin
```

Bases: object

Console driver mixin to implement the read, write, expect and sendline methods. It uses the internal _read and _write methods.

The class using the ConsoleExpectMixin must provide a logger and a txdelay attribute.

__attrs_post_init__()

```
read(size=1, timeout=0.0)
```

```
write(data)
```

```
sendline(line)
```

```
sendcontrol(char)
```

```
expect(pattern, timeout=-1)
```

```
settle(quiet_time, timeout=120.0)
```

```
resolve_conflicts(client)
```

```
__dict__ = mappingproxy({ '__module__': 'labgrid.driver.consoleexpectmixin', '__doc__': ''})
```

```
__module__ = 'labgrid.driver.consoleexpectmixin'
```

__weakref__

list of weak references to the object (if defined)

labgrid.driver.deditecrelaisdriver module

```
class labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver(target, name)
```

Bases: *labgrid.driver.common.Driver*, *labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol*

```
bindings = {'relais': {<class 'labgrid.resource.remote.NetworkDeditecRelais8'>, 'Dedi'}}
```

__attrs_post_init__()

```
on_activate()
```

Called by the Target when this object has been activated

```
on_deactivate()
```

Called by the Target when this object has been deactivated

```
set(status)
```

Implementations should set the status of the digital output

```
get()
```

Implementations should return the status of the digital output.

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))
```

```
__init__(target, name) → None
    Method generated by attrs for class DeditecRelaisDriver.

__module__ = 'labgrid.driver.deditecrelaisdriver'

__repr__()
    Method generated by attrs for class DeditecRelaisDriver.
```

labgrid.driver.dockerdriver module

Class for connecting to a docker daemon running on the host machine.

```
class labgrid.driver.dockerdriver.DockerDriver(target, name, image_uri=None,
                                               command=None, volumes=None,
                                               container_name=None, environment=None,
                                               host_config=None,
                                               network_services=None)
Bases: labgrid.protocol.powerprotocol.PowerProtocol, labgrid.driver.common.Driver
```

The DockerDriver is used to create docker containers. This is done via communication with a docker daemon.

When a container is created the container is labeled with an cleanup strategy identifier. Currently only one strategy is implemented. This strategy simply deletes all labgrid created containers before each test run. This is to ensure cleanup of dangling containers from crashed tests or hanging containers.

Image pruning is not done by the driver.

For detailed information about the arguments see the “Docker SDK for Python” documentation <https://docker-py.readthedocs.io/en/stable/containers.html#container-objects>

Parameters **bindings** (*dict*) – The labgrid bindings

Args passed to docker.create_container: image_uri (str): The uri of the image to fetch command (str): The command to execute once container has been created volumes (list): The volumes to declare environment (list): Docker environment variables to set host_config (dict): Docker host configuration parameters network_services (list): Sequence of dicts each specifying a network service that the docker container exposes.

```
bindings = {'docker_daemon': {'DockerDaemon'}}

__attrs_post_init__()

on_activate()
    On activation: 1. Import docker module (_client and _container remain available) 2. Connect to the docker daemon 3. Pull requested image from docker registry if needed 4. Create the new container according to parameters from conf

on_deactivate()
    Remove container after use

on()
    Start the container created during activation

off()
    Stop the container created during activation

cycle()
    Cycle the docker container by stopping and starting it

__abstractmethods__ = frozenset({})
```

```

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, image_uri=None, command=None, volumes=None, container_name=None,
         environment=None, host_config=None, network_services=None) → None
    Method generated by attrs for class DockerDriver.

__module__ = 'labgrid.driver.dockerdriver'

__repr__()
    Method generated by attrs for class DockerDriver.

```

labgrid.driver.exception module

```

exception labgrid.driver.exception.ExecutionError(msg, stdout=None, stderr=None)
Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>)
__init__(msg, stdout=None, stderr=None) → None
    Method generated by attrs for class ExecutionError.

__module__ = 'labgrid.driver.exception'

__repr__()
    Method generated by attrs for class ExecutionError.

__weakref__
    list of weak references to the object (if defined)

exception labgrid.driver.exception.CleanUpError(msg)
Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>)
__init__(msg) → None
    Method generated by attrs for class CleanUpError.

__module__ = 'labgrid.driver.exception'

__repr__()
    Method generated by attrs for class CleanUpError.

__weakref__
    list of weak references to the object (if defined)

```

labgrid.driver.externalconsoledriver module

```

class labgrid.driver.externalconsoledriver.ExternalConsoleDriver(target, name,
                                                               cmd, txdelay=0.0)
Bases: labgrid.driver.consoleexpectMixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.consoleprotocol.ConsoleProtocol

Driver implementing the ConsoleProtocol interface using a subprocess

__attrs_post_init__()

open()
    Starts the subprocess, does nothing if it is already closed

```

```
close()
    Stops the subprocess, does nothing if it is already closed

on_deactivate()
    Called by the Target when this object has been deactivated

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name, cmd, txdelay=0.0) → None
    Method generated by attrs for class ExternalConsoleDriver.

__module__ = 'labgrid.driver.externalconsoledriver'

__repr__()
    Method generated by attrs for class ExternalConsoleDriver.
```

labgrid.driver.fake module

```
class labgrid.driver.fake.FakeConsoleDriver(target, name, txdelay=0.0)
Bases: labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.consoleprotocol.ConsoleProtocol

__attrs_post_init__()

open()
close()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name, txdelay=0.0) → None
    Method generated by attrs for class FakeConsoleDriver.

__module__ = 'labgrid.driver.fake'

__repr__()
    Method generated by attrs for class FakeConsoleDriver.

class labgrid.driver.fake.FakeCommandDriver(target, name)
Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver, labgrid.protocol.commandprotocol.CommandProtocol

run(*args, timeout=None)
    Run a command

run_check(*args)
    External run_check function, only available if the driver is active. Runs the supplied command and returns the stdout, raises an ExecutionError otherwise.

    Parameters cmd(str) – command to run on the shell
    Returns stdout of the executed command
    Return type List[str]

get_status()
    Get status of the Driver

__abstractmethods__ = frozenset({})
```

```

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class FakeCommandDriver.
__module__ = 'labgrid.driver.fake'
__repr__()
    Method generated by attrs for class FakeCommandDriver.

class labgrid.driver.fake.FakeFileTransferDriver(target, name)
Bases: labgrid.driver.common.Driver, labgrid.protocol.filetransferprotocol.
FileTransferProtocol

get(*args)
put(*args)
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class FakeFileTransferDriver.
__module__ = 'labgrid.driver.fake'
__repr__()
    Method generated by attrs for class FakeFileTransferDriver.

class labgrid.driver.fake.FakePowerDriver(target, name)
Bases: labgrid.driver.common.Driver, labgrid.protocol.powerprotocol.
PowerProtocol

on(*args)
off(*args)
cycle(*args)
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class FakePowerDriver.
__module__ = 'labgrid.driver.fake'
__repr__()
    Method generated by attrs for class FakePowerDriver.

```

labgrid.driver.fastbootdriver module

```

class labgrid.driver.fastbootdriver.AndroidFastbootDriver(target, name,
                                                               boot_image=None,
                                                               flash_images={},
                                                               sparse_size=None)
Bases: labgrid.driver.common.Driver
bindings = {'fastboot': {'AndroidFastboot', 'NetworkAndroidFastboot'}}
__attrs_post_init__()

```

```
on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

__call__(*args)
    Call self as a function.

boot(filename=None)
flash(partition, filename=None)
flash_all()
run(cmd)
continue_boot()
getvar(var)
    Return variable value via ‘fastboot getvar <var>’.

oem_getenv(var)
    Return barebox environment variable value via ‘fastboot oem getenv <var>’.

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, boot_image=None, flash_images={}, sparse_size=None) → None
    Method generated by attrs for class AndroidFastbootDriver.

__module__ = 'labgrid.driver.fastbootdriver'
__repr__()
    Method generated by attrs for class AndroidFastbootDriver.
```

labgrid.driver.filédigitaloutput module

```
class labgrid.driver.filédigitaloutput.FileDigitalOutputDriver(target, name,
                    filepath,
                    false_repr='0n',
                    true_repr='1n')
Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
```

Two arbitrary string values false_repr and true_repr are defined as representations for False and True. These values are written to a file and read from it. If the file’s content does not match any of the representations it defaults to False. A prime example for using this driver is Linux’s sysfs.

```
__attrs_post_init__()
get()
    Implementations should return the status of the digital output.

set(status)
    Implementations should set the status of the digital output

__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, filepath, false_repr='0\\n', true_repr='1\\n') → None
    Method generated by attrs for class FileDigitalOutputDriver.

__module__ = 'labgrid.driver.filédigitaloutput'
```

__repr__()

Method generated by attrs for class FileDigitalOutputDriver.

labgrid.driver.flashromdriver module

```
class labgrid.driver.flashromdriver.FlashromDriver(target, name, image=None)
Bases: labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.
BootstrapProtocol
```

The Flashrom driver used the flashrom utility to write an image to a raw rom. The driver is a pure wrapper of the flashrom utility

```
bindings = {'flashrom_resource': {<class 'labgrid.resource.flashrom.NetworkFlashrom'>
__attrs_post_init__()
on_activate()
    Called by the Target when this object has been activated
on_deactivate()
    Called by the Target when this object has been deactivated
__call__(*args)
    Call self as a function.
load(filename=None)
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(<i>target, name, image=None</i>) → None
    Method generated by attrs for class FlashromDriver.
__module__ = 'labgrid.driver.flashromdriver'
__repr__()
    Method generated by attrs for class FlashromDriver.
```

labgrid.driver.flashscriptdriver module

```
class labgrid.driver.flashscriptdriver.FlashScriptDriver(target, name, script=None, args=NOTHING)
Bases: labgrid.driver.common.Driver
```

```
bindings = {'device': {'NetworkUSBFlashableDevice', 'USBFlashableDevice'}}
```

```
__attrs_post_init__()
```

```
on_activate()
    Called by the Target when this object has been activated
```

```
on_deactivate()
    Called by the Target when this object has been deactivated
```

```
flash(script=None, args=None)
```

Transfers and remotely executes the script

Parameters **script** (*str*) – optional, path to the script to write to bound Flashable Device

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, script=None, args=NOTHING) → None
    Method generated by attrs for class FlashScriptDriver.

__module__ = 'labgrid.driver.flashscriptdriver'

__repr__()
    Method generated by attrs for class FlashScriptDriver.
```

labgrid.driver.gpiodriver module

All GPIO-related drivers

```
class labgrid.driver.gpiodriver.GpioDigitalOutputDriver(target, name)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol

    bindings = {'gpio': { 'NetworkSysfsGPIO', 'SysfsGPIO' }}

    __attrs_post_init__()

    on_activate()
        Called by the Target when this object has been activated

    on_deactivate()
        Called by the Target when this object has been deactivated

    set(status)
        Implementations should set the status of the digital output

    get()
        Implementations should return the status of the digital output.

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

    __init__(target, name) → None
        Method generated by attrs for class GpioDigitalOutputDriver.

    __module__ = 'labgrid.driver.gpiodriver'

    __repr__()
        Method generated by attrs for class GpioDigitalOutputDriver.
```

labgrid.driver.httpvideodriver module

```
class labgrid.driver.httpvideodriver.HTTPVideoDriver(target, name)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.videoprotocol.VideoProtocol

    bindings = {'video': 'HTTPVideoStream'}

    get_qualities()

    stream(quality_hint=None)

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

    __init__(target, name) → None
        Method generated by attrs for class HTTPVideoDriver.
```

```
__module__ = 'labgrid.driver.httpvideodriver'
__repr__()
    Method generated by attrs for class HTTPVideoDriver.
```

labgrid.driver.lxaiobusdriver module

```
class labgrid.driver.lxaiobusdriver.LXAIOBusPIODriver(target, name)
Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.
DigitalOutputProtocol

bindings = {'pio': {'LXAIOBusPIO', 'NetworkLXAIOBusPIO'}}

__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

set(status)
    Implementations should set the status of the digital output

get()
    Implementations should return the status of the digital output.

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name) → None
    Method generated by attrs for class LXAIOBusPIODriver.

__module__ = 'labgrid.driver.lxaiobusdriver'

__repr__()
    Method generated by attrs for class LXAIOBusPIODriver.
```

labgrid.driver.lxausbmuxdriver module

```
class labgrid.driver.lxausbmuxdriver.LXAUSBMuxDriver(target, name)
Bases: labgrid.driver.common.Driver

The LXAUSBMuxDriver uses the usbmuxctl tool to control the USBMux hardware

bindings = {'mux': {'LXAUSBMux', 'NetworkLXAUSBMux'}}

__attrs_post_init__()

set_links(links)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name) → None
    Method generated by attrs for class LXAUSBMuxDriver.

__module__ = 'labgrid.driver.lxausbmuxdriver'

__repr__()
    Method generated by attrs for class LXAUSBMuxDriver.
```

labgrid.driver.manualswitchdriver module

```
class labgrid.driver.manualswitchdriver.ManualSwitchDriver(target, name, description=None)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol

    __attrs_post_init__()

    set(status)
        Implementations should set the status of the digital output

    get()
        Implementations should return the status of the digital output.

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

    __init__(target, name, description=None) → None
        Method generated by attrs for class ManualSwitchDriver.

    __module__ = 'labgrid.driver.manualswitchdriver'

    __repr__()
        Method generated by attrs for class ManualSwitchDriver.
```

labgrid.driver.modbusdriver module

```
class labgrid.driver.modbusdriver.ModbusCoilDriver(target, name)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol

    bindings = {'coil': 'ModbusTCPcoil'}

    __attrs_post_init__()

    on_activate()
        Called by the Target when this object has been activated

    on_deactivate()
        Called by the Target when this object has been deactivated

    set(status)
        Implementations should set the status of the digital output

    get()
        Implementations should return the status of the digital output.

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

    __init__(target, name) → None
        Method generated by attrs for class ModbusCoilDriver.

    __module__ = 'labgrid.driver.modbusdriver'

    __repr__()
        Method generated by attrs for class ModbusCoilDriver.
```

labgrid.driver.mqtt module

```
exception labgrid.driver.mqtt.MQTTError
    Bases: Exception

    __module__ = 'labgrid.driver.mqtt'

    __weakref__
        list of weak references to the object (if defined)

class labgrid.driver.mqtt.TasmotaPowerDriver(target, name, delay=2.0, client=None, status=None)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.powerprotocol.PowerProtocol

    bindings = {'power': {'TasmotaPowerPort'}}

    __attrs_post_init__()

    on_activate()
        Called by the Target when this object has been activated

    on_deactivate()
        Called by the Target when this object has been deactivated

    on()

    off()

    cycle()

    get()

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

    __init__(target, name, delay=2.0, client=None, status=None) → None
        Method generated by attrs for class TasmotaPowerDriver.

    __module__ = 'labgrid.driver.mqtt'

    __repr__()
        Method generated by attrs for class TasmotaPowerDriver.
```

labgrid.driver.networkinterfacedriver module

```
class labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver(target, name)
    Bases: labgrid.driver.common.Driver

    bindings = {'iface': {'RemoteNetworkInterface', 'USBNetworkInterface' }}

    __attrs_post_init__()

    on_activate()
        Called by the Target when this object has been activated

    on_deactivate()
        Called by the Target when this object has been deactivated

    configure(settings)
        Set a configuration on this interface and activate it.
```

```
wait_state(expected, timeout=60)
    Wait until the expected state is reached or the timeout expires.

    Possible states include disconnected and activated. See NM's DeviceState for more details.

disable()
    Disable and remove the created labgrid connection.

get_active_settings()
    Get the currently active settings from this interface.

get_settings()
    Get the settings of the labgrid connection for this interface.

get_state()
    Get the current state of this interface.

    This includes information such as the addresses or WiFi connection.

get_dhcpd_leases()
    Get the list of active DHCP leases in shared mode.

    This requires read access to /var/lib/NetworkManager/dnsmasq-* on the exporter.

request_scan()
    Request a scan to update the list visible access points.

get_access_points(scan=None)
    Get the list of currently visible access points.

    When scan is None (the default), it will automatically trigger a scan if the last scan is more than 30 seconds old.

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class NetworkInterfaceDriver.

__module__ = 'labgrid.driver.networkinterfacedriver'
__repr__()
    Method generated by attrs for class NetworkInterfaceDriver.
```

labgrid.driver.onewiredriver module

```
class labgrid.driver.onewiredriver.OneWirePIODriver(target, name)
Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol

bindings = {'port': 'OneWirePIO'}

__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

set(status)
    Implementations should set the status of the digital output
```

```

get()
    Implementations should return the status of the digital output.

__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class OneWirePIODriver.

__module__ = 'labgrid.driver.onewiredriver'
__repr__()
    Method generated by attrs for class OneWirePIODriver.

```

labgrid.driver.openocddriver module

```

class labgrid.driver.openocddriver.OpenOCDDriver(target, name, config=NOTHING,
                                                search=NOTHING, image=None, interface_config=None,
                                                board_config=None, load_commands=None)
Bases: labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.
BootstrapProtocol

bindings = {'interface': ['AlteraUSBBlaster', 'NetworkAlteraUSBBlaster', 'NetworkUSBD
__attrs_post_init__()
load(filename=None)
execute(commands: list)

__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, config=NOTHING, search=NOTHING, image=None, interface_config=None,
        board_config=None, load_commands=None) → None
    Method generated by attrs for class OpenOCDDriver.

__module__ = 'labgrid.driver.openocddriver'
__repr__()
    Method generated by attrs for class OpenOCDDriver.

```

labgrid.driver.powerdriver module

```

class labgrid.driver.powerdriver.PowerResetMixin
Bases: labgrid.protocol.resetprotocol.ResetProtocol

ResetMixin implements the ResetProtocol for drivers which support the PowerProtocol

priorities = {<class 'labgrid.protocol.resetprotocol.ResetProtocol'>: -10}
__attrs_post_init__()
reset()

__abstractmethods__ = frozenset({})
__attrs_attrs__ = ()

```

```
__init__() → None
    Method generated by attrs for class PowerResetMixin.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class PowerResetMixin.

class labgrid.driver.powerdriver.ManualPowerDriver(target, name)
Bases:           labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

    ManualPowerDriver - Driver to tell the user to control a target's power

on()
off()
cycle()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name) → None
    Method generated by attrs for class ManualPowerDriver.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class ManualPowerDriver.

class labgrid.driver.powerdriver.SiSPMPowerDriver(target, name, delay=2.0)
Bases:           labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

    SiSPMPowerDriver - Driver using a SiS-PM (Silver Shield PM) to control a target's power using the sispmctl
    tool - http://sispmctl.sourceforge.net/

bindings = {'port': { 'NetworkSiSPMPowerPort', 'SiSPMPowerPort' } }

__attrs_post_init__()

on()
off()
cycle()
get()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

__init__(target, name, delay=2.0) → None
    Method generated by attrs for class SiSPMPowerDriver.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class SiSPMPowerDriver.

class labgrid.driver.powerdriver.ExternalPowerDriver(target, name, cmd_on, cmd_off,
                                                cmd_cycle=None, delay=2.0)
Bases:           labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol
```

ExternalPowerDriver - Driver using an external command to control a target's power

```
on()
off()
cycle()
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, cmd_on, cmd_off, cmd_cycle=None, delay=2.0) → None
    Method generated by attrs for class ExternalPowerDriver.
__module__ = 'labgrid.driver.powerdriver'
__repr__()
    Method generated by attrs for class ExternalPowerDriver.
```

class labgrid.driver.powerdriver.**NetworkPowerDriver**(target, name, delay=2.0)

Bases: labgrid.driver.common.Driver, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

NetworkPowerDriver - Driver using a networked power switch to control a target's power

```
bindings = {'port': <class 'labgrid.resource.power.NetworkPowerPort'>}
```

```
__attrs_post_init__()
on_activate()
    Called by the Target when this object has been activated
```

```
on()
off()
cycle()
get()
```

```
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, delay=2.0) → None
    Method generated by attrs for class NetworkPowerDriver.
__module__ = 'labgrid.driver.powerdriver'
__repr__()
    Method generated by attrs for class NetworkPowerDriver.
```

class labgrid.driver.powerdriver.**DigitalOutputPowerDriver**(target, name, delay=1.0)

Bases: labgrid.driver.common.Driver, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

DigitalOutputPowerDriver uses a DigitalOutput to control the power of a DUT.

```
bindings = {'output': <class 'labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol'>}
__attrs_post_init__()
on()
off()
cycle()
```

```
get()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, delay=1.0) → None
    Method generated by attrs for class DigitalOutputPowerDriver.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class DigitalOutputPowerDriver.

class labgrid.driver.powerdriver.YKUSHPowerDriver(target, name, delay=2.0)
Bases:           labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

YKUSHPowerDriver - Driver using a YEPKIT YKUSH switchable USB hub to control a target's power -
https://www.yepkit.com/products/ykush

bindings = {'port': 'YKUSHPowerPort'}

__attrs_post_init__()

on()
off()
cycle()
get()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, delay=2.0) → None
    Method generated by attrs for class YKUSHPowerDriver.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class YKUSHPowerDriver.

class labgrid.driver.powerdriver.USBPowerDriver(target, name, delay=2.0)
Bases:           labgrid.driver.common.Driver,      labgrid.driver.powerdriver.
PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

USBPowerDriver - Driver using a power switchable USB hub and the uhubctl tool (https://github.com/mvp/uhubctl) to control a target's power

bindings = {'hub': {'NetworkUSBPowerPort', 'USBPowerPort'}}

__attrs_post_init__()

on()
off()
cycle()
get()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```

__init__(target, name, delay=2.0) → None
    Method generated by attrs for class USBPowerDriver.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class USBPowerDriver.

class labgrid.driver.powerdriver.PDUDaemonDriver(target, name, delay=5.0)
Bases: labgrid.driver.common.Driver, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

PDUDaemonDriver - Driver using a PDU port available via pdudaemon

bindings = {'port': 'PDUDaemonPort'}

__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

on()
off()
cycle()
get()

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, delay=5.0) → None
    Method generated by attrs for class PDUDaemonDriver.

__module__ = 'labgrid.driver.powerdriver'

__repr__()
    Method generated by attrs for class PDUDaemonDriver.

```

labgrid.driver.provider module

```

class labgrid.driver.provider.BaseProviderDriver(target, name)
Bases: labgrid.driver.common.Driver

__attrs_post_init__()

stage(filename)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name) → None
    Method generated by attrs for class BaseProviderDriver.

__module__ = 'labgrid.driver.provider'

__repr__()
    Method generated by attrs for class BaseProviderDriver.

class labgrid.driver.provider.TFTPProviderDriver(target, name)
Bases: labgrid.driver.provider.BaseProviderDriver

bindings = {'provider': {'RemoteTFTPProvider', 'TFTPProvider'}}
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class TFTPPProviderDriver.
__module__ = 'labgrid.driver.provider'
__repr__()
    Method generated by attrs for class TFTPPProviderDriver.

class labgrid.driver.provider.NFSPPProviderDriver(target, name)
Bases: labgrid.driver.provider.BaseProviderDriver

bindings = {'provider': {'NFSPProvider', 'RemoteNFSPProvider'}}

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class NFSPPProviderDriver.
__module__ = 'labgrid.driver.provider'
__repr__()
    Method generated by attrs for class NFSPPProviderDriver.

class labgrid.driver.provider.HTTPProviderDriver(target, name)
Bases: labgrid.driver.provider.BaseProviderDriver

bindings = {'provider': {'HTTPProvider', 'RemoteHTTPProvider'}}

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class HTTPProviderDriver.
__module__ = 'labgrid.driver.provider'
__repr__()
    Method generated by attrs for class HTTPProviderDriver.
```

labgrid.driver.pyvisadriver module

```
class labgrid.driver.pyvisadriver.PyVISADriver(target, name)
Bases: labgrid.driver.common.Driver
```

The PyVISADriver provides a transparent layer to the PyVISA module allowing to get a pyvisa resource

Parameters **bindings** (*dict*) – driver to use with PyVISA

```
bindings = {'pyvisa_resource': 'PyVISADevice'}
```

__attrs_post_init__()

on_activate()
Called by the Target when this object has been activated

on_deactivate()
Called by the Target when this object has been deactivated

get_session()

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

__init__(target, name) → None
Method generated by attrs for class PyVISADriver.

```
__module__ = 'labgrid.driver.pyvisadriver'
__repr__()
    Method generated by attrs for class PyVISADriver.
```

labgrid.driver.qemudriver module

The QEMUDriver implements a driver to use a QEMU target

```
class labgrid.driver.qemudriver.QEMUDriver(target, name, qemu_bin, machine, cpu,
                                             memory, extra_args, boot_args=None,
                                             kernel=None, disk=None, rootfs=None,
                                             dtb=None, flash=None, bios=None)
Bases: labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.powerprotocol.PowerProtocol, labgrid.protocol.consoleprotocol.ConsoleProtocol
```

The QEMUDriver implements an interface to start targets as qemu instances.

The kernel, flash, rootfs and dtb arguments refer to images and paths declared in the environment configuration.

Parameters

- **qemu_bin** (*str*) – reference to the tools key for the QEMU binary
- **machine** (*str*) – QEMU machine type
- **cpu** (*str*) – QEMU cpu type
- **memory** (*str*) – QEMU memory size (ends with M or G)
- **extra_args** (*str*) – extra QEMU arguments, they are passed directly to the QEMU binary
- **boot_args** (*str*) – optional, additional kernel boot argument
- **kernel** (*str*) – optional, reference to the images key for the kernel
- **disk** (*str*) – optional, reference to the images key for the disk image
- **flash** (*str*) – optional, reference to the images key for the flash image
- **rootfs** (*str*) – optional, reference to the paths key for use as the virtio-9p filesystem
- **dtb** (*str*) – optional, reference to the image key for the device tree
- **bios** (*str*) – optional, reference to the image key for the bios image

`__attrs_post_init__()`

`on_activate()`

Called by the Target when this object has been activated

`on_deactivate()`

Called by the Target when this object has been deactivated

`on()`

Start the QEMU subprocess, accept the unix socket connection and afterwards start the emulator using a QMP Command

`off()`

Stop the emulator using a monitor command and await the exitcode

`cycle()`

Cycle the emulator by restarting it

```
monitor_command(command)
    Execute a monitor_command via the QMP

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, qemu_bin, machine, cpu, memory, extra_args, boot_args=None, kernel=None,
        disk=None, rootfs=None, dtb=None, flash=None, bios=None) → None
    Method generated by attrs for class QEMUDriver.

__module__ = 'labgrid.driver.qemudriver'

__repr__()
    Method generated by attrs for class QEMUDriver.
```

labgrid.driver.quartushpsdriver module

```
class labgrid.driver.quartushpsdriver.QuartusHPSDriver(target, name, image=None)
    Bases: labgrid.driver.common.Driver

    bindings = {'interface': {'AlteraUSBBlaster', 'NetworkAlteraUSBBlaster'}}

    __attrs_post_init__()

    flash(filename=None, address=0)

    erase(address=None, size=None)

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    __init__(target, name, image=None) → None
        Method generated by attrs for class QuartusHPSDriver.

    __module__ = 'labgrid.driver.quartushpsdriver'

    __repr__()
        Method generated by attrs for class QuartusHPSDriver.
```

labgrid.driver.resetdriver module

```
class labgrid.driver.resetdriver.DigitalOutputResetDriver(target, name, de-
                                                               lay=1.0)
    Bases: labgrid.driver.common.Driver, labgrid.protocol.resetprotocol.
    ResetProtocol

    DigitalOutputResetDriver - Driver using a DigitalOutput to reset the target

    bindings = {'output': <class 'labgrid.protocol.digitaloutputprotocol.DigitalOutputPro-
    __attrs_post_init__()

    reset()

    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True

    __init__(target, name, delay=1.0) → None
        Method generated by attrs for class DigitalOutputResetDriver.

    __module__ = 'labgrid.driver.resetdriver'
```

__repr__()

Method generated by attrs for class DigitalOutputResetDriver.

labgrid.driver.serialdigitaloutput module

```
class labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver(target,  
                                name,  
                                sig-  
                                nal,  
                                in-  
                                vert)  
Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
```

Controls the state of a GPIO using the control lines of a serial port.

This driver uses the flow-control pins of a serial port (for example an USB-UART-dongle) to control some external power switch. You may connect some kind of relay board to the flow control pins.

The serial port should NOT be used for serial communication at the same time. This will probably reset the flow-control signals.

Usable signals are DTR and RTS.

```
bindings = {'serial': <class 'labgrid.driver.serialdriver.SerialDriver'>}  
_attrs_post_init__()  
get()  
    Implementations should return the status of the digital output.  
set(value)  
    Implementations should set the status of the digital output  
_abstractmethods_ = frozenset({})  
_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)  
_init__(target, name, signal, invert) → None  
    Method generated by attrs for class SerialPortDigitalOutputDriver.  
_module_ = 'labgrid.driver.serialdigitaloutput'  
_repr__()  
    Method generated by attrs for class SerialPortDigitalOutputDriver.
```

labgrid.driver.serialdriver module

```
class labgrid.driver.serialdriver.SerialDriver(target, name, txdelay=0.0, timeout=3.0)  
Bases: labgrid.driver.consoleexpectmixin.ConsoleExpectMixin, labgrid.driver.common.Driver, labgrid.protocol.consoleprotocol.ConsoleProtocol
```

Driver implementing the ConsoleProtocol interface over a SerialPort connection

```
bindings = {'port': {'NetworkSerialPort', 'SerialPort'}}  
message = 'The installed pyserial version does not contain important RFC2217 fixes.\nY  
_attrs_post_init__()
```

```
on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

open()
    Opens the serialport, does nothing if it is already closed

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, txdelay=0.0, timeout=3.0) → None
    Method generated by attrs for class SerialDriver.

__module__ = 'labgrid.driver.serialdriver'

__repr__()
    Method generated by attrs for class SerialDriver.

close()
    Closes the serialport, does nothing if it is already closed
```

labgrid.driver.shelldriver module

The ShellDriver provides the CommandProtocol, ConsoleProtocol and InfoProtocol on top of a SerialPort.

```
class labgrid.driver.shelldriver.ShellDriver(target, name, prompt, login_prompt,
                                              username, password='', keyfile='',
                                              login_timeout=60, console_ready='',
                                              await_login_timeout=2,
                                              post_login_settle_time=0)
Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver,
        labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.filetransferprotocol.FileTransferProtocol
```

ShellDriver - Driver to execute commands on the shell ShellDriver binds on top of a ConsoleProtocol.

On activation, the ShellDriver will look for the login prompt on the console, and login to provide shell access.

Parameters

- **prompt** (*regex*) – the shell prompt to detect
- **login_prompt** (*regex*) – the login prompt to detect
- **username** (*str*) – username to login with
- **password** (*str*) – password to login with
- **keyfile** (*str*) – keyfile to bind mount over users authorized keys
- **login_timeout** (*int*) – optional, timeout for login prompt detection
- **console_ready** (*regex*) – optional, pattern used by the kernel to inform the user that a console can be activated by pressing enter.
- **await_login_timeout** (*int*) – optional, time in seconds of silence that needs to pass before sending a newline to device.
- **post_login_settle_time** (*int*) – optional, seconds of silence after logging in before check for a prompt. Useful when the console is interleaved with boot output which may interrupt prompt detection.

```
bindings = {'console': <class 'labgrid.protocol.consoleprotocol.ConsoleProtocol'>}
__attrs_post_init__()
on_activate()
    Called by the Target when this object has been activated
on_deactivate()
    Called by the Target when this object has been deactivated
run(cmd, timeout=30.0, codec='utf-8', decodeerrors='strict')
    Run a command
get_status()
    Returns the status of the shell-driver. 0 means not connected/found, 1 means shell
put_ssh_key(keyfile_path)
put_bytes(buf: bytes, remotefile: str)
    Upload a file to the target. Will silently overwrite the remote file if it already exists.
```

Parameters

- **buf** (*bytes*) – file contents
- **remotefile** (*str*) – destination filename on the target

Raises *ExecutionError* – if something went wrong**put(localfile: str, remotefile: str)**

Upload a file to the target. Will silently overwrite the remote file if it already exists.

Parameters

- **localfile** (*str*) – source filename on the local machine
- **remotefile** (*str*) – destination filename on the target

Raises

- **IOError** – if the provided localfile could not be found
- **ExecutionError** – if something else went wrong

get_bytes(remotefile: str)

Download a file from the target.

Parameters **remotefile** (*str*) – source filename on the target**Returns** (*bytes*) file contents**Raises** *ExecutionError* – if something went wrong**get(remotefile: str, localfile: str)**

Download a file from the target. Will silently overwrite the local file if it already exists.

Parameters

- **remotefile** (*str*) – source filename on the target
- **localfile** (*str*) – destination filename on the local machine (can be relative)

Raises

- **IOError** – if localfile could not be written
- **ExecutionError** – if something went wrong

run_script (*data: bytes, timeout: int = 60*)

Upload a script to the target and run it.

Parameters

- **data** (*bytes*) – script data
- **timeout** (*int*) – timeout for the script to finish execution

Returns str, stderr: str, return_value: int)**Return type** Tuple of (stdout**Raises** *ExecutionError* – if something went wrong**run_script_file** (*scriptfile: str, *args, timeout: int = 60*)

Upload a script file to the target and run it.

Parameters

- **scriptfile** (*str*) – source file on the local file system to upload to the target
- ***args** – (list of str): any arguments for the script as positional arguments
- **timeout** (*int*) – timeout for the script to finish execution

Returns str, stderr: str, return_value: int)**Return type** Tuple of (stdout**Raises**

- *ExecutionError* – if something went wrong
- *IOError* – if the provided localfile could not be found

get_default_interface_device_name (*version=4*)

Retrieve the default route's interface device name.

Parameters **version** (*int*) – IP version**Returns** Name of the device of the default route**Raises** *ExecutionError* – if no or multiple routes are set up**get_ip_addresses** (*device=None*)

Retrieves IP addresses for given interface name.

Note that although the return type is named IPv4Interface/IPv6Interface, it contains an IP address with the corresponding network prefix.

Parameters **device** (*str*) – Name of the interface to query, defaults to default route's device name.**Returns** List of IPv4Interface or IPv6Interface objects

```
__abstractmethods__ = frozenset({})  
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)  
__init__(target, name, prompt, login_prompt, username, password='', keyfile='', login_timeout=60,  
        console_ready='', await_login_timeout=2, post_login_settle_time=0) → None  
    Method generated by attrs for class ShellDriver.  
  
__module__ = 'labgrid.driver.shelldriverv'  
  
__repr__()  
    Method generated by attrs for class ShellDriver.
```

labgrid.driver.sigrokdriver module

```
class labgrid.driver.sigrokdriver.SigrokCommon(target, name)
    Bases: labgrid.driver.common.Driver

    _attrs_post_init_()

    on_activate()
        Called by the Target when this object has been activated

    on_deactivate()
        Called by the Target when this object has been deactivated

    _attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    _init_(target, name) → None
        Method generated by attrs for class SigrokCommon.

    _module_ = 'labgrid.driver.sigrokdriver'

    _repr_class labgrid.driver.sigrokdriver.SigrokDriver(target, name)
    Bases: labgrid.driver.sigrokdriver.SigrokCommon

The SigrokDriver uses sigrok-cli to record samples and expose them as python dictionaries.

    Parameters bindings (dict) – driver to use with sigrok

    bindings = {'sigrok': {<class 'labgrid.resource.sigrok.SigrokDevice'>, <class 'labgrid.resource.remote.NetworkSigrokUSBSerialDevice'>}

    capture(filename, samplerate='200k')

    stop()

    analyze(args, filename=None)

    _attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    _init_(target, name) → None
        Method generated by attrs for class SigrokDriver.

    _module_ = 'labgrid.driver.sigrokdriver'

    _repr_class labgrid.driver.sigrokdriver.SigrokPowerDriver(target, name, delay=3.0,
                                                    max_voltage=None,
                                                    max_current=None)
    Bases: labgrid.driver.sigrokdriver.SigrokCommon, labgrid.driver.powerdriver.PowerResetMixin, labgrid.protocol.powerprotocol.PowerProtocol

The SigrokPowerDriver uses sigrok-cli to control a PSU and collect measurements.

    Parameters bindings (dict) – driver to use with sigrok

    bindings = {'sigrok': {<class 'labgrid.resource.remote.NetworkSigrokUSBSerialDevice'>,

    on()

    off()

    cycle()

    set_voltage_target(value)
```

```
set_current_limit(value)
get()
measure()
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, delay=3.0, max_voltage=None, max_current=None) → None
    Method generated by attrs for class SigrokPowerDriver.
__module__ = 'labgrid.driver.sigrokdriver'
__repr__()
Method generated by attrs for class SigrokPowerDriver.
```

labgrid.driver.smallubootdriver module

```
class labgrid.driver.smallubootdriver.SmallUBootDriver(target, name, prompt='',
    autoboot='stop autoboot',
    password='', interrupt='n',
    init_commands=NOTHING,
    password_prompt='enter
Password:',
    boot_expression='U-
Boot 20d+', boot_string='Linux version
\ d', boot_command='run
bootcmd', boot_timeout=30,
boot_secret='a', login_timeout=60)
```

Bases: *labgrid.driver.ubootdriver.UBootDriver*

SmallUBootDriver is meant as a driver for UBoot with only little functionality compared to standard a standard UBoot. Especially is copes with the following limitations:

- The UBoot does not have a real password-prompt but can be activated by entering a “secret” after a message was displayed.
- The command line is does not have a build-in echo command. Thus this driver uses ‘Unknown Command’ messages as marker before and after the output of a command.
- Since there is no echo we can not return the exit code of the command. Commands will always return 0 unless the command was not found.

This driver needs the following features activated in UBoot to work:

- The UBoot must not have real password prompt. Instead it must be keyword activated. For example it should be activated by a dialog like the following: UBoot: “Autobooting in 1s...” Labgrid: “secret” UBoot: <switching to console>
- The UBoot must be able to parse multiple commands in a single line separated by “;”.
- The UBoot must support the “bootm” command to boot from a memory location.

This driver was created especially for the following devices:

- TP-Link WR841 v11

Parameters

- **boot_secret** (*str*) – optional, secret used to unlock prompt
- **login_timeout** (*int*) – optional, timeout for login prompt detection,

boot (*name*)

Boot the device from the given memory location using ‘bootm’.

Parameters **name** (*str*) – address to boot

```
__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, prompt='', autoboot='stop autoboot', password='', interrupt='\n',
    init_commands=NOTHING, password_prompt='enter Password:', boot_expression='U-
    Boot 20\d+', bootstring='Linux version \d', boot_command='run bootcmd',
    boot_timeout=30, boot_secret='a', login_timeout=60) → None
Method generated by attrs for class SmallUBootDriver.

__module__ = 'labgrid.driver.smallubootdriver'

__repr__()
Method generated by attrs for class SmallUBootDriver.
```

labgrid.driver.sshdriver module

The SSHDriver uses SSH as a transport to implement CommandProtocol and FileTransferProtocol

```
class labgrid.driver.sshdriver.SSHDriver(target, name, keyfile='', stderr_merge=False)
Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver,
    labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.filetransferprotocol.FileTransferProtocol

SSHDriver - Driver to execute commands via SSH

bindings = {'networkservice': 'NetworkService'}

priorities = {<class 'labgrid.protocol.commandprotocol.CommandProtocol'>: 10, <class

__attrs_post_init__()

on_activate()
Called by the Target when this object has been activated

on_deactivate()
Called by the Target when this object has been deactivated

run(cmd, codec='utf-8', decodeerrors='strict', timeout=None)
Run a command

interact(cmd=None)

forward_local_port(remoteport, localport=None)
Forward a local port to a remote port on the target

A context manager that keeps a local port forwarded to a remote port as long as the context remains valid.
A connection can be made to the returned port on localhost and it will be forwarded to the remote port on
the target device

usage:

with ssh.forward_local_port(8080) as localport: # Use localhost:localport here to connect to port
8080 on the # target
```

returns: localport

forward_remote_port (*remoteport*, *localport*)

Forward a remote port on the target to a local port

A context manager that keeps a remote port forwarded to a local port as long as the context remains valid.
A connection can be made to the remote on the target device will be forwarded to the returned local port on localhost

usage:

```
with ssh.forward_remote_port(8080, 8081) as localport: # Connections to port 8080 on the target  
    will be redirected to # localhost:8081
```

scp (*, *src*, *dst*)

rsync (*, *src*, *dst*, *extra*=[])

sshfs (*, *path*, *mountpoint*)

get_status()

The SSHDriver is always connected, return 1

put (*filename*, *remotepath*=”)

get (*filename*, *destination*=’.’)

__abstractmethods__ = frozenset({})

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True,

__init__ (*target*, *name*, *keyfile*=”, *stderr_merge*=*False*) → None

Method generated by attrs for class SSHDriver.

__module__ = 'labgrid.driver.sshdriver'

__repr__()

Method generated by attrs for class SSHDriver.

labgrid.driver.ubootdriver module

The U-Boot Module contains the UBootDriver

```
class labgrid.driver.ubootdriver.UBootDriver(target, name, prompt='', autoboot='stop  
autoboot', password='', interrupt='n',  
init_commands=NOTHING, pass-  
word_prompt='enter          Password:',  
boot_expression='U-Boot      20\d+',  
bootstring='Linux      version      \d',  
boot_command='run      bootcmd',    lo-  
gin_timeout=30, boot_timeout=30)
```

Bases: labgrid.driver.commandmixin.CommandMixin, labgrid.driver.common.Driver, labgrid.protocol.commandprotocol.CommandProtocol, labgrid.protocol.linuxbootprotocol.LinuxBootProtocol

UBootDriver - Driver to control uboot via the console. UBootDriver binds on top of a ConsoleProtocol.

Parameters

- **prompt** (*str*) – optional, U-Boot prompt
- **password** (*str*) – optional, password to unlock U-Boot
- **init_commands** (*tuple*) – optional, tuple of commands to run after unlock

- **interrupt** (*str*) – optional, interrupt character to use to go to prompt
- **password_prompt** (*str*) – optional, string to detect the password prompt
- **boot_expression** (*str*) – optional, string to search for on U-Boot start
- **bootstring** (*str*) – optional, string that indicates that the Kernel is booting
- **boot_command** (*str*) – optional boot command to boot target
- **login_timeout** (*int*) – optional, timeout for login prompt detection
- **boot_timeout** (*int*) – optional, timeout for initial Linux Kernel version detection

```
bindings = {'console': <class 'labgrid.protocol.consoleprotocol.ConsoleProtocol'>}
```

__attrs_post_init__()

on_activate()
Activate the UBootDriver
This function checks for a prompt and awaits it if not already active

on_deactivate()
Deactivate the UBootDriver
Simply sets the internal status to 0

run (*cmd, timeout=30*)
Runs the specified command on the shell and returns the output.

Parameters

- **cmd** (*str*) – command to run on the shell
- **timeout** (*int*) – optional, how long to wait for completion

Returns if successful, None otherwise

Return type Tuple[List[str],List[str], int]

get_status()
Retrieve status of the UBootDriver. 0 means inactive, 1 means active.

Returns status of the driver

Return type int

reset()
Reset the board via a CPU reset

await_boot()
Wait for the initial Linux version string to verify we successfully jumped into the kernel.

boot (*name*)
Boot the default or a specific boot entry

Parameters **name** (*str*) – name of the entry to boot

```
__abstractmethods__ = frozenset({})
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True,
```

```
__init__(target, name, prompt=”, autoboot='stop autoboost', password=”, interrupt='\\n', init_commands=NOTHING, password_prompt='enter Password:', boot_expression='U-Boot 20\\d+', bootstring='Linux version \\d', boot_command='run bootcmd', login_timeout=30, boot_timeout=30) → None
```

Method generated by attrs for class UBootDriver.

```
__module__ = 'labgrid.driver.ubootdriver'  
__repr__()  
    Method generated by attrs for class UBootDriver.
```

labgrid.driver.usbaudiodriver module

```
class labgrid.driver.usbaudiodriver.USBAudioInputDriver(target, name)  
Bases: labgrid.driver.common.Driver
```

This driver provides access to a USB audio input device using ALSA and gstreamer.

When using this driver in a Python venv, you may need to allow access to the gi (GObject Introspection) module from the system. This can be done by crating a symlink: ln -s /usr/lib/python3/dist-packages/gi \$VENV/lib/python*/site-packages/

```
bindings = {'res': { 'NetworkUSBAudioInput', 'USBAudioInput' }}
```

```
_attrs_post_init__()
```

```
start_sender()
```

Return a subprocess which provides audio data in a matroska container on stdout

```
create_gst_src()
```

Returns a newly create gstreamer bin with a single audio output pad.

```
measure_level()
```

Returns the current peak and rms value (measured with the gst level element)

```
play()
```

Plays the captured audio via gstreamer's autoaudiosink

```
_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
_init__(target, name) → None
```

Method generated by attrs for class USBAudioInputDriver.

```
_module_ = 'labgrid.driver.usbaudiodriver'
```

```
_repr__()
```

Method generated by attrs for class USBAudioInputDriver.

labgrid.driver.usbhidrelay module

```
class labgrid.driver.usbhidrelay.HIDRelayDriver(target, name)  
Bases: labgrid.driver.common.Driver, labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
```

```
bindings = {'relay': { 'HIDRelay', <class 'labgrid.resource.remote.NetworkHIDRelay'> }}
```

```
_attrs_post_init__()
```

```
on_activate()
```

Called by the Target when this object has been activated

```
on_deactivate()
```

Called by the Target when this object has been deactivated

```
set(status)
```

Implementations should set the status of the digital output

```

get()
    Implementations should return the status of the digital output.

__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class HIDRelayDriver.

__module__ = 'labgrid.driver.usbhidrelay'
__repr__()
    Method generated by attrs for class HIDRelayDriver.

```

labgrid.driver.usbloader module

```

class labgrid.driver.usbloader.MXSUSBDriver(target, name, image=None)
Bases:      labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.
BootstrapProtocol

bindings = {'loader': {'MXSUSBLoader', 'NetworkMXSUSBLoader'}}
__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

load(filename=None)
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, image=None) → None
    Method generated by attrs for class MXSUSBDriver.

__module__ = 'labgrid.driver.usbloader'
__repr__()
    Method generated by attrs for class MXSUSBDriver.

class labgrid.driver.usbloader.IMXUSBDriver(target, name, image=None)
Bases:      labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.
BootstrapProtocol

bindings = {'loader': {'IMXUSBLoader', 'MXSUSBLoader', 'NetworkIMXUSBLoader', 'NetworkMXSUSBLoader'}}
__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

load(filename=None)
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

```

```
__init__(target, name, image=None) → None
    Method generated by attrs for class IMXUSBDriver.

_module_ = 'labgrid.driver.usbloader'

_repr_()
    Method generated by attrs for class IMXUSBDriver.

class labgrid.driver.usbloader.RKUSBDriver(target, name, image=None, usb_loader=None)
Bases: labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.BootstrapProtocol

bindings = {'loader': {'NetworkRKUSBLoader', 'RKUSBLoader'}}

_attrs_post_init_()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

load(filename=None)

_abstractmethods_ = frozenset({})

_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

_init_(target, name, image=None, usb_loader=None) → None
    Method generated by attrs for class RKUSBDriver.

_module_ = 'labgrid.driver.usbloader'

_repr_()
    Method generated by attrs for class RKUSBDriver.

class labgrid.driver.usbloader.UUUDriver(target, name, image=None, cmd='spl')
Bases: labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.BootstrapProtocol

bindings = {'loader': {'IMXUSBLoader', 'MXSUSBLoader', 'NetworkIMXUSBLoader', 'NetworkMXSUSBLoader'}}

_attrs_post_init_()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

load(filename=None)

_abstractmethods_ = frozenset({})

_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

_init_(target, name, image=None, cmd='spl') → None
    Method generated by attrs for class UUUDriver.

_module_ = 'labgrid.driver.usbloader'

_repr_()
    Method generated by attrs for class UUUDriver.
```

```
class labgrid.driver.usbloader.BDIMXUSBDriver (target, name)
Bases: labgrid.driver.common.Driver, labgrid.protocol.bootstrapprotocol.
BootstrapProtocol
```

This is a Driver for the Boundary Devices imx_usb_loader available from https://github.com/boundarydevices/imx_usb_loader

It supports loading the second stage bootloader to a SDP gadget implemented by the first stage bootloader in SRAM. Accordingly, the image to upload must be specified explicitly.

```
bindings = {'loader': {'IMXUSBLoader', 'NetworkIMXUSBLoader'}}

__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

load(filename)
    __abstractmethods__ = frozenset({})

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    __init__ (target, name) → None
        Method generated by attrs for class BDIMXUSBDriver.

    __module__ = 'labgrid.driver.usbloader'

    __repr__()
        Method generated by attrs for class BDIMXUSBDriver.
```

labgrid.driver.usbsdmuxdriver module

```
class labgrid.driver.usbsdmuxdriver.USBSDMuxDriver (target, name)
Bases: labgrid.driver.common.Driver
```

The USBSDMuxDriver uses the usbsdmux tool (<https://github.com/pengutronix/usbsdmux>) to control the USB-SD-Mux hardware

```
Parameters bindings (dict) – driver to use with usbsdmux

bindings = {'mux': {'NetworkUSBSDMuxDevice', 'USBSDMuxDevice'}}

__attrs_post_init__()

set_mode(mode)
get_mode()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__ (target, name) → None
    Method generated by attrs for class USBSDMuxDriver.

__module__ = 'labgrid.driver.usbsdmuxdriver'

__repr__()
    Method generated by attrs for class USBSDMuxDriver.
```

labgrid.driver.usbsdwiredriver module

```
class labgrid.driver.usbsdwiredriver.USBSDWireDriver(target, name)
Bases: labgrid.driver.common.Driver
```

The USBSDWireDriver uses the sd-mux-ctrl tool to control SDWire hardware

Parameters `bindings` (`dict`) – driver to use with usbsdmux

```
bindings = {'mux': { 'NetworkUSBSDWireDevice', 'USBSDWireDevice' } }
```

```
__attrs_post_init__()
```

```
set_mode(mode)
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name) → None
```

Method generated by attrs for class USBSDWireDriver.

```
__module__ = 'labgrid.driver.usbsdwiredriver'
```

```
__repr__()
```

Method generated by attrs for class USBSDWireDriver.

labgrid.driver.usbstoragedriver module

```
class labgrid.driver.usbstoragedriver.Mode
```

Bases: enum.Enum

An enumeration.

```
DD = 'dd'
```

```
BMAPTOOL = 'bmaptool'
```

```
__module__ = 'labgrid.driver.usbstoragedriver'
```

```
class labgrid.driver.usbstoragedriver.USBStorageDriver(target, name, image=None)
```

Bases: labgrid.driver.common.Driver

```
bindings = {'storage': { 'NetworkUSBMassStorage', 'NetworkUSBSDMuxDevice', 'NetworkUSB' }}
```

```
__attrs_post_init__()
```

```
on_activate()
```

Called by the Target when this object has been activated

```
on_deactivate()
```

Called by the Target when this object has been deactivated

```
write_image(filename=None, mode=<Mode.DD: 'dd'>, partition=None, skip=0, seek=0)
```

Writes the file specified by filename or if not specified by config image subkey to the bound USB storage root device or partition.

Parameters

- `filename` (`str`) – optional, path to the image to write to bound USB storage
- `mode` (`Mode`) – optional, Mode.DD or Mode.BMAPTOOL (defaults to Mode.DD)
- `partition` (`int or None`) – optional, write to the specified partition or None for writing to root device (defaults to None)
- `skip` (`int`) – optional, skip n 512-sized blocks at start of input file (defaults to 0)

- **seek** (*int*) – optional, skip n 512-sized blocks at start of output (defaults to 0)

```
get_size()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, image=None) → None
    Method generated by attrs for class USBStorageDriver.
__module__ = 'labgrid.driver.usbstoragedriver'
__repr__()
    Method generated by attrs for class USBStorageDriver.
```

class labgrid.driver.usbstoragedriver.**NetworkUSBStorageDriver** (*target, name, image=None*)
Bases: *labgrid.driver.usbstoragedriver.USBStorageDriver*

```
__attrs_post_init__()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, image=None) → None
    Method generated by attrs for class NetworkUSBStorageDriver.
__module__ = 'labgrid.driver.usbstoragedriver'
__repr__()
    Method generated by attrs for class NetworkUSBStorageDriver.
```

labgrid.driver.usbtmcdriver module

```
class labgrid.driver.usbtmcdriver.USBTMCDriver (target, name)
Bases: labgrid.driver.common.Driver

bindings = {'tmc': { 'NetworkUSBTMC', 'USBTMC' } }

__attrs_post_init__()

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

command (cmd)
query (cmd, binary=False, raw=False)
identify()
get_channel_info (channel)
get_channel_values (channel)
get_screenshot()
get_bool (cmd)
get_int (cmd)
get_decimal (cmd)
get_str (cmd)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name) → None
    Method generated by attrs for class USBTMCDriver.

__module__ = 'labgrid.driver.usbtmcdriver'

__repr__()
    Method generated by attrs for class USBTMCDriver.
```

labgrid.driver.usbvideodriver module

```
class labgrid.driver.usbvideodriver.USBVideoDriver(target, name)
Bases:      labgrid.driver.common.Driver,      labgrid.protocol.videoprotocol.
VideoProtocol

bindings = {'video': {'NetworkUSBVideo', 'USBVideo'}}
get_qualities()
select_caps(hint=None)
get_pipeline(path, caps, controls=None)
stream(caps_hint=None, controls=None)
__abstractmethods__ = frozenset({})
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__(target, name) → None
    Method generated by attrs for class USBVideoDriver.

__module__ = 'labgrid.driver.usbvideodriver'
__repr__()
    Method generated by attrs for class USBVideoDriver.
```

labgrid.driver.xenadriver module

```
class labgrid.driver.xenadriver.XenaDriver(target, name)
Bases: labgrid.driver.common.Driver

Xena Driver

bindings = {'xena_manager': 'XenaManager'}
__attrs_post_init__()
on_activate()
    Called by the Target when this object has been activated
on_deactivate()
    Called by the Target when this object has been deactivated
get_session()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
__init__(target, name) → None
    Method generated by attrs for class XenaDriver.

__module__ = 'labgrid.driver.xenadriver'
```

__repr__()

Method generated by attrs for class XenaDriver.

labgrid.protocol package

Submodules

labgrid.protocol.bootstrapprotocol module

class labgrid.protocol.bootstrapprotocol.BootstrapProtocol

Bases: abc.ABC

abstract load(filename: str)

__abstractmethods__ = frozenset({'load'})

__dict__ = mappingproxy({'**__module__**': 'labgrid.protocol.bootstrapprotocol', '**load**':

__module__ = 'labgrid.protocol.bootstrapprotocol'

__weakref__

list of weak references to the object (if defined)

labgrid.protocol.commandprotocol module

class labgrid.protocol.commandprotocol.CommandProtocol

Bases: abc.ABC

Abstract class for the CommandProtocol

abstract run(command: str)

Run a command

abstract run_check(command: str)

Run a command, return str if successful, ExecutionError otherwise

abstract get_status()

Get status of the Driver

abstract wait_for()

Wait for a shell command to return with the specified output

abstract poll_until_success()

Repeatedly call a shell command until it succeeds

__abstractmethods__ = frozenset({'get_status', 'poll_until_success', 'run', 'run_check'})

__dict__ = mappingproxy({'**__module__**': 'labgrid.protocol.commandprotocol', '**__doc__**':

__module__ = 'labgrid.protocol.commandprotocol'

__weakref__

list of weak references to the object (if defined)

labgrid.protocol.consoleprotocol module

class labgrid.protocol.consoleprotocol.ConsoleProtocol

Bases: abc.ABC

Abstract class for the ConsoleProtocol

```
abstract read()
    Read data from underlying port

abstract write(data: bytes)
    Write data to underlying port

sendline(line: str)

sendcontrol(char: str)

expect(pattern: str)

class Client
    Bases: abc.ABC

    abstract get_console_matches()

    abstract notify_console_match(pattern, match)

    __abstractmethods__ = frozenset({'get_console_matches', 'notify_console_match'})

    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.consoleprotocol', 'get_console_matches': <bound method Client.get_console_matches of <Client object at 0x7f3e0000>>, 'notify_console_match': <bound method Client.notify_console_match of <Client object at 0x7f3e0000>>})

    __module__ = 'labgrid.protocol.consoleprotocol'

    __weakref__
        list of weak references to the object (if defined)

    __abstractmethods__ = frozenset({'read', 'write'})

    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.consoleprotocol', '__doc__': None, 'get_console_matches': <bound method Client.get_console_matches of <Client object at 0x7f3e0000>>, 'notify_console_match': <bound method Client.notify_console_match of <Client object at 0x7f3e0000>>, 'read': <bound method Client.read of <Client object at 0x7f3e0000>>, 'write': <bound method Client.write of <Client object at 0x7f3e0000>>})

    __module__ = 'labgrid.protocol.consoleprotocol'

    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.digitaloutputprotocol module

```
class labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
    Bases: abc.ABC
```

Abstract class providing the DigitalOutputProtocol interface

```
abstract get()
    Implementations should return the status of the digital output.

abstract set(status)
    Implementations should set the status of the digital output

    __abstractmethods__ = frozenset({'get', 'set'})

    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.digitaloutputprotocol', '__doc__': None, 'get': <bound method DigitalOutputProtocol.get of <DigitalOutputProtocol object at 0x7f3e0000>>, 'set': <bound method DigitalOutputProtocol.set of <DigitalOutputProtocol object at 0x7f3e0000>>})

    __module__ = 'labgrid.protocol.digitaloutputprotocol'

    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.filesystemprotocol module

```
class labgrid.protocol.filesystemprotocol.FileSystemProtocol
Bases: abc.ABC

abstract read(filename: str)
abstract write(filename: str, data: bytes, append: bool)
_abstractmethods_ = frozenset({'read', 'write'})
_dict_ = mappingproxy({'_module__module_ = 'labgrid.protocol.filesystemprotocol'
_weakref_
    list of weak references to the object (if defined)
```

labgrid.protocol.filetransferprotocol module

```
class labgrid.protocol.filetransferprotocol.FileTransferProtocol
Bases: abc.ABC

abstract put(filename: str, remotepath: str)
abstract get(filename: str, destination: str)
_abstractmethods_ = frozenset({'get', 'put'})
_dict_ = mappingproxy({'_module__module_ = 'labgrid.protocol.filetransferprotocol'
_weakref_
    list of weak references to the object (if defined)
```

labgrid.protocol.infoprotocol module

```
class labgrid.protocol.infoprotocol.InfoProtocol
Bases: abc.ABC

Abstract class providing the InfoProtocol interface

abstract get_ip(interface: str = 'eth0')
    Implementations should return the IP-adress for the supplied interface.

abstract get_hostname()
    Implementations should return the hostname for the supplied interface.

abstract get_service_status(service)
    Implementations should return the status of a service

_abstractmethods_ = frozenset({'get_hostname', 'get_ip', 'get_service_status'})
_dict_ = mappingproxy({'_module__doc__module_ = 'labgrid.protocol.infoprotocol'
_weakref_
    list of weak references to the object (if defined)
```

labgrid.protocol.linuxbootprotocol module

```
class labgrid.protocol.linuxbootprotocol.LinuxBootProtocol
    Bases: abc.ABC

    abstract boot(name: str)
    abstract await_boot()
    abstract reset()
    __abstractmethods__ = frozenset({'await_boot', 'boot', 'reset'})
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.linuxbootprotocol', 'boot':
    __module__ = 'labgrid.protocol.linuxbootprotocol'
    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.mmioprotocol module

```
class labgrid.protocol.mmioprotocol.MMIOProtocol
    Bases: abc.ABC

    abstract read(address: int, size: int, count: int) → bytes
    abstract write(address: int, size: int, data: bytes) → None
    __abstractmethods__ = frozenset({'read', 'write'})
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.mmioprotocol', 'read': <func
    __module__ = 'labgrid.protocol.mmioprotocol'
    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.powerprotocol module

```
class labgrid.protocol.powerprotocol.PowerProtocol
    Bases: abc.ABC

    abstract on()
    abstract off()
    abstract cycle()
    __abstractmethods__ = frozenset({'cycle', 'off', 'on'})
    __dict__ = mappingproxy({'__module__': 'labgrid.protocol.powerprotocol', 'on': <func
    __module__ = 'labgrid.protocol.powerprotocol'
    __weakref__
        list of weak references to the object (if defined)
```

labgrid.protocol.resetprotocol module

```
class labgrid.protocol.resetprotocol.ResetProtocol
    Bases: abc.ABC

    abstract reset()

    _abstractmethods_ = frozenset({'reset'})

    _dict_ = mappingproxy({'__module__': 'labgrid.protocol.resetprotocol', 'reset': <function reset at 0x7f3e33333333>})

    _module_ = 'labgrid.protocol.resetprotocol'

    _weakref_
        list of weak references to the object (if defined)
```

labgrid.protocol.videoprotocol module

```
class labgrid.protocol.videoprotocol.VideoProtocol
    Bases: abc.ABC

    abstract get_qualities()

    abstract stream(quality_hint=None)

    _abstractmethods_ = frozenset({'get_qualities', 'stream'})

    _dict_ = mappingproxy({'__module__': 'labgrid.protocol.videoprotocol', 'get_qualities': <function get_qualities at 0x7f3e33333333>, 'stream': <function stream at 0x7f3e33333333>})

    _module_ = 'labgrid.protocol.videoprotocol'

    _weakref_
        list of weak references to the object (if defined)
```

labgrid.pytestplugin package

Submodules

labgrid.pytestplugin.fixtures module

```
labgrid.pytestplugin.fixtures.pytest_addoption(parser)
labgrid.pytestplugin.fixtures.env(request, record_testsuite_property)
    Return the environment configured in the supplied configuration file. It contains the targets contained in the configuration file.

labgrid.pytestplugin.fixtures.target(env)
    Return the default target main configured in the supplied configuration file.

labgrid.pytestplugin.fixtures.strategy(request, target)
    Return the Strategy of the default target main configured in the supplied configuration file.
```

labgrid.pytestplugin.hooks module

```
labgrid.pytestplugin.hooks.pytest_configure(config)
```

```
labgrid.pytestplugin.hooks.pytest_collection_modifyitems(config, items)
```

This function matches function feature flags with those found in the environment and disables the item if no match is found

labgrid.pytestplugin.reporter module

```
labgrid.pytestplugin.reporter.safe_dupfile(f)
```

```
class labgrid.pytestplugin.reporter.StepReporter(terminalreporter, *, rewrite=False)
```

Bases: object

```
__init__(terminalreporter, *, rewrite=False)
```

Initialize self. See help(type(self)) for accurate signature.

```
notify(event)
```

```
pytest_runttest_logstart()
```

```
pytest_runttest_logreport(report)
```

```
__dict__ = mappingproxy({ '__module__': 'labgrid.pytestplugin.reporter', '__init__':
```

```
__module__ = 'labgrid.pytestplugin.reporter'
```

```
__weakref__
```

list of weak references to the object (if defined)

```
class labgrid.pytestplugin.reporter.ColoredStepReporter(terminalreporter, *,  
                                                     rewrite=False)
```

Bases: *labgrid.pytestplugin.reporter.StepReporter*

```
EVENT_COLORS_DARK = {'cycle$|on$|off$': 'white', 'expect$': 'blue', 'run': 'magenta'}
```

```
EVENT_COLORS_LIGHT = {'cycle$|on$|off$': 'blue', 'expect$': 'white', 'run': 'magenta'}
```

```
EVENT_COLORS_DARK_256COLOR = {'cycle$|on$|off$': 246, 'expect$': 8, 'run': 129, 'style': 1}
```

```
EVENT_COLORS_LIGHT_256COLOR = {'cycle$|on$|off$': 8, 'expect$': 250, 'run': 93, 'style': 1}
```

```
EVENT_COLOR_SCHEMES = {'dark': {'cycle$|on$|off$': 'white', 'expect$': 'blue', 'run': 'magenta'}}
```

```
__init__(terminalreporter, *, rewrite=False)
```

Initialize self. See help(type(self)) for accurate signature.

```
__module__ = 'labgrid.pytestplugin.reporter'
```

labgrid.remote package

Submodules

labgrid.remote.authenticator module

labgrid.remote.client module

The remote.client module contains the functionality to connect to a coordinator, acquire a place and interact with the connected resources

```
exception labgrid.remote.client.Error
```

Bases: Exception

```

__module__ = 'labgrid.remote.client'

__weakref__
    list of weak references to the object (if defined)

exception labgrid.remote.client.UserError
    Bases: labgrid.remote.client.Error

__module__ = 'labgrid.remote.client'

exception labgrid.remote.client.ServerError
    Bases: labgrid.remote.client.Error

__module__ = 'labgrid.remote.client'

labgrid.remote.client.start_session(url, realm, extra)
labgrid.remote.client.find_role_by_place(config, place)
labgrid.remote.client.find_any_role_with_place(config)

class labgrid.remote.client.LocalPort(option_strings, dest, nargs=None, **kwargs)
    Bases: argparse.Action

__init__(option_strings, dest, nargs=None, **kwargs)
    Initialize self. See help(type(self)) for accurate signature.

__call__(parser, namespace, value, option_string)
    Call self as a function.

__module__ = 'labgrid.remote.client'

class labgrid.remote.client.RemotePort(option_strings, dest, nargs=None, **kwargs)
    Bases: argparse.Action

__init__(option_strings, dest, nargs=None, **kwargs)
    Initialize self. See help(type(self)) for accurate signature.

__call__(parser, namespace, value, option_string)
    Call self as a function.

__module__ = 'labgrid.remote.client'

labgrid.remote.client.main()

```

labgrid.remote.common module

```

class labgrid.remote.common.ResourceEntry(data)
    Bases: object

__attrs_post_init__()

property acquired
property avail
property cls
property params
property args
    arguments for resource construction

property extra
    extra resource information

```

```
asdict()
update(data)
    apply updated information from the exporter on the coordinator
acquire(place_name)
release()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', '__attrs_post_init__':
__init__(data) → None
    Method generated by attrs for class ResourceEntry.

__module__ = 'labgrid.remote.common'

__repr__()
    Method generated by attrs for class ResourceEntry.

__weakref__
    list of weak references to the object (if defined)

class labgrid.remote.common.ResourceMatch(exporter, group, cls, name=None, rename=None)
Bases: object

@classmethod fromstr(pattern)

__repr__()
    Return repr(self).

__str__()
    Return str(self).

ismatch(resource_path)
    Return True if this matches the given resource

__attrs_attrs__ = (Attribute(name='exporter', default=NOTHING, validator=None, repr=True,
__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', 'fromstr': <classmethod
__eq__(other)
    Method generated by attrs for class ResourceMatch.

__ge__(other)
    Method generated by attrs for class ResourceMatch.

__gt__(other)
    Method generated by attrs for class ResourceMatch.

__hash__ = None

__init__(exporter, group, cls, name=None, rename=None) → None
    Method generated by attrs for class ResourceMatch.

__le__(other)
    Method generated by attrs for class ResourceMatch.

__lt__(other)
    Method generated by attrs for class ResourceMatch.

__module__ = 'labgrid.remote.common'

__ne__(other)
    Method generated by attrs for class ResourceMatch.
```

__weakref__

list of weak references to the object (if defined)

```
class labgrid.remote.common.Place(name, aliases=NOTHING, comment='', tags=NOTHING,  
                                 matches=NOTHING, acquired=None, ac-  
quired_resources=NOTHING, allowed=NOTHING, cre-  
ated=NOTHING, changed=NOTHING, reservation=None)
```

Bases: object

asdict()

update(*config*)

show(*level*=0)

getmatch(*resource_path*)

Return the ResourceMatch object for the given resource path or None if not found.

A resource_path has the structure (exporter, group, cls, name).

hasmatch(*resource_path*)

Return True if this place as a ResourceMatch object for the given resource path.

A resource_path has the structure (exporter, group, cls, name).

unmatched(*resource_paths*)

Returns a match which could not be matched to the list of resource_path

A resource_path has the structure (exporter, group, cls, name).

touch()

```
__attrs_attrs__ = (Attribute(name='name', default=NOTHING, validator=None, repr=True,  
__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', 'asdict': <function asdict at 0x7f1d1c00>,  
__init__(name, aliases=NOTHING, comment='', tags=NOTHING, matches=NOTHING, ac-  
quired=None, acquired_resources=NOTHING, allowed=NOTHING, created=NOTHING,  
changed=NOTHING, reservation=None) → None  
Method generated by attrs for class Place.
```

__module__ = 'labgrid.remote.common'

__repr__()

Method generated by attrs for class Place.

__weakref__

list of weak references to the object (if defined)

```
class labgrid.remote.common.ReservationState
```

Bases: enum.Enum

An enumeration.

waiting = 0

allocated = 1

acquired = 2

expired = 3

invalid = 4

__module__ = 'labgrid.remote.common'

```
class labgrid.remote.common.Reservation(owner,      token=NOTHING,      state='waiting',
                                         prio=0.0,          filters=NOTHING,      allocations=NOTHING,
                                         created=NOTHING,    timeout=NOTHING)
Bases: object
asdict()
refresh(delta=60)
property expired
show(level=0)

__attrs_attrs__ = (Attribute(name='owner', default=NOTHING, validator=<instance_of val
__dict__ = mappingproxy({'__module__': 'labgrid.remote.common', 'asdict': <function asd
__init__(owner, token=NOTHING, state='waiting', prio=0.0, filters=NOTHING, allocations=NOTH
                                         created=NOTHING, timeout=NOTHING) → None
Method generated by attrs for class Reservation.

__module__ = 'labgrid.remote.common'
__repr__()
Method generated by attrs for class Reservation.

__weakref__
list of weak references to the object (if defined)

labgrid.remote.common.enable_tcp_nodelay(session)
asyncio/autobahn does not set TCP_NODELAY by default, so we need to do it like this for now.
```

labgrid.remote.config module

```
class labgrid.remote.config.ResourceConfig(filename)
Bases: object
__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='filename', default=NOTHING, validator=<instance_of val
__dict__ = mappingproxy({'__module__': 'labgrid.remote.config', '__attrs_post_init__':
__init__(filename) → None
Method generated by attrs for class ResourceConfig.

__module__ = 'labgrid.remote.config'
__repr__()
Method generated by attrs for class ResourceConfig.

__weakref__
list of weak references to the object (if defined)
```

labgrid.remote.coordinator module

The coordinator module coordinates exported resources and clients accessing them.

```
class labgrid.remote.coordinator.Action
Bases: enum.Enum

An enumeration.
```

```

ADD = 0
DEL = 1
UPD = 2
__module__ = 'labgrid.remote.coordinator'

class labgrid.remote.coordinator.RemoteSession
Bases: object

class encapsulating a session, used by ExporterSession and ClientSession

property key
    Key of the session

property name
    Name of the session

__attrs_attrs__ = (Attribute(name='coordinator', default=NOTHING, validator=None, repr=)
__attrs_init__(coordinator, session, authid) → None
    Method generated by attrs for class RemoteSession.

__dict__ = mappingproxy({'__module__': 'labgrid.remote.coordinator', '__doc__': 'cla
__module__ = 'labgrid.remote.coordinator'

repr() 
    Method generated by attrs for class RemoteSession.

__weakref__
    list of weak references to the object (if defined)

class labgrid.remote.coordinator.ExporterSession(coordinator, session, authid)
Bases: labgrid.remote.coordinator.RemoteSession

An ExporterSession is opened for each Exporter connecting to the coordinator, allowing the Exporter to get and set resources

set_resource(groupname, resourcename, resourcedata)

get_resources()
    Method invoked by the client, get the resources from the coordinator

__attrs_attrs__ = (Attribute(name='coordinator', default=NOTHING, validator=None, repr=)
__init__(coordinator, session, authid) → None
    Method generated by attrs for class ExporterSession.

__module__ = 'labgrid.remote.coordinator'

repr() 
    Method generated by attrs for class ExporterSession.

class labgrid.remote.coordinator.ClientSession(coordinator, session, authid)
Bases: labgrid.remote.coordinator.RemoteSession

__attrs_attrs__ = (Attribute(name='coordinator', default=NOTHING, validator=None, repr=)
__init__(coordinator, session, authid) → None
    Method generated by attrs for class ClientSession.

__module__ = 'labgrid.remote.coordinator'

repr() 
    Method generated by attrs for class ClientSession.

```

```
class labgrid.remote.coordinator.ResourceImport(data, *, path)
Bases: labgrid.remote.common.ResourceEntry
```

Represents a local resource exported from an exporter.

The ResourceEntry attributes contain the information for the client.

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, *, path) → None
    Method generated by attrs for class ResourceImport.
__module__ = 'labgrid.remote.coordinator'
__repr__()
    Method generated by attrs for class ResourceImport.
```

```
labgrid.remote.coordinator.locked(func)
```

labgrid.remote.exporter module

The remote.exporter module exports resources to the coordinator and makes them available to other clients on the same coordinator

```
exception labgrid.remote.exporter.ExporterError
```

Bases: Exception

```
__module__ = 'labgrid.remote.exporter'
```

```
__weakref__
```

list of weak references to the object (if defined)

```
exception labgrid.remote.exporter.BrokenResourceError
```

Bases: labgrid.remote.exporter.ExporterError

```
__module__ = 'labgrid.remote.exporter'
```

```
labgrid.remote.exporter.log_subprocess_kernel_stack(logger, child)
```

```
class labgrid.remote.exporter.ResourceExport(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: labgrid.remote.common.ResourceEntry

Represents a local resource exported via a specific protocol.

The ResourceEntry attributes contain the information for the client.

```
__attrs_post_init__()
```

```
property broken
```

```
start()
```

```
stop()
```

```
poll()
```

```
acquire(*args, **kwargs)
```

```
release(*args, **kwargs)
```

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
```

```

__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class ResourceExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class ResourceExport.

class labgrid.remote.exporter.SerialPortExport(data, host='build-15381576-project-
82349-labgrid', proxy=None,
proxy_required=False)
Bases: labgrid.remote.exporter.ResourceExport
ResourceExport for a USB or Raw SerialPort

__attrs_post_init__()

__del__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class SerialPortExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class SerialPortExport.

class labgrid.remote.exporter.USBNetworkExport(data, host='build-15381576-project-
82349-labgrid', proxy=None,
proxy_required=False)
Bases: labgrid.remote.exporter.ResourceExport
ResourceExport for a USB network interface

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class USBNetworkExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class USBNetworkExport.

class labgrid.remote.exporter.USBGenericExport(data, host='build-15381576-project-
82349-labgrid', proxy=None,
proxy_required=False)
Bases: labgrid.remote.exporter.ResourceExport
ResourceExport for USB devices accessed directly from userspace

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class USBGenericExport.

__module__ = 'labgrid.remote.exporter'

```

__repr__()

Method generated by attrs for class USBGenericExport.

```
class labgrid.remote.exporter.USBSigrokExport(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for USB devices accessed directly from userspace

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
```

```
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

→ None

Method generated by attrs for class USBSigrokExport.

__module__ = 'labgrid.remote.exporter'**__repr__()**

Method generated by attrs for class USBSigrokExport.

```
class labgrid.remote.exporter.USBSDMuxExport(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for USB devices accessed directly from userspace

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
```

```
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

→ None

Method generated by attrs for class USBSDMuxExport.

__module__ = 'labgrid.remote.exporter'**__repr__()**

Method generated by attrs for class USBSDMuxExport.

```
class labgrid.remote.exporter.USBSDWireExport(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for USB devices accessed directly from userspace

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
```

```
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

→ None

Method generated by attrs for class USBSDWireExport.

__module__ = 'labgrid.remote.exporter'**__repr__()**

Method generated by attrs for class USBSDWireExport.

```
class labgrid.remote.exporter.USBAudioInputExport (data, host='build-  
15381576-project-82349-  
labgrid', proxy=None,  
proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for ports on switchable USB hubs

```
__attrs_post_init__()  
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,  
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)  
→ None  
Method generated by attrs for class USBAudioInputExport.
```

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__()  
Method generated by attrs for class USBAudioInputExport.
```

```
class labgrid.remote.exporter.SiSPMPowerPortExport (data, host='build-  
15381576-project-82349-  
labgrid', proxy=None,  
proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for ports on GEMBRID switches

```
__attrs_post_init__()  
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,  
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)  
→ None  
Method generated by attrs for class SiSPMPowerPortExport.
```

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__()  
Method generated by attrs for class SiSPMPowerPortExport.
```

```
class labgrid.remote.exporter.USBPowerPortExport (data, host='build-15381576-project-  
82349-labgrid', proxy=None,  
proxy_required=False)
```

Bases: *labgrid.remote.exporter.USBGenericExport*

ResourceExport for ports on switchable USB hubs

```
__attrs_post_init__()  
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,  
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)  
→ None  
Method generated by attrs for class USBPowerPortExport.
```

```
__module__ = 'labgrid.remote.exporter'
```

```
__repr__()  
Method generated by attrs for class USBPowerPortExport.
```

```
class labgrid.remote.exporter.USBDeditecRelaisExport (data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.USBGenericExport

ResourceExport for outputs on deditec relais

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,)

__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class USBDeditecRelaisExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class USBDeditecRelaisExport.

class labgrid.remote.exporter.USBHIDRelayExport (data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.USBGenericExport

ResourceExport for outputs on simple USB HID relays

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,)

__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class USBHIDRelayExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class USBHIDRelayExport.

class labgrid.remote.exporter.USBFlashableExport (data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.USBGenericExport

ResourceExport for Flashable USB devices

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,)

__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class USBFlashableExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class USBFlashableExport.

class labgrid.remote.exporter.ProviderGenericExport (data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)

Bases: labgrid.remote.exporter.ResourceExport
```

ResourceExport for Resources derived from BaseProvider

```
__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
                           _init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
                           → None
                           Method generated by attrs for class ProviderGenericExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
                           Method generated by attrs for class ProviderGenericExport.
```

```
class labgrid.remote.exporter.EthernetPortExport(data, host='build-15381576-project-
                                                 82349-labgrid', proxy=None,
                                                 proxy_required=False)
```

Bases: *labgrid.remote.exporter.ResourceExport*

ResourceExport for a ethernet interface

```
__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
                           __eq__(other)
                           Method generated by attrs for class EthernetPortExport.

                           __ge__(other)
                           Method generated by attrs for class EthernetPortExport.

                           __gt__(other)
                           Method generated by attrs for class EthernetPortExport.

                           __hash__ = None

                           __init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
                           → None
                           Method generated by attrs for class EthernetPortExport.

                           __le__(other)
                           Method generated by attrs for class EthernetPortExport.

                           __lt__(other)
                           Method generated by attrs for class EthernetPortExport.

                           __module__ = 'labgrid.remote.exporter'

                           __ne__(other)
                           Method generated by attrs for class EthernetPortExport.

                           __repr__()
                           Method generated by attrs for class EthernetPortExport.
```

```
class labgrid.remote.exporter.GPIOGenericExport(data, host='build-15381576-project-
                                                 82349-labgrid', proxy=None,
                                                 proxy_required=False)
```

Bases: *labgrid.remote.exporter.ResourceExport*

```
__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
                           __init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
                           → None
                           Method generated by attrs for class GPIOGenericExport.
```

```
__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class GPIOGenericExport.

class labgrid.remote.exporter.NetworkServiceExport(data, host='build-
15381576-project-82349-
labgrid', proxy=None,
proxy_required=False)
Bases: labgrid.remote.exporter.ResourceExport

ResourceExport for a NetworkService

This checks if the address has a interface suffix and then provides the neccessary proxy information.

__attrs_post_init__()
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__eq__(other)
    Method generated by attrs for class NetworkServiceExport.

__ge__(other)
    Method generated by attrs for class NetworkServiceExport.

__gt__(other)
    Method generated by attrs for class NetworkServiceExport.

__hash__ = None
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class NetworkServiceExport.

__le__(other)
    Method generated by attrs for class NetworkServiceExport.

__lt__(other)
    Method generated by attrs for class NetworkServiceExport.

__module__ = 'labgrid.remote.exporter'

__ne__(other)
    Method generated by attrs for class NetworkServiceExport.

__repr__()
    Method generated by attrs for class NetworkServiceExport.

class labgrid.remote.exporter.HTTPVideoStreamExport(data, host='build-
15381576-project-82349-
labgrid', proxy=None,
proxy_required=False)
Bases: labgrid.remote.exporter.ResourceExport

ResourceExport for an HTTPVideoStream

__attrs_post_init__()
__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__eq__(other)
    Method generated by attrs for class HTTPVideoStreamExport.

__ge__(other)
    Method generated by attrs for class HTTPVideoStreamExport.
```

```

__gt__(other)
    Method generated by attrs for class HTTPVideoStreamExport.

__hash__ = None

__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class HTTPVideoStreamExport.

__le__(other)
    Method generated by attrs for class HTTPVideoStreamExport.

__lt__(other)
    Method generated by attrs for class HTTPVideoStreamExport.

__module__ = 'labgrid.remote.exporter'

__ne__(other)
    Method generated by attrs for class HTTPVideoStreamExport.

__repr__()
    Method generated by attrs for class HTTPVideoStreamExport.

```

```
class labgrid.remote.exporter.LXAIOBusNodeExport(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
```

Bases: *labgrid.remote.exporter.ResourceExport*

ResourceExport for LXAIOBusNode devices accessed via the HTTP API

```

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='data', default=NOTHING, validator=None, repr=True,
__init__(data, host='build-15381576-project-82349-labgrid', proxy=None, proxy_required=False)
    → None
    Method generated by attrs for class LXAIOBusNodeExport.

__module__ = 'labgrid.remote.exporter'

__repr__()
    Method generated by attrs for class LXAIOBusNodeExport.

```

```
labgrid.remote.exporter.main()
```

labgrid.remote.scheduler module

```
class labgrid.remote.scheduler.TagSet(name, tags)
```

Bases: object

```

__attrs_attrs__ = (Attribute(name='name', default=NOTHING, validator=<instance_of validate>),
__dict__ = mappingproxy({ '__module__': 'labgrid.remote.scheduler', '__dict__': <attribute '__dict__' of 'TagSet' objects>,
__init__(name, tags) → None
    Method generated by attrs for class TagSet.

__module__ = 'labgrid.remote.scheduler'

__repr__()
    Method generated by attrs for class TagSet.

__weakref__
    list of weak references to the object (if defined)

```

`labgrid.remote.scheduler.schedule_step(places, filters)`

Find the filters that can be directly allocated without overlap.

`labgrid.remote.scheduler.schedule_overlaps(places, filters)`

Iterate schedule_step until no more allocations are found.

`labgrid.remote.scheduler.schedule(places, filters)`

labgrid.resource package

Submodules

labgrid.resource.base module

`class labgrid.resource.base.SerialPort(target, name, port=None, speed=115200)`

Bases: `labgrid.resource.common.Resource`

The basic SerialPort describes port and speed

Parameters

- `port (str)` – port to connect to
- `speed (int)` – speed of the port, defaults to 115200

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)`

`__init__(target, name, port=None, speed=115200) → None`

Method generated by attrs for class SerialPort.

`__module__ = 'labgrid.resource.base'`

`__repr__()`

Method generated by attrs for class SerialPort.

`class labgrid.resource.base.NetworkInterface(target, name, ifname=None)`

Bases: `labgrid.resource.common.Resource`

The basic NetworkInterface contains an interface name

Parameters `ifname (str)` – name of the interface

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)`

`__init__(target, name, ifname=None) → None`

Method generated by attrs for class NetworkInterface.

`__module__ = 'labgrid.resource.base'`

`__repr__()`

Method generated by attrs for class NetworkInterface.

`class labgrid.resource.base.EthernetPort(target, name, switch=None, interface=None)`

Bases: `labgrid.resource.common.Resource`

The basic EthernetPort describes a switch and interface

Parameters

- `switch (str)` – name of the switch
- `interface (str)` – name of the interface

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)`

```

__eq__(other)
    Method generated by attrs for class EthernetPort.

__ge__(other)
    Method generated by attrs for class EthernetPort.

__gt__(other)
    Method generated by attrs for class EthernetPort.

__hash__ = None

__init__(target, name, switch=None, interface=None) → None
    Method generated by attrs for class EthernetPort.

__le__(other)
    Method generated by attrs for class EthernetPort.

__lt__(other)
    Method generated by attrs for class EthernetPort.

__module__ = 'labgrid.resource.base'

__ne__(other)
    Method generated by attrs for class EthernetPort.

__repr__()
    Method generated by attrs for class EthernetPort.

class labgrid.resource.base.SysfsGPIO(target, name, index=None)
Bases: labgrid.resource.common.Resource

The basic SysfsGPIO contains an index

    Parameters index (int) – index of target gpio line.

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True,
__init__(target, name, index=None) → None
    Method generated by attrs for class SysfsGPIO.

__module__ = 'labgrid.resource.base'

__repr__()
    Method generated by attrs for class SysfsGPIO.

```

labgrid.resource.common module

```

class labgrid.resource.common.Resource(target, name)
Bases: labgrid.binding.BindingMixin

```

Represents a resource which is used by drivers. It only stores information and does not implement any actual functionality.

Resources can exist without a target, but they must be bound to one before use.

Life cycle:

- create
- bind (n times)

```
__attrs_post_init__()
```

```
property command_prefix
```

```
property parent
get_managed_parent()
    For Resources which have been created at runtime, return the ManagedResource resource which created it.

    Returns None otherwise.

poll()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class Resource.

__module__ = 'labgrid.resource.common'
__repr__()
    Method generated by attrs for class Resource.

class labgrid.resource.common.NetworkResource(target, name, host)
Bases: labgrid.resource.common.Resource

Represents a remote Resource available on another computer.

This stores a command_prefix to describe how to connect to the remote computer.

Parameters host (str) – remote host the resource is available on

property command_prefix
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host) → None
    Method generated by attrs for class NetworkResource.

__module__ = 'labgrid.resource.common'
__repr__()
    Method generated by attrs for class NetworkResource.

class labgrid.resource.common.ResourceManager
Bases: object

instances = {}

classmethod get() → labgrid.resource.common.ResourceManager

__attrs_post_init__()

on_resource_added(resource: labgrid.resource.common.ManagedResource)

poll()

__annotations__ = {'instances': 'Dict[Type[ResourceManager], ResourceManager]'}
__attrs_attrs__ = {}

__dict__ = mappingproxy({'__module__': 'labgrid.resource.common', '__annotations__': {}})
__init__() → None
    Method generated by attrs for class ResourceManager.

__module__ = 'labgrid.resource.common'
__repr__()
    Method generated by attrs for class ResourceManager.
```

__weakref__

list of weak references to the object (if defined)

```
class labgrid.resource.common.ManagedResource(target, name)
Bases: labgrid.resource.common.Resource
```

Represents a resource which can appear and disappear at runtime. Every ManagedResource has a corresponding ResourceManager which handles these events.

manager_cls

alias of *ResourceManager*

__attrs_post_init__()**poll()****__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True****__init__(target, name) → None**

Method generated by attrs for class ManagedResource.

__module__ = 'labgrid.resource.common'**__repr__()**

Method generated by attrs for class ManagedResource.

get_managed_parent()

For Resources which have been created at runtime, return the ManagedResource resource which created it.

Returns None otherwise.

labgrid.resource.docker module

Auxiliary classes that assist DockerDriver. Specifically, DockerDaemon and DockerManager will create the NetworkResource instance that is declared in the specification (e.g. yaml) of DockerDriver.

```
class labgrid.resource.docker.DockerConstants
```

Bases: *object*

Class constants for handling container cleanup

```
DOCKER_LG_CLEANUP_LABEL = 'lg_cleanup'
```

```
DOCKER_LG_CLEANUP_TYPE_AUTO = 'auto'
```

```
__dict__ = mappingproxy({ '__module__': 'labgrid.resource.docker', '__doc__': 'Class c' })
```

```
__module__ = 'labgrid.resource.docker'
```

__weakref__

list of weak references to the object (if defined)

```
class labgrid.resource.docker.DockerManager
```

Bases: *labgrid.resource.common.ResourceManager*

The DockerManager is responsible for cleaning up dangling containers and managing the managed NetworkService resources. Different docker daemons for different targets are allowed, but there has to be only one for each target.

__attrs_post_init__()

on_resource_added(resource)

If the resource added is a DockerDaemon, make sure this is the only one added for this target. If it is, create a docker client to be used to communicate with the docker daemon.

poll()

Ask associated DockerDaemon resource to check if associated NetworkService has come up.

__attrs_attrs__ = ()**__init__() → None**

Method generated by attrs for class DockerManager.

__module__ = 'labgrid.resource.docker'**__repr__()**

Method generated by attrs for class DockerManager.

class labgrid.resource.docker.DockerDaemon(target, name, docker_daemon_url)

Bases: *labgrid.resource.common.ManagedResource*

A resource identifying a docker daemon

docker_daemon_url = None

The docker network service is a managed resource mapping a container name to a network service.

manager_cls

alias of *DockerManager*

__attrs_post_init__()**on_client_bound(client)**

Each time a docker driver binds to the DockerDaemon resource the docker driver network services list is iterated and for each network service defined a NetworkService resource instance is created with the parameters from the configuration file.

on_poll(docker_client)

Check if associated NetworkService has come up.

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True**__init__(target, name, docker_daemon_url) → None**

Method generated by attrs for class DockerDaemon.

__module__ = 'labgrid.resource.docker'**__repr__()**

Method generated by attrs for class DockerDaemon.

labgrid.resource.ethernetport module**class labgrid.resource.ethernetport.SNMPSwitch(hostname)**

Bases: *object*

SNMPSwitch describes a switch accessible over SNMP. This class implements functions to query ports and the forwarding database.

__attrs_post_init__()**update()**

Update port status and forwarding database status

Returns None

```

__attrs_attrs__ = (Attribute(name='hostname', default=NOTHING, validator=<instance_of_>
__dict__ = mappingproxy({ '__module__': 'labgrid.resource.ethernetport', '__doc__': ''
__eq__(other)
    Method generated by attrs for class SNMPSwitch.

__ge__(other)
    Method generated by attrs for class SNMPSwitch.

__gt__(other)
    Method generated by attrs for class SNMPSwitch.

__hash__ = None

__init__(hostname) → None
    Method generated by attrs for class SNMPSwitch.

__le__(other)
    Method generated by attrs for class SNMPSwitch.

__lt__(other)
    Method generated by attrs for class SNMPSwitch.

__module__ = 'labgrid.resource.ethernetport'

__ne__(other)
    Method generated by attrs for class SNMPSwitch.

__repr__()
    Method generated by attrs for class SNMPSwitch.

__weakref__
    list of weak references to the object (if defined)

class labgrid.resource.ethernetport.EthernetPortManager
Bases: labgrid.resource.common.ResourceManager

The EthernetPortManager periodically polls the switch for new updates.

__attrs_post_init__()

on_resource_added(resource)
    Handler to execute when the resource is added

    Checks whether the resource can be managed by this Manager and starts the event loop.

        Parameters resource (Resource) – resource to check against

        Returns None

poll()
    Updates the state with new information from the event loop

        Returns None

__attrs_attrs__ = ()

__eq__(other)
    Method generated by attrs for class EthernetPortManager.

__ge__(other)
    Method generated by attrs for class EthernetPortManager.

__gt__(other)
    Method generated by attrs for class EthernetPortManager.

```

```
__hash__ = None
__init__(self) → None
    Method generated by attrs for class EthernetPortManager.

__le__(other)
    Method generated by attrs for class EthernetPortManager.

__lt__(other)
    Method generated by attrs for class EthernetPortManager.

__module__ = 'labgrid.resource.ethernetport'
__ne__(other)
    Method generated by attrs for class EthernetPortManager.

__repr__(self)
    Method generated by attrs for class EthernetPortManager.

class labgrid.resource.ethernetport.SNMPEthernetPort(target, name, switch, interface)
Bases: labgrid.resource.common.ManagedResource

SNMPEthernetPort describes an ethernet port which can be queried over SNMP.

    Parameters
        • switch (str) – hostname of the switch to query
        • interface (str) – name of the interface to query

manager_cls
alias of EthernetPortManager

__attrs_post_init__(self)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True,
__eq__(other)
    Method generated by attrs for class SNMPEthernetPort.

__ge__(other)
    Method generated by attrs for class SNMPEthernetPort.

__gt__(other)
    Method generated by attrs for class SNMPEthernetPort.

__hash__ = None
__init__(self, target, name, switch, interface) → None
    Method generated by attrs for class SNMPEthernetPort.

__le__(other)
    Method generated by attrs for class SNMPEthernetPort.

__lt__(other)
    Method generated by attrs for class SNMPEthernetPort.

__module__ = 'labgrid.resource.ethernetport'
__ne__(other)
    Method generated by attrs for class SNMPEthernetPort.

__repr__(self)
    Method generated by attrs for class SNMPEthernetPort.
```

labgrid.resource.flashrom module

```
class labgrid.resource.flashrom.Flashrom(target, name, programmer)
    Bases: labgrid.resource.common.Resource

    Programmer is the programmer parameter described in man(8) of flashrom

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    __init__(target, name, programmer) → None
        Method generated by attrs for class Flashrom.

    __module__ = 'labgrid.resource.flashrom'

    __repr__()
        Method generated by attrs for class Flashrom.

class labgrid.resource.flashrom.NetworkFlashrom(target, name, host, programmer)
    Bases: labgrid.resource.common.NetworkResource

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    __init__(target, name, host, programmer) → None
        Method generated by attrs for class NetworkFlashrom.

    __module__ = 'labgrid.resource.flashrom'

    __repr__()
        Method generated by attrs for class NetworkFlashrom.
```

labgrid.resource.httpvideostream module

```
class labgrid.resource.httpvideostream.HTTPVideoStream(target, name, url)
    Bases: labgrid.resource.common.Resource

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

    __init__(target, name, url) → None
        Method generated by attrs for class HTTPVideoStream.

    __module__ = 'labgrid.resource.httpvideostream'

    __repr__()
        Method generated by attrs for class HTTPVideoStream.
```

labgrid.resource.lxaiobus module

```
class labgrid.resource.lxaiobus.LXAIOBusNodeManager
    Bases: labgrid.resource.common.ResourceManager

    __attrs_post_init__()

    poll()

    __attrs_attrs__ = ()

    __init__() → None
        Method generated by attrs for class LXAIOBusNodeManager.

    __module__ = 'labgrid.resource.lxaiobus'
```

`__repr__()`

Method generated by attrs for class LXAIOPBusNodeManager.

class labgrid.resource.lxaiobus.**LXAIOPBusNode** (*target, name, host, node*)
Bases: *labgrid.resource.common.ManagedResource*

This resource describes a generic LXA IO BUs Node.

Parameters

- **host** (*str*) – hostname of the owserver e.g. localhost:4304
- **node** (*str*) – node name e.g. EthMux-5c12ca8b

`manager_cls`

alias of *LXAIOPBusNodeManager*

`__attrs_post_init__()`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)`

`__init__` (*target, name, host, node*) → None

Method generated by attrs for class LXAIOPBusNode.

`__module__ = 'labgrid.resource.lxaiobus'`

`__repr__()`

Method generated by attrs for class LXAIOPBusNode.

class labgrid.resource.lxaiobus.**LXAIOPBusPIO** (*target, name, host, node, pin, invert=False*)
Bases: *labgrid.resource.lxaiobus.LXAIOPBusNode*

This resource describes a LXA IO Bus PIO Port.

Parameters

- **pin** (*str*) – pin label e.g. OUT0
- **invert** (*bool*) – optional, whether the logic level is inverted (active-low)

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)`

`__init__` (*target, name, host, node, pin, invert=False*) → None

Method generated by attrs for class LXAIOPBusPIO.

`__module__ = 'labgrid.resource.lxaiobus'`

`__repr__()`

Method generated by attrs for class LXAIOPBusPIO.

labgrid.resource.modbus module

class labgrid.resource.modbus.**ModbusTCPcoil** (*target, name, host, coil, invert=False*)
Bases: *labgrid.resource.common.Resource*

This resource describes Modbus TCP coil.

Parameters

- **host** (*str*) – hostname of the Modbus TCP server e.g. “192.168.23.42:502”
- **coil** (*int*) – index of the coil e.g. 3
- **invert** (*bool*) – optional, whether the logic level is be inverted (active-low)

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)`

```
__init__(target, name, host, coil, invert=False) → None
    Method generated by attrs for class ModbusTCPcoil.

__module__ = 'labgrid.resource.modbus'
__repr__()
    Method generated by attrs for class ModbusTCPcoil.
```

labgrid.resource.mqtt module

```
class labgrid.resource.mqtt.MQTTManager(available=NOTHING,      avail_lock=<unlocked
                                         _thread.lock object>,     clients=NOTHING,
                                         topics=NOTHING,          topic_lock=<unlocked
                                         _thread.lock object>, last=0.0)
Bases: labgrid.resource.common.ResourceManager

__attrs_post_init__()
on_resource_added(resource)

poll()

__attrs_attrs__ = (Attribute(name='available', default=Factory(factory=<class 'set'>),
__init__(available=NOTHING, avail_lock=<unlocked _thread.lock object>, clients=NOTHING, top-
       ics=NOTHING, topic_lock=<unlocked _thread.lock object>, last=0.0) → None
    Method generated by attrs for class MQTTManager.

__module__ = 'labgrid.resource.mqtt'
__repr__()
    Method generated by attrs for class MQTTManager.

class labgrid.resource.mqtt.MQTTResource(target, name, host, avail_topic)
Bases: labgrid.resource.common.ManagedResource

manager_cls
alias of MQTTManager

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, avail_topic) → None
    Method generated by attrs for class MQTTResource.

__module__ = 'labgrid.resource.mqtt'
__repr__()
    Method generated by attrs for class MQTTResource.

class labgrid.resource.mqtt.TasmotaPowerPort(target,      name,      host,      avail_topic,
                                              power_topic=None, status_topic=None)
Bases: labgrid.resource.mqtt.MQTTResource

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, avail_topic, power_topic=None, status_topic=None) → None
    Method generated by attrs for class TasmotaPowerPort.

__module__ = 'labgrid.resource.mqtt'
__repr__()
    Method generated by attrs for class TasmotaPowerPort.
```

labgrid.resource.networkservice module

```
class labgrid.resource.networkservice.NetworkService(target, name, address, user-
                                                 name, password="", port=22)
Bases: labgrid.resource.common.Resource
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, address, username, password="", port=22) → None
    Method generated by attrs for class NetworkService.
__module__ = 'labgrid.resource.networkservice'
__repr__()
    Method generated by attrs for class NetworkService.
```

labgrid.resource.onewirereport module

```
class labgrid.resource.onewirereport.OneWirePIO(target, name, host, path, invert=False)
Bases: labgrid.resource.common.Resource
This resource describes a Onewire PIO Port.

Parameters
• host (str) – hostname of the owserver e.g. localhost:4304
• path (str) – path to the port on the owserver e.g. 29.7D6913000000/PIO.0
• invert (bool) – optional, whether the logic level is be inverted (active-low)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, path, invert=False) → None
    Method generated by attrs for class OneWirePIO.
__module__ = 'labgrid.resource.onewirereport'
__repr__()
    Method generated by attrs for class OneWirePIO.
```

labgrid.resource.power module

```
class labgrid.resource.power.NetworkPowerPort(target, name, model, host, index)
Bases: labgrid.resource.common.Resource
The NetworkPowerPort describes a remotely switchable PowerPort

Parameters
• model (str) – model of the external power switch
• host (str) – host to connect to
• index (str) – index of the power port on the external switch

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, model, host, index) → None
    Method generated by attrs for class NetworkPowerPort.
__module__ = 'labgrid.resource.power'
```

__repr__()

Method generated by attrs for class NetworkPowerPort.

```
class labgrid.resource.power.PDUDaemonPort (target, name, host, pdu, index)
```

Bases: *labgrid.resource.common.Resource*

The PDUDaemonPort describes a port on a PDU accessible via PDUDaemon

Parameters

- **host** (*str*) – name of the host running the PDUDaemon
- **pdu** (*str*) – name of the PDU in the configuration file
- **index** (*int*) – index of the power port on the PDU

```
_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
_init_(target, name, host, pdu, index) → None
```

Method generated by attrs for class PDUDaemonPort.

```
_module_ = 'labgrid.resource.power'
```

__repr__()

Method generated by attrs for class PDUDaemonPort.

labgrid.resource.provider module

```
class labgrid.resource.provider.BaseProvider (target, name, internal, external)
```

Bases: *labgrid.resource.common.Resource*

```
_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
_init_(target, name, internal, external) → None
```

Method generated by attrs for class BaseProvider.

```
_module_ = 'labgrid.resource.provider'
```

__repr__()

Method generated by attrs for class BaseProvider.

```
class labgrid.resource.provider.TFTPProvider (target, name, internal, external)
```

Bases: *labgrid.resource.provider.BaseProvider*

```
_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
_init_(target, name, internal, external) → None
```

Method generated by attrs for class TFTPProvider.

```
_module_ = 'labgrid.resource.provider'
```

__repr__()

Method generated by attrs for class TFTPProvider.

```
class labgrid.resource.provider.NFSProvider (target, name, internal, external)
```

Bases: *labgrid.resource.provider.BaseProvider*

```
_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
_init_(target, name, internal, external) → None
```

Method generated by attrs for class NFSProvider.

```
_module_ = 'labgrid.resource.provider'
```

`__repr__()`

Method generated by attrs for class NFSProvider.

`class labgrid.resource.provider.HTTPProvider(target, name, internal, external)`

Bases: `labgrid.resource.provider.BaseProvider`

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, internal, external) → None`

Method generated by attrs for class HTTPProvider.

`__module__ = 'labgrid.resource.provider'`

`__repr__()`

Method generated by attrs for class HTTPProvider.

labgrid.resource.pyvisa module

`class labgrid.resource.pyvisa.PyVISADevice(target, name, type, url)`

Bases: `labgrid.resource.common.Resource`

The PyVISADevice describes a test stimuli device controlled with PyVISA

Parameters

- `type` (`str`) – device resource type following the pyVISA resource syntax, e.g. ASRL, TCPIP...

- `url` (`str`) – device identifier on selected resource, e.g. <ip> for TCPIP resource

`__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True`

`__init__(target, name, type, url) → None`

Method generated by attrs for class PyVISADevice.

`__module__ = 'labgrid.resource.pyvisa'`

`__repr__()`

Method generated by attrs for class PyVISADevice.

labgrid.resource.remote module

`class labgrid.resource.remote.RemotePlaceManager`

Bases: `labgrid.resource.common.ResourceManager`

`__attrs_post_init__()`

`on_resource_added(resource)`

`poll()`

`__attrs_attrs__ = ()`

`__init__() → None`

Method generated by attrs for class RemotePlaceManager.

`__module__ = 'labgrid.resource.remote'`

`__repr__()`

Method generated by attrs for class RemotePlaceManager.

```

class labgrid.resource.remote.RemotePlace(target, name)
Bases: labgrid.resource.common.ManagedResource

manager_cls
    alias of RemotePlaceManager

_attrs_post_init_()

_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

_init_(target, name) → None
    Method generated by attrs for class RemotePlace.

_module_ = 'labgrid.resource.remote'

_repr_()
    Method generated by attrs for class RemotePlace.

class labgrid.resource.remote.RemoteUSBResource(target, name, host, busnum, devnum,
                                                path, vendor_id, model_id)
Bases: labgrid.resource.common.NetworkResource, labgrid.resource.common.
        ManagedResource

manager_cls
    alias of RemotePlaceManager

_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

_init_(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class RemoteUSBResource.

_module_ = 'labgrid.resource.remote'

_repr_()
    Method generated by attrs for class RemoteUSBResource.

class labgrid.resource.remote.NetworkAndroidFastboot(target, name, host, busnum,
                                                       devnum, path, vendor_id,
                                                       model_id)
Bases: labgrid.resource.remote.RemoteUSBResource

_attrs_post_init_()

_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

_init_(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkAndroidFastboot.

_module_ = 'labgrid.resource.remote'

_repr_()
    Method generated by attrs for class NetworkAndroidFastboot.

class labgrid.resource.remote.NetworkIMXUSBLoader(target, name, host, busnum, devnum,
                                                       path, vendor_id, model_id)
Bases: labgrid.resource.remote.RemoteUSBResource

_attrs_post_init_()

_attrs_attrs_ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

_init_(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkIMXUSBLoader.

_module_ = 'labgrid.resource.remote'

```

__repr__()

Method generated by attrs for class NetworkIMXUSBLoader.

```
class labgrid.resource.remote.NetworkMXSUSBLoader(target, name, host, busnum, devnum,
                                                 path, vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
```

Method generated by attrs for class NetworkMXSUSBLoader.

```
__module__ = 'labgrid.resource.remote'
```

__repr__()

Method generated by attrs for class NetworkMXSUSBLoader.

```
class labgrid.resource.remote.NetworkRKUSBLoader(target, name, host, busnum, devnum,
                                                 path, vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
```

Method generated by attrs for class NetworkRKUSBLoader.

```
__module__ = 'labgrid.resource.remote'
```

__repr__()

Method generated by attrs for class NetworkRKUSBLoader.

```
class labgrid.resource.remote.NetworkAlteraUSBBBlaster(target, name, host, busnum,
                                                       devnum, path, vendor_id,
                                                       model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
```

Method generated by attrs for class NetworkAlteraUSBBBlaster.

```
__module__ = 'labgrid.resource.remote'
```

__repr__()

Method generated by attrs for class NetworkAlteraUSBBBlaster.

```
class labgrid.resource.remote.NetworkSigrokUSBDevice(target, name, host, busnum,
                                                       devnum, path, vendor_id,
                                                       model_id, driver=None, chan-
                                                       nels=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkSigrokUSBDevice describes a remotely accessible sigrok USB device

__attrs_post_init__()

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, driver=None, chan-
        nels=None) → None
```

Method generated by attrs for class NetworkSigrokUSBDevice.

```

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkSigrokUSBDevice.

class labgrid.resource.remote.NetworkSigrokUSBSerialDevice(target, name,
                                                               host, busnum, dev-
                                                               vnum, path, ven-
                                                               dor_id, model_id,
                                                               driver=None, chan-
                                                               nels=None)
Bases: labgrid.resource.remote.RemoteUSBResource

```

The NetworkSigrokUSBSerialDevice describes a remotely accessible sigrok USB device

```

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, driver=None, chan-
        nels=None) → None
    Method generated by attrs for class NetworkSigrokUSBSerialDevice.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkSigrokUSBSerialDevice.

```

```

class labgrid.resource.remote.NetworkUSBBMassStorage(target, name, host, busnum,
                                                       devnum, path, vendor_id,
                                                       model_id)
Bases: labgrid.resource.remote.RemoteUSBResource

```

The NetworkUSBBMassStorage describes a remotely accessible USB storage device

```

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkUSBBMassStorage.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBBMassStorage.

```

```

class labgrid.resource.remote.NetworkUSBSDMuxDevice(target, name, host, busnum,
                                                       devnum, path, vendor_id,
                                                       model_id, control_path=None)
Bases: labgrid.resource.remote.RemoteUSBResource

```

The NetworkUSBSDMuxDevice describes a remotely accessible USBSDMux device

```

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, control_path=None) →
        None
    Method generated by attrs for class NetworkUSBSDMuxDevice.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBSDMuxDevice.

```

```
class labgrid.resource.remote.NetworkUSBSDWireDevice(target, name, host, busnum, devnum, path, vendor_id, model_id, control_serial=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBSDWireDevice describes a remotely accessible USBSDWire device

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, control_serial=None) → None
```

Method generated by attrs for class NetworkUSBSDWireDevice.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Method generated by attrs for class NetworkUSBSDWireDevice.

```
class labgrid.resource.remote.NetworkSiSPMPowerPort(target, name, host, busnum, devnum, path, vendor_id, model_id, index=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkSiSPMPowerPort describes a remotely accessible SiS-PM power port

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, index=None) → None
```

Method generated by attrs for class NetworkSiSPMPowerPort.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Method generated by attrs for class NetworkSiSPMPowerPort.

```
class labgrid.resource.remote.NetworkUSBPowerPort(target, name, host, busnum, devnum, path, vendor_id, model_id, index=None)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBPowerPort describes a remotely accessible USB hub port with power switching

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, index=None) → None
```

Method generated by attrs for class NetworkUSBPowerPort.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Method generated by attrs for class NetworkUSBPowerPort.

```
class labgrid.resource.remote.NetworkUSBVideo(target, name, host, busnum, devnum, path, vendor_id, model_id)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkUSBVideo describes a remotely accessible USB video device

```
__attrs_post_init__()
```

```

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkUSBVideo.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBVideo.

class labgrid.resource.remote.NetworkUSBTextInput(target, name, host, busnum, de-
                                                vnum, path, vendor_id, model_id,
                                                index=0, alsa_name=None)
Bases: labgrid.resource.remote.RemoteUSBResource

The NetworkUSBTextInput describes a remotely accessible USB input device

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, index=0,
        alsa_name=None) → None
    Method generated by attrs for class NetworkUSBTextInput.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBTextInput.

class labgrid.resource.remote.NetworkUSBTMC(target, name, host, busnum, devnum, path,
                                              vendor_id, model_id)
Bases: labgrid.resource.remote.RemoteUSBResource

The NetworkUSBTMC describes a remotely accessible USB TMC device

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkUSBTMC.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBTMC.

class labgrid.resource.remote.NetworkUSBDebugger(target, name, host, busnum, devnum,
                                                 path, vendor_id, model_id)
Bases: labgrid.resource.remote.RemoteUSBResource

The NetworkUSBDebugger describes a remotely accessible USB JTAG/Debugger device

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkUSBDebugger.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBDebugger.

```

```
class labgrid.resource.remote.NetworkDeditecRelais8(target, name, host, busnum,
                                                    devnum, path, vendor_id,
                                                    model_id, index=None, invert=False)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkDeditecRelais8 describes a remotely accessible USB relais port

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, index=None, invert=False)
```

→ None

Method generated by attrs for class NetworkDeditecRelais8.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Method generated by attrs for class NetworkDeditecRelais8.

```
class labgrid.resource.remote.NetworkHIDRelay(target, name, host, busnum, devnum,
                                              path, vendor_id, model_id, index=1, invert=False)
```

Bases: *labgrid.resource.remote.RemoteUSBResource*

The NetworkHIDRelay describes a remotely accessible USB relay port

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, index=1, invert=False) →
```

None

Method generated by attrs for class NetworkHIDRelay.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Method generated by attrs for class NetworkHIDRelay.

```
class labgrid.resource.remote.NetworkSysfsGPIO(target, name, host, index)
```

Bases: *labgrid.resource.common.NetworkResource*, *labgrid.resource.common.ManagedResource*

manager_cls

The NetworkSysfsGPIO describes a remotely accessible gpio line

alias of *RemotePlaceManager*

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```
__init__(target, name, host, index) → None
```

Method generated by attrs for class NetworkSysfsGPIO.

```
__module__ = 'labgrid.resource.remote'
```

```
__repr__()
```

Method generated by attrs for class NetworkSysfsGPIO.

```
class labgrid.resource.remote.NetworkLXAIOBusNode(target, name, host, node)
```

Bases: *labgrid.resource.common.ManagedResource*

manager_cls

alias of *RemotePlaceManager*

```

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, node) → None
    Method generated by attrs for class NetworkLXAIOBusNode.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkLXAIOBusNode.

class labgrid.resource.remote.NetworkLXAIOBusPIO(target, name, host, node, pin, invert=False)
Bases: labgrid.resource.remote.NetworkLXAIOBusNode

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, node, pin, invert=False) → None
    Method generated by attrs for class NetworkLXAIOBusPIO.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkLXAIOBusPIO.

class labgrid.resource.remote.NetworkLXAUSBMux(target, name, host, busnum, devnum,
                                                path, vendor_id, model_id)
Bases: labgrid.resource.remote.RemoteUSBResource

The NetworkLXAUSBMux describes a remotely accessible USBMux device

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, busnum, devnum, path, vendor_id, model_id) → None
    Method generated by attrs for class NetworkLXAUSBMux.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkLXAUSBMux.

class labgrid.resource.remote.NetworkUSBFlashableDevice(target, name, host, busnum,
                                                       devnum, path, vendor_id,
                                                       model_id, devnode)
Bases: labgrid.resource.remote.RemoteUSBResource

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, busnum, devnum, path, vendor_id, model_id, devnode) → None
    Method generated by attrs for class NetworkUSBFlashableDevice.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkUSBFlashableDevice.

class labgrid.resource.remote.NetworkMQTTResource(target, name, host, avail_topic)
Bases: labgrid.resource.common.ManagedResource

manager_cls
    alias of RemotePlaceManager

__attrs_post_init__()

```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, avail_topic) → None
    Method generated by attrs for class NetworkMQTTResource.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class NetworkMQTTResource.

class labgrid.resource.remote.RemoteNetworkInterface(target, name, host, if-
                                                     name=None)
Bases: labgrid.resource.common.NetworkResource, labgrid.resource.common.
ManagedResource

manager_cls
    alias of RemotePlaceManager

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, ifname=None) → None
    Method generated by attrs for class RemoteNetworkInterface.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class RemoteNetworkInterface.

class labgrid.resource.remote.RemoteBaseProvider(target, name, host, internal, external)
Bases: labgrid.resource.common.NetworkResource

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, internal, external) → None
    Method generated by attrs for class RemoteBaseProvider.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class RemoteBaseProvider.

class labgrid.resource.remote.RemoteTFTPProvider(target, name, host, internal, external)
Bases: labgrid.resource.remote.RemoteBaseProvider

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, internal, external) → None
    Method generated by attrs for class RemoteTFTPProvider.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class RemoteTFTPProvider.

class labgrid.resource.remote.RemoteNFSProvider(target, name, host, internal, external)
Bases: labgrid.resource.remote.RemoteBaseProvider

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, host, internal, external) → None
    Method generated by attrs for class RemoteNFSProvider.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class RemoteNFSProvider.
```

```
class labgrid.resource.remote.RemoteHTTPProvider(target, name, host, internal, external)
Bases: labgrid.resource.remote.RemoteBaseProvider

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, internal, external) → None
    Method generated by attrs for class RemoteHTTPProvider.

__module__ = 'labgrid.resource.remote'

__repr__()
    Method generated by attrs for class RemoteHTTPProvider.
```

labgrid.resource.serialport module

```
class labgrid.resource.serialport.RawSerialPort(target, name, port=None,
                                                speed=115200)
Bases: labgrid.resource.base.SerialPort, labgrid.resource.common.Resource

RawSerialPort describes a serialport which is available on the local computer.

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, port=None, speed=115200) → None
    Method generated by attrs for class RawSerialPort.

__module__ = 'labgrid.resource.serialport'

__repr__()
    Method generated by attrs for class RawSerialPort.
```

```
class labgrid.resource.serialport.NetworkSerialPort(target, name, host, port,
                                                    speed=115200, proto-
                                                    col='rfc2217')
Bases: labgrid.resource.common.NetworkResource
```

A NetworkSerialPort is a remotely accessable serialport, usually accessed via rfc2217 or tcp raw.

Parameters

- **port** (*str*) – socket port to connect to
- **speed** (*int*) – speed of the port e.g. 9800
- **protocol** (*str*) – connection protocol: “raw” or “rfc2217”

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, host, port, speed=115200, protocol='rfc2217') → None
    Method generated by attrs for class NetworkSerialPort.

__module__ = 'labgrid.resource.serialport'

__repr__()
    Method generated by attrs for class NetworkSerialPort.
```

labgrid.resource.sigrok module

```
class labgrid.resource.sigrok.SigrokDevice(target, name, driver='demo', chan-
                                           nels=None)
Bases: labgrid.resource.common.Resource
```

The SigrokDevice describes an attached sigrok device with driver and channel mapping

Parameters

- **driver** (*str*) – driver to use with sigrok

- **channels** (*str*) – a sigrok channel mapping as described in the sigrok-cli man page

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, driver='demo', channels=None) → None
    Method generated by attrs for class SigrokDevice.

__module__ = 'labgrid.resource.sigrok'
__repr__()
    Method generated by attrs for class SigrokDevice.
```

labgrid.resource.suggest module

```
class labgrid.resource.suggest.Suggester(args)
Bases: object

__init__(args)
    Initialize self. See help(type(self)) for accurate signature.

suggest_callback(resource, meta, suggestions)

run()

__dict__ = mappingproxy({'__module__': 'labgrid.resource.suggest', '__init__': <func>
__module__ = 'labgrid.resource.suggest'
__weakref__
    list of weak references to the object (if defined)

labgrid.resource.suggest.main()
```

labgrid.resource.udev module

```
class labgrid.resource.udev.UdevManager
Bases: labgrid.resource.common.ResourceManager

__attrs_post_init__()

on_resource_added(resource)

poll()

__attrs_attrs__ = ()

__init__() → None
    Method generated by attrs for class UdevManager.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class UdevManager.

class labgrid.resource.udev.USBResource(target, name, match=NOTHING, device=None,
                                         suggest=False)
Bases: labgrid.resource.common.ManagedResource
```

```

manager_cls
    alias of UdevManager

__attrs_post_init__()
filter_match(device)
suggest_match(device)
try_match(device)
update()

property busnum
property devnum
property path
property vendor_id
property model_id
read_attr(attribute)
    read uncached attribute value from sysfs

    pyudev currently supports only cached access to attributes, so we read directly from sysfs.

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class USBResource.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class USBResource.

class labgrid.resource.udev.USBSerialPort(target, name, match=NOTHING, device=None,
    suggest=False, port=None, speed=115200)
Bases: labgrid.resource.udev.USBResource, labgrid.resource.base.SerialPort

__attrs_post_init__()
update()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False, port=None, speed=115200)
    → None
    Method generated by attrs for class USBSerialPort.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class USBSerialPort.

class labgrid.resource.udev.USBMassStorage(target, name, match=NOTHING, de-
    vice=None, suggest=False)
Bases: labgrid.resource.udev.USBResource

__attrs_post_init__()
property avail
property path
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

```

```
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class USBMassStorage.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class USBMassStorage.

class labgrid.resource.udev.IMXUSBLoader(target, name, match=NOTHING, device=None,
                                             suggest=False)
Bases: labgrid.resource.udev.USBResource

filter_match(device)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class IMXUSBLoader.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class IMXUSBLoader.

class labgrid.resource.udev.RKUSBLoader(target, name, match=NOTHING, device=None,
                                             suggest=False)
Bases: labgrid.resource.udev.USBResource

filter_match(device)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class RKUSBLoader.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class RKUSBLoader.

class labgrid.resource.udev.MXSUSBLoader(target, name, match=NOTHING, device=None,
                                             suggest=False)
Bases: labgrid.resource.udev.USBResource

filter_match(device)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class MXSUSBLoader.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class MXSUSBLoader.

class labgrid.resource.udev.AndroidFastboot(target, name, match=NOTHING,
                                              device=None, suggest=False,
                                              usb_vendor_id='1d6b',
                                              usb_product_id='0104')
Bases: labgrid.resource.udev.USBResource

filter_match(device)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
```

```

__init__(target, name, match=NOTHING, device=None, suggest=False, usb_vendor_id='1d6b',
         usb_product_id='0104') → None
    Method generated by attrs for class AndroidFastboot.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class AndroidFastboot.

class labgrid.resource.udev.USBNetworkInterface(target, name, match=NOTHING,
                                                device=None, suggest=False, if-
                                                name=None)
Bases: labgrid.resource.udev.USBRessource, labgrid.resource.base.
NetworkInterface

__attrs_post_init__()

update()

property if_state

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, match=NOTHING, device=None, suggest=False, ifname=None) → None
    Method generated by attrs for class USBNetworkInterface.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class USBNetworkInterface.

class labgrid.resource.udev.AlterUSBBlaster(target, name, match=NOTHING, de-
                                              vice=None, suggest=False)
Bases: labgrid.resource.udev.USBRessource

filter_match(device)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class AlterUSBBlaster.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class AlterUSBBlaster.

class labgrid.resource.udev.SigrokUSBDevice(target, name, match=NOTHING, de-
                                              vice=None, suggest=False, driver=None,
                                              channels=None)
Bases: labgrid.resource.udev.USBRessource

The SigrokUSBDevice describes an attached sigrok device with driver and optional channel mapping, it is identified via usb using udev.

This is used for devices which communicate over a custom USB protocol.

Parameters
• driver (str) – driver to use with sigrok
• channels (str) – a sigrok channel mapping as described in the sigrok-cli man page

__attrs_post_init__()

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, driver=None, channels=None) → None
```

Method generated by attrs for class SigrokUSBDevice.

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Method generated by attrs for class SigrokUSBDevice.

```
class labgrid.resource.udev.SigrokUSBSerialDevice(target, name, match=NOTHING, device=None, suggest=False, driver=None, channels=None)
```

Bases: *labgrid.resource.udev.USBResource*

The SigrokUSBSerialDevice describes an attached sigrok device with driver and optional channel mapping, it is identified via usb using udev.

This is used for devices which communicate over an emulated serial device.

Parameters

- **driver** (*str*) – driver to use with sigrok
- **channels** (*str*) – a sigrok channel mapping as described in the sigrok-cli man page

```
__attrs_post_init__()
```

```
property path
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, driver=None, channels=None) → None
```

Method generated by attrs for class SigrokUSBSerialDevice.

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Method generated by attrs for class SigrokUSBSerialDevice.

```
class labgrid.resource.udev.USBSDWireDevice(target, name, match=NOTHING, device=None, suggest=False, control_path=None, disk_path=None)
```

Bases: *labgrid.resource.udev.USBResource*

The USBSDWireDevice describes an attached SDWire device, it is identified via USB using udev

```
__attrs_post_init__()
```

```
property avail
```

```
poll()
```

```
property path
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, control_path=None, disk_path=None) → None
```

Method generated by attrs for class USBSDWireDevice.

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Method generated by attrs for class USBSDWireDevice.

```
class labgrid.resource.udev.USBSDMuxDevice(target, name, match=NOTHING,
                                         device=None, suggest=False, control_path=None, disk_path=None)
```

Bases: *labgrid.resource.udev.USBResource*

The USBSDMuxDevice describes an attached USBSDMux device, it is identified via USB using udev

```
__attrs_post_init__()
```

```
property avail
```

```
poll()
```

```
property path
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, control_path=None,
disk_path=None) → None
```

Method generated by attrs for class USBSDMuxDevice.

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Method generated by attrs for class USBSDMuxDevice.

```
class labgrid.resource.udev.USBPowerPort(target, name, match=NOTHING, device=None,
                                         suggest=False, index=None)
```

Bases: *labgrid.resource.udev.USBResource*

The USBPowerPort describes a single port on an USB hub which supports power control.

Parameters index (int) – index of the downstream port on the USB hub

```
__attrs_post_init__()
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, index=None) → None
```

Method generated by attrs for class USBPowerPort.

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Method generated by attrs for class USBPowerPort.

```
class labgrid.resource.udev.SiSPMPowerPort(target, name, match=NOTHING, device=None,
                                         suggest=False, index=0)
```

Bases: *labgrid.resource.udev.USBResource*

This resource describes a SiS-PM (Silver Shield PM) power port.

Parameters index (int) – port index

```
filter_match(device)
```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True
```

```
__init__(target, name, match=NOTHING, device=None, suggest=False, index=0) → None
```

Method generated by attrs for class SiSPMPowerPort.

```
__module__ = 'labgrid.resource.udev'
```

```
__repr__()
```

Method generated by attrs for class SiSPMPowerPort.

```
class labgrid.resource.udev.USBVideo(target, name, match=NOTHING, device=None, suggest=False)
Bases: labgrid.resource.udev.USBRessource

__attrs_post_init__()

property path

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class USBVideo.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class USBVideo.

class labgrid.resource.udev.USBAudioInput(target, name, match=NOTHING, device=None, suggest=False, index=0)
Bases: labgrid.resource.udev.USBRessource

filter_match(device)

__attrs_post_init__()

property path
    the device node (for example /dev/snd/pcmC3D0c)

property alsa_name
    CARD=3,DEV=0)

    Type the ALSA device name (for example hw

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, match=NOTHING, device=None, suggest=False, index=0) → None
    Method generated by attrs for class USBAudioInput.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class USBAudioInput.

class labgrid.resource.udev.USBTMC(target, name, match=NOTHING, device=None, suggest=False)
Bases: labgrid.resource.udev.USBRessource

__attrs_post_init__()

property path

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class USBTMC.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class USBTMC.

class labgrid.resource.udev.DeditecRelais8(target, name, match=NOTHING, device=None, suggest=False, index=None, invert=False)
Bases: labgrid.resource.udev.USBRessource
```

```

__attrs_post_init__()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False, index=None, invert=False)
         → None
    Method generated by attrs for class DeditecRelais8.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class DeditecRelais8.

class labgrid.resource.udev.HIDRelay(target, name, match=NOTHING, device=None, suggest=False, index=1, invert=False)
Bases: labgrid.resource.udev.USBRessource

__attrs_post_init__()
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False, index=1, invert=False) →
         None
    Method generated by attrs for class HIDRelay.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class HIDRelay.

class labgrid.resource.udev.USBFlashableDevice(target, name, match=NOTHING, device=None, suggest=False)
Bases: labgrid.resource.udev.USBRessource

property devnode
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class USBFlashableDevice.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class USBFlashableDevice.

class labgrid.resource.udev.LXAUSBMux(target, name, match=NOTHING, device=None, suggest=False)
Bases: labgrid.resource.udev.USBRessource

The LXAUSBMux describes an attached USBMux device, it is identified via USB using udev.

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__attrs_post_init__()

__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class LXAUSBMux.

__module__ = 'labgrid.resource.udev'
__repr__()
    Method generated by attrs for class LXAUSBMux.

class labgrid.resource.udev.USBDebugger(target, name, match=NOTHING, device=None, suggest=False)
Bases: labgrid.resource.udev.USBRessource

```

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, match=NOTHING, device=None, suggest=False) → None
    Method generated by attrs for class USBDebugger.

__module__ = 'labgrid.resource.udev'

__repr__()
    Method generated by attrs for class USBDebugger.

filter_match(device)
```

labgrid.resource.xenamanager module

```
class labgrid.resource.xenamanager.XenaManager(target, name, hostname)
Bases: labgrid.resource.common.Resource
```

Hostname/IP identifying the manageent address of the xena tester

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, hostname) → None
    Method generated by attrs for class XenaManager.

__module__ = 'labgrid.resource.xenamanager'

__repr__()
    Method generated by attrs for class XenaManager.
```

labgrid.resource.ykushpowerport module

```
class labgrid.resource.ykushpowerport.YKUSHPowerPort(target, name, serial, index)
Bases: labgrid.resource.common.Resource
```

This resource describes a YEPKIT YKUSH switchable USB hub.

Parameters

- **serial** (*str*) – serial of the YKUSH device
- **index** (*int*) – port index

```
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, serial, index) → None
    Method generated by attrs for class YKUSHPowerPort.

__module__ = 'labgrid.resource.ykushpowerport'

__repr__()
    Method generated by attrs for class YKUSHPowerPort.
```

labgrid.strategy package

Submodules

labgrid.strategy.bareboxstrategy module

```
class labgrid.strategy.bareboxstrategy.Status
    Bases: enum.Enum

    An enumeration.

    unknown = 0
    off = 1
    barebox = 2
    shell = 3
    __module__ = 'labgrid.strategy.bareboxstrategy'

class labgrid.strategy.bareboxstrategy.BareboxStrategy(target, name, status=<Status.unknown: 0>)
    Bases: labgrid.strategy.common.Strategy

    BareboxStrategy - Strategy to switch to barebox or shell

    bindings = {'barebox': 'BareboxDriver', 'console': 'ConsoleProtocol', 'power': 'Power'}
    __attrs_post_init__()
    transition(status, *, step)
    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))
    __init__(target, name, status=<Status.unknown: 0>) → None
        Method generated by attrs for class BareboxStrategy.
    __module__ = 'labgrid.strategy.bareboxstrategy'
    __repr__()
        Method generated by attrs for class BareboxStrategy.
```

labgrid.strategy.common module

```
exception labgrid.strategy.common.StrategyError(msg)
    Bases: Exception

    __attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of valid>))
    __init__(msg) → None
        Method generated by attrs for class StrategyError.
    __module__ = 'labgrid.strategy.common'
    __repr__()
        Method generated by attrs for class StrategyError.
    __weakref__
        list of weak references to the object (if defined)

class labgrid.strategy.common.Strategy(target, name)
    Bases: labgrid.driver.common.Driver

    Represents a strategy which places a target into a requested state by calling specific drivers. A strategy usually needs to know some details of a given target.
```

Life cycle: - create - bind (n times) - usage

TODO: This might also be just a driver?

```
__attrs_post_init__()
on_client_bound(client)
    Called by the Target after a new client has been bound

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

resolve_conflicts(client)
    Called by the Target to allow this object to deactivate conflicting clients.

transition(status)

force(status)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name) → None
    Method generated by attrs for class Strategy.

__module__ = 'labgrid.strategy.common'
__repr__()
    Method generated by attrs for class Strategy.
```

labgrid.strategy.dockerstrategy module

```
class labgrid.strategy.dockerstrategy.Status
```

Bases: enum.Enum

The possible states of a docker container

```
unknown = 0
```

```
gone = 1
```

```
accessible = 2
```

```
__module__ = 'labgrid.strategy.dockerstrategy'
```

```
class labgrid.strategy.dockerstrategy.DockerStrategy(target, name, status=<Status.unknown: 0>)
```

Bases: *labgrid.strategy.common.Strategy*

DockerStrategy enables the user to directly transition to a state where a fresh docker container has been created and is ready for access (e.g. shell access via SSH if the docker image runs an SSH daemon).

```
bindings = {'docker_driver': <class 'labgrid.driver.dockerdriver.DockerDriver'>}
__attrs_post_init__()
transition(status)

__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, status=<Status.unknown: 0>) → None
    Method generated by attrs for class DockerStrategy.

__module__ = 'labgrid.strategy.dockerstrategy'
```

`__repr__()`

Method generated by attrs for class DockerStrategy.

labgrid.strategy.graphstrategy module

exception labgrid.strategy.graphstrategy.**GraphStrategyError** (*msg*)

Bases: *labgrid.strategy.common.StrategyError*

Generic GraphStrategy error

module = 'labgrid.strategy.graphstrategy'

exception labgrid.strategy.graphstrategy.**InvalidGraphStrategyError** (*msg*)

Bases: *labgrid.strategy.graphstrategy.GraphStrategyError*

GraphStrategy error raised during initialization of broken strategies

module = 'labgrid.strategy.graphstrategy'

exception labgrid.strategy.graphstrategy.**GraphStrategyRuntimeError** (*msg*)

Bases: *labgrid.strategy.graphstrategy.GraphStrategyError*

GraphStrategy error raised during runtime when used in unintended ways

module = 'labgrid.strategy.graphstrategy'

class labgrid.strategy.graphstrategy.**GraphStrategy** (*target, name*)

Bases: *labgrid.strategy.common.Strategy*

_attrs_post_init__()

invalidate()

Marks the path to the current state as out-of-date. Subsequent transition() calls will start from the root state. Will be called if exceptions in state methods occur.

transition (*state, via=None*)

Computes the path from root state (via “via” state, if given) to given state. If the computed path is fully incremental to the path executed previously, only the state’s methods relative to the previous path are executed. Otherwise all states’ methods of the computed path (starting from the root node) are executed.

find_abs_path (*state, via=None*)

Computes the absolute path from the root state, via “via” (if given), to the given state.

find_rel_path (*path*)

If the given path is fully incremental to the path executed before, returns the path relative to the previously executed one. Otherwise the given path is returned.

property graph

Returns a graphviz.Digraph for the directed graph the inheriting strategy represents.

The graph can be rendered with: mystrategy.graph.render("filename") # renders to filename.png

classmethod depends (**dependencies*)

@depends decorator used to list states the decorated state directly depends on.

module = 'labgrid.strategy.graphstrategy'

labgrid.strategy.shellstrategy module

```
class labgrid.strategy.shellstrategy.Status
    Bases: enum.Enum

    An enumeration.

    unknown = 0
    off = 1
    shell = 2
    __module__ = 'labgrid.strategy.shellstrategy'

class labgrid.strategy.shellstrategy.ShellStrategy(target, name, status=<Status.unknown: 0>)
    Bases: labgrid.strategy.common.Strategy

    ShellStrategy - Strategy to switch to shell

    bindings = {'console': 'ConsoleProtocol', 'power': 'PowerProtocol', 'shell': 'ShellProtocol'}
    __attrs_post_init__()
    transition(status, *, step)
    force(status, *, step)
    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))
    __init__(target, name, status=<Status.unknown: 0>) → None
        Method generated by attrs for class ShellStrategy.

    __module__ = 'labgrid.strategy.shellstrategy'
    __repr__()
        Method generated by attrs for class ShellStrategy.
```

labgrid.strategy.ubootstrategy module

```
class labgrid.strategy.ubootstrategy.Status
    Bases: enum.Enum

    An enumeration.

    unknown = 0
    off = 1
    uboot = 2
    shell = 3
    __module__ = 'labgrid.strategy.ubootstrategy'

class labgrid.strategy.ubootstrategy.UBootStrategy(target, name, status=<Status.unknown: 0>)
    Bases: labgrid.strategy.common.Strategy

    UbootStrategy - Strategy to switch to uboot or shell

    bindings = {'console': 'ConsoleProtocol', 'power': 'PowerProtocol', 'shell': 'ShellProtocol'}
    __attrs_post_init__()
```

```
transition(status)
__attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True)
__init__(target, name, status=<Status.unknown: 0>) → None
    Method generated by attrs for class UBootStrategy.
__module__ = 'labgrid.strategy.ubootstrategy'
__repr__()
    Method generated by attrs for class UBootStrategy.
```

labgrid.util package

Subpackages

labgrid.util.agents package

Submodules

labgrid.util.agents.deditec_relais8 module

labgrid.util.agents.dummy module

```
labgrid.util.agents.dummy.handle_neg(value)
```

labgrid.util.agents.network_interface module

```
class labgrid.util.agents.network_interface.Future
Bases: object
```

```
__init__()
    Initialize self. See help(type(self)) for accurate signature.
```

```
set(result)
```

```
wait()
```

```
__dict__ = mappingproxy({ '__module__': 'labgrid.util.agents.network_interface', '__in...
```

```
__module__ = 'labgrid.util.agents.network_interface'
```

```
__weakref__
```

list of weak references to the object (if defined)

```
class labgrid.util.agents.network_interface.BackgroundLoop
```

Bases: threading.Thread

```
__init__()
```

This constructor should always be called with keyword arguments. Arguments are:

group should be None; reserved for future extension when a ThreadGroup class is implemented.

target is the callable object to be invoked by the run() method. Defaults to None, meaning nothing is called.

name is the thread name. By default, a unique name is constructed of the form “Thread-N” where N is a small decimal number.

args is the argument tuple for the target invocation. Defaults to ().

kwargs is a dictionary of keyword arguments for the target invocation. Defaults to {}.

If a subclass overrides the constructor, it must make sure to invoke the base class constructor (Thread.__init__()) before doing anything else to the thread.

run()

Method representing the thread's activity.

You may override this method in a subclass. The standard run() method invokes the callable object passed to the object's constructor as the target argument, if any, with sequential and keyword arguments taken from the args and kwargs arguments, respectively.

block_on(func, *args, **kwargs)

__module__ = 'labgrid.util.agents.network_interface'

labgrid.util.agents.network_interface.**address_from_str(s)**

labgrid.util.agents.network_interface.**connection_from_dict(data)**

class labgrid.util.agents.network_interface.**NMDev(interface)**

Bases: object

__init__(interface)

Initialize self. See help(type(self)) for accurate signature.

get_settings()

get_active_settings()

configure(data)

wait_state(expected, timeout)

disable()

get_state()

request_scan()

get_access_points(scan)

get_dhcpd_leases()

__dict__ = mappingproxy({ '__module__': 'labgrid.util.agents.network_interface', '__name__': 'NMDev' })

__module__ = 'labgrid.util.agents.network_interface'

__weakref__

list of weak references to the object (if defined)

labgrid.util.agents.network_interface.**handle_configure(interface, settings)**

labgrid.util.agents.network_interface.**handle_wait_state(interface, expected, timeout=60)**

labgrid.util.agents.network_interface.**handle_disable(interface)**

labgrid.util.agents.network_interface.**handle_get_active_settings(interface)**

labgrid.util.agents.network_interface.**handle_get_settings(interface)**

labgrid.util.agents.network_interface.**handle_get_state(interface)**

labgrid.util.agents.network_interface.**handle_get_dhcpd_leases(interface)**

labgrid.util.agents.network_interface.**handle_request_scan(interface)**

```
labgrid.util.agents.network_interface.handle_get_access_points(interface,
    scan=None)
```

labgrid.util.agents.sysfsgpio module

This module implements switching GPIOs via sysfs GPIO kernel interface.

Takes an integer property ‘index’ which refers to the already exported GPIO device.

```
class labgrid.util.agents.sysfsgpio.GpioDigitalOutput(index)
Bases: object
```

```
__init__(index)
```

Initialize self. See help(type(self)) for accurate signature.

```
__del__()
```

```
get()
```

```
set(status)
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.util.agents.sysfsgpio', '_gpio_sysfs_...'})
```

```
__module__ = 'labgrid.util.agents.sysfsgpio'
```

```
__weakref__
```

list of weak references to the object (if defined)

```
labgrid.util.agents.sysfsgpio.handle_set(index, status)
```

```
labgrid.util.agents.sysfsgpio.handle_get(index)
```

labgrid.util.agents.usb_hid_relay module

Submodules

labgrid.util.agent module

```
labgrid.util.agent.b2s(b)
```

```
labgrid.util.agent.s2b(s)
```

```
class labgrid.util.agent.Agent
```

Bases: object

```
__init__()
```

Initialize self. See help(type(self)) for accurate signature.

```
send(data)
```

```
register(name, func)
```

```
load(name, source)
```

```
list()
```

```
run()
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.util.agent', '__init__': <function Agent.__init__>, ...})
```

```
__module__ = 'labgrid.util.agent'
```

__weakref__

list of weak references to the object (if defined)

```
labgrid.util.agent.handle_test(*args, **kwargs)
labgrid.util.agent.handle_error(message)
labgrid.util.agent.handle_usbtmc(index, cmd, read=False)
labgrid.util.agent.main()
```

labgrid.util.agentwrapper module

```
labgrid.util.agentwrapper.b2s(b)
labgrid.util.agentwrapper.s2b(s)
```

```
exception labgrid.util.agentwrapper.AgentError
```

Bases: Exception

```
__module__ = 'labgrid.util.agentwrapper'
```

__weakref__

list of weak references to the object (if defined)

```
exception labgrid.util.agentwrapper.AgentException
```

Bases: Exception

```
__module__ = 'labgrid.util.agentwrapper'
```

__weakref__

list of weak references to the object (if defined)

```
class labgrid.util.agentwrapper.MethodProxy(wrapper, name)
Bases: object
```

```
__init__(wrapper, name)
```

Initialize self. See help(type(self)) for accurate signature.

```
__call__(*args, **kwargs)
```

Call self as a function.

```
__dict__ = mappingproxy({'__module__': 'labgrid.util.agentwrapper', '__init__': <fun
```

```
__module__ = 'labgrid.util.agentwrapper'
```

__weakref__

list of weak references to the object (if defined)

```
class labgrid.util.agentwrapper.ModuleProxy(wrapper, name)
Bases: object
```

```
__init__(wrapper, name)
```

Initialize self. See help(type(self)) for accurate signature.

```
__getattr__(name)
```

```
__dict__ = mappingproxy({'__module__': 'labgrid.util.agentwrapper', '__init__': <fun
```

```
__module__ = 'labgrid.util.agentwrapper'
```

__weakref__

list of weak references to the object (if defined)

```
class labgrid.util.agentwrapper.AgentWrapper (host=None)
Bases: object

__init__ (host=None)
    Initialize self. See help(type(self)) for accurate signature.

__del__()
__getattr__ (name)
call (method, *args, **kargs)
__dict__ = mappingproxy({ '__module__': 'labgrid.util.agentwrapper', '__init__': <function __init__ at 0x7f3e00000000>, ...})
__module__ = 'labgrid.util.agentwrapper'
__weakref__
    list of weak references to the object (if defined)

load (name)
close()
```

labgrid.util.atomic module

```
labgrid.util.atomic.atomic_replace (filename, data)
```

labgrid.util.dict module

This module contains helper functions for working with dictionaries.

```
labgrid.util.dict.diff_dict (old, new)
    Compares old and new dictionaries, yielding for each difference (key, old_value, new_value). None is used for missing values.
```

```
labgrid.util.dict.flat_dict (d)
```

```
labgrid.util.dict.filter_dict (d, cls, warn=False)
    Returns a copy a dictionary which only contains the attributes defined on an attrs class.
```

```
labgrid.util.dict.find_dict (d, key)
    Recursively search for a key in a dictionary
```

Parameters

- **d** (*dict*) – The dictionary to recursively search through
- **key** (*str*) – The key to search for

labgrid.util.exceptions module

```
exception labgrid.util.exceptions.NoValidDriverError (msg)
```

Bases: Exception

```
__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
__init__ (msg) → None
```

Method generated by attrs for class NoValidDriverError.

```
__module__ = 'labgrid.util.exceptions'
```

__repr__()

Method generated by attrs for class NoValidDriverError.

__weakref__

list of weak references to the object (if defined)

labgrid.util.expect module**class labgrid.util.expect.PtxExpect(driver)**

Bases: pexpect.pty_spawn.spawn

labgrid Wrapper of the pexpect module.

This class provides pexpect functionality for the ConsoleProtocol classes. driver: ConsoleProtocol object to be passed in

__init__(driver)

Initializes a pexpect spawn instance with required configuration

send(s)

Write to underlying transport, return number of bytes written

read_nonblocking(size=1, timeout=-1)

Pexpect needs a nonblocking read function, simply use pyserial with a timeout of 0.

__module__ = 'labgrid.util.expect'**labgrid.util.helper module****labgrid.util.helper.get_free_port()**

Helper function to always return an unused port.

labgrid.util.helper.get_user()

Get the username of the current user.

class labgrid.util.helper.ProcessWrapper(callbacks=NOTHING)

Bases: object

loglevel = 20**check_output(command, *, print_on_silent_log=False)**

Run a command and supply the output to callback functions

register(callback)

Register a callback with the ProcessWrapper

unregister(callback)

Unregister a callback with the ProcessWrapper

static log_callback(message, process)

Logs process output message along with its pid.

static print_callback(message, _)

Prints process output message.

enable_logging()

Enables process output to the logging interface.

disable_logging()

Disables process output logging.

```
enable_print()
    Enables process output to print.

disable_print()
    Disables process output printing.

__attrs_attrs__ = (Attribute(name='callbacks', default=Factory(factory=<class 'list'>,
__dict__ = mappingproxy({'__module__': 'labgrid.util.helper', 'loglevel': 20, 'check
__eq__(other)
    Method generated by attrs for class ProcessWrapper.

__ge__(other)
    Method generated by attrs for class ProcessWrapper.

__gt__(other)
    Method generated by attrs for class ProcessWrapper.

__hash__ = None

__init__(callbacks=NOTHING) → None
    Method generated by attrs for class ProcessWrapper.

__le__(other)
    Method generated by attrs for class ProcessWrapper.

__lt__(other)
    Method generated by attrs for class ProcessWrapper.

__module__ = 'labgrid.util.helper'

__ne__(other)
    Method generated by attrs for class ProcessWrapper.

__repr__()
    Method generated by attrs for class ProcessWrapper.

__weakref__
    list of weak references to the object (if defined)
```

labgrid.util.managedfile module

```
exception labgrid.util.managedfile.ManagedFileError
    Bases: Exception

    __module__ = 'labgrid.util.managedfile'

__weakref__
    list of weak references to the object (if defined)

class labgrid.util.managedfile.ManagedFile (local_path, resource, detect_nfs=True)
    Bases: object

    The ManagedFile allows the synchronisation of a file to a remote host. It has to be created with the to be synced
    file and the target resource as argument:

    :: from labgrid.util.managedfile import ManagedFile

        ManagedFile("/tmp/examplefile", <your-resource>

    Synchronisation is done with the sync_to_resource method.

    __attrs_post_init__()
```

```
sync_to_resource(symlink=None)
    sync the file to the host specified in a resource

    Raises ExecutionError – if the SSH connection/copy fails

get_remote_path()
    Retrieve the remote file path

    Returns path to the file on the remote host

    Return type str

get_hash()
    Retrieve the hash of the file

    Returns SHA256 hexdigest of the file

    Return type str

__attrs_attrs__ = (Attribute(name='local_path', default=NOTHING, validator=<instance_of>
__dict__ = mappingproxy({ '__module__': 'labgrid.util.managedfile', '__doc__': ' The
__eq__(other)
    Method generated by attrs for class ManagedFile.

__ge__(other)
    Method generated by attrs for class ManagedFile.

__gt__(other)
    Method generated by attrs for class ManagedFile.

__hash__ = None

__init__(local_path, resource, detect_nfs=True) → None
    Method generated by attrs for class ManagedFile.

__le__(other)
    Method generated by attrs for class ManagedFile.

__lt__(other)
    Method generated by attrs for class ManagedFile.

__module__ = 'labgrid.util.managedfile'

__ne__(other)
    Method generated by attrs for class ManagedFile.

__repr__()
    Method generated by attrs for class ManagedFile.

__weakref__
    list of weak references to the object (if defined)
```

labgrid.util.marker module

```
labgrid.util.marker.gen_marker()
```

labgrid.util.proxy module

labgrid.util.qmp module

```
class labgrid.util.qmp.QMPMonitor(monitor_out, monitor_in)
    Bases: object

    _attrs_post_init_()

    execute(command)
        _attrs_attrs_ = (Attribute(name='monitor_out', default=NOTHING, validator=None, repr=...))
        _dict_ = mappingproxy({'__module__': 'labgrid.util.qmp', '_attrs_post_init__': <function ...>, ...})
        _init_(monitor_out, monitor_in) → None
            Method generated by attrs for class QMPMonitor.
        _module_ = 'labgrid.util.qmp'
        _repr_()
            Method generated by attrs for class QMPMonitor.
        _weakref_
            list of weak references to the object (if defined)

exception labgrid.util.qmp.QMPError(msg)
    Bases: Exception

    _attrs_attrs_ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
    _init_(msg) → None
        Method generated by attrs for class QMPError.
    _module_ = 'labgrid.util.qmp'
    _repr_()
        Method generated by attrs for class QMPError.
    _weakref_
        list of weak references to the object (if defined)
```

labgrid.util.ssh module

```
class labgrid.util.ssh.SSHConnection(host)
    Bases: object
```

SSHConnections are individual connections to hosts managed by a control socket. In addition to command execution this class also provides an interface to manage port forwardings. These are used in the remote infrastructure to tunnel multiple connections over one SSH link.

A public identity infrastructure is assumed, no extra username or passwords are supported.

```
_attrs_post_init_()

get_prefix()

run(command, *, codec='utf-8', decodeerrors='strict', force_tty=False, stderr_merge=False,
stderr_loglevel=None, stdout_loglevel=None)
    Run a command over the SSHConnection
```

Parameters

- **command** (*string*) – The command to run
- **codec** (*string, optional*) – output encoding. Defaults to “utf-8”.

- **decodeerrors** (*string, optional*) – behavior on decode errors. Defaults to “strict”. Refer to stdtypes’ bytes.decode for details.
- **force_tty** (*bool, optional*) – force allocate a tty (ssh -tt). Defaults to False
- **stderr_merge** (*bool, optional*) – merge ssh subprocess stderr into stdout. Defaults to False.
- **stdout_loglevel** (*int, optional*) – log stdout with specific log level as well. Defaults to None, i.e. don’t log.
- **stderr_loglevel** (*int, optional*) – log stderr with specific log level as well. Defaults to None, i.e. don’t log.

Returns (stdout, stderr, returncode)

run_check (*command, *, codec='utf-8', decodeerrors='strict', force_tty=False, stderr_merge=False, stderr_loglevel=None, stdout_loglevel=None*)

Runs a command over the SSHConnection returns the output if successful, raises ExecutionError otherwise.

Except for the means of returning the value, this is equivalent to run.

Parameters

- **command** (*string*) – The command to run
- **codec** (*string, optional*) – output encoding. Defaults to “utf-8”.
- **decodeerrors** (*string, optional*) – behavior on decode errors. Defaults to “strict”. Refer to stdtypes’ bytes.decode for details.
- **force_tty** (*bool, optional*) – force allocate a tty (ssh -tt). Defaults to False
- **stderr_merge** (*bool, optional*) – merge ssh subprocess stderr into stdout. Defaults to False.
- **stdout_loglevel** (*int, optional*) – log stdout with specific log level as well. Defaults to None, i.e. don’t log.
- **stderr_loglevel** (*int, optional*) – log stderr with specific log level as well. Defaults to None, i.e. don’t log.

Returns

stdout of the executed command if successful and otherwise an ExecutionError Exception

Return type List[str]

get_file (*remote_file, local_file*)
Get a file from the remote host

put_file (*local_file, remote_path*)
Put a file onto the remote host

add_port_forward (*remote_host, remote_port*)
forward command

remove_port_forward (*remote_host, remote_port*)
cancel command

connect()

isconnected()

disconnect()

```

cleanup()
__attrs_attrs__ = (Attribute(name='host', default=NOTHING, validator=<instance_of validator>))
__dict__ = mappingproxy({'__module__': 'labgrid.util.ssh', '__doc__': 'SSHConnection class'})
__eq__(other)
    Method generated by attrs for class SSHConnection.

__ge__(other)
    Method generated by attrs for class SSHConnection.

__gt__(other)
    Method generated by attrs for class SSHConnection.

__hash__ = None

__init__(host) → None
    Method generated by attrs for class SSHConnection.

__le__(other)
    Method generated by attrs for class SSHConnection.

__lt__(other)
    Method generated by attrs for class SSHConnection.

__module__ = 'labgrid.util.ssh'

__ne__(other)
    Method generated by attrs for class SSHConnection.

__repr__()
    Method generated by attrs for class SSHConnection.

__weakref__
    list of weak references to the object (if defined)

exception labgrid.util.ssh.ForwardError(msg)
Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
__eq__(other)
    Method generated by attrs for class ForwardError.

__ge__(other)
    Method generated by attrs for class ForwardError.

__gt__(other)
    Method generated by attrs for class ForwardError.

__hash__ = None

__init__(msg) → None
    Method generated by attrs for class ForwardError.

__le__(other)
    Method generated by attrs for class ForwardError.

__lt__(other)
    Method generated by attrs for class ForwardError.

__module__ = 'labgrid.util.ssh'

__ne__(other)
    Method generated by attrs for class ForwardError.

```

__repr__()

Method generated by attrs for class ForwardError.

__weakref__

list of weak references to the object (if defined)

labgrid.util.timeout module**class labgrid.util.timeout.Timeout(timeout=120.0)**

Bases: object

Represents a timeout (as a deadline)

__attrs_post_init__()**property remaining****property expired****__attrs_attrs__ = (Attribute(name='timeout', default=120.0, validator=<instance_of val****_dict_ = mappingproxy({ '__module__': 'labgrid.util.timeout', '__doc__': 'Represents****__init__(timeout=120.0) → None**

Method generated by attrs for class Timeout.

__module__ = 'labgrid.util.timeout'**__repr__()**

Method generated by attrs for class Timeout.

__weakref__

list of weak references to the object (if defined)

labgrid.util.yaml module

This module contains the custom YAML load and dump functions and associated loader and dumper

class labgrid.util.yaml.Loader(stream)

Bases: yaml.loader.SafeLoader

__module__ = 'labgrid.util.yaml'**yaml_constructors = {'tag:yaml.org,2002:null': <function SafeConstructor.construct_yam****class labgrid.util.yaml.Dumper(stream, default_style=None, default_flow_style=False, canonical=None, indent=None, width=None, allow_unicode=None, line_break=None, encoding=None, explicit_start=None, explicit_end=None, version=None, tags=None, sort_keys=True)**

Bases: yaml.dumper.SafeDumper

__module__ = 'labgrid.util.yaml'**yaml_representers = {<class 'NoneType'>: <function SafeRepresenter.represent_none>, <****labgrid.util.yaml.load(stream)**

Wrapper for yaml load function with custom loader.

labgrid.util.yaml.dump(data, stream=None)

Wrapper for yaml dump function with custom dumper.

```
labgrid.util.yaml.resolve_templates(data, mapping)
    Iterate recursively over data and call substitute(mapping) on all Templates.
```

9.1.2 Submodules

9.1.3 labgrid.binding module

```
exception labgrid.binding.StateError(msg)
```

Bases: Exception

```
__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
```

```
__init__(msg) → None
```

Method generated by attrs for class StateError.

```
__module__ = 'labgrid.binding'
```

```
__repr__()
```

Method generated by attrs for class StateError.

```
__weakref__
```

list of weak references to the object (if defined)

```
exception labgrid.binding.BindingError(msg)
```

Bases: Exception

```
__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
```

```
__init__(msg) → None
```

Method generated by attrs for class BindingError.

```
__module__ = 'labgrid.binding'
```

```
__repr__()
```

Method generated by attrs for class BindingError.

```
__weakref__
```

list of weak references to the object (if defined)

```
class labgrid.binding.BindingState
```

Bases: enum.Enum

An enumeration.

```
error = -1
```

```
idle = 0
```

```
bound = 1
```

```
active = 2
```

```
__module__ = 'labgrid.binding'
```

```
class labgrid.binding.BindingMixin(target, name)
```

Bases: object

Handles the binding and activation of drivers and their supplying resources and drivers.

One client can be bound to many suppliers, and one supplier can be bound by many clients.

Conflicting access to one supplier can be avoided by deactivating conflicting clients before activation (using the resolve_conflicts callback).

```
bindings = {}

__attrs_post_init__()

property display_name

on_supplier_bound(supplier)
    Called by the Target after a new supplier has been bound

on_client_bound(client)
    Called by the Target after a new client has been bound

on_activate()
    Called by the Target when this object has been activated

on_deactivate()
    Called by the Target when this object has been deactivated

resolve_conflicts(client)
    Called by the Target to allow this object to deactivate conflicting clients.

classmethod check_active(func)

class NamedBinding(value)
    Bases: object

    Marks a binding (or binding set) as requiring an explicit name.

    __init__(value)
        Initialize self. See help(type(self)) for accurate signature.

    __repr__()
        Return repr(self).

    __dict__ = mappingproxy({ '__module__': 'labgrid.binding', '__doc__': '\n Marks a\nbinding\n'
    __module__ = 'labgrid.binding'

    __weakref__
        list of weak references to the object (if defined)

    __annotations__ = {'bindings': typing.Dict[str, typing.Any]}

    __attrs_attrs__ = (Attribute(name='target', default=NOTHING, validator=None, repr=True))

    __dict__ = mappingproxy({ '__module__': 'labgrid.binding', '__annotations__': {'bindi
    __init__(target, name) → None
        Method generated by attrs for class BindingMixin.

    __module__ = 'labgrid.binding'

    __repr__()
        Method generated by attrs for class BindingMixin.

    __weakref__
        list of weak references to the object (if defined)
```

9.1.4 labgrid.config module

Config convenience class

This class encapsulates access functions to the environment configuration

```
class labgrid.config.Config(filename)
Bases: object

__attrs_post_init__()

resolve_path(path)
    Resolve an absolute path

    Parameters path (str) – path to resolve
    Returns the absolute path
    Return type str

resolve_path_str_or_list(path)
    Resolves a single path or multiple paths. Always returns a list (containing a single or multiple resolved paths).

    Parameters path (str, list) – path(s) to resolve
    Returns absolute path(s)
    Return type list
    Raises TypeError – if input is neither str nor list

get_tool(tool)
    Retrieve an entry from the tools subkey

    Parameters tool (str) – the tool to retrieve the path for
    Returns path to the requested tools
    Return type str

get_image_path(kind)
    Retrieve an entry from the images subkey

    Parameters kind (str) – the kind of the image to retrieve the path for
    Returns path to the image
    Return type str
    Raises KeyError – if the requested image can not be found in the configuration

get_path(kind)
    Retrieve an entry from the paths subkey

    Parameters kind (str) – the type of path to retrieve the path for
    Returns path to the path
    Return type str
    Raises KeyError – if the requested image can not be found in the configuration

get_option(name, default=None)
    Retrieve an entry from the options subkey

    Parameters
        • name (str) – name of the option
        • default (str) – A default parameter in case the option can not be found
    Returns value of the option or default parameter
    Return type str
```

Raises `KeyError` – if the requested image can not be found in the configuration

set_option (*name*, *value*)
Set an entry in the options subkey

Parameters

- **name** (*str*) – name of the option
- **value** (*str*) – the new value

get_target_option (*target*, *name*, *default=None*)

Returns Retrieve an entry from the options subkey under the specified **target** subkey

Parameters

- **target** (*str*) – name of the target
- **name** (*str*) – name of the option
- **default** (*str*) – A default parameter in case the option can not be found

Returns value of the option or default parameter

Return type str

Raises `KeyError` – if the requested key can not be found in the configuration, or if the target can not be found in the configuration.

set_target_option (*target*, *name*, *value*)
Set an entry in the options subkey under the specified target subkey

Parameters

- **target** (*str*) – name of the target
- **name** (*str*) – name of the option
- **value** (*str*) – the new value

Raises `KeyError` – if the requested target can not be found in the configuration

get_targets ()

get_imports ()
Helper function that returns the list of all imports

Returns List of files which should be imported

Return type List

get_paths ()
Helper function that returns the subdict of all paths

Returns Dictionary containing all path definitions

Return type Dict

get_images ()
Helper function that returns the subdict of all images

Returns Dictionary containing all image definitions

Return type Dict

get_features ()

```

__attrs_attrs__ = (Attribute(name='filename', default=NOTHING, validator=<instance_of>
__dict__ = mappingproxy({ '__module__': 'labgrid.config', '__attrs_post_init__': <function __attrs_post_init__ at 0x7f3e3a0d1a0>
__init__(filename) → None
    Method generated by attrs for class Config.
__module__ = 'labgrid.config'
__repr__()
    Method generated by attrs for class Config.
__weakref__
    list of weak references to the object (if defined)

```

9.1.5 labgrid.consoleloggingreporter module

```
class labgrid.consoleloggingreporter.ConsoleLoggingReporter(logpath)
Bases: object
```

ConsoleLoggingReporter - Reporter that writes console log files

Parameters *logpath* (*str*) – path to store the logfiles in

instance = None

classmethod **start**(*path*)
starts the ConsoleLoggingReporter

classmethod **stop**()
stops the ConsoleLoggingReporter

__init__(*logpath*)
Initialize self. See help(type(self)) for accurate signature.

get_logfile(*event*)
Returns the correct file handle from cache or creates a new file handle

notify(*event*)
This is the callback function for steps

```

__dict__ = mappingproxy({ '__module__': 'labgrid.consoleloggingreporter', '__doc__': ''
__module__ = 'labgrid.consoleloggingreporter'
__weakref__
    list of weak references to the object (if defined)

```

9.1.6 labgrid.environment module

```
class labgrid.environment.Environment(config_file='config.yaml', interact=<built-in function
                                         input>)
Bases: object
```

An environment encapsulates targets.

__attrs_post_init__()

get_target(*role*: *str* = 'main') → Optional[labgrid.target.Target]
Returns the specified target or None if not found.

Each target is initialized as needed.

```
get_features()
get_target_features()
cleanup()

__attrs_attrs__ = (Attribute(name='config_file', default='config.yaml', validator=<instance_of validator>))
__dict__ = mappingproxy({'__module__': 'labgrid.environment', '__doc__': 'An environment object representing the current configuration.'})
__init__(config_file='config.yaml', interact=<built-in function input>) → None
    Method generated by attrs for class Environment.

__module__ = 'labgrid.environment'

__repr__()
    Method generated by attrs for class Environment.

__weakref__
    list of weak references to the object (if defined)
```

9.1.7 labgrid.exceptions module

```
exception labgrid.exceptions.NoConfigFoundError(msg)
Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
__init__(msg) → None
    Method generated by attrs for class NoConfigNotFoundError.

__module__ = 'labgrid.exceptions'

__repr__()
    Method generated by attrs for class NoConfigNotFoundError.

__weakref__
    list of weak references to the object (if defined)

exception labgrid.exceptions.NoSupplierFoundError(msg, filter=None)
Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
__init__(msg, filter=None) → None
    Method generated by attrs for class NoSupplierNotFoundError.

__module__ = 'labgrid.exceptions'

__repr__()
    Method generated by attrs for class NoSupplierNotFoundError.

__weakref__
    list of weak references to the object (if defined)

exception labgrid.exceptions.InvalidConfigError(msg)
Bases: Exception

__attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
__init__(msg) → None
    Method generated by attrs for class InvalidConfigError.

__module__ = 'labgrid.exceptions'
```

```

__repr__()
    Method generated by attrs for class InvalidConfigError.

__weakref__
    list of weak references to the object (if defined)

exception labgrid.exceptions.NoDriverNotFoundError (msg,filter=None)
    Bases: labgrid.exceptions.NoSupplierNotFoundError

    __attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
    __init__(msg,filter=None) → None
        Method generated by attrs for class NoDriverNotFoundError.

    __module__ = 'labgrid.exceptions'

__repr__()
    Method generated by attrs for class NoDriverNotFoundError.

exception labgrid.exceptions.NoResourceNotFoundError (msg,filter=None)
    Bases: labgrid.exceptions.NoSupplierNotFoundError

    __attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
    __init__(msg,filter=None) → None
        Method generated by attrs for class NoResourceNotFoundError.

    __module__ = 'labgrid.exceptions'

__repr__()
    Method generated by attrs for class NoResourceNotFoundError.

exception labgrid.exceptions.RegistrationError(msg)
    Bases: Exception

    __attrs_attrs__ = (Attribute(name='msg', default=NOTHING, validator=<instance_of validator>))
    __init__(msg) → None
        Method generated by attrs for class RegistrationError.

    __module__ = 'labgrid.exceptions'

__repr__()
    Method generated by attrs for class RegistrationError.

__weakref__
    list of weak references to the object (if defined)

```

9.1.8 labgrid.factory module

```

class labgrid.factory.TargetFactory
    Bases: object

    __init__()
        Initialize self. See help(type(self)) for accurate signature.

    reg_resource(cls)
        Register a resource with the factory.

        Returns the class to allow using it as a decorator.

    reg_driver(cls)
        Register a driver with the factory.

```

Returns the class to allow using it as a decorator.

```
static normalize_config(config)
make_resource(target, resource, name, args)
make_driver(target, driver, name, args)
make_target(name, config, *, env=None)
class_from_string(string: str)
__dict__ = mappingproxy({ '__module__': 'labgrid.factory', '__init__': <function TargetFactory> })
__module__ = 'labgrid.factory'
__weakref__
list of weak references to the object (if defined)
```

labgrid.factory.target_factory = <labgrid.factory.TargetFactory object>
Global TargetFactory instance

This instance is used to register Resource and Driver classes so that Targets can be created automatically from YAML files.

9.1.9 labgrid.step module

```
class labgrid.step.Steps
Bases: object

__init__()
    Initialize self. See help(type(self)) for accurate signature.

get_current()
get_new(title, tag, source)
push(step)
pop(step)
subscribe(callback)
unsubscribe(callback)
notify(event)

__dict__ = mappingproxy({ '__module__': 'labgrid.step', '__init__': <function Steps.__init__> })
__module__ = 'labgrid.step'
__weakref__
list of weak references to the object (if defined)

class labgrid.step.StepEvent(step, data, *, resource=None, stream=False)
Bases: object

__init__(step, data, *, resource=None, stream=False)
    Initialize self. See help(type(self)) for accurate signature.

__str__()
    Return str(self).

__setitem__(k, v)
merge(other)
```

```

property age
    dict = mappingproxy({'module': 'labgrid.step', 'init': <function StepEven...})
    module = 'labgrid.step'

weakref
    list of weak references to the object (if defined)

class labgrid.step.Step(title, level, tag, source)
    Bases: object

    __init__(title, level, tag, source)
        Initialize self. See help(type(self)) for accurate signature.

    __repr__()
        Return repr(self).

    __str__()
        Return str(self).

property duration
property status
property is_active
property is_done
start()
skip(reason)
stop()
__del__()
    dict = mappingproxy({'module': 'labgrid.step', 'init': <function StepEven...})
    module = 'labgrid.step'

weakref
    list of weak references to the object (if defined)

labgrid.step.step(*, title=None, args=[], result=False, tag=None)

```

9.1.10 labgrid.stepreporter module

```

class labgrid.stepreporter.StepReporter
    Bases: object

    instance = None

    classmethod start()
        starts the StepReporter

    classmethod stop()
        stops the StepReporter

    __init__()
        Initialize self. See help(type(self)) for accurate signature.

    static notify(event)
        dict = mappingproxy({'module': 'labgrid.stepreporter', 'instance': None, 'st...

```

```
__module__ = 'labgrid.stepreporter'  
__weakref__  
    list of weak references to the object (if defined)
```

9.1.11 labgrid.target module

```
class labgrid.target.Target(name, env=None)
```

Bases: object

```
__attrs_post_init__()
```

```
interact(msg)
```

```
update_resources()
```

Iterate over all relevant resources and deactivate any active but unavailable resources.

```
await_resources(resources, timeout=None, avail=True)
```

Poll the given resources and wait until they are (un-)available.

Parameters

- **resources** (*List*) – the resources to poll
- **timeout** (*float*) – optional timeout
- **avail** (*bool*) – optionally wait until the resources are unavailable with avail=False

```
get_resource(cls, *, name=None, wait_avail=True)
```

Helper function to get a resource of the target. Returns the first valid resource found, otherwise a NoResourceFoundError is raised.

Arguments: cls – resource-class to return as a resource name – optional name to use as a filter wait_avail – wait for the resource to become available (default True)

```
get_active_driver(cls, *, name=None)
```

Helper function to get the active driver of the target. Returns the active driver found, otherwise None.

Arguments: cls – driver-class to return as a resource name – optional name to use as a filter

```
get_driver(cls, *, name=None, activate=True)
```

Helper function to get a driver of the target. Returns the first valid driver found, otherwise None.

Arguments: cls – driver-class to return as a resource name – optional name to use as a filter activate – activate the driver (default True)

```
__getitem__(key)
```

Syntactic sugar to access drivers by class (optionally filtered by name).

```
>>> target = Target('main')
>>> console = FakeConsoleDriver(target, 'console')
>>> target.activate(console)
>>> target[FakeConsoleDriver]
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
>>> target[FakeConsoleDriver, 'console']
FakeConsoleDriver(target=Target(name='main', ...), name='console', ...)
```

```
set_binding_map(mapping)
```

Configure the binding name mapping for the next driver only.

```
bind_resource(resource)
```

Bind the resource to this target.

bind_driver(*client*)
Bind the driver to all suppliers (resources and other drivers).
Currently, we only support binding all suppliers at once.

bind(*bindable*)

activate(*client, name=None*)
Activate the client by activating all bound suppliers. This may require deactivating other clients.

deactivate(*client, name=None*)
Recursively deactivate the client's clients and itself.
This is needed to ensure that no client has an inactive supplier.

deactivate_all_drivers()
Deactivates all drivers in reversed order they were activated

cleanup()
Clean up connected drivers and resources in reversed order

__attrs_attrs__ = (**Attribute**(name='name', default=NOTHING, validator=<instance_of validate>))
__dict__ = **mappingproxy**({'__module__': 'labgrid.target', '__attrs_post_init__': <function __attrs_post_init__>})
__init__(*name, env=None*) → None
Method generated by attrs for class Target.

__module__ = 'labgrid.target'

__repr__()
Method generated by attrs for class Target.

__weakref__
list of weak references to the object (if defined)

**CHAPTER
TEN**

INDICES AND TABLES

- genindex
- modindex
- search

PYTHON MODULE INDEX

|

labgrid, 111
labgrid.autoconfigure, 111
labgrid.autoconfigure.main, 111
labgrid.binding, 219
labgrid.config, 220
labgrid.consoleloggingreporter, 223
labgrid.driver, 112
labgrid.driver.bareboxdriver, 114
labgrid.driver.commandmixin, 115
labgrid.driver.common, 116
labgrid.driver.consoleexpectmixin, 117
labgrid.driver.deditecrelaisdriver, 117
labgrid.driver.dockerdriver, 118
labgrid.driver.exception, 119
labgrid.driver.externalconsoledriver,
 119
labgrid.driver.fake, 120
labgrid.driver.fastbootdriver, 121
labgrid.driver.filereadoutput, 122
labgrid.driver.flashromdriver, 123
labgrid.driver.flashscriptdriver, 123
labgrid.driver.gpiodriver, 124
labgrid.driver.httpvideodriver, 124
labgrid.driver.lxaiobusdriver, 125
labgrid.driver.lxausbmuxdriver, 125
labgrid.driver.manualswitchdriver, 126
labgrid.driver.modbusdriver, 126
labgrid.driver.mqtt, 127
labgrid.driver.networkinterfacedriver,
 127
labgrid.driver.onewiredriver, 128
labgrid.driver.openocddriver, 129
labgrid.driver.power, 112
labgrid.driver.power.apc, 112
labgrid.driver.power.digipower, 112
labgrid.driver.power.gude, 112
labgrid.driver.power.gude24, 112
labgrid.driver.power.gude8031, 112
labgrid.driver.power.gude8316, 113
labgrid.driver.power.netio, 113
labgrid.driver.power.netio_kshell, 113

labgrid.driver.power.rest, 113
labgrid.driver.power.sentry, 113
labgrid.driver.power.simplerest, 113
labgrid.driver.powerdriver, 129
labgrid.driver.provider, 133
labgrid.driver.pyvisadriver, 134
labgrid.driver.qemudriver, 135
labgrid.driver.quartushpsdriver, 136
labgrid.driver.resetdriver, 136
labgrid.driver.serialdigitaloutput, 137
labgrid.driver.serialdriver, 137
labgrid.driver.shelldriver, 138
labgrid.driver.sigrokdriver, 141
labgrid.driver.smallubootdriver, 142
labgrid.driver.sshdriver, 143
labgrid.driver.ubootdriver, 144
labgrid.driver.usbaudioplayer, 146
labgrid.driver.usbhidrelay, 146
labgrid.driver.usbloader, 147
labgrid.driver.usbsdmuxdriver, 149
labgrid.driver.usbsdwiredriver, 150
labgrid.driver.usbstoragedriver, 150
labgrid.driver.usbtmc, 114
labgrid.driver.usbtmc.keysight_dsox2000,
 114
labgrid.driver.usbtmc.tektronix_tds2000,
 114
labgrid.driver.usbtmcdriver, 151
labgrid.driver.usbvideodriver, 152
labgrid.driver.xenadriver, 152
labgrid.environment, 223
labgrid.exceptions, 224
labgrid.factory, 225
labgrid.protocol, 153
labgrid.protocol.bootstrappingprotocol, 153
labgrid.protocol.commandprotocol, 153
labgrid.protocol.consoleprotocol, 153
labgrid.protocol.digitaloutputprotocol,
 154
labgrid.protocol.filesystemprotocol, 155
labgrid.protocol.filetransferprotocol,
 155

labgrid.protocol.infoprotocol, 155
labgrid.protocol.linuxbootprotocol, 156
labgrid.protocol.mmioprotocol, 156
labgrid.protocol.powerprotocol, 156
labgrid.protocol.resetprotocol, 157
labgrid.protocol.videoprotocol, 157
labgrid.pytestplugin, 157
labgrid.pytestplugin.fixtures, 157
labgrid.pytestplugin.hooks, 157
labgrid.pytestplugin.reporter, 158
labgrid.remote, 158
labgrid.remote.authenticator, 158
labgrid.remote.client, 158
labgrid.remote.common, 159
labgrid.remote.config, 162
labgrid.remote.coordinator, 162
labgrid.remote.exporter, 164
labgrid.remote.scheduler, 171
labgrid.resource, 172
labgrid.resource.base, 172
labgrid.resource.common, 173
labgrid.resource.docker, 175
labgrid.resource.ethernetport, 176
labgrid.resource.flashrom, 179
labgrid.resource.httpvideostream, 179
labgrid.resource.lxaiobus, 179
labgrid.resource.modbus, 180
labgrid.resource.mqtt, 181
labgrid.resource.networkservice, 182
labgrid.resource.onewirereport, 182
labgrid.resource.power, 182
labgrid.resource.provider, 183
labgrid.resource.pyvisa, 184
labgrid.resource.remote, 184
labgrid.resource.serialport, 193
labgrid.resource.sigrok, 193
labgrid.resource.suggest, 194
labgrid.resource.udev, 194
labgrid.resource.xenamanager, 202
labgrid.resource.ykushpowerport, 202
labgrid.step, 226
labgrid.stepreporter, 227
labgrid.strategy, 202
labgrid.strategy.bareboxstrategy, 203
labgrid.strategy.common, 203
labgrid.strategy.dockerstrategy, 204
labgrid.strategy.graphstrategy, 205
labgrid.strategy.shellstrategy, 206
labgrid.strategy.ubootstrategy, 206
labgrid.target, 228
labgrid.util, 207
labgrid.util.agent, 209
labgrid.util.agents, 207
labgrid.util.agents.dummy, 207
labgrid.util.agents.network_interface, 207
labgrid.util.agents.sysfsgpio, 209
labgrid.util.agentwrapper, 210
labgrid.util.atomic, 211
labgrid.util.dict, 211
labgrid.util.exceptions, 211
labgrid.util.expect, 212
labgrid.util.helper, 212
labgrid.util.managedfile, 213
labgrid.util.marker, 214
labgrid.util.proxy, 214
labgrid.util.qmp, 215
labgrid.util.ssh, 215
labgrid.util.timeout, 218
labgrid.util.yaml, 218

INDEX

Symbols

— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.bareboxdriver.BareboxDriver attribute), 115	at-	grid.driver.modbusdriver.ModbusCoilDriver attribute), 126	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.deditecrelaisdriver.DeditecRelaisDriver attribute), 117	at-	grid.driver.mqtt.TasmotaPowerDriver attribute), 127	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.dockerdriver.DockerDriver attribute), 118	at-	grid.driver.onewiredriver.OneWirePIODriver attribute), 129	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.externalconsoledriver.ExternalConsoleDriver attribute), 120	at-	grid.driver.openocddriver.OpenOCDDriver attribute), 129	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.fake.FakeCommandDriver attribute), 120	at-	grid.driver.powerdriver.DigitalOutputPowerDriver attribute), 132	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.fake.FakeConsoleDriver attribute), 120	at-	grid.driver.powerdriver.ExternalPowerDriver attribute), 131	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.fake.FakeFileTransferDriver attribute), 121	at-	grid.driver.powerdriver.ManualPowerDriver attribute), 130	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.fake.FakePowerDriver attribute), 121	at-	grid.driver.powerdriver.NetworkPowerDriver attribute), 131	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.filédigitaloutput.FileDigitalOutputDriver attribute), 122	at-	grid.driver.powerdriver.PDUDaemonDriver attribute), 133	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.flashromdriver.FlashromDriver attribute), 123	at-	grid.driver.powerdriver.PowerResetMixin attribute), 129	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.gpiodriver.GpioDigitalOutputDriver attribute), 124	at-	grid.driver.powerdriver.SiSPMPowerDriver attribute), 130	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.httpvideodriver.HTTPVideoDriver attribute), 124	at-	grid.driver.powerdriver.USBBPowerDriver attribute), 132	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.lxaibusdriver.LXAIBusPIODriver attribute), 125	at-	grid.driver.powerdriver.YKUSHPowerDriver attribute), 132	at-
— abstractmethods_	(lab-	— abstractmethods_	(lab-
grid.driver.manualswitchdriver.ManualSwitchDriver	at-	grid.driver.qemudriver.QEMUDriver	at-

tribute), 136
—abstractmethods__(lab-
grid.driver.resetdriver.DigitalOutputResetDriver
attribute), 136
—abstractmethods__(lab-
grid.driver.serialdigitaloutput.SerialPortDigitalOutputDrive
grid.protocol.digitaloutputprotocol.DigitalOutputProtocol
attribute), 137
—abstractmethods__(lab-
grid.driver.serialdriver.SerialDriver
attribute), 138
—abstractmethods__(lab-
grid.driver.shelldriver.ShellDriver
attribute), 140
—abstractmethods__(lab-
grid.driver.sigrokdriver.SigrokPowerDriver
attribute), 142
—abstractmethods__(lab-
grid.driver.smallubootdriver.SmallUBootDriver
attribute), 143
—abstractmethods__(lab-
grid.driver.sshdriver.SSHDriver
attribute), 144
—abstractmethods__(lab-
grid.driver.ubootdriver.UBootDriver
attribute), 145
—abstractmethods__(lab-
grid.driver.usbhidrelay.HIDRelayDriver
attribute), 147
—abstractmethods__(lab-
grid.driver.usbloader.BDIMXUSBDriver
attribute), 149
—abstractmethods__(lab-
grid.driver.usbloader.IMGXUSBDriver
attribute), 147
—abstractmethods__(lab-
grid.driver.usbloader.MXSUSBDriver
attribute), 147
—abstractmethods__(lab-
grid.driver.usbloader.RKUSBDriver
attribute), 148
—abstractmethods__(lab-
grid.driver.usbloader.UUUDriver
attribute), 148
—abstractmethods__(lab-
grid.driver.usbvideodriver.USBVideoDriver
attribute), 152
—abstractmethods__(lab-
grid.protocol.bootstrapprotocol.BootstrapProtocol
attribute), 153
—abstractmethods__(lab-
grid.protocol.commandprotocol.CommandProtocol
attribute), 153
—abstractmethods__(lab-
grid.protocol.consoleprotocol.ConsoleProtocol
attribute), 154
—abstractmethods__(lab-
grid.protocol.consoleprotocol.ConsoleProtocol.Client
attribute), 154
—abstractmethods__(lab-
grid.protocol.filesystemprotocol.FileSystemProtocol
attribute), 155
—abstractmethods__(lab-
grid.protocol.filetransferprotocol.FileTransferProtocol
attribute), 155
—abstractmethods__(lab-
grid.protocol.infoprotocol.InfoProtocol
attribute), 155
—abstractmethods__(lab-
grid.protocol.linuxbootprotocol.LinuxBootProtocol
attribute), 156
—abstractmethods__(lab-
grid.protocol.mmioprotocol.MMIOProtocol
attribute), 156
—abstractmethods__(lab-
grid.protocol.powerprotocol.PowerProtocol
attribute), 156
—abstractmethods__(lab-
grid.protocol.resetprotocol.ResetProtocol
attribute), 157
—abstractmethods__(lab-
grid.protocol.videoprotocol.VideoProtocol
attribute), 157
—annotations__(labgrid.binding.BindingMixin
attribute), 220
—annotations__(labgrid.resource.common.ResourceManager
attribute), 174
—attrs_attrs__(labgrid.binding.BindingError
attribute), 219
—attrs_attrs__(labgrid.binding.BindingMixin
attribute), 220
—attrs_attrs__(labgrid.binding.StateError
attribute), 219
—attrs_attrs__(labgrid.config.Config
attribute), 222
—attrs_attrs__(labgrid.driver.bareboxdriver.BareboxDriver
attribute), 115
—attrs_attrs__(labgrid.driver.common.Driver
attribute), 116
—attrs_attrs__(labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver
attribute), 117
—attrs_attrs__(labgrid.driver.dockerdriver.DockerDriver
attribute), 117

```

    tribute), 118
__attrs_attrs__(lab-
grid.driver.exception.CleanUpError attribute),
119
__attrs_attrs__(lab-
grid.driver.exception.ExecutionError
tribute), 119
__attrs_attrs__(lab-
grid.driver.externalconsoledriver.ExternalConsoleDriver
attribute), 120
__attrs_attrs__(lab-
grid.driver.fake.FakeCommandDriver
tribute), 120
__attrs_attrs__(lab-
grid.driver.fake.FakeConsoleDriver attribute),
120
__attrs_attrs__(lab-
grid.driver.fake.FakeFileTransferDriver
tribute), 121
__attrs_attrs__(lab-
grid.driver.fake.FakePowerDriver attribute),
121
__attrs_attrs__(lab-
grid.driver.fastbootdriver.AndroidFastbootDriver
attribute), 122
__attrs_attrs__(lab-
grid.driver.filédigitaloutput.FileDigitalOutputDriver
attribute), 122
__attrs_attrs__(lab-
grid.driver.flashromdriver.FlashromDriver
attribute), 123
__attrs_attrs__(lab-
grid.driver.flashscriptdriver.FlashScriptDriver
attribute), 123
__attrs_attrs__(lab-
grid.driver.gpiodriver.GpioDigitalOutputDriver
attribute), 124
__attrs_attrs__(lab-
grid.driver.httpvideodriver.HTTPVideoDriver
attribute), 124
__attrs_attrs__(lab-
grid.driver.lxaiobusdriver.LXAIOBusPIODriver
attribute), 125
__attrs_attrs__(lab-
grid.driver.lxausbmuxdriver.LXAUSBMuxDriver
attribute), 125
__attrs_attrs__(lab-
grid.driver.manualswitchdriver.ManualSwitchDriver
attribute), 126
__attrs_attrs__(lab-
grid.driver.modbusdriver.ModbusCoilDriver
attribute), 126
__attrs_attrs__(lab-
grid.driver.mqtt.TasmotaPowerDriver
attribute), 127
__attrs_attrs__(lab-
grid.driver.networkinterface.driver.NetworkInterfaceDriver
attribute), 128
__attrs_attrs__(lab-
grid.driver.onewiredriver.OneWirePIODriver
attribute), 129
__attrs_attrs__(lab-
grid.driver.openocddriver.OpenOCDDriver
attribute), 129
__attrs_attrs__(lab-
grid.driver.powerdriver.DigitalOutputPowerDriver
attribute), 132
__attrs_attrs__(lab-
grid.driver.powerdriver.ExternalPowerDriver
attribute), 131
__attrs_attrs__(lab-
grid.driver.powerdriver.ManualPowerDriver
attribute), 130
__attrs_attrs__(lab-
grid.driver.powerdriver.NetworkPowerDriver
attribute), 131
__attrs_attrs__(lab-
grid.driver.powerdriver.PDUDaemonDriver
attribute), 133
__attrs_attrs__(lab-
grid.driver.powerdriver.PowerResetMixin
attribute), 129
__attrs_attrs__(lab-
grid.driver.powerdriver.SiSPMPowerDriver
attribute), 130
__attrs_attrs__(lab-
grid.driver.powerdriver.USBPowerDriver
attribute), 132
__attrs_attrs__(lab-
grid.driver.powerdriver.YKUSHPowerDriver
attribute), 132
__attrs_attrs__(lab-
grid.driver.provider.BaseProviderDriver
attribute), 133
__attrs_attrs__(lab-
grid.driver.provider.HTTPProviderDriver
attribute), 134
__attrs_attrs__(lab-
grid.driver.provider.NFSPPProviderDriver
attribute), 134
__attrs_attrs__(lab-
grid.driver.provider.TFTPPProviderDriver
attribute), 133
__attrs_attrs__(lab-
grid.driver.pyvisadriver.PyVISADriver
attribute), 134
__attrs_attrs__(lab-
grid.driver.qemudriver.QEMUDriver
attribute), 135

```

```

tribute), 136
__attrs_attrs__(lab-
grid.driver.quartushpsdriver.QuartusHPSDriver
attribute), 136
__attrs_attrs__(lab-
grid.driver.resetdriver.DigitalOutputResetDriver
attribute), 136
__attrs_attrs__(lab-
grid.driver.serialdigitaloutput.SerialPortDigitalOutputDrive
grid.driver.usbstoragedriver.NetworkUSBStorageDriver
attribute), 137
__attrs_attrs__(lab-
grid.driver.serialdriver.SerialDriver
attribute), 138
__attrs_attrs__(lab-
grid.driver.shelldrive.ShellDriver
attribute), 140
__attrs_attrs__(lab-
grid.driver.sigrokdriver.SigrokCommon
attribute), 141
__attrs_attrs__(lab-
grid.driver.sigrokdriver.SigrokDriver
attribute), 141
__attrs_attrs__(lab-
grid.driver.sigrokdriver.SigrokPowerDriver
attribute), 142
__attrs_attrs__(lab-
grid.driver.smallubootdriver.SmallUBootDriver
attribute), 143
__attrs_attrs__(lab-
grid.driver.sshdriver.SSHDriver
attribute), 144
__attrs_attrs__(lab-
grid.driver.ubootdriver.UBootDriver
attribute), 145
__attrs_attrs__(lab-
grid.driver.usbaudioplayer.USBAudioInputDriver
attribute), 146
__attrs_attrs__(lab-
grid.driver.usbhidrelay.HIDRelayDriver
attribute), 147
__attrs_attrs__(lab-
grid.driver.usbloader.BDIMXUSBDriver
attribute), 149
__attrs_attrs__(lab-
grid.driver.usbloader.IMXUSBDriver
attribute), 147
__attrs_attrs__(lab-
grid.driver.usbloader.MXSUSBDriver
attribute), 147
__attrs_attrs__(lab-
grid.driver.usbloader.RKUSBDriver
attribute), 148
__attrs_attrs__(lab-
grid.driver.usbloader.UUUDriver
attribute), 148
__attrs_attrs__(lab-
grid.driver.usbsdmuxdriver.USBSDMuxDriver
attribute), 149
__attrs_attrs__(lab-
grid.driver.usbsdwiredriver.USBSDWireDriver
attribute), 150
__attrs_attrs__(lab-
grid.driver.usbstoragedriver.USBStorageDriver
attribute), 151
__attrs_attrs__(lab-
grid.driver.usbstoragedriver.USBStorageDriver
attribute), 151
__attrs_attrs__(lab-
grid.driver.usbtmcdriver.USBTMCDriver
attribute), 151
__attrs_attrs__(lab-
grid.driver.usbvideodriver.USBVideoDriver
attribute), 152
__attrs_attrs__(lab-
grid.driver.xenadriver.XenaDriver
attribute), 152
__attrs_attrs__(lab-
grid.environment.Environment
attribute), 224
__attrs_attrs__(lab-
grid.exceptions.InvalidConfigError
attribute), 224
__attrs_attrs__(lab-
grid.exceptions.NoConfigNotFoundError
attribute), 224
__attrs_attrs__(lab-
grid.exceptions.NoDriverNotFoundError
attribute), 225
__attrs_attrs__(lab-
grid.exceptions.NoResourceNotFoundError
attribute), 225
__attrs_attrs__(lab-
grid.exceptions.NoSupplierNotFoundError
attribute), 224
__attrs_attrs__(lab-
grid.exceptions.RegistrationError
attribute), 225
__attrs_attrs__(lab-
grid.remote.common.Place
attribute), 161
__attrs_attrs__(lab-
grid.remote.common.Reservation
attribute), 162
__attrs_attrs__(lab-
grid.remote.common.ResourceEntry
attribute), 160
__attrs_attrs__(lab-
grid.remote.common.ResourceMatch
attribute), 160
__attrs_attrs__(lab-

```

<code>grid.remote.config.ResourceConfig</code> attribute),	<code>grid.remote.exporter.USBHIDRelayExport</code>
162	attribute), 168
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.coordinator.ClientSession</code>	at-
tribute), 163	grid.remote.exporter.USBNetworkExport
<code>__attrs_attrs__</code>	attribute), 165
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.coordinator.ExporterSession</code>	at-
attribute), 163	grid.remote.exporter.USBPowerPortExport
<code>__attrs_attrs__</code>	attribute), 167
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.coordinator.RemoteSession</code>	at-
tribute), 163	grid.remote.exporter.USBSDMuxExport
<code>__attrs_attrs__</code>	attribute), 166
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.coordinator.ResourceImport</code>	at-
attribute), 164	grid.remote.exporter.USBSDWireExport
<code>__attrs_attrs__</code>	attribute), 166
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.EthernetPortExport</code>	at-
attribute), 169	grid.remote.exporter.USBSigrokExport
<code>__attrs_attrs__</code>	attribute), 166
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.GPIOGenericExport</code>	at-
attribute), 169	grid.remote.scheduler.TagSet
<code>__attrs_attrs__</code>	attribute), 171
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.HTTPVideoStreamExport</code>	at-
attribute), 170	grid.resource.base.EthernetPort
<code>__attrs_attrs__</code>	attribute), 172
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.LXAIOBusNodeExport</code>	at-
attribute), 171	grid.resource.base.NetworkInterface
<code>__attrs_attrs__</code>	attribute), 172
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.NetworkServiceExport</code>	at-
attribute), 170	grid.resource.base.SerialPort
<code>__attrs_attrs__</code>	attribute), 172
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.ProviderGenericExport</code>	at-
attribute), 169	grid.resource.base.SysfsGPIO
<code>__attrs_attrs__</code>	attribute), 173
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.ResourceExport</code>	at-
tribute), 164	grid.common.ManagedResource
<code>__attrs_attrs__</code>	attribute), 175
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.SerialPortExport</code>	at-
tribute), 165	grid.common.NetworkResource
<code>__attrs_attrs__</code>	attribute), 174
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.SiSPMPowerPortExport</code>	at-
attribute), 167	grid.common.Resource
<code>__attrs_attrs__</code>	attribute), 174
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.USBAudioInputExport</code>	at-
attribute), 167	grid.common.ResourceManager
<code>__attrs_attrs__</code>	attribute), 174
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.USBDeditecRelaisExport</code>	at-
attribute), 168	grid.docker.DockerDaemon
<code>__attrs_attrs__</code>	attribute), 176
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.USBFashableExport</code>	at-
attribute), 168	grid.docker.DockerManager
<code>__attrs_attrs__</code>	attribute), 176
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.USBGenericExport</code>	at-
attribute), 165	grid.ethernetport.EthernetPortManager
<code>__attrs_attrs__</code>	attribute), 177
<code>__attrs_attrs__</code>	(lab-
<code>grid.remote.exporter.USBGenericExport</code>	at-
attribute), 165	grid.ethernetport.SNMPEthernetPort
<code>__attrs_attrs__</code>	attribute), 178
<code>__attrs_attrs__</code>	(lab-

<code>grid.resource.ethernetport.SNMPSwitch attribute), 176</code>	<code>(lab-</code>	<code>grid.resource.provider.TFTPPProvider attribute), 183</code>	<code>at-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.flashrom.Flashrom attribute), 179</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.flashrom.NetworkFlashrom attribute), 179</code>	<code>grid.resource.pyvisa.PyVISADevice attribute), 184</code>	<code>grid.resource.remote.NetworkAlteraUSBBlaster attribute), 186</code>
<code>__attrs_attrs__</code>	<code>grid.resource.httpvideostream.HTTPVideoStream attribute), 179</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.lxaiobus.LXAIOBusNode attribute), 180</code>	<code>grid.resource.remote.NetworkAndroidFastboot attribute), 185</code>	<code>grid.resource.remote.NetworkDeditecRelais8 attribute), 190</code>
<code>__attrs_attrs__</code>	<code>grid.resource.lxaiobus.LXAIOBusNodeManager attribute), 179</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.lxaiobus.LXAIOBusPIO attribute), 180</code>	<code>grid.resource.remote.NetworkHIDRelay attribute), 190</code>	<code>grid.resource.remote.NetworkIMXUSBLoader attribute), 185</code>
<code>__attrs_attrs__</code>	<code>grid.resource.modbus.ModbusTCPcoil attribute), 180</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.mqtt.MQTTManager attribute), 181</code>	<code>grid.resource.remote.NetworkLXAIOBusNode attribute), 191</code>	<code>grid.resource.remote.NetworkLXAIOBusPIO attribute), 191</code>
<code>__attrs_attrs__</code>	<code>grid.resource.mqtt.MQTTResource attribute), 181</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.mqtt.TasmotaPowerPort attribute), 181</code>	<code>grid.resource.remote.NetworkLXAUSBMux attribute), 191</code>	<code>grid.resource.remote.NetworkMQTTResource attribute), 191</code>
<code>__attrs_attrs__</code>	<code>grid.resource.networkservice.NetworkService attribute), 182</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.onewirereport.OneWirePIO attribute), 182</code>	<code>grid.resource.remote.NetworkMXSUSBLoader attribute), 186</code>	<code>grid.resource.remote.NetworkRKUSBLoader attribute), 186</code>
<code>__attrs_attrs__</code>	<code>grid.resource.power.NetworkPowerPort attribute), 182</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.power.PDUDaemonPort attribute), 183</code>	<code>grid.resource.remote.NetworkSiSPMpowerPort attribute), 188</code>	<code>grid.resource.remote.NetworkSigrokUSBDevice attribute), 186</code>
<code>__attrs_attrs__</code>	<code>grid.resource.provider.BaseProvider attribute), 183</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>	<code>grid.resource.provider.HTTPProvider attribute), 184</code>	<code>grid.resource.remote.NetworkSigrokUSBserialDevice attribute), 187</code>	<code>grid.resource.remote.NetworkSysfsGPIO attribute), 190</code>
<code>__attrs_attrs__</code>	<code>grid.resource.provider.NFSProvider attribute), 183</code>	<code>__attrs_attrs__</code>	<code>(lab-</code>
<code>__attrs_attrs__</code>		<code>grid.resource.remote.NetworkUSBAudioInput attribute), 189</code>	<code>grid.resource.remote.NetworkUSBLoader attribute), 189</code>

`grid.resource.remote.NetworkUSBDebugger attribute), 189`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBFlashableDevice attribute), 191`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBBMassStorage attribute), 187`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBPowerPort attribute), 188`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBSDMuxDevice attribute), 187`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBSDWireDevice attribute), 188`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBTMC attribute), 189`

`__attrs_attrs__(lab-`

`grid.resource.remote.NetworkUSBVideo attribute), 188`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemoteBaseProvider attribute), 192`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemoteHTTPProvider attribute), 193`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemoteNFSProvider attribute), 192`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemoteNetworkInterface attribute), 192`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemotePlace attribute), 185`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemotePlaceManager attribute), 184`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemoteTFTPPProvider attribute), 192`

`__attrs_attrs__(lab-`

`grid.resource.remote.RemoteUSBResource attribute), 185`

`__attrs_attrs__(lab-`

`grid.resource.serialport.NetworkSerialPort attribute), 193`

`__attrs_attrs__(lab-`

`grid.resource.serialport.RawSerialPort attribute), 193`

`__attrs_attrs__(lab-`

`grid.resource.sigrok.SigrokDevice attribute), 194`

`__attrs_attrs__(lab-`

`grid.resource.udc.AlteraUSBBlaster attribute), 197`

`__attrs_attrs__(lab-`

`grid.resource.udc.AndroidFastboot attribute), 196`

`__attrs_attrs__(lab-`

`grid.resource.udc.DeditecRelais8 attribute), 201`

`__attrs_attrs__(lab-`

`grid.resource.udc.HIDRelay attribute), 201`

`__attrs_attrs__(lab-`

`grid.resource.udc.IMXUSBLoader attribute), 196`

`__attrs_attrs__(lab-`

`grid.resource.udc.LXAUSBMux attribute), 201`

`__attrs_attrs__(lab-`

`grid.resource.udc.MXSUSBLoader attribute), 196`

`__attrs_attrs__(lab-`

`grid.resource.udc.RKUSBLoader attribute), 196`

`__attrs_attrs__(lab-`

`grid.resource.udc.SiSPMPowerPort attribute), 199`

`__attrs_attrs__(lab-`

`grid.resource.udc.SigrokUSBDevice attribute), 197`

`__attrs_attrs__(lab-`

`grid.resource.udc.SigrokUSBSerialDevice attribute), 198`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBAudioInput attribute), 200`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBDebugger attribute), 201`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBFlashableDevice attribute), 201`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBBMassStorage attribute), 195`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBNetworkInterface attribute), 197`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBPowerPort attribute), 199`

`__attrs_attrs__(lab-`

`grid.resource.udc.USBResource attribute),`

195
— attrs_attrs_ (lab-
grid.resource.udev.USBSDMuxDevice
attribute), 199
— attrs_attrs_ (lab-
grid.resource.udev.USBSDWireDevice
attribute), 198
— attrs_attrs_ (lab-
grid.resource.udev.USBSerialPort attribute),
195
— attrs_attrs_ (labgrid.resource.udev.USBTMC
attribute), 200
— attrs_attrs_ (labgrid.resource.udev.USBVideo
attribute), 200
— attrs_attrs_ (lab-
grid.resource.udev.UdevManager attribute),
194
— attrs_attrs_ (lab-
grid.resource.xenamanager.XenaManager
attribute), 202
— attrs_attrs_ (lab-
grid.resource.ykushpowerport.YKUSHPowerPort
attribute), 202
— attrs_attrs_ (lab-
grid.strategy.bareboxstrategy.BareboxStrategy
attribute), 203
— attrs_attrs_ (lab-
grid.strategy.common.Strategy
attribute), 204
— attrs_attrs_ (lab-
grid.strategy.common.StrategyError attribute),
203
— attrs_attrs_ (lab-
grid.strategy.dockerstrategy.DockerStrategy
attribute), 204
— attrs_attrs_ (lab-
grid.strategy.shellstrategy.ShellStrategy
attribute), 206
— attrs_attrs_ (lab-
grid.strategy.u-bootstrategy.UBootStrategy
attribute), 207
— attrs_attrs_ (labgrid.target.Target attribute),
229
— attrs_attrs_ (lab-
grid.util.exceptions.NoValidDriverError
attribute), 211
— attrs_attrs_ (lab-
grid.util.helper.ProcessWrapper attribute),
213
— attrs_attrs_ (lab-
grid.util.managedfile.ManagedFile attribute),
214
— attrs_attrs_ (labgrid.util.qmp.QMPError at-
tribute), 215
— attrs_attrs_ (lab-
grid.util.qmp.QMPMonitor
attribute), 215
— attrs_attrs_ (labgrid.util.ssh.ForwardError at-
tribute), 217
— attrs_attrs_ (labgrid.util.ssh.SSHConnection
attribute), 217
— attrs_attrs_ (labgrid.util.timeout.Timeout at-
tribute), 218
— attrs_init__() (lab-
grid.remote.coordinator.RemoteSession
method), 163
— attrs_post_init__() (lab-
grid.binding.BindingMixin method), 220
— attrs_post_init__() (labgrid.config.Config
method), 221
— attrs_post_init__() (lab-
grid.driver.bareboxdriver.BareboxDriver
method), 114
— attrs_post_init__() (lab-
grid.driver.commandmixin.CommandMixin
method), 115
— attrs_post_init__() (lab-
grid.driver.common.Driver method), 116
— attrs_post_init__() (lab-
grid.driver.consoleexpectmixin.ConsoleExpectMixin
method), 117
— attrs_post_init__() (lab-
grid.driver.deditecrelaisdriver.DeditecRelaisDriver
method), 117
— attrs_post_init__() (lab-
grid.driver.dockerdriver.DockerDriver
method), 118
— attrs_post_init__() (lab-
grid.driver.externalconsoledriver.ExternalConsoleDriver
method), 119
— attrs_post_init__() (lab-
grid.driver.fake.FakeConsoleDriver method),
120
— attrs_post_init__() (lab-
grid.driver.fastbootdriver.AndroidFastbootDriver
method), 121
— attrs_post_init__() (lab-
grid.driver.filereadoutput.FileDigitalOutputDriver
method), 122
— attrs_post_init__() (lab-
grid.driver.flashromdriver.FlashromDriver
method), 123
— attrs_post_init__() (lab-
grid.driver.flashscriptdriver.FlashScriptDriver
method), 123
— attrs_post_init__() (lab-
grid.driver.gpiodriver.GpioDigitalOutputDriver
method), 124
— attrs_post_init__() (lab-

<code>grid.driver.lxaiobusdriver.LXAIOBusPIODriver method), 125</code>	<code>(lab-</code>	<code>grid.driver.quartushpsdriver.QuartusHPSDriver method), 136</code>
<code>__attrs_post_init__() grid.driver.lxausbmuxdriver.LXAUSBMuxDriver method), 125</code>	<code>grid.driver.resetdriver.DigitalOutputResetDriver method), 136</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.manualswitchdriver.ManualSwitchDriver method), 126</code>	<code>grid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver method), 137</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.modbusdriver.ModbusCoilDriver method), 126</code>	<code>grid.driver.serialdriver.SerialDriver method), 137</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.mqtt.TasmotaPowerDriver method), 127</code>	<code>grid.driver.shelldriver.ShellDriver method), 139</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.networkinterfacedriver.NetworkInterfaceDriver method), 127</code>	<code>grid.driver.sigrokdriver.SigrokCommon method), 141</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.onewiredriver.OneWirePIODriver method), 128</code>	<code>grid.driver.sshdriver.SSHDriver method), 143</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.openocddriver.OpenOCDDriver method), 129</code>	<code>grid.driver.u-bootdriver.UBootDriver method), 145</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.DigitalOutputPowerDriver method), 131</code>	<code>grid.driver.usbaudioplayer.USBAudioInputDriver method), 146</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.NetworkPowerDriver method), 131</code>	<code>grid.driver.usbhidrelay.HIDRelayDriver method), 146</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.PDUDaemonDriver method), 133</code>	<code>grid.driver.usbloader.BDIMXUSBDriver method), 149</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.PowerResetMixin method), 129</code>	<code>grid.driver.usbloader.IMXUSBDriver method), 147</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.SiSPMPowerDriver method), 130</code>	<code>grid.driver.usbloader.MXSUSBDriver method), 147</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.USBPowerDriver method), 132</code>	<code>grid.driver.usbloader.RKUSBDriver method), 148</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.powerdriver.YKUSHPowerDriver method), 132</code>	<code>grid.driver.usbloader.UUUDriver method), 148</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.provider.BaseProviderDriver method), 133</code>	<code>grid.driver.usbsdmuxdriver.USBSDMuxDriver method), 149</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.pyvisadriver.PyVISADriver method), 134</code>	<code>grid.driver.usbsdwiredriver.USBSDWireDriver method), 150</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.qemudriver.QEMUDriver method), 135</code>	<code>grid.driver.usbstoragedriver.NetworkUSBStorageDriver method), 151</code>	<code>(lab-</code>
<code>__attrs_post_init__() grid.driver.usbstorageprovider.NetworkUSBStorageProvider method), 152</code>	<code>grid.driver.usbstoragedriver.USBStorageDriver method), 152</code>	<code>(lab-</code>

<code>grid.driver.usbstoragedriver.USBStorageDriver</code>	<code>grid.remote.exporter.USBGenericExport</code>
<code>method), 150</code>	<code>method), 165</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.driver.usbtmcdriver.USBTMCDriver</code>	<code>grid.remote.exporter.USBHIDRelayExport</code>
<code>method), 151</code>	<code>method), 168</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.driver.xenadriver.XenaDriver</code>	<code>method),</code>
<code>152</code>	<code>grid.remote.exporter.USBNetworkExport</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.environment.Environment</code>	<code>method),</code>
<code>223</code>	<code>grid.remote.exporter.USBPowerPortExport</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.common.ResourceEntry</code>	<code>method),</code>
<code>159</code>	<code>grid.remote.exporter.USBSDMuxExport</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.config.ResourceConfig</code>	<code>method),</code>
<code>162</code>	<code>grid.remote.exporter.USBSDWireExport</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.EthernetPortExport</code>	<code>grid.remote.exporter.USBSigrokExport</code>
<code>method), 169</code>	<code>method), 166</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.GPIOGenericExport</code>	<code>grid.resource.common.ManagedResource</code>
<code>method), 169</code>	<code>method), 175</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.HTTPVideoStreamExport</code>	<code>grid.resource.common.Resource</code>
<code>method), 170</code>	<code>method), 173</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.LXAIOBusNodeExport</code>	<code>grid.resource.common.ResourceManager</code>
<code>method), 171</code>	<code>method), 174</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.NetworkServiceExport</code>	<code>grid.resource.docker.DockerDaemon</code>
<code>method), 170</code>	<code>method), 176</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.ProviderGenericExport</code>	<code>grid.resource.docker.DockerManager</code>
<code>method), 169</code>	<code>method), 175</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.ResourceExport</code>	<code>grid.resource.ethernetport.EthernetPortManager</code>
<code>method), 164</code>	<code>method), 177</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.SerialPortExport</code>	<code>grid.resource.ethernetport.SNMPEthernetPort</code>
<code>method), 165</code>	<code>method), 178</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.SiSPMPowerPortExport</code>	<code>grid.resource.ethernetport.SNMPSwitch</code>
<code>method), 167</code>	<code>method), 176</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.USBAudioInputExport</code>	<code>grid.resource.lxaiobus.LXAIOBusNode</code>
<code>method), 167</code>	<code>method), 180</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.USBDeditecRelaisExport</code>	<code>grid.resource.lxaiobus.LXAIOBusNodeManager</code>
<code>method), 168</code>	<code>method), 179</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>
<code>grid.remote.exporter.USBFetchableExport</code>	<code>grid.resource.mqtt.MQTTManager</code>
<code>method), 168</code>	<code>method), 181</code>
<code>__attrs_post_init__()</code>	<code>(lab-</code>

```

grid.resource.mqtt.MQTTResource    method),      grid.resource.remote.NetworkUSBPowerPort
181                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkAlteraUSBBBlaster   method), 186      grid.resource.remote.NetworkUSBSDMuxDevice
method), 186                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkAndroidFastboot     method), 185      grid.resource.remote.NetworkUSBSDWireDevice
method), 185                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkDeditecRelais8      method), 190      grid.resource.remote.NetworkUSBTMC
method), 190                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkHIDRelay           method), 190      grid.resource.remote.NetworkUSBVideo
method), 190                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkIMXUSBLoader       method), 185      grid.resource.remote.RemotePlace
method), 185                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkLXAIOBusNode       method), 191      grid.resource.remote.RemotePlaceManager
method), 191                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkLXAUSBMux         method), 191      grid.resource.serialport.RawSerialPort
method), 191                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkMQTTResource      method), 191      grid.resource.udev.DeditecRelais8
method), 191                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkMXSUSBLoader       method), 186      grid.resource.udev.HIDRelay
method), 186                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkRKUSBLoader        method), 186      grid.resource.udev.LXAUSBMux
method), 186                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkSiSPMPowerPort     method), 188      grid.resource.udev.SigrokUSBDevice
method), 188                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkSigrokUSBDevice    method), 186      grid.resource.udev.SigrokUSBSerialDevice
method), 186                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkSigrokUSBSerialDevice
method), 187                                (lab-      grid.resource.udev.USBAudioInput
method), 187                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkSysfsGPIO          method), 190      grid.resource.udev.USBMassStorage
method), 190                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkUSBAudioInput      method), 189      grid.resource.udev.USBNetworkInterface
method), 189                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkUSBDebugger        method), 189      grid.resource.udev.USBPowerPort
method), 189                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkUSBMassStorage     method), 187      grid.resource.udev.USBResource
method), 187                                (lab-      __attrs_post_init__()           (lab-
grid.resource.remote.NetworkUSBSDMuxDevice     method),

```

199
— attrs_post_init__() (labgrid.resource.udev.USBSDWireDevice method), 198
— attrs_post_init__() (labgrid.resource.udev.USBSerialPort method), 195
— attrs_post_init__() (labgrid.resource.udev.USBTMC method), 200
— attrs_post_init__() (labgrid.resource.udev.USBVideo method), 200
— attrs_post_init__() (labgrid.resource.udev.UdevManager method), 194
— attrs_post_init__() (labgrid.strategy.bareboxstrategy.BareboxStrategy method), 203
— attrs_post_init__() (labgrid.strategy.common.Strategy method), 204
— attrs_post_init__() (labgrid.strategy.dockerstrategy.DockerStrategy method), 204
— attrs_post_init__() (labgrid.strategy.graphstrategy.GraphStrategy method), 205
— attrs_post_init__() (labgrid.strategy.shellstrategy.ShellStrategy method), 206
— attrs_post_init__() (labgrid.strategy.ubootstrategy.UBootStrategy method), 206
— attrs_post_init__() (labgrid.target.Target method), 228
— attrs_post_init__() (labgrid.util.managedfile.ManagedFile method), 213
— attrs_post_init__() (labgrid.util.qmp.QMPMonitor method), 215
— attrs_post_init__() (labgrid.util.ssh.SSHConnection method), 215
— attrs_post_init__() (labgrid.util.timeout.Timeout method), 218
— call__() (labgrid.driver.fastbootdriver.AndroidFastbootDriver method), 122
— call__() (labgrid.driver.flashromdriver.FlashromDriver method), 123
— call__() (labgrid.remote.client.LocalPort method), 159
— call__() (labgrid.remote.client.RemotePort method), 159
— call__() (labgrid.util.agentwrapper.MethodProxy method), 210
— del__() (labgrid.remote.exporter.SerialPortExport

method), 165
— del__() (labgrid.step.Step method), 227
— del__() (labgrid.util.agents.sysfsgpio.GpioDigitalOutput method), 209
— del__() (labgrid.util.agentwrapper.AgentWrapper method), 211
— dict__ (labgrid.autoinstall.main.Manager attribute), 111
— dict__ (labgrid.binding.BindingMixin attribute), 220
— dict__ (labgrid.binding.BindingMixin.NamedBinding attribute), 220
— dict__ (labgrid.config.Config attribute), 223
— dict__ (labgrid.consoleloggingreporter.ConsoleLoggingReporter attribute), 223
— dict__ (labgrid.driver.commandmixin.CommandMixin attribute), 116
— dict__ (labgrid.driver.consoleexpectmixin.ConsoleExpectMixin attribute), 117
— dict__ (labgrid.environment.Environment attribute), 224
— dict__ (labgrid.factory.TargetFactory attribute), 226
— dict__ (labgrid.protocol.bootstrapprotocol.BootstrapProtocol attribute), 153
— dict__ (labgrid.protocol.commandprotocol.CommandProtocol attribute), 153
— dict__ (labgrid.protocol.consoleprotocol.ConsoleProtocol attribute), 154
— dict__ (labgrid.protocol.consoleprotocol.ConsoleProtocol.Client attribute), 154
— dict__ (labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol attribute), 154
— dict__ (labgrid.protocol.filesystemprotocol.FileSystemProtocol attribute), 155
— dict__ (labgrid.protocol.filetransferprotocol.FileTransferProtocol attribute), 155
— dict__ (labgrid.protocol.infoprotocol.InfoProtocol attribute), 155
— dict__ (labgrid.protocol.linuxbootprotocol.LinuxBootProtocol attribute), 156
— dict__ (labgrid.protocol.mmioprotocol.MMIOProtocol attribute), 156
— dict__ (labgrid.protocol.powerprotocol.PowerProtocol attribute), 156
— dict__ (labgrid.protocol.resetprotocol.ResetProtocol attribute), 157
— dict__ (labgrid.protocol.videoprotocol.VideoProtocol attribute), 157
— dict__ (labgrid.pytestplugin.reporter.StepReporter attribute), 158
— dict__ (labgrid.remote.common.Place attribute), 161
— dict__ (labgrid.remote.common.Reservation attribute)

```

        tribute), 162
__dict__(labgrid.remote.common.ResourceEntry attribute), 160
__dict__(labgrid.remote.common.ResourceMatch attribute), 160
__dict__(labgrid.remote.config.ResourceConfig attribute), 162
__dict__(labgrid.remote.coordinator.RemoteSession attribute), 163
__dict__(labgrid.remote.scheduler.TagSet attribute), 171
__dict__(labgrid.resource.common.ResourceManager attribute), 174
__dict__(labgrid.resource.docker.DockerConstants attribute), 175
__dict__(labgrid.resource.ethernetport.SNMPSwitch attribute), 177
__dict__(labgrid.resource.suggest.Suggester attribute), 194
__dict__(labgrid.step.Step attribute), 227
__dict__(labgrid.step.StepEvent attribute), 227
__dict__(labgrid.step.Steps attribute), 226
__dict__(labgrid.stepreporter.StepReporter attribute), 227
__dict__(labgrid.target.Target attribute), 229
__dict__(labgrid.util.agent.Agent attribute), 209
__dict__(labgrid.util.agents.network_interface.Future attribute), 207
__dict__(labgrid.util.agents.network_interface.NMDev attribute), 208
__dict__(labgrid.util.agents.sysfsgpio.GpioDigitalOutput attribute), 209
__dict__(labgrid.util.agentwrapper.AgentWrapper attribute), 211
__dict__(labgrid.util.agentwrapper.MethodProxy attribute), 210
__dict__(labgrid.util.agentwrapper.ModuleProxy attribute), 210
__dict__(labgrid.util.helper.ProcessWrapper attribute), 213
__dict__(labgrid.util.managedfile.ManagedFile attribute), 214
__dict__(labgrid.util.qmp.QMPMonitor attribute), 215
__dict__(labgrid.util.ssh.SSHConnection attribute), 217
__dict__(labgrid.util.timeout.Timeout attribute), 218
__eq__() (labgrid.remote.common.ResourceMatch method), 160
__eq__() (labgrid.remote.exporter.EthernetPortExport method), 169
__eq__() (labgrid.remote.exporter.HTTPVideoStreamExport method), 170
__eq__() (labgrid.remote.exporter.NetworkServiceExport
method), 170
__eq__() (labgrid.resource.base.EthernetPort method), 172
__eq__() (labgrid.resource.ethernetport.EthernetPortManager method), 177
__eq__() (labgrid.resource.ethernetport.SNMPEthernetPort method), 178
__eq__() (labgrid.resource.ethernetport.SNMPSwitch method), 177
__eq__() (labgrid.util.helper.ProcessWrapper method), 213
__eq__() (labgrid.util.managedfile.ManagedFile method), 214
__eq__() (labgrid.util.ssh.ForwardError method), 217
__eq__() (labgrid.util.ssh.SSHConnection method), 217
__ge__() (labgrid.remote.common.ResourceMatch method), 160
__ge__() (labgrid.remote.exporter.EthernetPortExport method), 169
__ge__() (labgrid.remote.exporter.HTTPVideoStreamExport method), 170
__ge__() (labgrid.remote.exporter.NetworkServiceExport method), 170
__ge__() (labgrid.resource.base.EthernetPort method), 173
__ge__() (labgrid.resource.ethernetport.EthernetPortManager method), 177
__ge__() (labgrid.resource.ethernetport.SNMPEthernetPort method), 178
__ge__() (labgrid.resource.ethernetport.SNMPSwitch method), 177
__ge__() (labgrid.util.helper.ProcessWrapper method), 213
__ge__() (labgrid.util.managedfile.ManagedFile method), 214
__ge__() (labgrid.util.ssh.ForwardError method), 217
__ge__() (labgrid.util.ssh.SSHConnection method), 217
__getattr__() (labgrid.util.agentwrapper.AgentWrapper method), 211
__getattr__() (labgrid.util.agentwrapper.ModuleProxy method), 210
__getitem__() (labgrid.target.Target method), 228
__gt__() (labgrid.remote.common.ResourceMatch method), 160
__gt__() (labgrid.remote.exporter.EthernetPortExport method), 169
__gt__() (labgrid.remote.exporter.HTTPVideoStreamExport method), 170
__gt__() (labgrid.remote.exporter.NetworkServiceExport method), 170

```

```
__gt__(labgrid.resource.base.EthernetPort method), 115
      __init__(labgrid.driver.common.Driver method), 116
__gt__(labgrid.resource.ethernetport.EthernetPortManager method), 117
      __init__(labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver method), 117
__gt__(labgrid.resource.ethernetport.SNMPEthernetPort method), 118
      __init__(labgrid.driver.dockerdriver.DockerDriver method), 119
__gt__(labgrid.resource.ethernetport.SNMPSwitch method), 119
      __init__(labgrid.driver.exception.CleanUpError method), 119
__gt__(labgrid.util.helper.ProcessWrapper method), 120
      __init__(labgrid.driver.exception.ExecutionError method), 119
__gt__(labgrid.util.managedfile.ManagedFile method), 121
      __init__(labgrid.driver.externalconsoledriver.ExternalConsoleDrive method), 120
__gt__(labgrid.util.ssh.ForwardError method), 121
      __init__(labgrid.driver.fake.FakeCommandDriver method), 121
__gt__(labgrid.util.ssh.SSHConnection method), 121
      __init__(labgrid.driver.fake.FakeConsoleDriver method), 120
__hash__(labgrid.remote.common.ResourceMatch attribute), 120
      __init__(labgrid.driver.fake.FakeFileTransferDriver method), 121
__hash__(labgrid.remote.exporter.EthernetPortExport attribute), 120
      __init__(labgrid.driver.fake.FakePowerDriver method), 121
__hash__(labgrid.remote.exporter.HTTPVideoStreamExport attribute), 121
      __init__(labgrid.driver.fastbootdriver.AndroidFastbootDriver method), 122
__hash__(labgrid.resource.base.EthernetPort attribute), 121
      __init__(labgrid.driver.filédigitaloutput.FileDigitalOutputDriver method), 122
__hash__(labgrid.resource.ethernetport.EthernetPortManager attribute), 122
      __init__(labgrid.driver.flashromdriver.FlashromDriver method), 123
__hash__(labgrid.resource.ethernetport.SNMPEthernetPort attribute), 123
      __init__(labgrid.driver.flashscriptdriver.FlashScriptDriver method), 124
__hash__(labgrid.resource.ethernetport.SNMPSwitch attribute), 124
      __init__(labgrid.driver.gpiodriver.GpioDigitalOutputDriver method), 124
__hash__(labgrid.util.helper.ProcessWrapper attribute), 125
      __init__(labgrid.driver.httpvideodriver.HTTPVideoDriver method), 124
__hash__(labgrid.util.managedfile.ManagedFile attribute), 125
      __init__(labgrid.driver.lxaiobusdriver.LXAIOBusPIODriver method), 125
__hash__(labgrid.util.ssh.ForwardError attribute), 126
      __init__(labgrid.driver.lxausbmuxdriver.LXAUSBMuxDriver method), 125
__hash__(labgrid.util.ssh.SSHConnection attribute), 126
      __init__(labgrid.driver.manualswitchdriver.ManualSwitchDriver method), 126
__init__(labgrid.autoinstall.main.Handler method), 126
      __init__(labgrid.driver.modbusdriver.ModbusCoilDriver method), 126
__init__(labgrid.autoinstall.main.Manager method), 127
      __init__(labgrid.driver.mqtt.TasmotaPowerDriver method), 127
__init__(labgrid.binding.BindingError method), 128
      __init__(labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver method), 128
__init__(labgrid.binding.BindingMixin method), 129
      __init__(labgrid.driver.onewiredriver.OneWirePIODriver method), 129
__init__(labgrid.binding.BindingMixin.NamedBinding method), 129
      __init__(labgrid.driver.openocddriver.OpenOCDDriver method), 129
__init__(labgrid.binding.StateError method), 130
      __init__(labgrid.driver.powerdriver.DigitalOutputPowerDriver method), 132
__init__(labgrid.config.Config method), 123
      __init__(labgrid.driver.powerdriver.ExternalPowerDriver method), 131
__init__(labgrid.consoleloggingreporter.ConsoleLoggingReport method), 123
      __init__(labgrid.driver.powerdriver.ManualPowerDriver method), 131
__init__(labgrid.driver.bareboxdriver.BareboxDriver method), 131
```

`method), 130`
`__init__() (labgrid.driver.powerdriver.NetworkPowerDriver __init__() (labgrid.driver.usbloader.MXSUSBDriver method), 131`
`__init__() (labgrid.driver.powerdriver.PDUDaemonDriver __init__() (labgrid.driver.usbloader.RKUSBDriver method), 133`
`__init__() (labgrid.driver.powerdriver.PowerResetMixin __init__() (labgrid.driver.usbloader.UUUDriver method), 129`
`__init__() (labgrid.driver.powerdriver.SiSPMPowerDriver __init__() (labgrid.driver.usbsdmuxdriver.USBSDMuxDriver method), 130`
`__init__() (labgrid.driver.powerdriver.USBPowerDriver __init__() (labgrid.driver.usbsdwiredriver.USBSDWireDriver method), 132`
`__init__() (labgrid.driver.powerdriver.YKUSHPowerDriver __init__() (labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver method), 132`
`__init__() (labgrid.driver.provider.BaseProviderDriver __init__() (labgrid.driver.usbstoragedriver.USBSStorageDriver method), 133`
`__init__() (labgrid.driver.provider.HTTPProviderDriver __init__() (labgrid.driver.usbtmcdriver.USBTMCDriver method), 134`
`__init__() (labgrid.driver.provider.NFSPPProviderDriver __init__() (labgrid.driver.usbvideodriver.USBVideoDriver method), 134`
`__init__() (labgrid.driver.provider.TFTPPProviderDriver __init__() (labgrid.driver.xenadriver.XenaDriver method), 134`
`__init__() (labgrid.driver.pyvisadriver.PyVISADriver __init__() (labgrid.environment.Environment method), 134`
`__init__() (labgrid.driver.qemudriver.QEMUDriver __init__() (labgrid.exceptions.InvalidConfigError method), 136`
`__init__() (labgrid.driver.quartushpsdriver.QuartusHPSDriver __init__() (labgrid.exceptions.NoConfigNotFoundError method), 136`
`__init__() (labgrid.driver.resetdriver.DigitalOutputResetDriver __init__() (labgrid.exceptions.NoDriverNotFoundError method), 136`
`__init__() (labgrid.driver.serialdigitaloutput.SerialPortDigitalOutput __init__() (labgrid.exceptions.NoResourceNotFoundError method), 137`
`__init__() (labgrid.driver.serialdriver.SerialDriver __init__() (labgrid.exceptions.NoSupplierNotFoundError method), 138`
`__init__() (labgrid.driver.shelldriver.ShellDriver __init__() (labgrid.exceptions.RegistrationError method), 140`
`__init__() (labgrid.driver.sigrokdriver.SigrokCommon __init__() (labgrid.factory.TargetFactory method), 141`
`__init__() (labgrid.driver.sigrokdriver.SigrokDriver __init__() (labgrid.pytestplugin.reporter.ColoredStepReporter method), 141`
`__init__() (labgrid.driver.sigrokdriver.SigrokPowerDriver __init__() (labgrid.pytestplugin.reporter.StepReporter method), 142`
`__init__() (labgrid.driver.smallubootdriver.SmallUBootDriver __init__() (labgrid.remote.client.LocalPort method), 143`
`__init__() (labgrid.driver.sshdriver.SSHDriver __init__() (labgrid.remote.client.RemotePort method), 144`
`__init__() (labgrid.driver.ubootdriver.UBootDriver __init__() (labgrid.remote.common.Place method), 145`
`__init__() (labgrid.driver.usbaudioplayer.USBAudioInputDriver __init__() (labgrid.remote.common.Reservation method), 146`
`__init__() (labgrid.driver.usbhidrelay.HIDRelayDriver __init__() (labgrid.remote.common.ResourceEntry method), 147`
`__init__() (labgrid.driver.usbloader.BDIMXUSBDriver __init__() (labgrid.remote.common.ResourceMatch method), 149`
`__init__() (labgrid.driver.usbloader.IMXUSBDriver __init__() (labgrid.remote.config.ResourceConfig`

```
        method), 162
__init__() (labgrid.remote.coordinator.ClientSession __init__() (labgrid.resource.common.ManagedResource
        method), 163
__init__() (labgrid.remote.coordinator.ExporterSession __init__() (labgrid.resource.common.NetworkResource
        method), 163
__init__() (labgrid.remote.coordinator.ResourceImport __init__() (labgrid.resource.common.Resource
        method), 164
__init__() (labgrid.remote.exporter.EthernetPortExport __init__() (labgrid.resource.common.ResourceManager
        method), 169
__init__() (labgrid.remote.exporter.GPIOGenericExport __init__() (labgrid.resource.docker.DockerDaemon
        method), 169
__init__() (labgrid.remote.exporter.HTTPVideoStreamExport __init__() (labgrid.resource.docker.DockerManager
        method), 171
__init__() (labgrid.remote.exporter.LXAIOBusNodeExport __init__() (labgrid.resource.ethernetport.EthernetPortManager
        method), 171
__init__() (labgrid.remote.exporter.NetworkServiceExport __init__() (labgrid.resource.ethernetport.SNMPEthernetPort
        method), 170
__init__() (labgrid.remote.exporter.ProviderGenericExport __init__() (labgrid.resource.ethernetport.SNMPSwitch
        method), 169
__init__() (labgrid.remote.exporter.ResourceExport __init__() (labgrid.resource.flashrom.Flashrom
        method), 164
__init__() (labgrid.remote.exporter.SerialPortExport __init__() (labgrid.resource.flashrom.NetworkFlashrom
        method), 165
__init__() (labgrid.remote.exporter.SiSPMPowerPortExport __init__() (labgrid.resource.httpvideostream.HTTPVideoStream
        method), 167
__init__() (labgrid.remote.exporter.USBAudioInputExport __init__() (labgrid.resource.lxaiobus.LXAIOBusNode
        method), 167
__init__() (labgrid.remote.exporter.USBDeditecRelaisExp __init__() (labgrid.resource.lxaiobus.LXAIOBusNodeManager
        method), 168
__init__() (labgrid.remote.exporter.USBFlashableExport __init__() (labgrid.resource.lxaiobus.LXAIOBusPIO
        method), 168
__init__() (labgrid.remote.exporter.USBGenericExport __init__() (labgrid.resource.modbus.ModbusTCPcoil
        method), 165
__init__() (labgrid.remote.exporter.USBHIDRelayExport __init__() (labgrid.resource.mqtt.MQTTManager
        method), 168
__init__() (labgrid.remote.exporter.USBNetworkExport __init__() (labgrid.resource.mqtt.MQTTResource
        method), 165
__init__() (labgrid.remote.exporter.USBPowerPortExport __init__() (labgrid.resource.mqtt.TasmotaPowerPort
        method), 167
__init__() (labgrid.remote.exporter.USBSDMuxExport __init__() (labgrid.resource.networkservice.NetworkService
        method), 166
__init__() (labgrid.remote.exporter.USBSDWireExport __init__() (labgrid.resource.onewirereport.OneWirePIO
        method), 166
__init__() (labgrid.remote.exporter.USBSigrokExport __init__() (labgrid.resource.power.NetworkPowerPort
        method), 166
__init__() (labgrid.remote.scheduler.TagSet __init__() (labgrid.resource.power.PDUDaemonPort
        method), 171
__init__() (labgrid.resource.base.EthernetPort __init__() (labgrid.resource.provider.BaseProvider
        method), 173
__init__() (labgrid.resource.base.NetworkInterface __init__() (labgrid.resource.provider.HTTPProvider
        method), 172
__init__() (labgrid.resource.base.SerialPort __init__() (labgrid.resource.provider.NFSProvider
        method), 172
__init__() (labgrid.resource.base.SysfsGPIO __init__() (labgrid.resource.provider.TFTPPProvider
```

`method), 183`
`__init__(labgrid.resource.pyvisa.PyVISADevice method), 184`
`__init__(labgrid.resource.remote.NetworkAlteraUSBBlaster method), 186`
`__init__(labgrid.resource.remote.NetworkAndroidFastboot method), 185`
`__init__(labgrid.resource.remote.NetworkDeditecRelais8 method), 190`
`__init__(labgrid.resource.remote.NetworkHIDRelay method), 190`
`__init__(labgrid.resource.remote.NetworkIMXUSBLoader method), 185`
`__init__(labgrid.resource.remote.NetworkLXAIOBusNode method), 191`
`__init__(labgrid.resource.remote.NetworkLXAIOBusPIQ method), 191`
`__init__(labgrid.resource.remote.NetworkLXAUSBMux method), 191`
`__init__(labgrid.resource.remote.NetworkMQTTResource method), 192`
`__init__(labgrid.resource.remote.NetworkMXSUSBLoader method), 186`
`__init__(labgrid.resource.remote.NetworkRKUSBLoader method), 186`
`__init__(labgrid.resource.remote.NetworkSiSPMPowerPort method), 188`
`__init__(labgrid.resource.remote.NetworkSigrokUSBDevice method), 186`
`__init__(labgrid.resource.remote.NetworkSigrokUSBSerialDevice method), 187`
`__init__(labgrid.resource.remote.NetworkSysfsGPIO method), 190`
`__init__(labgrid.resource.remote.NetworkUSBAudioInput method), 189`
`__init__(labgrid.resource.remote.NetworkUSBDebugger method), 189`
`__init__(labgrid.resource.remote.NetworkUSBFlashableDevice method), 191`
`__init__(labgrid.resource.remote.NetworkUSBMassStorage method), 187`
`__init__(labgrid.resource.remote.NetworkUSBPowerPort method), 188`
`__init__(labgrid.resource.remote.NetworkUSBSDMuxDevice method), 187`
`__init__(labgrid.resource.remote.NetworkUSBSDWireDevice method), 188`
`__init__(labgrid.resource.remote.NetworkUSBTMC method), 189`
`__init__(labgrid.resource.remote.NetworkUSBVideo method), 189`
`__init__(labgrid.resource.remote.RemoteBaseProvider method), 192`
`__init__(labgrid.resource.remote.RemoteHTTPProvider method), 193`
`__init__(labgrid.resource.remote.RemoteNFSProvider method), 192`
`__init__(labgrid.resource.remote.RemoteNetworkInterface method), 192`
`__init__(labgrid.resource.remote.RemotePlace method), 185`
`__init__(labgrid.resource.remote.RemotePlaceManager method), 184`
`__init__(labgrid.resource.remote.RemoteTFTPProvider method), 192`
`__init__(labgrid.resource.remote.RemoteUSBResource method), 185`
`__init__(labgrid.resource.serialport.NetworkSerialPort method), 193`
`__init__(labgrid.resource.serialport.RawSerialPort method), 193`
`__init__(labgrid.resource.sigrok.SigrokDevice method), 194`
`__init__(labgrid.resource.suggest.Suggester method), 194`
`__init__(labgrid.resource.udev.AlteraUSBBlaster method), 197`
`__init__(labgrid.resource.udev.AndroidFastboot method), 196`
`__init__(labgrid.resource.udev.DeditecRelais8 method), 201`
`__init__(labgrid.resource.udev.HIDRelay method), 201`
`__init__(labgrid.resource.udev.IMXUSBLoader method), 196`
`__init__(labgrid.resource.udev.LXAUSBMux method), 201`
`__init__(labgrid.resource.udev.MXSUSBLoader method), 196`
`__init__(labgrid.resource.udev.RKUSBLoader method), 196`
`__init__(labgrid.resource.udev.SiSPMPowerPort method), 199`
`__init__(labgrid.resource.udev.SigrokUSBDevice method), 197`
`__init__(labgrid.resource.udev.SigrokUSBSerialDevice method), 198`
`__init__(labgrid.resource.udev.USBAudioInput method), 200`
`__init__(labgrid.resource.udev.USBDebugger method), 202`
`__init__(labgrid.resource.udev.USBFlashableDevice method), 201`
`__init__(labgrid.resource.udev.USBMassStorage method), 195`
`__init__(labgrid.resource.udev.USBNetworkInterface method), 197`
`__init__(labgrid.resource.udev.USBPowerPort`

```
        method), 199
__init__() (labgrid.resource.udev.USBResource
        method), 195
__init__() (labgrid.resource.udev.USBSDMuxDevice
        method), 199
__init__() (labgrid.resource.udev.USBSDWireDevice
        method), 198
__init__() (labgrid.resource.udev.USBSerialPort
        method), 195
__init__() (labgrid.resource.udev.USBTMC
        method), 200
__init__() (labgrid.resource.udev.USBVideo
        method), 200
__init__() (labgrid.resource.udev.UdevManager
        method), 194
__init__() (labgrid.resource.xenamanager.XenaManager
        method), 202
__init__() (labgrid.resource.ykushpowerport.YKUSHPowerPort
        method), 202
__init__() (labgrid.step.Step method), 227
__init__() (labgrid.step.StepEvent method), 226
__init__() (labgrid.step.Steps method), 226
__init__() (labgrid.stepreporter.StepReporter
        method), 227
__init__() (labgrid.strategy.bareboxstrategy.BareboxStrategy
        method), 203
__init__() (labgrid.strategy.common.Strategy
        method), 204
__init__() (labgrid.strategy.common.StrategyError
        method), 203
__init__() (labgrid.strategy.dockerstrategy.DockerStrategy
        method), 204
__init__() (labgrid.strategy.shellstrategy.ShellStrategy
        method), 206
__init__() (labgrid.strategy.ubootstrategy.UBootStrategy
        method), 207
__init__() (labgrid.target.Target method), 229
__init__() (labgrid.util.agent.Agent method), 209
__init__() (labgrid.util.agents.network_interface.BackgroundLoop
        method), 207
__init__() (labgrid.util.agents.network_interface.Future
        method), 207
__init__() (labgrid.util.agents.network_interface.NMDev
        method), 208
__init__() (labgrid.util.agents.sysfsgpio.GpioDigitalOutput
        method), 209
__init__() (labgrid.util.agentwrapper.AgentWrapper
        method), 211
__init__() (labgrid.util.agentwrapper.MethodProxy
        method), 210
__init__() (labgrid.util.agentwrapper.ModuleProxy
        method), 210
__init__() (labgrid.util.exceptions.NoValidDriverError
        method), 211
__init__() (labgrid.util.expect.PtxExpect method),
        212
__init__() (labgrid.util.helper.ProcessWrapper
        method), 213
__init__() (labgrid.util.managedfile.ManagedFile
        method), 214
__init__() (labgrid.util.qmp.QMPError method),
        215
__init__() (labgrid.util.qmp.QMPMonitor method),
        215
__init__() (labgrid.util.ssh.ForwardError method),
        217
__init__() (labgrid.util.ssh.SSHConnection method),
        217
__init__() (labgrid.util.timeout.Timeout method),
        218
__le__() (labgrid.remote.common.ResourceMatch
        method), 160
__le__() (labgrid.remote.exporter.EthernetPortExport
        method), 169
__le__() (labgrid.remote.exporter.HTTPVideoStreamExport
        method), 171
__le__() (labgrid.remote.exporter.NetworkServiceExport
        method), 170
__le__() (labgrid.resource.base.EthernetPort
        method), 173
__le__() (labgrid.resource.ethernetport.EthernetPortManager
        method), 178
__le__() (labgrid.resource.ethernetport.SNMPEthernetPort
        method), 178
__le__() (labgrid.resource.ethernetport.SNMPSwitch
        method), 177
__le__() (labgrid.util.helper.ProcessWrapper
        method), 213
__le__() (labgrid.util.managedfile.ManagedFile
        method), 214
__le__() (labgrid.util.ssh.ForwardError method), 217
__le__() (labgrid.util.ssh.SSHConnection method),
        217
__lt__() (labgrid.remote.common.ResourceMatch
        method), 160
__lt__() (labgrid.remote.exporter.EthernetPortExport
        method), 169
__lt__() (labgrid.remote.exporter.HTTPVideoStreamExport
        method), 171
__lt__() (labgrid.remote.exporter.NetworkServiceExport
        method), 170
__lt__() (labgrid.resource.base.EthernetPort
        method), 173
__lt__() (labgrid.resource.ethernetport.EthernetPortManager
        method), 178
__lt__() (labgrid.resource.ethernetport.SNMPEthernetPort
        method), 178
__lt__() (labgrid.resource.ethernetport.SNMPSwitch
        method), 178
```

```

    method), 177
__lt__(...) (labgrid.util.helper.ProcessWrapper
    method), 213
__lt__(...) (labgrid.util.managedfile.ManagedFile
    method), 214
__lt__(...) (labgrid.util.ssh.ForwardError method), 217
__lt__(...) (labgrid.util.ssh.SSHConnection method),
    217
__module__(labgrid.autoconfigure.main.Handler attribute),
    111
__module__(labgrid.autoconfigure.main.Manager
    attribute), 111
__module__(labgrid.binding.BindingError attribute),
    219
__module__(labgrid.binding.BindingMixin attribute),
    220
__module__(labgrid.binding.BindingMixin.NamedBinding
    attribute), 220
__module__(labgrid.binding.BindingState attribute),
    219
__module__(labgrid.binding.StateError attribute),
    219
__module__(labgrid.config.Config attribute), 223
__module__(labgrid.consoleloggingreporter.ConsoleLoggingReporter
    attribute), 223
__module__(labgrid.driver.bareboxdriver.BareboxDriver
    attribute), 115
__module__(labgrid.driver.commandmixin.CommandMixin
    attribute), 116
__module__(labgrid.driver.common.Driver attribute),
    116
__module__(labgrid.driver.consoleexpectMixin.ConsoleExpect
    attribute), 117
__module__(labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver
    attribute), 118
__module__(labgrid.driver.dockerdriver.DockerDriver
    attribute), 119
__module__(labgrid.driver.exception.CleanUpError
    attribute), 119
__module__(labgrid.driver.exception.ExecutionError
    attribute), 119
__module__(labgrid.driver.externalconsoledriver.ExternalConsoleDriver
    attribute), 120
__module__(labgrid.driver.fake.FakeCommandDriver
    attribute), 121
__module__(labgrid.driver.fake.FakeConsoleDriver
    attribute), 120
__module__(labgrid.driver.fake.FakeFileTransferDriver
    attribute), 121
__module__(labgrid.driver.fake.FakePowerDriver at-
    tribute), 121
__module__(labgrid.driver.fastbootdriver.AndroidFastbootDriver
    attribute), 122
__module__(labgrid.driver.filereadigitaloutput.FileDigitalOutput
    attribute), 122
__module__(labgrid.driver.flashromdriver.FlashromDriver
    attribute), 123
__module__(labgrid.driver.flashscriptdriver.FlashScriptDriver
    attribute), 124
__module__(labgrid.driver.gpiodriver.GpioDigitalOutputDriver
    attribute), 124
__module__(labgrid.driver.httpvideodriver.HTTPVideoDriver
    attribute), 124
__module__(labgrid.driver.lxaiobusdriver.LXAIOBusPIODriver
    attribute), 125
__module__(labgrid.driver.lxausbmuxdriver.LXAUSBMuxDriver
    attribute), 125
__module__(labgrid.driver.manualswitchdriver.ManualSwitchDriver
    attribute), 126
__module__(labgrid.driver.modbusdriver.ModbusCoilDriver
    attribute), 126
__module__(labgrid.driver.mqtt.MQTTError attribute),
    127
__module__(labgrid.driver.mqtt.TasmotaPowerDriver
    attribute), 127
__module__(labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver
    attribute), 128
__module__(labgrid.driver.onewiredriver.OneWirePIO
    attribute), 129
__module__(labgrid.driver.openocddriver.OpenOCDDriver
    attribute), 129
__module__(labgrid.driver.powerdriver.DigitalOutputPowerDriver
    attribute), 132
__module__(labgrid.driver.powerdriver.ExternalPowerDriver
    attribute), 131
__module__(labgrid.driver.powerdriver.ManualPowerDriver
    attribute), 130
__module__(labgrid.driver.powerdriver.NetworkPowerDriver
    attribute), 131
__module__(labgrid.driver.powerdriver.PDUDaemonDriver
    attribute), 133
__module__(labgrid.driver.powerdriver.PowerResetMixin
    attribute), 130
__module__(labgrid.driver.powerdriver.SiSPMPowerDriver
    attribute), 130
__module__(labgrid.driver.powerdriver.USBPowerDriver
    attribute), 133
__module__(labgrid.driver.powerdriver.YKUSHPowerDriver
    attribute), 132
__module__(labgrid.driver.provider.BaseProviderDriver
    attribute), 133
__module__(labgrid.driver.provider.HTTPProviderDriver
    attribute), 134
__module__(labgrid.driver.provider.NFSPPProviderDriver
    attribute), 134
__module__(labgrid.driver.provider.TFTPPProviderDriver
    attribute), 134
__module__(labgrid.driver.pyvisadriver.PyVISADriver
    attribute)

```

```
        attribute), 134
__module__(labgrid.driver.gemudriver.QEMUDriver __module__(labgrid.environment.Environment at-
        attribute), 136 tribute), 152
__module__(labgrid.driver.quartushpsdriver.QuartusHPSDriver __module__(labgrid.exceptions.InvalidConfigError
        attribute), 136 attribute), 224
__module__(labgrid.driver.resetdriver.DigitalOutputResetDriver __module__(labgrid.exceptions.NoConfigNotFoundError
        attribute), 136 attribute), 224
__module__(labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver __module__(labgrid.exceptions.NoDriverNotFoundError
        attribute), 137 attribute), 225
__module__(labgrid.driver.serialdriver.SerialDriver __module__(labgrid.exceptions.NoResourceNotFoundError
        attribute), 138 attribute), 225
__module__(labgrid.driver.shelldriver.ShellDriver at- __module__(labgrid.exceptions.NoSupplierNotFoundError
        tribute), 140 attribute), 224
__module__(labgrid.driver.sigrokdriver.SigrokCommon __module__(labgrid.exceptions.RegistrationError at-
        attribute), 141 tribute), 225
__module__(labgrid.driver.sigrokdriver.SigrokDriver __module__(labgrid.factory.TargetFactory attribute),
        attribute), 141 226
__module__(labgrid.driver.sigrokdriver.SigrokPowerDriver __module__(labgrid.protocol.bootstrapprotocol.BootstrapProtocol
        attribute), 142 attribute), 153
__module__(labgrid.driver.smallubootdriver.SmallUBootDriver __module__(labgrid.protocol.commandprotocol.CommandProtocol
        attribute), 143 attribute), 153
__module__(labgrid.driver.sshdriver.SSHDriver at- __module__(labgrid.protocol.consoleprotocol.ConsoleProtocol
        tribute), 144 attribute), 154
__module__(labgrid.driver.ubootdriver.UBootDriver __module__(labgrid.protocol.consoleprotocol.ConsoleProtocol.Client
        attribute), 145 attribute), 154
__module__(labgrid.driver.usbaudioplayer.USBAudioInputDriver __module__(labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
        attribute), 146 attribute), 154
__module__(labgrid.driver.usbhidrelay.HIDRelayDriver __module__(labgrid.protocol.filesystemprotocol.FileSystemProtocol
        attribute), 147 attribute), 155
__module__(labgrid.driver.usbloader.BDIMXUSBDriver __module__(labgrid.protocol.filetransferprotocol.FileTransferProtocol
        attribute), 149 attribute), 155
__module__(labgrid.driver.usbloader.IMXUSBDriver __module__(labgrid.protocol.infoprotocol.InfoProtocol
        attribute), 148 attribute), 155
__module__(labgrid.driver.usbloader.MXSUSBDriver __module__(labgrid.protocol.linuxbootprotocol.LinuxBootProtocol
        attribute), 147 attribute), 156
__module__(labgrid.driver.usbloader.RKUSBDriver __module__(labgrid.protocol.mmioprotocol.MMIOProtocol
        attribute), 148 attribute), 156
__module__(labgrid.driver.usbloader.UUUDriver at- __module__(labgrid.protocol.powerprotocol.PowerProtocol
        tribute), 148 attribute), 156
__module__(labgrid.driver.usbsdmuxdriver.USBSDMuxDriver __module__(labgrid.protocol.resetprotocol.ResetProtocol
        attribute), 149 attribute), 157
__module__(labgrid.driver.usbsdwiredriver.USBSDWireDriver __module__(labgrid.protocol.videoprotocol.VideoProtocol
        attribute), 150 attribute), 157
__module__(labgrid.driver.usbstoragedriver.Mode at- __module__(labgrid.pytestplugin.reporter.ColoredStepReporter
        tribute), 150 attribute), 158
__module__(labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver __module__(labgrid.pytestplugin.reporter.StepReporter
        attribute), 151 attribute), 158
__module__(labgrid.driver.usbstoragedriver.USBStorageDriver __module__(labgrid.remote.client.Error attribute),
        attribute), 151 158
__module__(labgrid.driver.usbtmcdriver.USBTMCMDriver __module__(labgrid.remote.client.LocalPort attribute),
        attribute), 152 159
__module__(labgrid.driver.usbvideodriver.USBVideoDriver __module__(labgrid.remote.client.RemotePort attribute),
        attribute), 152 159
__module__(labgrid.driver.xenadriver.XenaDriver at- __module__(labgrid.remote.client.ServerError attribute),
        attribute), 153
```

```

    tribute), 159
__module__(labgrid.remote.client.UserError attribute), 159
__module__(labgrid.remote.common.Place attribute), 161
__module__(labgrid.remote.common.Reservation attribute), 162
__module__(labgrid.remote.common.ReservationState attribute), 161
__module__(labgrid.remote.common.ResourceEntry attribute), 160
__module__(labgrid.remote.common.ResourceMatch attribute), 160
__module__(labgrid.remote.config.ResourceConfig attribute), 162
__module__(labgrid.remote.coordinator.Action attribute), 163
__module__(labgrid.remote.coordinator.ClientSession attribute), 163
__module__(labgrid.remote.coordinator.ExporterSession attribute), 163
__module__(labgrid.remote.coordinator.RemoteSession attribute), 163
__module__(labgrid.remote.coordinator.ResourceImport attribute), 164
__module__(labgrid.remote.exporter.BrokenResourceError attribute), 164
__module__(labgrid.remote.exporter.EthernetPortExport attribute), 169
__module__(labgrid.remote.exporter.ExporterError attribute), 164
__module__(labgrid.remote.exporter.GPIOGenericExport attribute), 169
__module__(labgrid.remote.exporter.HTTPVideoStreamExport attribute), 171
__module__(labgrid.remote.exporter.LXAIOBusNodeExport attribute), 171
__module__(labgrid.remote.exporter.NetworkServiceExport attribute), 170
__module__(labgrid.remote.exporter.ProviderGenericExport attribute), 169
__module__(labgrid.remote.exporter.ResourceExport attribute), 165
__module__(labgrid.remote.exporter.SerialPortExport attribute), 165
__module__(labgrid.remote.exporter.SiSPMPowerPortExport attribute), 167
__module__(labgrid.remote.exporter.USBAudioInputExport attribute), 167
__module__(labgrid.remote.exporter.USBDeditecRelaisExport attribute), 168
__module__(labgrid.remote.exporter.USBFlashableExport attribute), 168
__module__(labgrid.remote.exporter.USBGenericExport attribute), 165
__module__(labgrid.remote.exporter.USBHIDRelayExport attribute), 168
__module__(labgrid.remote.exporter.USBNetworkExport attribute), 165
__module__(labgrid.remote.exporter.USBPowerPortExport attribute), 167
__module__(labgrid.remote.exporter.USBSDMuxExport attribute), 166
__module__(labgrid.remote.exporter.USBSDWireExport attribute), 166
__module__(labgrid.remote.exporter.USBSigrokExport attribute), 166
__module__(labgrid.remote.scheduler.TagSet attribute), 171
__module__(labgrid.resource.base.EthernetPort attribute), 173
__module__(labgrid.resource.base.NetworkInterface attribute), 172
__module__(labgrid.resource.base.SerialPort attribute), 172
__module__(labgrid.resource.base.SysfsGPIO attribute), 173
__module__(labgrid.resource.common.ManagedResource attribute), 175
__module__(labgrid.resource.common.NetworkResource attribute), 174
__module__(labgrid.resource.common.Resource attribute), 174
__module__(labgrid.resource.common.ResourceManager attribute), 174
__module__(labgrid.resource.docker.DockerConstants attribute), 175
__module__(labgrid.resource.docker.DockerDaemon attribute), 176
__module__(labgrid.resource.docker.DockerManager attribute), 176
__module__(labgrid.resource.ethernetport.EthernetPortManager attribute), 178
__module__(labgrid.resource.ethernetport.SNMPEthernetPort attribute), 178
__module__(labgrid.resource.ethernetport.SNMPSwitch attribute), 177
__module__(labgrid.resource.flashrom.Flashrom attribute), 179
__module__(labgrid.resource.flashrom.NetworkFlashrom attribute), 179
__module__(labgrid.resource.httpvideostream.HTTPVideoStream attribute), 179
__module__(labgrid.resource.lxaiobus.LXAIOBusNode attribute), 180
__module__(labgrid.resource.lxaiobus.LXAIOBusNodeManager attribute), 179
__module__(labgrid.resource.lxaiobus.LXAIOBusPIO attribute), 179

```

attribute), 180
__module__(*labgrid.resource.modbus.ModbusTCPcoil* attribute), 181
__module__(*labgrid.resource.mqtt.MQTTManager* attribute), 181
__module__(*labgrid.resource.mqtt.MQTTResource* attribute), 181
__module__(*labgrid.resource.mqtt.TasmotaPowerPort* attribute), 181
__module__(*labgrid.resource.networkservice.NetworkService* attribute), 182
__module__(*labgrid.resource.onewirereport.OneWirePIO* attribute), 182
__module__(*labgrid.resource.power.NetworkPowerPort* attribute), 182
__module__(*labgrid.resource.power.PDUDaemonPort* attribute), 183
__module__(*labgrid.resource.provider.BaseProvider* attribute), 183
__module__(*labgrid.resource.provider.HTTPProvider* attribute), 184
__module__(*labgrid.resource.provider.NFSProvider* attribute), 183
__module__(*labgrid.resource.provider.TFTPProvider* attribute), 183
__module__(*labgrid.resource.pyvisa.PyVISADevice* attribute), 184
__module__(*labgrid.resource.remote.NetworkAlteraUSBBlaster* attribute), 186
__module__(*labgrid.resource.remote.NetworkAndroidFastboot* attribute), 185
__module__(*labgrid.resource.remote.NetworkDeditecRelais8* attribute), 190
__module__(*labgrid.resource.remote.NetworkHIDRelay* attribute), 190
__module__(*labgrid.resource.remote.NetworkIMXUSBLoader* attribute), 185
__module__(*labgrid.resource.remote.NetworkLXAIOBusNode* attribute), 191
__module__(*labgrid.resource.remote.NetworkLXAIOBusPIO* attribute), 191
__module__(*labgrid.resource.remote.NetworkLXAUSBMux* attribute), 191
__module__(*labgrid.resource.remote.NetworkMQTTResource* attribute), 192
__module__(*labgrid.resource.remote.NetworkMXSUSBLoader* attribute), 186
__module__(*labgrid.resource.remote.NetworkRKUSBLoader* attribute), 186
__module__(*labgrid.resource.remote.NetworkSiSPMPowerPort* attribute), 188
__module__(*labgrid.resource.remote.NetworkSigrokUSBDevice* attribute), 187
__module__(*labgrid.resource.remote.NetworkSigrokUSBSerialDevice* attribute), 187
__module__(*labgrid.resource.remote.NetworkSysfsGPIO* attribute), 190
__module__(*labgrid.resource.remote.NetworkUSBAudioInput* attribute), 189
__module__(*labgrid.resource.remote.NetworkUSBDebugger* attribute), 189
__module__(*labgrid.resource.remote.NetworkUSBFlashableDevice* attribute), 191
__module__(*labgrid.resource.remote.NetworkUSBMassStorage* attribute), 187
__module__(*labgrid.resource.remote.NetworkUSBPowerPort* attribute), 188
__module__(*labgrid.resource.remote.NetworkUSBSDMuxDevice* attribute), 187
__module__(*labgrid.resource.remote.NetworkUSBSDWireDevice* attribute), 188
__module__(*labgrid.resource.remote.NetworkUSBTMC* attribute), 189
__module__(*labgrid.resource.remote.NetworkUSBVideo* attribute), 189
__module__(*labgrid.resource.remote.RemoteBaseProvider* attribute), 192
__module__(*labgrid.resource.remote.RemoteHTTPProvider* attribute), 193
__module__(*labgrid.resource.remote.RemoteNFSProvider* attribute), 192
__module__(*labgrid.resource.remote.RemoteNetworkInterface* attribute), 192
__module__(*labgrid.resource.remote.RemotePlace* attribute), 185
__module__(*labgrid.resource.remote.RemotePlaceManager* attribute), 184
__module__(*labgrid.resource.remote.RemoteTFTPProvider* attribute), 192
__module__(*labgrid.resource.remote.RemoteUSBResource* attribute), 185
__module__(*labgrid.resource.serialport.NetworkSerialPort* attribute), 193
__module__(*labgrid.resource.serialport.RawSerialPort* attribute), 193
__module__(*labgrid.resource.sigrok.SigrokDevice* attribute), 194
__module__(*labgrid.resource.suggest.Suggester* attribute), 194
__module__(*labgrid.resource.udev.AlteraUSBBlaster* attribute), 197
__module__(*labgrid.resource.udev.AndroidFastboot* attribute), 197
__module__(*labgrid.resource.udev.DeditecRelais8* attribute), 201
__module__(*labgrid.resource.udev.HIDRelay* attribute), 201
__module__(*labgrid.resource.udev.IMXUSBLoader* attribute), 201

attribute), 196
`__module__ (labgrid.resource.udev.LXAUSBMux attribute)`, 201
`__module__ (labgrid.resource.udev.MXSUSBLoader attribute)`, 196
`__module__ (labgrid.resource.udev.RKUSBLoader attribute)`, 196
`__module__ (labgrid.resource.udev.SiSPMPowerPort attribute)`, 199
`__module__ (labgrid.resource.udev.SigrokUSBDevice attribute)`, 198
`__module__ (labgrid.resource.udev.SigrokUSBSerialDevice attribute)`, 198
`__module__ (labgrid.resource.udev.USBAudioInput attribute)`, 200
`__module__ (labgrid.resource.udev.USBDebugger attribute)`, 202
`__module__ (labgrid.resource.udev.USBFashableDevice attribute)`, 201
`__module__ (labgrid.resource.udev.USBMassStorage attribute)`, 196
`__module__ (labgrid.resource.udev.USBNetworkInterface attribute)`, 197
`__module__ (labgrid.resource.udev.USBPowerPort attribute)`, 199
`__module__ (labgrid.resource.udev.USBRResource attribute)`, 195
`__module__ (labgrid.resource.udev.USBSDMuxDevice attribute)`, 199
`__module__ (labgrid.resource.udev.USBSDWireDevice attribute)`, 198
`__module__ (labgrid.resource.udev.USBSerialPort attribute)`, 195
`__module__ (labgrid.resource.udev.USBTMC attribute)`, 200
`__module__ (labgrid.resource.udev.USBVideo attribute)`, 200
`__module__ (labgrid.resource.udev.UdevManager attribute)`, 194
`__module__ (labgrid.resource.xenamanager.XenaManager attribute)`, 202
`__module__ (labgrid.resource.ykushpowerport.YKUSHPowerPort attribute)`, 202
`__module__ (labgrid.step.Step attribute)`, 227
`__module__ (labgrid.step.StepEvent attribute)`, 227
`__module__ (labgrid.step.Steps attribute)`, 226
`__module__ (labgrid.stepreporter.StepReporter attribute)`, 227
`__module__ (labgrid.strategy.bareboxstrategy.BareboxStrategy attribute)`, 203
`__module__ (labgrid.strategy.bareboxstrategy.Status attribute)`, 203
`__module__ (labgrid.strategy.common.Strategy attribute)`, 204
`__module__ (labgrid.strategy.common.StrategyError attribute)`, 203
`__module__ (labgrid.strategy.dockerstrategy.DockerStrategy attribute)`, 204
`__module__ (labgrid.strategy.dockerstrategy.Status attribute)`, 204
`__module__ (labgrid.strategy.graphstrategy.GraphStrategy attribute)`, 205
`__module__ (labgrid.strategy.graphstrategy.GraphStrategyError attribute)`, 205
`__module__ (labgrid.strategy.graphstrategy.GraphStrategyRuntimeError attribute)`, 205
`__module__ (labgrid.strategy.graphstrategy.InvalidGraphStrategyError attribute)`, 205
`__module__ (labgrid.strategy.shellstrategy.ShellStrategy attribute)`, 206
`__module__ (labgrid.strategy.shellstrategy.Status attribute)`, 206
`__module__ (labgrid.strategy.ubootstrategy.Status attribute)`, 206
`__module__ (labgrid.strategy.ubootstrategy.UBootStrategy attribute)`, 207
`__module__ (labgrid.target.Target attribute)`, 229
`__module__ (labgrid.util.agent.Agent attribute)`, 209
`__module__ (labgrid.util.agents.network_interface.BackgroundLoop attribute)`, 208
`__module__ (labgrid.util.agents.network_interface.Future attribute)`, 207
`__module__ (labgrid.util.agents.network_interface.NMDev attribute)`, 208
`__module__ (labgrid.util.agents.sysfsgpio.GpioDigitalOutput attribute)`, 209
`__module__ (labgrid.util.agentwrapper.AgentError attribute)`, 210
`__module__ (labgrid.util.agentwrapper.AgentException attribute)`, 210
`__module__ (labgrid.util.agentwrapper.AgentWrapper attribute)`, 211
`__module__ (labgrid.util.agentwrapper.MethodProxy attribute)`, 210
`__module__ (labgrid.util.agentwrapper.ModuleProxy attribute)`, 210
`__module__ (labgrid.util.exceptions.NoValidDriverError attribute)`, 211
`__module__ (labgrid.util.expect.PtxExpect attribute)`, 212
`__module__ (labgrid.util.helper.ProcessWrapper attribute)`, 213
`__module__ (labgrid.util.managedfile.ManagedFile attribute)`, 214
`__module__ (labgrid.util.managedfile.ManagedFileError attribute)`, 213
`__module__ (labgrid.util.qmp.QMPError attribute)`, 215

```
__module__(labgrid.util.qmp.QMPMonitor attribute),  
    215  
__module__(labgrid.util.ssh.ForwardError attribute),  
    217  
__module__(labgrid.util.ssh.SSHConnection attribute),  
    217  
__module__(labgrid.util.timeout.Timeout attribute),  
    218  
__module__(labgrid.util.yaml.Dumper attribute), 218  
__module__(labgrid.util.yaml.Loader attribute), 218  
__ne__(labgrid.remote.common.ResourceMatch  
      method), 160  
__ne__(labgrid.remote.exporter.EthernetPortExport  
      method), 169  
__ne__(labgrid.remote.exporter.HTTPVideoStreamExport  
      method), 171  
__ne__(labgrid.remote.exporter.NetworkServiceExport  
      method), 170  
__ne__(labgrid.resource.base.EthernetPort  
      method), 173  
__ne__(labgrid.resource.ethernetport.EthernetPortManager  
      method), 178  
__ne__(labgrid.resource.ethernetport.SNMPEthernetPort  
      method), 178  
__ne__(labgrid.resource.ethernetport.SNMPSwitch  
      method), 177  
__ne__(labgrid.util.helper.ProcessWrapper  
      method), 213  
__ne__(labgrid.util.managedfile.ManagedFile  
      method), 214  
__ne__(labgrid.util.ssh.ForwardError method), 217  
__ne__(labgrid.util.ssh.SSHConnection method),  
    217  
__repr__(labgrid.binding.BindingError method),  
    219  
__repr__(labgrid.binding.BindingMixin method),  
    220  
__repr__(labgrid.binding.BindingMixin.NamedBinding  
      method), 220  
__repr__(labgrid.binding.StateError method), 219  
__repr__(labgrid.config.Config method), 223  
__repr__(labgrid.driver.bareboxdriver.BareboxDriver  
      method), 115  
__repr__(labgrid.driver.common.Driver method),  
    116  
__repr__(labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver  
      method), 118  
__repr__(labgrid.driver.dockerdriver.DockerDriver  
      method), 119  
__repr__(labgrid.driver.exception.CleanUpError  
      method), 119  
__repr__(labgrid.driver.exception.ExecutionError  
      method), 119  
__repr__(labgrid.driver.externalconsoledriver.ExternalConsoleDriver  
      method), 120  
__repr__(labgrid.driver.fake.FakeCommandDriver  
      method), 121  
__repr__(labgrid.driver.fake.FakeConsoleDriver  
      method), 120  
__repr__(labgrid.driver.fake.FakeFileTransferDriver  
      method), 121  
__repr__(labgrid.driver.fake.FakePowerDriver  
      method), 121  
__repr__(labgrid.driver.fastbootdriver.AndroidFastbootDriver  
      method), 122  
__repr__(labgrid.driver.filédigitaloutput.FileDigitalOutputDriver  
      method), 123  
__repr__(labgrid.driver.flashromdriver.FlashromDriver  
      method), 123  
__repr__(labgrid.driver.flashscriptdriver.FlashScriptDriver  
      method), 124  
__repr__(labgrid.driver.gpiodriver.GpioDigitalOutputDriver  
      method), 124  
__repr__(labgrid.driver.httpvideodriver.HTTPVideoDriver  
      method), 125  
__repr__(labgrid.driver.lxaiobusdriver.LXAIOBusPIODriver  
      method), 125  
__repr__(labgrid.driver.lxausbmuxdriver.LXAUSBMuxDriver  
      method), 125  
__repr__(labgrid.driver.manualswitchdriver.ManualSwitchDriver  
      method), 126  
__repr__(labgrid.driver.modbusdriver.ModbusCoilDriver  
      method), 126  
__repr__(labgrid.driver.mqtt.TasmotaPowerDriver  
      method), 127  
__repr__(labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver  
      method), 128  
__repr__(labgrid.driver.onewiredriver.OneWirePIODriver  
      method), 129  
__repr__(labgrid.driver.openocddriver.OpenOCDDriver  
      method), 129  
__repr__(labgrid.driver.powerdriver.DigitalOutputPowerDriver  
      method), 132  
__repr__(labgrid.driver.powerdriver.ExternalPowerDriver  
      method), 131  
__repr__(labgrid.driver.powerdriver.ManualPowerDriver  
      method), 130  
__repr__(labgrid.driver.powerdriver.NetworkPowerDriver  
      method), 131  
__repr__(labgrid.driver.powerdriver.PDUDaemonDriver  
      method), 133  
__repr__(labgrid.driver.powerdriver.PowerResetMixin  
      method), 130  
__repr__(labgrid.driver.powerdriver.SiSPMPowerDriver  
      method), 130  
__repr__(labgrid.driver.powerdriver.USBPowerDriver  
      method), 133  
__repr__(labgrid.driver.powerdriver.YKUSHPowerDriver  
      method), 134
```

`method), 132`
`__repr__() (labgrid.driver.provider.BaseProviderDriver __repr__ () (labgrid.driver.usbstoragedriver.USBStorageDriver method), 133`
`__repr__() (labgrid.driver.provider.HTTPProviderDriver __repr__ () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 134`
`__repr__() (labgrid.driver.provider.NFSPPProviderDriver __repr__ () (labgrid.driver.usbvideodriver.USBVideoDriver method), 134`
`__repr__() (labgrid.driver.provider.TFTPPProviderDriver __repr__ () (labgrid.driver.xenadriver.XenaDriver method), 134`
`__repr__() (labgrid.driver.pyvisadriver.PyVISADriver __repr__ () (labgrid.environment.Environment method), 135`
`__repr__() (labgrid.driver.qemudriver.QEMUDriver __repr__ () (labgrid.exceptions.InvalidConfigError method), 136`
`__repr__() (labgrid.driver.quartushpsdriver.QuartusHPSDriver __repr__ () (labgrid.exceptions.NoConfigFoundError method), 136`
`__repr__() (labgrid.driver.resetdriver.DigitalOutputResetDriver __repr__ () (labgrid.exceptions.NoDriverNotFoundError method), 136`
`__repr__() (labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver __repr__ () (labgrid.exceptions.NoResourceNotFoundError method), 137`
`__repr__() (labgrid.driver.serialdriver.SerialDriver __repr__ () (labgrid.exceptions.NoSupplierNotFoundError method), 138`
`__repr__() (labgrid.driver.shelldriver.ShellDriver __repr__ () (labgrid.exceptions.RegistrationError method), 140`
`__repr__() (labgrid.driver.sigrokdriver.SigrokCommon __repr__ () (labgrid.remote.common.Place method), 141`
`__repr__() (labgrid.driver.sigrokdriver.SigrokDriver __repr__ () (labgrid.remote.common.Reservation method), 141`
`__repr__() (labgrid.driver.sigrokdriver.SigrokPowerDriver __repr__ () (labgrid.remote.common.ResourceEntry method), 142`
`__repr__() (labgrid.driver.smallubootdriver.SmallUBootDriver __repr__ () (labgrid.remote.common.ResourceMatch method), 143`
`__repr__() (labgrid.driver.sshdriver.SSHDriver __repr__ () (labgrid.remote.config.ResourceConfig method), 144`
`__repr__() (labgrid.driver.ubootdriver.UBootDriver __repr__ () (labgrid.remote.coordinator.ClientSession method), 146`
`__repr__() (labgrid.driver.usbaudioplayer.USBAudioInputDriver __repr__ () (labgrid.remote.coordinator.ExporterSession method), 146`
`__repr__() (labgrid.driver.usbhidrelay.HIDRelayDriver __repr__ () (labgrid.remote.coordinator.RemoteSession method), 147`
`__repr__() (labgrid.driver.usbloader.BDIMXUSBDriver __repr__ () (labgrid.remote.coordinator.ResourceImport method), 149`
`__repr__() (labgrid.driver.usbloader.IMGUSBDriver __repr__ () (labgrid.remote.exporter.EthernetPortExport method), 148`
`__repr__() (labgrid.driver.usbloader.MXSUSBDriver __repr__ () (labgrid.remote.exporter.GPIOGenericExport method), 147`
`__repr__() (labgrid.driver.usbloader.RKUSBDriver __repr__ () (labgrid.remote.exporter.HTTPVideoStreamExport method), 148`
`__repr__() (labgrid.driver.usbloader.UUUDriver __repr__ () (labgrid.remote.exporter.LXAIOBusNodeExport method), 148`
`__repr__() (labgrid.driver.usbsdmuxdriver.USBSDMuxDriver __repr__ () (labgrid.remote.exporter.NetworkServiceExport method), 149`
`__repr__() (labgrid.driver.usbsdwiredriver.USBSDWireDriver __repr__ () (labgrid.remote.exporter.ProviderGenericExport method), 150`
`__repr__() (labgrid.driver.usbstoragedriver.NetworkUSBStorageDriver (labgrid.remote.exporter.ResourceExport`

```
        method), 165
__repr__(labgrid.remote.exporter.SerialPortExport __repr__(labgrid.resource.flashrom.NetworkFlashrom
        method), 165
method), 179
__repr__(labgrid.remote.exporter.SiSPMPowerPortExport __repr__(labgrid.resource.httpvideostream.HTTPVideoStream
        method), 167
method), 179
__repr__(labgrid.remote.exporter.USBAudioInputExport __repr__(labgrid.resource.lxaiobus.LXAIOBusNode
        method), 167
method), 180
__repr__(labgrid.remote.exporter.USBDeditecRelaisExport __repr__(labgrid.resource.lxaiobus.LXAIOBusNodeManager
        method), 168
method), 179
__repr__(labgrid.remote.exporter.USBFashableExport __repr__(labgrid.resource.lxaiobus.LXAIOBusPIO
        method), 168
method), 180
__repr__(labgrid.remote.exporter.USBGenericExport __repr__(labgrid.resource.modbus.ModbusTCPcoil
        method), 165
method), 181
__repr__(labgrid.remote.exporter.USBHIDRelayExport __repr__(labgrid.resource.mqtt.MQTTManager
        method), 168
method), 181
__repr__(labgrid.remote.exporter.USBNetworkExport __repr__(labgrid.resource.mqtt.MQTTResource
        method), 165
method), 181
__repr__(labgrid.remote.exporter.USBPowerPortExport __repr__(labgrid.resource.mqtt.TasmotaPowerPort
        method), 167
method), 181
__repr__(labgrid.remote.exporter.USBSDMuxExport __repr__(labgrid.resource.networkservice.NetworkService
        method), 166
method), 182
__repr__(labgrid.remote.exporter.USBSDWireExport __repr__(labgrid.resource.onewirereport.OneWirePIO
        method), 166
method), 182
__repr__(labgrid.remote.exporter.USBSigrokExport __repr__(labgrid.resource.power.NetworkPowerPort
        method), 166
method), 182
__repr__(labgrid.remote.scheduler.TagSet __repr__(labgrid.resource.power.PDUDaemonPort
        method), 171
method), 183
__repr__(labgrid.resource.base.EthernetPort __repr__(labgrid.resource.provider.BaseProvider
        method), 173
method), 183
__repr__(labgrid.resource.base.NetworkInterface __repr__(labgrid.resource.provider.HTTPProvider
        method), 172
method), 184
__repr__(labgrid.resource.base.SerialPort __repr__(labgrid.resource.provider.NFSProvider
        method), 172
method), 183
__repr__(labgrid.resource.base.SysfsGPIO __repr__(labgrid.resource.provider.TFTPProvider
        method), 173
method), 183
__repr__(labgrid.resource.common.ManagedResource __repr__(labgrid.resource.pyvisa.PyVISAdevice
        method), 175
method), 184
__repr__(labgrid.resource.common.NetworkResource __repr__(labgrid.resource.remote.NetworkAlteraUSBBlaster
        method), 174
method), 186
__repr__(labgrid.resource.common.Resource __repr__(labgrid.resource.remote.NetworkAndroidFastboot
        method), 174
method), 185
__repr__(labgrid.resource.common.ResourceManager __repr__(labgrid.resource.remote.NetworkDeditecRelais8
        method), 174
method), 190
__repr__(labgrid.resource.docker.DockerDaemon __repr__(labgrid.resource.remote.NetworkHIDRelay
        method), 176
method), 190
__repr__(labgrid.resource.docker.DockerManager __repr__(labgrid.resource.remote.NetworkIMXUSBLoader
        method), 176
method), 185
__repr__(labgrid.resource.ethernetport.EthernetPortManager __repr__(labgrid.resource.remote.NetworkLXAIOBusNode
        method), 178
method), 191
__repr__(labgrid.resource.ethernetport.SNMPEthernetPort __repr__(labgrid.resource.remote.NetworkLXAIOBusPIO
        method), 178
method), 191
__repr__(labgrid.resource.ethernetport.SNMPSwitch __repr__(labgrid.resource.remote.NetworkLXAUSBMux
        method), 177
method), 191
__repr__(labgrid.resource.flashrom.Flashrom __repr__(labgrid.resource.remote.NetworkMQTTResource
```

```

        method), 192
__repr__() (labgrid.resource.remote.NetworkMXSUSBLoader __repr__() (labgrid.resource.udb.AndroidFastboot
method), 186                                     method), 197
__repr__() (labgrid.resource.remote.NetworkRKUSBLoader __repr__() (labgrid.resource.udb.DeditecRelais8
method), 186                                     method), 201
__repr__() (labgrid.resource.remote.NetworkSiSPMPowerPort __repr__() (labgrid.resource.udb.HIDRelay
method), 188                                     method), 201
__repr__() (labgrid.resource.remote.NetworkSigrokUSBDevice __repr__() (labgrid.resource.udb.IMXUSBLoader
method), 187                                     method), 196
__repr__() (labgrid.resource.remote.NetworkSigrokUSBSerialDevice __repr__() (labgrid.resource.udb.LXAUSBMux
method), 187                                     method), 201
__repr__() (labgrid.resource.remote.NetworkSysfsGPIO __repr__() (labgrid.resource.udb.MXSUSBLoader
method), 190                                     method), 196
__repr__() (labgrid.resource.remote.NetworkUSBAudioInput __repr__() (labgrid.resource.udb.RKUSBLoader
method), 189                                     method), 196
__repr__() (labgrid.resource.remote.NetworkUSBDebugger __repr__() (labgrid.resource.udb.SiSPMPowerPort
method), 189                                     method), 199
__repr__() (labgrid.resource.remote.NetworkUSBFlashableDevice __repr__() (labgrid.resource.udb.SigrokUSBDevice
method), 191                                     method), 198
__repr__() (labgrid.resource.remote.NetworkUSBMassStorage __repr__() (labgrid.resource.udb.SigrokUSBSerialDevice
method), 187                                     method), 198
__repr__() (labgrid.resource.remote.NetworkUSBPowerPort __repr__() (labgrid.resource.udb.USBAudioInput
method), 188                                     method), 200
__repr__() (labgrid.resource.remote.NetworkUSBSDMuxDevice __repr__() (labgrid.resource.udb.USBDebugger
method), 187                                     method), 202
__repr__() (labgrid.resource.remote.NetworkUSBSDWireDevice __repr__() (labgrid.resource.udb.USBFlashableDevice
method), 188                                     method), 201
__repr__() (labgrid.resource.remote.NetworkUSBTMC __repr__() (labgrid.resource.udb.USBMassStorage
method), 189                                     method), 196
__repr__() (labgrid.resource.remote.NetworkUSBVideo __repr__() (labgrid.resource.udb.USBNetworkInterface
method), 189                                     method), 197
__repr__() (labgrid.resource.remote.RemoteBaseProvider __repr__() (labgrid.resource.udb.USBPowerPort
method), 192                                     method), 199
__repr__() (labgrid.resource.remote.RemoteHTTPProvider __repr__() (labgrid.resource.udb.USBResource
method), 193                                     method), 195
__repr__() (labgrid.resource.remote.RemoteNFSProvider __repr__() (labgrid.resource.udb.USBSDMuxDevice
method), 192                                     method), 199
__repr__() (labgrid.resource.remote.RemoteNetworkInterface __repr__() (labgrid.resource.udb.USBSDWireDevice
method), 192                                     method), 198
__repr__() (labgrid.resource.remote.RemotePlace __repr__() (labgrid.resource.udb.USBSerialPort
method), 185                                     method), 195
__repr__() (labgrid.resource.remote.RemotePlaceManager __repr__() (labgrid.resource.udb.USBTMC
method), 184                                     method), 200
__repr__() (labgrid.resource.remote.RemoteTFTPPProvider __repr__() (labgrid.resource.udb.USBVideo
method), 192                                     method), 200
__repr__() (labgrid.resource.remote.RemoteUSBResource __repr__() (labgrid.resource.udb.UdevManager
method), 185                                     method), 194
__repr__() (labgrid.resource.serialport.NetworkSerialPort __repr__() (labgrid.resource.xenamanager.XenaManager
method), 193                                     method), 202
__repr__() (labgrid.resource.serialport.RawSerialPort __repr__() (labgrid.resource.ykushpowerport.YKUSHPowerPort
method), 193                                     method), 202
__repr__() (labgrid.resource.sigrok.SigrokDevice __repr__() (labgrid.step.Step method), 227
method), 194                                     __repr__() (labgrid.strategy.bareboxstrategy.BareboxStrategy
method), 203
__repr__() (labgrid.resource.udb.AlteraUSBBlaster

```

```
__repr__() (labgrid.strategy.common.Strategy
            method), 204
__repr__() (labgrid.strategy.common.StrategyError
            method), 203
__repr__() (labgrid.strategy.dockerstrategy.DockerStrategy
            method), 204
__repr__() (labgrid.strategy.shellstrategy.ShellStrategy
            method), 206
__repr__() (labgrid.strategy.ubootstrategy.UBootStrategy
            method), 207
__repr__() (labgrid.target.Target method), 229
__repr__() (labgrid.util.exceptions.NoValidDriverError
            method), 211
__repr__() (labgrid.util.helper.ProcessWrapper
            method), 213
__repr__() (labgrid.util.managedfile.ManagedFile
            method), 214
__repr__() (labgrid.util.qmp.QMPError method),
            215
__repr__() (labgrid.util.qmp.QMPMonitor method),
            215
__repr__() (labgrid.util.ssh.ForwardError method),
            217
__repr__() (labgrid.util.ssh.SSHConnection method),
            217
__repr__() (labgrid.util.timeout.Timeout method),
            218
__setitem__() (labgrid.step.StepEvent method), 226
__str__() (labgrid.remote.common.ResourceMatch
            method), 160
__str__() (labgrid.step.Step method), 227
__str__() (labgrid.step.StepEvent method), 226
__weakref__ (labgrid.autoinstall.main.Manager
            attribute), 111
__weakref__ (labgrid.binding.BindingError
            attribute), 219
__weakref__ (labgrid.binding.BindingMixin
            attribute), 220
__weakref__ (labgrid.binding.BindingMixin.NamedBinding
            attribute), 220
__weakref__ (labgrid.binding.StateError attribute),
            219
__weakref__ (labgrid.config.Config attribute), 223
__weakref__ (labgrid.consoleloggingreporter.ConsoleLoggingReporter
            attribute), 223
__weakref__ (labgrid.driver.commandmixin.CommandMixin
            attribute), 116
__weakref__ (labgrid.driver.consoleexpectmixin.ConsoleExpectMixin
            attribute), 117
__weakref__ (labgrid.driver.exception.CleanUpError
            attribute), 119
__weakref__ (labgrid.driver.exception.ExecutionError
            attribute), 119
__weakref__ (labgrid.driver.mqtt.MQTTError at-
            tribute), 127
__weakref__ (labgrid.environment.Environment at-
            tribute), 224
__weakref__ (labgrid.exceptions.InvalidConfigError
            attribute), 225
__weakref__ (labgrid.exceptions.NoConfigNotFoundError
            attribute), 224
__weakref__ (labgrid.exceptions.NoSupplierNotFoundError
            attribute), 224
__weakref__ (labgrid.exceptions.RegistrationError
            attribute), 225
__weakref__ (labgrid.factory.TargetFactory
            attribute), 226
__weakref__ (labgrid.protocol.bootstrapprotocol.BootstrapProtocol
            attribute), 153
__weakref__ (labgrid.protocol.commandprotocol.CommandProtocol
            attribute), 153
__weakref__ (labgrid.protocol.consoleprotocol.ConsoleProtocol
            attribute), 154
__weakref__ (labgrid.protocol.consoleprotocol.ConsoleProtocol.Client
            attribute), 154
__weakref__ (labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
            attribute), 154
__weakref__ (labgrid.protocol.filesystemprotocol.FileSystemProtocol
            attribute), 155
__weakref__ (labgrid.protocol.filetransferprotocol.FileTransferProtocol
            attribute), 155
__weakref__ (labgrid.protocol.infoprotocol.InfoProtocol
            attribute), 155
__weakref__ (labgrid.protocol.linuxbootprotocol.LinuxBootProtocol
            attribute), 156
__weakref__ (labgrid.protocol.mmioprotocol.MMIOProtocol
            attribute), 156
__weakref__ (labgrid.protocol.powerprotocol.PowerProtocol
            attribute), 156
__weakref__ (labgrid.protocol.resetprotocol.ResetProtocol
            attribute), 157
__weakref__ (labgrid.protocol.videoprotocol.VideoProtocol
            attribute), 157
__weakref__ (labgrid.pytestplugin.reporter.StepReporter
            attribute), 158
__weakref__ (labgrid.remote.client.Error attribute),
            159
__weakref__ (labgrid.remote.common.Place attribute),
            161
__weakref__ (labgrid.remote.common.Reservation
            attribute), 162
__weakref__ (labgrid.remote.common.ResourceEntry
            attribute), 160
__weakref__ (labgrid.remote.common.ResourceMatch
            attribute), 161
__weakref__ (labgrid.remote.config.ResourceConfig
            attribute), 162
__weakref__ (labgrid.remote.coordinator.RemoteSession
```

`attribute), 163`
`__weakref__ (labgrid.remote.exporter.ExporterError attribute), 164`
`__weakref__ (labgrid.remote.scheduler.TagSet attribute), 171`
`__weakref__ (labgrid.resource.common.ResourceManager attribute), 174`
`__weakref__ (labgrid.resource.docker.DockerConstants attribute), 175`
`__weakref__ (labgrid.resource.ethernetport.SNMPSwitch attribute), 177`
`__weakref__ (labgrid.resource.suggest.Suggester attribute), 194`
`__weakref__ (labgrid.step.Step attribute), 227`
`__weakref__ (labgrid.step.StepEvent attribute), 227`
`__weakref__ (labgrid.step.Steps attribute), 226`
`__weakref__ (labgrid.stepreporter.StepReporter attribute), 228`
`__weakref__ (labgrid.strategy.common.StrategyError attribute), 203`
`__weakref__ (labgrid.target.Target attribute), 229`
`__weakref__ (labgrid.util.agent.Agent attribute), 209`
`__weakref__ (labgrid.util.agents.network_interface.Future attribute), 207`
`__weakref__ (labgrid.util.agents.network_interface.NMDevice attribute), 208`
`__weakref__ (labgrid.util.agents.sysfsgpio.GpioDigitalOutput attribute), 209`
`__weakref__ (labgrid.util.agentwrapper.AgentError attribute), 210`
`__weakref__ (labgrid.util.agentwrapper.AgentExceptionalsa_name attribute), 210`
`__weakref__ (labgrid.util.agentwrapper.AgentWrapper attribute), 211`
`__weakref__ (labgrid.util.agentwrapper.MethodProxy attribute), 210`
`__weakref__ (labgrid.util.agentwrapper.ModuleProxy attribute), 210`
`__weakref__ (labgrid.util.exceptions.NoValidDriverError attribute), 212`
`__weakref__ (labgrid.util.helper.ProcessWrapper attribute), 213`
`__weakref__ (labgrid.util.managedfile.ManagedFile attribute), 214`
`__weakref__ (labgrid.util.managedfile.ManagedFileError attribute), 213`
`__weakref__ (labgrid.util.qmp.QMPError attribute), 215`
`__weakref__ (labgrid.util.qmp.QMPMonitor attribute), 215`
`__weakref__ (labgrid.util.ssh.ForwardError attribute), 218`
`__weakref__ (labgrid.util.ssh.SSHConnection attribute), 217`
`__weakref__ (labgrid.util.timeout.Timeout attribute), 218`

A

`accessible (labgrid.strategy.dockerstrategy.Status attribute), 204`
`acquire() (labgrid.remote.common.ResourceEntry method), 160`
`acquire() (labgrid.remote.exporter.ResourceExport method), 164`
`acquired (labgrid.remote.common.ReservationState attribute), 161`
`acquired() (labgrid.remote.common.ResourceEntry property), 159`
`Action (class in labgrid.remote.coordinator), 162`
`activate() (labgrid.target.Target method), 229`
`active (labgrid.binding.BindingState attribute), 219`
`ADD (labgrid.remote.coordinator.Action attribute), 162`
`add_port_forward() (labgrid.util.ssh.SSHConnection method), 216`
`address_from_str() (in module labgrid.util.agents.network_interface), 208`
`age () (labgrid.step.StepEvent property), 226`
`Agent (class in labgrid.util.agent), 209`
`AgentError, 210`
`AgentException, 210`
`AgentWrapper (class in labgrid.util.agentwrapper), 210`
`allocated (labgrid.remote.common.ReservationState attribute), 161`
`analyze() (labgrid.driver.sigrokdriver.SigrokDriver method), 141`
`AndroidFastboot (class in labgrid.resource.udrv), 196`
`AndroidFastbootDriver (class in labgrid.driver.fastbootdriver), 121`
`args() (labgrid.remote.common.ResourceEntry property), 159`
`asdict() (labgrid.remote.common.Place method), 161`
`asdict() (labgrid.remote.common.Reservation method), 162`
`asdict() (labgrid.remote.common.ResourceEntry method), 159`
`atomic_replace() (in module labgrid.util.atomic), 211`
`avail() (labgrid.remote.common.ResourceEntry property), 159`
`avail() (labgrid.resource.udrv.USBMassStorage property), 195`

avail() (*labgrid.resource.udev.USBSDMuxDevice property*), 199
avail() (*labgrid.resource.udev.USBSDWireDevice property*), 198
await_boot() (*labgrid.driver.bareboxdriver.BareboxDriver method*), 115
await_boot() (*labgrid.driver.ubootdriver.UBootDriver method*), 145
await_boot() (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol method*), 156
await_resources() (*labgrid.target.Target method*), 228

B

b2s() (*in module labgrid.util.agent*), 209
b2s() (*in module labgrid.util.agentwrapper*), 210
BackgroundLoop (*class in labgrid.util.agents.network_interface*), 207
barebox (*labgrid.strategy.bareboxstrategy.Status attribute*), 203
BareboxDriver (*class in labgrid.driver.bareboxdriver*), 114
BareboxStrategy (*class in labgrid.strategy.bareboxstrategy*), 203
BaseProvider (*class in labgrid.resource.provider*), 183
BaseProviderDriver (*class in labgrid.driver.provider*), 133
BDIMXUSBDriver (*class in labgrid.driver.usbloader*), 148
bind() (*labgrid.target.Target method*), 229
bind_driver() (*labgrid.target.Target method*), 228
bind_resource() (*labgrid.target.Target method*), 228
BindingError, 219
BindingMixin (*class in labgrid.binding*), 219
BindingMixin.NamedBinding (*class in labgrid.binding*), 220
bindings (*labgrid.binding.BindingMixin attribute*), 219
bindings (*labgrid.driver.bareboxdriver.BareboxDriver attribute*), 114
bindings (*labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver attribute*), 117
bindings (*labgrid.driver.dockerdriver.DockerDriver attribute*), 118
bindings (*labgrid.driver.fastbootdriver.AndroidFastbootDriver attribute*), 121
bindings (*labgrid.driver.flashromdriver.FlashromDriver attribute*), 123
bindings (*labgrid.driver.flashscriptdriver.FlashScriptDriver attribute*), 123
bindings (*labgrid.driver.gpiodriver.GpioDigitalOutputDriver attribute*), 124
bindings (*labgrid.driver.httpvideodriver.HTTPVideoDriver attribute*), 124
bindings (*labgrid.driver.lxaiobusdriver.LXAIOBusPIODriver attribute*), 125
bindings (*labgrid.driver.lxausbmuxdriver.LXAUSBMuxDriver attribute*), 125
bindings (*labgrid.driver.modbusdriver.ModbusCoilDriver attribute*), 126
bindings (*labgrid.driver.mqtt.TasmotaPowerDriver attribute*), 127
bindings (*labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver attribute*), 127
bindings (*labgrid.driver.onewiredriver.OneWirePIODriver attribute*), 128
bindings (*labgrid.driver.openocddriver.OpenOCDDriver attribute*), 129
bindings (*labgrid.driver.powerdriver.DigitalOutputPowerDriver attribute*), 131
bindings (*labgrid.driver.powerdriver.NetworkPowerDriver attribute*), 131
bindings (*labgrid.driver.powerdriver.PDUDaemonDriver attribute*), 133
bindings (*labgrid.driver.powerdriver.SiSPMPowerDriver attribute*), 130
bindings (*labgrid.driver.powerdriver.USBPowerDriver attribute*), 132
bindings (*labgrid.driver.powerdriver.YKUSHPowerDriver attribute*), 132
bindings (*labgrid.driver.provider.HTTPProviderDriver attribute*), 134
bindings (*labgrid.driver.provider.NFSPProviderDriver attribute*), 134
bindings (*labgrid.driver.provider.TFTPPProviderDriver attribute*), 133
bindings (*labgrid.driver.pyvisadriver.PyVISADriver attribute*), 134
bindings (*labgrid.driver.quartushpsdriver.QuartusHPSDriver attribute*), 136
bindings (*labgrid.driver.resetdriver.DigitalOutputResetDriver attribute*), 136
bindings (*labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver attribute*), 137
bindings (*labgrid.driver.serialdriver.SerialDriver attribute*), 137
bindings (*labgrid.driver.shelldriver.ShellDriver attribute*), 139
bindings (*labgrid.driver.sigrokdriver.SigrokDriver attribute*), 141
bindings (*labgrid.driver.sigrokdriver.SigrokPowerDriver attribute*), 141

bindings (*labgrid.driver.sshdriver.SSHDriver attribute*), 143
 bindings (*labgrid.driver.ubootdriver.UBootDriver attribute*), 145
 bindings (*labgrid.driver.usbaudioplayer.USBAudioInputPlayer attribute*), 146
 bindings (*labgrid.driver.usbhidrelay.HIDRelayDriver attribute*), 146
 bindings (*labgrid.driver.usbloader.BDIMXUSBDriver attribute*), 149
 bindings (*labgrid.driver.usbloader.IMXUSBDriver attribute*), 147
 bindings (*labgrid.driver.usbloader.MXSUSBDriver attribute*), 147
 bindings (*labgrid.driver.usbloader.RKUSBDriver attribute*), 148
 bindings (*labgrid.driver.usbloader.UUUDriver attribute*), 148
 bindings (*labgrid.driver.usbsdmuxdriver.USBSDMuxDriver attribute*), 149
 bindings (*labgrid.driver.usbsdwiredriver.USBSDWireDriver attribute*), 150
 bindings (*labgrid.driver.usbstoragedriver.USBStorageDriver attribute*), 150
 bindings (*labgrid.driver.usbtmcdriver.USBTMCDriver attribute*), 151
 bindings (*labgrid.driver.usbvideodriver.USBVideoDriver attribute*), 152
 bindings (*labgrid.driver.xenadriver.XenaDriver attribute*), 152
 bindings (*labgrid.strategy.bareboxstrategy.BareboxStrategy attribute*), 203
 bindings (*labgrid.strategy.dockerstrategy.DockerStrategy attribute*), 204
 bindings (*labgrid.strategy.shellstrategy.ShellStrategy attribute*), 206
 bindings (*labgrid.strategy.ubootstrategy.UBootStrategy attribute*), 206
 BindingState (class in *labgrid.binding*), 219
 block_on () (*labgrid.util.agents.network_interface.BackgroundLoop* method), 208
 BMAPTOOL (*labgrid.driver.usbstoragedriver.Mode attribute*), 150
 boot () (*labgrid.driver.bareboxdriver.BareboxDriver method*), 115
 boot () (*labgrid.driver.fastbootdriver.AndroidFastbootDriver method*), 122
 boot () (*labgrid.driver.smallubootdriver.SmallUBootDriver method*), 143
 boot () (*labgrid.driver.ubootdriver.UBootDriver method*), 145
 boot () (*labgrid.protocol.linuxbootprotocol.LinuxBootProtocol method*), 156
 BootstrapProtocol (class in *lab-*

grid.protocol.bootstrapprotocol), 153
 bound (*labgrid.binding.BindingState attribute*), 219
 broken () (*labgrid.remote.exporter.ResourceExport property*), 164
 BrokenResourceError, 164
 busnum () (*labgrid.resource.udev.USBResource property*), 195

C

call () (*labgrid.util.agentwrapper.AgentWrapper method*), 211
 capture () (*labgrid.driver.sigrokdriver.SigrokDriver method*), 141
 check_active () (*labgrid.binding.BindingMixin class method*), 220
 check_file () (in module *labgrid.driver.common*), 117
 check_output () (*labgrid.util.helper.ProcessWrapper method*), 212
 Class_from_string () (*labgrid.factory.TargetFactory method*), 226
 cleanup () (*labgrid.environment.Environment method*), 224
 cleanup () (*labgrid.target.Target method*), 229
 cleanup () (*labgrid.util.ssh.SSHConnection method*), 217
 CleanUpError, 119
 ClientSession (class in *labgrid.remote.coordinator*), 163
 Close () (*labgrid.driver.externalconsoledriver.ExternalConsoleDriver method*), 119
 close () (*labgrid.driver.fake.FakeConsoleDriver method*), 120
 close () (*labgrid.driver.serialdriver.SerialDriver method*), 138
 close () (*labgrid.util.agentwrapper.AgentWrapper method*), 211
 cls () (*labgrid.remote.common.ResourceEntry property*), 159
 ColoredStepReporter (class in *labgrid.pytestplugin.reporter*), 158
 command () (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 151
 command_prefix () (*labgrid.resource.common.NetworkResource property*), 174
 CommandMixin (class in *labgrid.driver.commandmixin*), 115
 CommandProtocol (class in *labgrid.protocol.commandprotocol*), 153

Config (class in `labgrid.config`), 220
`configure()` (`labgrid.autoconfigure.main.Manager method`), 111
`configure()` (`labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver`), 127
`configure()` (`labgrid.util.agents.network_interface.NMDev method`), 208
`connect()` (`labgrid.util.ssh.SSHConnection method`), 216
`connection_from_dict()` (in module `grid.util.agents.network_interface`), 208
`ConsoleExpectMixin` (class in `grid.driver.consoleexpectmixin`), 117
`ConsoleLoggingReporter` (class in `grid.consoleloggingreporter`), 223
`ConsoleProtocol` (class in `grid.protocol.consoleprotocol`), 153
`ConsoleProtocol.Client` (class in `grid.protocol.consoleprotocol`), 154
`continue_boot()` (`labgrid.driver.fastbootdriver.AndroidFastbootDriver method`), 122
`create_gst_src()` (`labgrid.driver.usbaudiodriver.USBAudioInputDriver method`), 146
`cycle()` (`labgrid.driver.dockerdriver.DockerDriver method`), 118
`cycle()` (`labgrid.driver.fake.FakePowerDriver method`), 121
`cycle()` (`labgrid.driver.mqtt.TasmotaPowerDriver method`), 127
`cycle()` (`labgrid.driver.powerdriver.DigitalOutputPowerDriver method`), 131
`cycle()` (`labgrid.driver.powerdriver.ExternalPowerDriver method`), 131
`cycle()` (`labgrid.driver.powerdriver.ManualPowerDriver method`), 130
`cycle()` (`labgrid.driver.powerdriver.NetworkPowerDriver method`), 131
`cycle()` (`labgrid.driver.powerdriver.PDUDaemonDriver method`), 133
`cycle()` (`labgrid.driver.powerdriver.SiSPMPowerDriver method`), 130
`cycle()` (`labgrid.driver.powerdriver.USBPowerDriver method`), 132
`cycle()` (`labgrid.driver.powerdriver.YKUSHPowerDriver method`), 132
`cycle()` (`labgrid.driver.qemudriver.QEMUDriver method`), 135
`cycle()` (`labgrid.driver.sigrokdriver.SigrokPowerDriver method`), 141
`cycle()` (`labgrid.protocol.powerprotocol.PowerProtocol method`), 156

D

DD (`labgrid.driver.usbstoragedriver.Mode attribute`), 150
`deactivate()` (`labgrid.target.Target method`), 229
`deactivate_all_drivers()` (`labgrid.target.Target method`), 229
`DeditecRelais8` (class in `labgrid.resource.udb`), 200
`DeditecRelaisDriver` (class in `labgrid.driver.deditecrelaisdriver`), 117
`DEL` (`labgrid.remote.coordinator.Action attribute`), 163
`depends()` (`labgrid.strategy.graphstrategy.GraphStrategy class method`), 205
`devnode()` (`labgrid.resource.udb.USBFlashableDevice property`), 201
`devnum()` (`labgrid.resource.udb.USBRessource property`), 195
`diff_dict()` (in module `labgrid.util.dict`), 211
`DigitalOutputPowerDriver` (class in `labgrid.driver.powerdriver`), 131
`DigitalOutputProtocol` (class in `labgrid.protocol.digitaloutputprotocol`), 154
`DigitalOutputResetDriver` (class in `labgrid.driver.resetdriver`), 136
`disable()` (`labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver method`), 128
`disable()` (`labgrid.util.agents.network_interface.NMDev method`), 208
`disable_logging()` (`labgrid.util.helper.ProcessWrapper method`), 212
`disable_print()` (`labgrid.util.helper.ProcessWrapper method`), 213
`disconnect()` (`labgrid.util.ssh.SSHConnection method`), 216
`display_name()` (`labgrid.binding.BindingMixin property`), 220
`docker_daemon_url` (`labgrid.resource.docker.DockerDaemon attribute`), 176
`DOCKER_LG_CLEANUP_LABEL` (`labgrid.resource.docker.DockerConstants attribute`), 175
`DOCKER_LG_CLEANUP_TYPE_AUTO` (`labgrid.resource.docker.DockerConstants attribute`), 175
`DockerConstants` (class in `labgrid.resource.docker`), 175
`DockerDaemon` (class in `labgrid.resource.docker`), 176
`DockerDriver` (class in `labgrid.driver.dockerdriver`), 118
`DockerManager` (class in `labgrid.resource.docker`), 175
`DockerStrategy` (class in `labgrid.strategy`), 175

grid.strategy.dockerstrategy), 204
Driver (*class in labgrid.driver.common*), 116
dump () (in module labgrid.util.yaml), 218
Dumper (*class in labgrid.util.yaml*), 218
duration () (labgrid.step.Step property), 227

E

enable_logging ()
grid.util.helper.ProcessWrapper
212
enable_print ()
grid.util.helper.ProcessWrapper
212
enable_tcp_nodelay () (in module labgrid.remote.common), 162
env () (in module labgrid.pytestplugin.fixtures), 157
Environment (*class in labgrid.environment*), 223
erase () (labgrid.driver.quartushpsdriver.QuartusHPSDriver method), 136
Error, 158
error (labgrid.binding.BindingState attribute), 219
EthernetPort (*class in labgrid.resource.base*), 172
EthernetPortExport (*class in labgrid.remote.exporter*), 169
EthernetPortManager (*class in labgrid.resource.ethernetport*), 177
EVENT_COLOR_SCHEMES (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 158
EVENT_COLORS_DARK (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 158
EVENT_COLORS_DARK_256COLOR (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 158
EVENT_COLORS_LIGHT (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 158
EVENT_COLORS_LIGHT_256COLOR (*labgrid.pytestplugin.reporter.ColoredStepReporter attribute*), 158
execute () (labgrid.driver.openocddriver.OpenOCDDriver method), 129
execute () (labgrid.util.qmp.QMPMonitor method), 215
ExecutionError, 119
expect () (labgrid.driver.consoleexpectmixin.ConsoleExpectMixin grid.resource.udev.USBAudioInput method), 117
expect () (labgrid.protocol.consoleprotocol.ConsoleProtocol method), 154
expired (labgrid.remote.common.ReservationState attribute), 161
expired () (labgrid.remote.common.Reservation property), 162

expired () (labgrid.util.timeout.Timeout property), 218
ExporterError, 164
ExporterSession (*class in labgrid.remote.coordinator*), 163
ExternalConsoleDriver (*class in labgrid.driver.externalconsoledriver*), 119
ExternalPowerDriver (*class in labgrid.driver.powerdriver*), 130
extra () (labgrid.remote.common.ResourceEntry property), 159

F

FakeCommandDriver (*class in labgrid.driver.fake*), 120
FakeConsoleDriver (*class in labgrid.driver.fake*), 120
FakeFileTransferDriver (*class in labgrid.driver.fake*), 121
FakePowerDriver (*class in labgrid.driver.fake*), 121
FileDigitalOutputDriver (*class in labgrid.driver.filigitaloutput*), 122
FileSystemProtocol (*class in labgrid.protocol.filesystemprotocol*), 155
FileTransferProtocol (*class in labgrid.protocol.filetransferprotocol*), 155
filter_dict () (in module labgrid.util.dict), 211
filter_match ()
(labgrid.resource.udev.AlteraUSBBlaster method), 197
filter_match ()
(labgrid.resource.udev.AndroidFastboot method), 196
filter_match ()
(labgrid.resource.udev.IMXUSBLoader method), 196
filter_match ()
(labgrid.resource.udev.MXSUSBLoader method), 196
filter_match ()
(labgrid.resource.udev.RKUSBLoader method), 196
filter_match ()
(labgrid.resource.udev.SiSPMPowerPort method), 199
filter_match ()
(labgrid.resource.udev.USBAudioInput method), 200
filter_match ()
(labgrid.resource.udev.USBDebugger method), 202
filter_match ()
(labgrid.resource.udev.USBResource method), 195

```

find_abs_path()                               (lab-
    grid.strategy.graphstrategy.GraphStrategy
    method), 205
find_any_role_with_place() (in module lab-
    grid.remote.client), 159
find_dict () (in module labgrid.util.dict), 211
find_rel_path()                               (lab-
    grid.strategy.graphstrategy.GraphStrategy
    method), 205
find_role_by_place() (in module lab-
    grid.remote.client), 159
flash() (labgrid.driver.fastbootdriver.AndroidFastbootDriver
    method), 122
flash() (labgrid.driver.flashscriptdriver.FlashScriptDriver
    method), 123
flash() (labgrid.driver.quartushpsdriver.QuartusHPSDriver
    method), 136
flash_all () (labgrid.driver.fastbootdriver.AndroidFastbootDriver
    method), 132
Flashrom (class in labgrid.resource.flashrom), 179
FlashromDriver (class in lab-
    grid.driver.flashromdriver), 123
FlashScriptDriver (class in lab-
    grid.driver.flashscriptdriver), 123
flat_dict () (in module labgrid.util.dict), 211
force() (labgrid.strategy.common.Strategy
    method), 204
force() (labgrid.strategy.shellstrategy.ShellStrategy
    method), 206
forward_local_port() (lab-
    grid.driver.sshdriver.SSHDriver
    method), 143
forward_remote_port() (lab-
    grid.driver.sshdriver.SSHDriver
    method), 144
ForwardError, 217
fromstr() (labgrid.remote.common.ResourceMatch
    class method), 160
Future (class in labgrid.util.agents.network_interface), 207

G
gen_marker () (in module labgrid.util.marker), 214
get () (labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver
    method), 117
get () (labgrid.driver.fake.FakeFileTransferDriver
    method), 121
get () (labgrid.driver.filereader.FileDigitalOutputDriver
    method), 122
get () (labgrid.driver.gpiodriver.GpioDigitalOutputDriver
    method), 124
get () (labgrid.driver.lxaiobusdriver.LXAIOBusPIODriver
    method), 125
get () (labgrid.driver.manualswitchdriver.ManualSwitchDriver
    method), 126
get () (labgrid.driver.modbusdriver.ModbusCoilDriver
    method), 126
get () (labgrid.driver.mqtt.TasmotaPowerDriver
    method), 127
get () (labgrid.driver.onewiredriver.OneWirePIODriver
    method), 128
get () (labgrid.driver.powerdriver.DigitalOutputPowerDriver
    method), 132
get () (labgrid.driver.powerdriver.NetworkPowerDriver
    method), 131
get () (labgrid.driver.powerdriver.PDUDaemonDriver
    method), 133
get () (labgrid.driver.powerdriver.SiSPMPowerDriver
    method), 130
get () (labgrid.driver.powerdriver.USBPowerDriver
    method), 132
get () (labgrid.driver.powerdriver.YKUSHPowerDriver
    method), 132
get () (labgrid.driver.serialdigitaloutput.SerialPortDigitalOutputDriver
    method), 137
get () (labgrid.driver.shelldriver.ShellDriver
    method), 139
get () (labgrid.driver.sigrokdriver.SigrokPowerDriver
    method), 142
get () (labgrid.driver.sshdriver.SSHDriver
    method), 144
get () (labgrid.driver.usbhidrelay.HIDRelayDriver
    method), 146
get () (labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
    method), 154
get () (labgrid.protocol.filetransferprotocol.FileTransferProtocol
    method), 155
get () (labgrid.resource.common.ResourceManager
    class method), 174
get () (labgrid.util.agents.sysfsgpio.GpioDigitalOutput
    method), 209
get_access_points() (lab-
    grid.driver.networkinterface.driver.NetworkInterfaceDriver
    method), 128
get_access_points() (lab-
    grid.util.agents.network_interface.NMDev
    method), 208
get_active_driver() (labgrid.target.Target
    method), 228
get_active_settings() (lab-
    grid.driver.networkinterface.driver.NetworkInterfaceDriver
    method), 128
get_active_settings() (lab-
    grid.util.agents.network_interface.NMDev
    method), 208
get_bool() (labgrid.driver.usbtmcdriver.USBTMCDDriver
    method), 151

```

get_bytes () (labgrid.driver.shelldriver.ShellDriver method), 139	grid.driver.shelldriver.ShellDriver method), 140
get_channel_info () (in module labgrid.driver.usbtmc.keysight_dsox2000), 114	get_logfile () (labgrid.consoleloggingreporter.ConsoleLoggingReporter method), 223
get_channel_info () (in module labgrid.driver.usbtmc.tektronix_tds2000), 114	get_managed_parent () (labgrid.resource.common.ManagedResource method), 175
get_channel_info () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 151	get_managed_parent () (labgrid.resource.common.Resource method), 174
get_channel_values () (in module labgrid.driver.usbtmc.keysight_dsox2000), 114	get_mode () (labgrid.driver.usbsdmuxdriver.USBSDMuxDriver method), 149
get_channel_values () (in module labgrid.driver.usbtmc.tektronix_tds2000), 114	get_new () (labgrid.step.Steps method), 226
get_channel_values () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 151	get_option () (labgrid.config.Config method), 221
get_console_matches () (labgrid.protocol.consoleprotocol.ConsoleProtocol.Client method), 154	get_path () (labgrid.config.Config method), 221
get_current () (labgrid.step.Steps method), 226	get_paths () (labgrid.config.Config method), 222
get_decimal () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 151	get_pipeline () (labgrid.driver.usbvideodriver.USBVideoDriver method), 152
get_default_interface_device_name () (labgrid.driver.shelldriver.ShellDriver method), 140	get_prefix () (labgrid.util.ssh.SSHConnection method), 215
get_dhcpd_leases () (labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver method), 128	get_priority () (labgrid.driver.common.Driver method), 116
get_dhcpd_leases () (labgrid.util.agents.network_interface.NMDev method), 208	get_qualities () (labgrid.driver.httpvideodriver.HTTPVideoDriver method), 124
get_driver () (labgrid.target.Target method), 228	get_qualities () (labgrid.driver.usbvideodriver.USBVideoDriver method), 152
get_features () (labgrid.config.Config method), 222	get_qualities () (labgrid.protocol.videoprotocol.VideoProtocol method), 157
get_features () (labgrid.environment.Environment method), 223	get_remote_path () (labgrid.util.managedfile.ManagedFile method), 214
get_file () (labgrid.util.ssh.SSHConnection method), 216	get_resource () (labgrid.target.Target method), 228
get_free_port () (in module labgrid.util.helper), 212	get_resources () (labgrid.remote.coordinator.ExporterSession method), 163
get_hash () (labgrid.util.managedfile.ManagedFile method), 214	get_screenshot () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 151
get_hostname () (labgrid.protocol.infoprotocol.InfoProtocol method), 155	get_screenshot_png () (in module labgrid.driver.usbtmc.keysight_dsox2000), 114
get_image_path () (labgrid.config.Config method), 221	get_screenshot_tiff () (in module labgrid.driver.usbtmc.tektronix_tds2000), 114
get_images () (labgrid.config.Config method), 222	get_service_status () (labgrid.protocol.infoprotocol.InfoProtocol method), 155
get_imports () (labgrid.config.Config method), 222	get_session () (labgrid.driver.pyvisadriver.PyVISADriver method), 134
get_int () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 151	get_session () (labgrid.driver.pyvisadriver.PyVISADriver method), 134
get_ip () (labgrid.protocol.infoprotocol.InfoProtocol method), 155	
get_ip_addresses ()	

grid.driver.xenadriver.XenaDriver (method), GPIOGenericExport (class in labgrid.remote.exporter), 169
152
get_settings () (labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver property), 205
grid.driver.networkinterfacedriver.NetworkInterfaceDriver (method), 128
get_settings () (labgrid.util.agents.network_interface.NMDev method), 208
get_size () (labgrid.driver.usbstoragedriver.USBStorageDriver method), 151
H
get_state () (in module labgrid.driver.power.gude24), 112
get_state () (labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver method), 128
get_state () (labgrid.util.agents.network_interface.NMDev method), 208
get_status () (labgrid.driver.bareboxdriver.BareboxDriver method), 115
get_status () (labgrid.driver.fake.FakeCommandDriver method), 120
get_status () (labgrid.driver.shelldrive.ShellDriver method), 139
get_status () (labgrid.driver.sshdriver.SSHDriver method), 144
get_status () (labgrid.driver.ubootdriver.UBootDriver method), 145
get_status () (labgrid.protocol.commandprotocol.CommandProtocol method), 153
get_str () (labgrid.driver.usbtmcdriver.USBTMCDriver method), 151
get_target () (labgrid.environment.Environment method), 223
get_target_features () (labgrid.environment.Environment method), 224
get_target_option () (labgrid.config.Config method), 222
get_targets () (labgrid.config.Config method), 222
get_tool () (labgrid.config.Config method), 221
get_user () (in module labgrid.util.helper), 212
getmatch () (labgrid.remote.common.Place method), 161
getvar () (labgrid.driver.fastbootdriver.AndroidFastbootDriver method), 122
gone (labgrid.strategy.dockerstrategy.Status attribute), 204
GpioDigitalOutput (class in labgrid.util.agents.sysfsgpio), 209
GpioDigitalOutputDriver (class in labgrid.driver.gpiodriver), 124
handle_configure () (in module labgrid.util.agents.network_interface), 208
handle_error () (in module labgrid.util.agent), 210
handle_get () (in module labgrid.util.agents.sysfsgpio), 209
handle_get_access_points () (in module labgrid.util.agents.network_interface), 208
handle_get_active_settings () (in module labgrid.util.agents.network_interface), 208
handle_get_dhcpd_leases () (in module labgrid.util.agents.network_interface), 208
handle_get_settings () (in module labgrid.util.agents.network_interface), 208
handle_get_state () (in module labgrid.util.agents.network_interface), 208
handle_neg () (in module labgrid.util.agents.dummy), 207
handle_request_scan () (in module labgrid.util.agents.network_interface), 208
handle_set () (in module labgrid.util.agents.sysfsgpio), 209
handle_test () (in module labgrid.util.agent), 210
handle_usbtmc () (in module labgrid.util.agent), 210
handle_wait_state () (in module labgrid.util.agents.network_interface), 208
Handler (class in labgrid.autoconfigure.main), 111
hasmatch () (labgrid.remote.common.Place method), 161
HIDRelay (class in labgrid.resource.udev), 201
HIDRelayDriver (class in labgrid.driver.usbhidrelay), 146
HTTPProvider (class in labgrid.resource.provider), 184
HTTPProviderDriver (class in labgrid.driver.provider), 134
HTTPVideoDriver (class in labgrid.driver.httpvideodriver), 124
HTTPVideoStream (class in labgrid.resource.httpvideostream), 179
HTTPVideoStreamExport (class in labgrid.remote.exporter), 170

I

identify () (*labgrid.driver.usbtmcdriver.USBTMCDriver method*), 151
 idle (*labgrid.binding.BindingState attribute*), 219
 if_state () (*labgrid.resource.udev.USBNetworkInterface property*), 197
 IMXUSBDriver (*class in labgrid.driver.usbloader*), 147
 IMXUSBLoader (*class in labgrid.resource.udev*), 196
 InfoProtocol (*class in labgrid.protocol.infoprotocol*), 155
 instance (*labgrid.consoleloggingreporter.ConsoleLoggingReporter attribute*), 223
 instance (*labgrid.stepreporter.StepReporter attribute*), 227
 instances (*labgrid.resource.common.ResourceManager attribute*), 174
 interact () (*labgrid.driver.sshdriver.SSHDriver method*), 143
 interact () (*labgrid.target.Target method*), 228
 invalid (*labgrid.remote.common.ReservationState attribute*), 161
 invalidate () (*labgrid.strategy.graphstrategy.GraphStrategy method*), 205
 InvalidConfigError, 224
 InvalidGraphStrategyError, 205
 is_active () (*labgrid.step.Step property*), 227
 is_done () (*labgrid.step.Step property*), 227
 isconnected () (*labgrid.util.ssh.SSHConnection method*), 216
 ismatch () (*labgrid.remote.common.ResourceMatch method*), 160

J

join () (*labgrid.autoinstall.main.Manager method*), 111

K

key () (*labgrid.remote.coordinator.RemoteSession property*), 163

L

labgrid (*module*), 111
 labgrid.autoinstall (*module*), 111
 labgrid.autoinstall.main (*module*), 111
 labgrid.binding (*module*), 219
 labgrid.config (*module*), 220
 labgrid.consoleloggingreporter (*module*), 223
 labgrid.driver (*module*), 112
 labgrid.driver.bareboxdriver (*module*), 114
 labgrid.driver.commandmixin (*module*), 115
 labgrid.driver.common (*module*), 116

labgrid.driver.consoleexpectMixin (*module*), 117
 labgrid.driver.deditecrelaisdriver (*module*), 117
 labgrid.driver.dockerdriver (*module*), 118
 labgrid.driver.exception (*module*), 119
 labgrid.driver.externalconsoledriver (*module*), 119
 labgrid.driver.fake (*module*), 120
 labgrid.driver.fastbootdriver (*module*), 121
 labgrid.driver.filereadoutput (*module*), 122
 labgrid.driver.flashromdriver (*module*), 123
 labgrid.driver.flashscriptdriver (*module*), 123
 labgrid.driver.gpiodriver (*module*), 124
 labgrid.driver.httpvideodriver (*module*), 124
 labgrid.driver.lxaiobusdriver (*module*), 125
 labgrid.driver.lxausbmuxdriver (*module*), 125
 labgrid.driver.manualswitchdriver (*module*), 126
 labgrid.driver.modbusdriver (*module*), 126
 labgrid.driver.mqtt (*module*), 127
 labgrid.driver.networkinterfacedriver (*module*), 127
 labgrid.driver.onewiredriver (*module*), 128
 labgrid.driver.openocddriver (*module*), 129
 labgrid.driver.power (*module*), 112
 labgrid.driver.power.apc (*module*), 112
 labgrid.driver.power.digipower (*module*), 112
 labgrid.driver.power.gude (*module*), 112
 labgrid.driver.power.gude24 (*module*), 112
 labgrid.driver.power.gude8031 (*module*), 112
 labgrid.driver.power.gude8316 (*module*), 113
 labgrid.driver.power.netio (*module*), 113
 labgrid.driver.power.netio_kshell (*module*), 113
 labgrid.driver.power.rest (*module*), 113
 labgrid.driver.power.sentry (*module*), 113
 labgrid.driver.power.simplerest (*module*), 113
 labgrid.driver.powerdriver (*module*), 129
 labgrid.driver.provider (*module*), 133
 labgrid.driver.pyvisadriver (*module*), 134
 labgrid.driver.qemudriver (*module*), 135
 labgrid.driver.quartushpsdriver (*module*),

136
labgrid.driver.resetdriver (*module*), 136
labgrid.driver.serialdigitaloutput (*module*), 137
labgrid.driver.serialdriver (*module*), 137
labgrid.driver.shelldriver (*module*), 138
labgrid.driver.sigrokdriver (*module*), 141
labgrid.driver.smallubootdriver (*module*),
 142
labgrid.driver.sshdriver (*module*), 143
labgrid.driver.ubootdriver (*module*), 144
labgrid.driver.usbaudioplayer (*module*),
 146
labgrid.driver.usbhidrelay (*module*), 146
labgrid.driver.usbloader (*module*), 147
labgrid.driver.usbsdmuxdriver (*module*),
 149
labgrid.driver.usbsdwiredriver (*module*),
 150
labgrid.driver.usbstoragedriver (*module*),
 150
labgrid.driver.usbtmc (*module*), 114
labgrid.driver.usbtmc.keysight_dsox2000
 (*module*), 114
labgrid.driver.usbtmc.tektronix_tds2000
 (*module*), 114
labgrid.driver.usbtmcdriver (*module*), 151
labgrid.driver.usbvideoplayer (*module*),
 152
labgrid.driver.xenadriver (*module*), 152
labgrid.environment (*module*), 223
labgrid.exceptions (*module*), 224
labgrid.factory (*module*), 225
labgrid.protocol (*module*), 153
labgrid.protocol.bootstrappingprotocol
 (*module*), 153
labgrid.protocol.commandprotocol (*module*),
 153
labgrid.protocol.consoleprotocol (*module*),
 153
labgrid.protocol.digitaloutputprotocol
 (*module*), 154
labgrid.protocol.filesystemprotocol
 (*module*), 155
labgrid.protocol.filetransferprotocol
 (*module*), 155
labgrid.protocol.infoprotocol (*module*),
 155
labgrid.protocol.linuxbootprotocol (*module*),
 156
labgrid.protocol.mmioprotocol (*module*),
 156
labgrid.protocol.powerprotocol (*module*),
 156
labgrid.protocol.resetprotocol (*module*),
 157
labgrid.protocol.videoprotocol (*module*),
 157
labgrid.pytestplugin (*module*), 157
labgrid.pytestplugin.fixtures (*module*),
 157
labgrid.pytestplugin.hooks (*module*), 157
labgrid.pytestplugin.reporter (*module*),
 158
labgrid.remote (*module*), 158
labgrid.remote.authenticator (*module*), 158
labgrid.remote.client (*module*), 158
labgrid.remote.common (*module*), 159
labgrid.remote.config (*module*), 162
labgrid.remote.coordinator (*module*), 162
labgrid.remote.exporter (*module*), 164
labgrid.remote.scheduler (*module*), 171
labgrid.resource (*module*), 172
labgrid.resource.base (*module*), 172
labgrid.resource.common (*module*), 173
labgrid.resource.docker (*module*), 175
labgrid.resource.ethernetport (*module*),
 176
labgrid.resource.flashrom (*module*), 179
labgrid.resource.httpvideostream (*module*),
 179
labgrid.resource.lxaiobus (*module*), 179
labgrid.resource.modbus (*module*), 180
labgrid.resource.mqtt (*module*), 181
labgrid.resource.networkservice (*module*),
 182
labgrid.resource.onewirereport (*module*), 182
labgrid.resource.power (*module*), 182
labgrid.resource.provider (*module*), 183
labgrid.resource.pyvisa (*module*), 184
labgrid.resource.remote (*module*), 184
labgrid.resource.serialport (*module*), 193
labgrid.resource.sigrok (*module*), 193
labgrid.resource.suggest (*module*), 194
labgrid.resource.udev (*module*), 194
labgrid.resource.xenamanager (*module*), 202
labgrid.resource.ykushpowerport (*module*),
 202
labgrid.step (*module*), 226
labgrid.stepreporter (*module*), 227
labgrid.strategy (*module*), 202
labgrid.strategy.bareboxstrategy (*module*),
 203
labgrid.strategy.common (*module*), 203
labgrid.strategy.dockerstrategy (*module*),
 204
labgrid.strategy.graphstrategy (*module*),
 205

labgrid.strategy.shellstrategy (*module*), 206
 labgrid.strategy.ubootstrategy (*module*), 206
 labgrid.target (*module*), 228
 labgrid.util (*module*), 207
 labgrid.util.agent (*module*), 209
 labgrid.util.agents (*module*), 207
 labgrid.util.agents.dummy (*module*), 207
 labgrid.util.agents.network_interface (*module*), 207
 labgrid.util.agents.sysfsgpio (*module*), 209
 labgrid.util.agentwrapper (*module*), 210
 labgrid.util.atomic (*module*), 211
 labgrid.util.dict (*module*), 211
 labgrid.util.exceptions (*module*), 211
 labgrid.util.expect (*module*), 212
 labgrid.util.helper (*module*), 212
 labgrid.util.managedfile (*module*), 213
 labgrid.util.marker (*module*), 214
 labgrid.util.proxy (*module*), 214
 labgrid.util.qmp (*module*), 215
 labgrid.util.ssh (*module*), 215
 labgrid.util.timeout (*module*), 218
 labgrid.util.yaml (*module*), 218
 LinuxBootProtocol (*class* in *labgrid.protocol.linuxbootprotocol*), 156
 list () (*labgrid.util.agent.Agent method*), 209
 load () (*in module labgrid.util.yaml*), 218
 load () (*labgrid.driver.flashromdriver.FlashromDriver method*), 123
 load () (*labgrid.driver.openocddriver.OpenOCDDriver method*), 129
 load () (*labgrid.driver.usbloader.BDIMXUSBDriver method*), 149
 load () (*labgrid.driver.usbloader.IMXUSBDriver method*), 147
 load () (*labgrid.driver.usbloader.MXSUSBDriver method*), 147
 load () (*labgrid.driver.usbloader.RKUSBDriver method*), 148
 load () (*labgrid.driver.usbloader.UUUDriver method*), 148
 load () (*labgrid.protocol.bootstrapprotocol.BootstrapProtocol method*), 153
 load () (*labgrid.util.agent.Agent method*), 209
 load () (*labgrid.util.agentwrapper.AgentWrapper method*), 211
 Loader (*class* in *labgrid.util.yaml*), 218
 LocalPort (*class* in *labgrid.remote.client*), 159
 locked() (*in module labgrid.remote.coordinator*), 164
 log_callback () (*labgrid.util.helper.ProcessWrapper static method*), 212
 log_subprocess_kernel_stack () (*in module labgrid.remote.exporter*), 164
 loglevel (*labgrid.util.helper.ProcessWrapper attribute*), 212
 LXAIOPBusNode (*class* in *labgrid.resource.lxaiobus*), 180
 LXAIOPBusNodeExport (*class* in *labgrid.remote.exporter*), 171
 LXAIOPBusNodeManager (*class* in *labgrid.resource.lxaiobus*), 179
 LXAIOPBusPIO (*class* in *labgrid.resource.lxaiobus*), 180
 LXAIOPBusPIODriver (*class* in *labgrid.driver.lxaiobusdriver*), 125
 LXAUSBMux (*class* in *labgrid.resource.udev*), 201
 LXAUSBMuxDriver (*class* in *labgrid.driver.lxausbmuxdriver*), 125

M

main () (*in module labgrid.autoconfigure.main*), 111
 main () (*in module labgrid.remote.client*), 159
 main () (*in module labgrid.remote.exporter*), 171
 main () (*in module labgrid.resource.suggest*), 194
 main () (*in module labgrid.util.agent*), 210
 make_driver () (*labgrid.factory.TargetFactory method*), 226
 make_resource () (*labgrid.factory.TargetFactory method*), 226
 make_target () (*labgrid.factory.TargetFactory method*), 226
 ManagedFile (*class* in *labgrid.util.managedfile*), 213
 ManagedFileError, 213
 ManagedResource (*class* in *labgrid.resource.common*), 175
 Manager (*class* in *labgrid.autoconfigure.main*), 111
 manager_cls (*labgrid.resource.common.ManagedResource attribute*), 175
 manager_cls (*labgrid.resource.docker.DockerDaemon attribute*), 176
 manager_cls (*labgrid.resource.ethernetport.SNMPEthernetPort attribute*), 178
 manager_cls (*labgrid.resource.lxaiobus.LXAIOPBusNode attribute*), 180
 manager_cls (*labgrid.resource.mqtt.MQTTResource attribute*), 181
 manager_cls (*labgrid.resource.remote.NetworkLXAIOPBusNode attribute*), 190
 manager_cls (*labgrid.resource.remote.NetworkMQTTResource attribute*), 191
 manager_cls (*labgrid.resource.remote.NetworkSysfsGPIO attribute*), 190
 manager_cls (*labgrid.resource.remote.RemoteNetworkInterface attribute*), 192

manager_cls (<i>labgrid.resource.remote.RemotePlace attribute</i>), 185	NetworkInterface (<i>class in labgrid.resource.base</i>), 172
manager_cls (<i>labgrid.resource.remote.RemoteUSBResource attribute</i>), 185	NetworkInterfaceDriver (<i>class in labgrid.driver.networkinterfacedriver</i>), 127
manager_cls (<i>labgrid.resource.udev.USBResource attribute</i>), 194	NetworkLXAIOBusNode (<i>class in labgrid.resource.remote</i>), 190
ManualPowerDriver (<i>class in labgrid.driver.powerdriver</i>), 130	NetworkLXAIOBusPIO (<i>class in labgrid.resource.remote</i>), 191
ManualSwitchDriver (<i>class in labgrid.driver.manualswitchdriver</i>), 126	NetworkLXAUSBMux (<i>class in labgrid.resource.remote</i>), 191
measure () (<i>labgrid.driver.sigrokdriver.SigrokPowerDrive method</i>), 142	NetworkMQTTResource (<i>class in labgrid.resource.remote</i>), 191
measure_level () (<i>labgrid.driver.usbaudiodriver.USBAudioInputDriver method</i>), 146	NetworkMXSUSBLoader (<i>class in labgrid.resource.remote</i>), 186
merge () (<i>labgrid.step.StepEvent method</i>), 226	NetworkPowerDriver (<i>class in labgrid.driver.powerdriver</i>), 131
message (<i>labgrid.driver.serialdriver.SerialDriver attribute</i>), 137	NetworkPowerPort (<i>class in labgrid.resource.power</i>), 182
MethodProxy (<i>class in labgrid.util.agentwrapper</i>), 210	NetworkResource (<i>class in labgrid.resource.common</i>), 174
MMIOProtocol (<i>class in labgrid.protocol.mmioprotocol</i>), 156	NetworkRKUSBLoader (<i>class in labgrid.resource.remote</i>), 186
ModbusCoilDriver (<i>class in labgrid.driver.modbusdriver</i>), 126	NetworkSerialPort (<i>class in labgrid.resource.serialport</i>), 193
ModbusTCPCoil (<i>class in labgrid.resource.modbus</i>), 180	NetworkService (<i>class in labgrid.resource.networkservice</i>), 182
Mode (<i>class in labgrid.driver.usbstoragedriver</i>), 150	NetworkServiceExport (<i>class in labgrid.remote.exporter</i>), 170
model_id () (<i>labgrid.resource.udev.USBResource property</i>), 195	NetworkSigrokUSBDevice (<i>class in labgrid.resource.remote</i>), 186
ModuleProxy (<i>class in labgrid.util.agentwrapper</i>), 210	NetworkSigrokUSBSerialDevice (<i>class in labgrid.resource.remote</i>), 187
monitor_command () (<i>labgrid.driver.qemudriver.QEMUDriver method</i>), 136	NetworkSiSPMPowerPort (<i>class in labgrid.resource.remote</i>), 188
MQTError, 127	NetworkSysfsGPIO (<i>class in labgrid.resource.remote</i>), 190
MQTTManager (<i>class in labgrid.resource.mqtt</i>), 181	NetworkUSBAudioInput (<i>class in labgrid.resource.remote</i>), 189
MQTTResource (<i>class in labgrid.resource.mqtt</i>), 181	NetworkUSBDebugger (<i>class in labgrid.resource.remote</i>), 189
MXSUSBDriver (<i>class in labgrid.driver.usbloader</i>), 147	NetworkUSBFlashableDevice (<i>class in labgrid.resource.remote</i>), 191
MXSUSBLoader (<i>class in labgrid.resource.udev</i>), 196	NetworkUSBMassStorage (<i>class in labgrid.resource.remote</i>), 187
N	NetworkUSBPowerPort (<i>class in labgrid.resource.remote</i>), 188
name () (<i>labgrid.remote.coordinator.RemoteSession property</i>), 163	NetworkUSBSDMuxDevice (<i>class in labgrid.resource.remote</i>), 187
NetworkAlteraUSBBlaster (<i>class in labgrid.resource.remote</i>), 186	NetworkUSBSDWireDevice (<i>class in labgrid.resource.remote</i>), 187
NetworkAndroidFastboot (<i>class in labgrid.resource.remote</i>), 185	NetworkUSBStorageDriver (<i>class in labgrid.driver.usbstoragedriver</i>), 151
NetworkDeditecRelais8 (<i>class in labgrid.resource.remote</i>), 189	NetworkUSBTMC (<i>class in labgrid.resource.remote</i>), 189
NetworkFlashrom (<i>class in labgrid.resource.flashrom</i>), 179	
NetworkHIDRelay (<i>class in labgrid.resource.remote</i>), 190	
NetworkIMXUSBLoader (<i>class in labgrid.resource.remote</i>), 185	

NetworkUSBVideo (<i>class in labgrid.resource.remote</i>), 188	off () (labgrid.driver.powerdriver.YKUSHPowerDriver method), 132
NFSPProviderDriver (<i>class in labgrid.driver.provider</i>), 134	off () (labgrid.driver.qemudriver.QEMUDriver method), 135
NFSProvider (<i>class in labgrid.resource.provider</i>), 183	off () (labgrid.driver.sigrokdriver.SigrokPowerDriver method), 141
NMDev (<i>class in labgrid.util.agents.network_interface</i>), 208	off () (labgrid.protocol.powerprotocol.PowerProtocol method), 156
NoConfigNotFoundError, 224	on () (labgrid.driver.dockerdriver.DockerDriver method), 118
NoDriverNotFoundError, 225	on () (labgrid.driver.fake.FakePowerDriver method), 121
NoResourceNotFoundError, 225	on () (labgrid.driver.mqtt.TasmotaPowerDriver method), 127
normalize_config () (labgrid.factory.TargetFactory static method), 226	on () (labgrid.driver.powerdriver.DigitalOutputPowerDriver method), 131
NoSupplierNotFoundError, 224	on () (labgrid.driver.powerdriver.ExternalPowerDriver method), 131
notify () (labgrid.consoleloggingreporter.ConsoleLoggingReporter method), 223	on () (labgrid.driver.powerdriver.ManualPowerDriver method), 130
notify () (labgrid.pytestplugin.reporter.StepReporter method), 158	on () (labgrid.driver.powerdriver.NetworkPowerDriver method), 131
notify () (labgrid.step.Steps method), 226	on () (labgrid.driver.powerdriver.PDUDaemonDriver method), 133
notify () (labgrid.stepreporter.StepReporter static method), 227	on () (labgrid.driver.powerdriver.SiSPMPowerDriver method), 130
notify_console_match () (labgrid.protocol.consoleprotocol.ConsoleProtocol.Client method), 154	on () (labgrid.driver.powerdriver.USBPowerDriver method), 132
NoValidDriverError, 211	on () (labgrid.driver.powerdriver.YKUSHPowerDriver method), 132
O	
oem_getenv () (labgrid.driver.fastbootdriver.AndroidFastbootDriver method), 122	on () (labgrid.driver.qemudriver.QEMUDriver method), 135
off (labgrid.strategy.bareboxstrategy.Status attribute), 203	on () (labgrid.driver.sigrokdriver.SigrokPowerDriver method), 141
off (labgrid.strategy.shellstrategy.Status attribute), 206	on () (labgrid.protocol.powerprotocol.PowerProtocol method), 156
off (labgrid.strategy.ubootstrategy.Status attribute), 206	on_activate () (labgrid.binding.BindingMixin method), 220
off () (labgrid.driver.dockerdriver.DockerDriver method), 118	on_activate () (labgrid.driver.bareboxdriver.BareboxDriver method), 115
off () (labgrid.driver.fake.FakePowerDriver method), 121	on_activate () (labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver method), 117
off () (labgrid.driver.mqtt.TasmotaPowerDriver method), 127	on_activate () (labgrid.driver.dockerdriver.DockerDriver method), 118
off () (labgrid.driver.powerdriver.DigitalOutputPowerDriver method), 131	on_activate () (labgrid.driver.fastbootdriver.AndroidFastbootDriver method), 121
off () (labgrid.driver.powerdriver.ExternalPowerDriver method), 131	on_activate () (labgrid.driver.flashromdriver.FlashromDriver method), 123
off () (labgrid.driver.powerdriver.ManualPowerDriver method), 130	on_activate () (labgrid.driver.powerdriver.USBPowerDriver method), 132
off () (labgrid.driver.powerdriver.NetworkPowerDriver method), 131	
off () (labgrid.driver.powerdriver.PDUDaemonDriver method), 133	
off () (labgrid.driver.powerdriver.SiSPMPowerDriver method), 130	
off () (labgrid.driver.powerdriver.USBPowerDriver method), 132	

```
    grid.driver.flashscriptdriver.FlashScriptDriver
        method), 123
on_activate()                                (lab-
    grid.driver.gpiodriver.GpioDigitalOutputDriver
        method), 124
on_activate()                                (lab-
    grid.driver.lxaiobusdriver.LXAIOBusPIODriver
        method), 125
on_activate()                                (lab-
    grid.driver.modbusdriver.ModbusCoilDriver
        method), 126
on_activate()                                (lab-
    grid.driver.mqtt.TasmotaPowerDriver method),
    127
on_activate()                                (lab-
    grid.driver.networkinterfacedriver.NetworkInterfaceDriver
        method), 127
on_activate()                                (lab-
    grid.driver.onewiredriver.OneWirePIODriver
        method), 128
on_activate()                                (lab-
    grid.driver.powerdriver.NetworkPowerDriver
        method), 131
on_activate()                                (lab-
    grid.driver.powerdriver.PDUDaemonDriver
        method), 133
on_activate()                                (lab-
    grid.driver.pyvisadriver.PyVISADriver
        method), 134
on_activate()                                (lab-
    grid.driver.qemudriver.QEMUDriver method),
    135
on_activate()                                (lab-
    grid.driver.serialdriver.SerialDriver  method),
    137
on_activate()                                (lab-
    grid.driver.shelldriver.ShellDriver   method),
    139
on_activate()                                (lab-
    grid.driver.sigrokdriver.SigrokCommon
        method), 141
on_activate()                                (lab-
    grid.driver.sshdriver.SSHDriver   method), 143
on_activate()                                (lab-
    grid.driver.ubootdriver.UBootDriver  method),
    145
on_activate()                                (lab-
    grid.driver.usbhidrelay.HIDRelayDriver
        method), 146
on_activate()                                (lab-
    grid.driver.usbloader.BDIMXUSBDriver
        method), 149
on_activate()                                (lab-
    grid.driver.usbloader.IMXUSBDriver  method),
    147
on_activate()                                (lab-
    grid.driver.usbloader.MXSUSBDriver  method),
    147
on_activate()                                (lab-
    grid.driver.usbloader.RKUSBDriver   method),
    148
on_activate()                                (lab-
    grid.driver.usbloader.UUUDriver    method),
    148
on_activate()                                (lab-
    grid.driver.usbstoragedriver.USBSStorageDriver
        method), 150
on_activate()                                (lab-
    grid.driver.usbtmcdriver.USBTMCDriver
        method), 151
on_activate()                                (lab-
    grid.driver.xenadriver.XenaDriver   method),
    152
on_activate()      (labgrid.strategy.common.Strategy
        method), 204
on_client_bound()  (labgrid.binding.BindingMixin
        method), 220
on_client_bound()  (labgrid.resource.docker.DockerDaemon
        method), 176
on_client_bound()  (labgrid.strategy.common.Strategy
        method), 204
on_deactivate()  (labgrid.binding.BindingMixin
        method), 220
on_deactivate()  (labgrid.driver.bareboxdriver.BareboxDriver
        method), 115
on_deactivate()  (labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver
        method), 117
on_deactivate()  (labgrid.driver.dockerdriver.DockerDriver
        method), 118
on_deactivate()  (labgrid.driver.externalconsoledriver.ExternalConsoleDriver
        method), 120
on_deactivate()  (labgrid.driver.fastbootdriver.AndroidFastbootDriver
        method), 122
on_deactivate()  (labgrid.driver.flashromdriver.FlashromDriver
        method), 123
on_deactivate()  (labgrid.driver.flashscriptdriver.FlashScriptDriver
        method), 123
on_deactivate()  (labgrid.driver.gpiodriver.GpioDigitalOutputDriver
        method), 124
```

on_deactivate() method), 124	(lab- grid.driver.modbusdriver.ModbusCoilDriver method), 126	(lab- grid.driver.mqtt.TasmotaPowerDriver method), 127	(lab- grid.driver.networkinterface.driver.NetworkInterfaceDriver method), 127	(lab- grid.driver.onewiredriver.OneWirePIODriver method), 128	(lab- grid.driver.pyvisadriver.PyVISADriver method), 134	(lab- grid.driver.qemudriver.QEMUDriver method), 135	(lab- grid.driver.serialdriver.SerialDriver method), 138	(lab- grid.driver.shelldrive.ShellDriver method), 139	(lab- grid.driver.sigrokdriver.SigrokCommon method), 141	(lab- grid.driver.sshdriver.SSHDriver method), 143	(lab- grid.driver.ubootdriver.UBootDriver method), 145	(lab- grid.driver.usbhidrelay.HIDRelayDriver method), 146	(lab- grid.driver.usbloader.BDIMXUSBDriver method), 149	(lab- grid.driver.usbloader.IMXUSBDriver method), 147	(lab- grid.driver.usbloader.MXSUSBDriver method), 147	(lab- grid.driver.usbloader.RKUSBDriver method), 148	(lab- grid.driver.usbloader.UUUDriver method), 148	(lab- grid.driver.usbstoragedriver.USBStorageDriver method), 150	(lab- grid.driver.usbtmcdriver.USBTMCDriver method), 151	(lab- grid.driver.xenadriver.XenaDriver method), 152	(lab- grid.strategy.common.Strategy method), 204	(lab- grid.resource.docker.DockerDaemon method), 176	(lab- grid.resource.common.ResourceManager method), 176	(lab- grid.resource.docker.DockerManager method), 175	(lab- grid.resource.ethernetport.EthernetPortManager method), 177	(lab- grid.resource.mqtt.MQTTManager method), 181	(lab- grid.resource.remote.RemotePlaceManager method), 184	(lab- grid.resource.udc.UdevManager method), 194	(lab- grid.binding.BindingMixin method), 220	OneWirePIO (class in labgrid.resource.onewirereport), 182	OneWirePIODriver (class in labgrid.driver.onewiredriver), 128	open () (labgrid.driver.externalconsoledriver.ExternalConsoleDriver method), 119	open () (labgrid.driver.fake.FakeConsoleDriver method), 120	open () (labgrid.driver.serialdriver.SerialDriver method), 138	OpenOCDDriver (class in labgrid.driver.openocddriver), 129
												P																							
												params () (labgrid.remote.common.ResourceEntry property), 159																							
												parent () (labgrid.resource.common.Resource property), 173																							
												path () (labgrid.resource.udc.SigrokUSBSerialDevice property), 198																							
												path () (labgrid.resource.udc.USBAudioInput property), 200																							

```

path() (labgrid.resource.udev.USBMassStorage property), 195
path() (labgrid.resource.udev.USBRessource property), 195
path() (labgrid.resource.udev.USBSDMuxDevice property), 199
path() (labgrid.resource.udev.USBSDWireDevice property), 198
path() (labgrid.resource.udev.USBTMC property), 200
path() (labgrid.resource.udev.USBVideo property), 200
PDUDaemonDriver (class in labgrid.driver.powerdriver), 133
PDUDaemonPort (class in labgrid.resource.power), 183
Place (class in labgrid.remote.common), 161
play() (labgrid.driver.usbaudioplayer.USBAudioInputDriver method), 146
poll() (labgrid.remote.exporter.ResourceExport method), 164
poll() (labgrid.resource.common.ManagedResource method), 175
poll() (labgrid.resource.common.Resource method), 174
poll() (labgrid.resource.common.ResourceManager method), 174
poll() (labgrid.resource.docker.DockerManager method), 176
poll() (labgrid.resource.ethernetport.EthernetPortManager method), 177
poll() (labgrid.resource.lxaiobus.LXAIOBusNodeManager method), 179
poll() (labgrid.resource.mqtt.MQTTManager method), 181
poll() (labgrid.resource.remote.RemotePlaceManager method), 184
poll() (labgrid.resource.udev.UdevManager method), 194
poll() (labgrid.resource.udev.USBSDMuxDevice method), 199
poll() (labgrid.resource.udev.USBSDWireDevice method), 198
poll_until_success() (labgrid.driver.commandmixin.CommandMixin method), 116
poll_until_success() (labgrid.protocol.commandprotocol.CommandProtocol method), 153
pop() (labgrid.step.Steps method), 226
power_get() (in module labgrid.driver.power.apc), 112
power_get() (in module labgrid.driver.power.digipower), 112
power_get() (in module labgrid.driver.power.gude), 112
power_get() (in module labgrid.driver.power.gude24), 112
power_get() (in module labgrid.driver.power.gude8031), 112
power_get() (in module labgrid.driver.power.gude8316), 113
power_get() (in module labgrid.driver.power.netio), 113
power_get() (in module labgrid.driver.power.netio_kshell), 113
power_get() (in module labgrid.driver.power.rest), 113
power_get() (in module labgrid.driver.power.sentry), 113
PowerProtocol (class in labgrid.protocol.powerprotocol), 156
PowerResetMixin (class in labgrid.driver.powerdriver), 129
print_callback() (labgrid.util.helper.ProcessWrapper static method), 212
priorities (labgrid.driver.powerdriver.PowerResetMixin attribute), 129
priorities (labgrid.driver.sshdriver.SSHDriver attribute), 143
ProcessWrapper (class in labgrid.util.helper), 212
ProviderGenericExport (class in labgrid.remote.exporter), 168
PtxExpect (class in labgrid.util.expect), 212

```

push() (*labgrid.step.Steps* method), 226
put() (*labgrid.driver.fake.FakeFileTransferDriver* method), 121
put() (*labgrid.driver.shelldriver.ShellDriver* method), 139
put() (*labgrid.driver.sshdriver.SSHDriver* method), 144
put() (*labgrid.protocol.filetransferprotocol.FileTransferProtocol* method), 155
put_bytes() (*labgrid.driver.shelldriver.ShellDriver* method), 139
put_file() (*labgrid.util.ssh.SSHConnection* method), 216
put_ssh_key() (*labgrid.driver.shelldriver.ShellDriver* method), 139
pytest_adoption() (in module *labgrid.pytestplugin.fixtures*), 157
pytest_collection_modifyitems() (in module *labgrid.pytestplugin.hooks*), 157
pytest_configure() (in module *labgrid.pytestplugin.hooks*), 157
pytest_runttest_logreport() (*labgrid.pytestplugin.reporter.StepReporter* method), 158
pytest_runttest_logstart() (*labgrid.pytestplugin.reporter.StepReporter* method), 158
Python Enhancement Proposals
 PEP 8, 98
PyVISADevice (class in *labgrid.resource.pyvisa*), 184
PyVISADriver (class in *labgrid.driver.pyvisadriver*), 134

Q

QEMUDriver (class in *labgrid.driver.qemudriver*), 135
QMPError, 215
QMPMonitor (class in *labgrid.util.qmp*), 215
QuartusHPSDriver (class in *labgrid.driver.quartushpsdriver*), 136
query() (*labgrid.driver.usbtmcdriver.USBTMCDriver* method), 151

R

RawSerialPort (class in *labgrid.resource.serialport*), 193
read() (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin* method), 117
read() (*labgrid.protocol.consoleprotocol.ConsoleProtocol* method), 154
read() (*labgrid.protocol.filesystemprotocol.FileSystemProtocol* method), 155
read() (*labgrid.protocol.mmioprotocol.MMIOProtocol* method), 156

read_attr() (*labgrid.resource.udev.USBResource* method), 195
read_nonblocking() (*labgrid.util.expect.PtxExpect* method), 212
refresh() (*labgrid.remote.common.Reservation* method), 162
reg_driver() (*labgrid.factory.TargetFactory* method), 225
reg_resource() (*labgrid.factory.TargetFactory* method), 225
register() (*labgrid.util.agent.Agent* method), 209
register() (*labgrid.util.helper.ProcessWrapper* method), 212
RegistrationError, 225
release() (*labgrid.remote.common.ResourceEntry* method), 160
release() (*labgrid.remote.exporter.ResourceExport* method), 164
remaining() (*labgrid.util.timeout.Timeout* property), 218
RemoteBaseProvider (class in *labgrid.resource.remote*), 192
RemoteHTTPProvider (class in *labgrid.resource.remote*), 192
RemoteNetworkInterface (class in *labgrid.resource.remote*), 192
RemoteNFSPProvider (class in *labgrid.resource.remote*), 192
RemotePlace (class in *labgrid.resource.remote*), 184
RemotePlaceManager (class in *labgrid.resource.remote*), 184
RemotePort (class in *labgrid.remote.client*), 159
RemoteSession (class in *labgrid.remote.coordinator*), 163
RemoteTFTPPProvider (class in *labgrid.resource.remote*), 192
RemoteUSBResource (class in *labgrid.resource.remote*), 185
remove_port_forward() (*labgrid.util.ssh.SSHConnection* method), 216
request_scan() (*labgrid.driver.networkinterface.NetworkInterfaceDriver* method), 128
request_scan() (*labgrid.util.agents.network_interface.NMDev* method), 208
Reservation (class in *labgrid.remote.common*), 161
ReservationState (class in *labgrid.remote.common*), 161
reset() (*labgrid.driver.bareboxdriver.BareboxDriver* method), 115
reset() (*labgrid.driver.powerdriver.PowerResetMixin* method), 129
reset() (*labgrid.driver.resetdriver.DigitalOutputResetDriver*

```

        method), 136
reset() (labgrid.driver.ubootdriver.UBootDriver
        method), 145
reset() (labgrid.protocol.linuxbootprotocol.LinuxBootProtocol
        method), 156
reset() (labgrid.protocol.resetprotocol.ResetProtocol
        method), 157
ResetProtocol (class in lab-
    grid.protocol.resetprotocol), 157
resolve_conflicts() (lab-
    grid.binding.BindingMixin method), 220
resolve_conflicts() (lab-
    grid.driver.consoleexpectMixin.ConsoleExpectMixin
        method), 117
resolve_conflicts() (lab-
    grid.strategy.common.Strategy
        method), 204
resolve_path() (labgrid.config.Config method), 221
resolve_path_str_or_list() (lab-
    grid.config.Config method), 221
resolve_templates() (in module lab-
    grid.util.yaml), 218
Resource (class in labgrid.resource.common), 173
ResourceConfig (class in labgrid.remote.config), 162
ResourceEntry (class in labgrid.remote.common),
    159
ResourceExport (class in labgrid.remote.exporter),
    164
ResourceImport (class in lab-
    grid.remote.coordinator), 163
ResourceManager (class in lab-
    grid.resource.common), 174
ResourceMatch (class in labgrid.remote.common),
    160
RKUSBDriver (class in labgrid.driver.usbloader), 148
RKUSBLoader (class in labgrid.resource.udev), 196
rsync() (labgrid.driver.sshdriver.SSHDriver method),
    144
run() (labgrid.autoinstall.main.Handler method), 111
run() (labgrid.driver.bareboxdriver.BareboxDriver
        method), 115
run() (labgrid.driver.fake.FakeCommandDriver
        method), 120
run() (labgrid.driver.fastbootdriver.AndroidFastbootDriver
        method), 122
run() (labgrid.driver.shelldriver.ShellDriver method),
    139
run() (labgrid.driver.sshdriver.SSHDriver method),
    143
run() (labgrid.driver.ubootdriver.UBootDriver
        method), 145
run() (labgrid.protocol.commandprotocol.CommandProtocol
        method), 153
run() (labgrid.resource.suggest.Suggerster method), 194
run() (labgrid.util.agent.Agent method), 209
run() (labgrid.util.agents.network_interface.BackgroundLoop
        method), 208
run_check() (labgrid.driver.commandMixin.CommandMixin
        method), 116
run_check() (labgrid.driver.fake.FakeCommandDriver
        method), 120
run_check() (labgrid.protocol.commandprotocol.CommandProtocol
        method), 153
run_check() (labgrid.util.ssh.SSHConnection
        method), 216
run_once() (labgrid.autoinstall.main.Handler
        method), 111
run_script() (labgrid.driver.shelldriver.ShellDriver
        method), 139
run_script_file() (lab-
    grid.driver.shelldriver.ShellDriver
        method), 140

```

S

```

s2b() (in module labgrid.util.agent), 209
s2b() (in module labgrid.util.agentwrapper), 210
safe_dupfile() (in module lab-
    grid.pytestplugin.reporter), 158
schedule() (in module labgrid.remote.scheduler), 172
schedule_overlaps() (in module lab-
    grid.remote.scheduler), 172
schedule_step() (in module lab-
    grid.remote.scheduler), 171
scp() (labgrid.driver.sshdriver.SSHDriver method),
    144
select_caps() (lab-
    grid.driver.usbvideodriver.USBVideoDriver
        method), 152
send() (labgrid.util.agent.Agent method), 209
send() (labgrid.util.expect.PtxExpect method), 212
sendcontrol() (lab-
    grid.driver.consoleexpectMixin.ConsoleExpectMixin
        method), 117
sendcontrol() (lab-
    grid.protocol.consoleprotocol.ConsoleProtocol
        method), 154
sendline() (labgrid.driver.consoleexpectMixin.ConsoleExpectMixin
        method), 117
sendline() (labgrid.protocol.consoleprotocol.ConsoleProtocol
        method), 154
SerialDriver (class in labgrid.driver.serialdriver),
    137
SerialPort (class in labgrid.resource.base), 172
SerialPortDigitalOutputDriver (class in lab-
    grid.driver.serialdigitaloutput), 137
SerialPortExport (class in lab-
    grid.remote.exporter), 165

```

```

ServerError, 159
set() (labgrid.driver.deditecrelaisdriver.DeditecRelaisDriver
       method), 117
set() (labgrid.driver.filereadoutput.FileDigitalOutputDriver
       method), 122
set() (labgrid.driver.gpiodriver.GpioDigitalOutputDriver
       method), 124
set() (labgrid.driver.lxaibusdriver.LXAIOBusPIO
       method), 125
set() (labgrid.driver.manualswitchdriver.ManualSwitchDriver
       method), 126
set() (labgrid.driver.modbusdriver.ModbusCoilDriver
       method), 126
set() (labgrid.driver.onewiredriver.OneWirePIO
       method), 128
set() (labgrid.driver.serialdigitaloutput.SerialPortDigital
       method), 137
set() (labgrid.driver.usbhidrelay.HIDRelayDriver
       method), 146
set() (labgrid.protocol.digitaloutputprotocol.DigitalOutputProtocol
       method), 154
set() (labgrid.util.agents.network_interface.Future
       method), 207
set() (labgrid.util.agents.sysfsgpio.GpioDigitalOutput
       method), 209
set_binding_map() (labgrid.target.Target
       method), 228
set_current_limit() (lab-
       grid.driver.sigrokdriver.SigrokPowerDriver
       method), 141
set_links() (labgrid.driver.lxausbmuxdriver.LXAUSBM
       method), 125
set_mode() (labgrid.driver.usbsdmuxdriver.USBSDMuxDriver
       method), 149
set_mode() (labgrid.driver.usbsdwiredriver.USBSDWireDriver
       method), 150
set_option() (labgrid.config.Config
       method), 222
set_resource() (lab-
       grid.remote.coordinator.ExporterSession
       method), 163
set_target_option() (labgrid.config.Config
       method), 222
set_voltage_target() (lab-
       grid.driver.sigrokdriver.SigrokPowerDriver
       method), 141
settle() (labgrid.driver.consoleexpectmixin.ConsoleExpectMixin
       method), 117
shell (labgrid.strategy.bareboxstrategy.Status
       attribute), 203
shell (labgrid.strategy.shellstrategy.Status
       attribute), 206
shell (labgrid.strategy.ubootstrategy.Status
       attribute), 206
ShellDriver (class in labgrid.driver.shelldrive
       r), 138
ShellStrategy (class
       in lab-
       grid.strategy.shellstrategy), 206
show() (labgrid.remote.common.Place
       method), 161
162
SigrokCommon (class
       in labgrid.driver.sigrokdriver),
       141
SigrokDevice (class
       in labgrid.resource.sigrok),
       193
SigrokDriver (class
       in labgrid.driver.sigrokdriver),
       141
SigrokPowerDriver (class
       in lab-
       grid.driver.sigrokdriver), 141
SigrokUSBDevice (class
       in labgrid.resource.udev),
       197
SigrokUSBSerialDevice (class
       in lab-
       grid), 198
SiSPMPowerDriver (class
       in lab-
       grid.driver.powerdriver), 130
SiSPMPowerPort (class
       in labgrid.resource.udev),
       99
SiSPMPowerPortExport (class
       in lab-
       grid.remote.exporter), 167
skip() (labgrid.step.Step
       method), 227
SmallUBootDriver (class
       in lab-
       grid.driver.smallubootdriver), 142
SNMPEthernetPort (class
       in lab-
       grid.resource.ethernetport), 178
SNMPSwitch (class
       in labgrid.resource.ethernetport),
       176
SSHConnection (class
       in labgrid.util.ssh), 215
SSHDriver (class in labgrid.driver.sshdriver), 143
sshfs() (labgrid.driver.sshdriver.SSHDriver
       method), 144
stage() (labgrid.provider.BaseProviderDriver
       method), 133
start() (labgrid.autoinstall.main.Manager
       method), 111
start() (labgrid.consoleloggingreporter.ConsoleLoggingReporter
       class
       method), 223
start() (labgrid.remote.exporter.ResourceExport
       method), 164
start() (labgrid.step.Step
       method), 227
start() (labgrid.stepreporter.StepReporter
       class
       method), 227
start_sender() (lab-
       grid), 159
start_session() (in module labgrid.remote.client),
       159
StateError, 219
Status (class in labgrid.strategy.bareboxstrat
       egy), 203
Status (class in labgrid.strategy.dockerstrat
       egy), 204
Status (class in labgrid.strategy.shellstrat
       egy), 206
Status (class in labgrid.strategy.ubootstrat
       egy), 206

```

s
 status() (*labgrid.step.Step* property), 227
Step (*class* in *labgrid.step*), 227
step () (*in module labgrid.step*), 227
StepEvent (*class* in *labgrid.step*), 226
StepReporter (*class* in *labgrid.pytestplugin.reporter*), 158
StepReporter (*class* in *labgrid.stepreporter*), 227
Steps (*class* in *labgrid.step*), 226
stop () (*labgrid.consoleloggingreporter.ConsoleLoggingReporter* class method), 223
stop () (*labgrid.driver.sigrokdriver.SigrokDriver* method), 141
stop () (*labgrid.remote.exporter.ResourceExport* method), 164
stop () (*labgrid.step.Step* method), 227
stop () (*labgrid.stepreporter.StepReporter* class method), 227
Strategy (*class* in *labgrid.strategy.common*), 203
strategy () (*in module labgrid.pytestplugin.fixtures*), 157
StrategyError, 203
stream () (*labgrid.driver.httpvideodriver.HTTPVideoDriver* method), 124
stream () (*labgrid.driver.usbvideodriver.USBVideoDriver* method), 152
stream () (*labgrid.protocol.videoprotocol.VideoProtocol* method), 157
subscribe () (*labgrid.step.Steps* method), 226
suggest_callback () (*labgrid.resource.suggest.Suggerter* method), 194
suggest_match () (*labgrid.resource.udev.USBResource* method), 195
Suggerter (*class* in *labgrid.resource.suggest*), 194
sync_to_resource () (*labgrid.util.managedfile.ManagedFile* method), 213
SysfsGPIO (*class* in *labgrid.resource.base*), 173

T
TagSet (*class* in *labgrid.remote.scheduler*), 171
Target (*class* in *labgrid.target*), 228
target () (*in module labgrid.pytestplugin.fixtures*), 157
target_factory (*in module labgrid.factory*), 226
TargetFactory (*class* in *labgrid.factory*), 225
TasmotaPowerDriver (*class* in *labgrid.driver.mqtt*), 127
TasmotaPowerPort (*class* in *labgrid.resource.mqtt*), 181
TFTPPProvider (*class* in *labgrid.resource.provider*), 183
TFTPPProviderDriver (*class* in *labgrid.driver.provider*), 133

U
Timeout (*class* in *labgrid.util.timeout*), 218
touch () (*labgrid.remote.common.Place* method), 161
transition () (*labgrid.strategy.bareboxstrategy.BareboxStrategy* method), 203
transition () (*labgrid.strategy.common.Strategy* method), 204
transition () (*labgrid.strategy.dockerstrategy.DockerStrategy* method), 204
transition () (*labgrid.strategy.graphstrategy.GraphStrategy* method), 205
transition () (*labgrid.strategy.shellstrategy.ShellStrategy* method), 206
transition () (*labgrid.strategy.ubootstrategy.UBootStrategy* method), 206
try_match () (*labgrid.resource.udev.USBResource* method), 195

U
uboot (*labgrid.strategy.ubootstrategy.Status* attribute), 206
UBootDriver (*class* in *labgrid.driver.ubootdriver*), 144
UBootStrategy (*class* in *labgrid.strategy.ubootstrategy*), 206
UdevManager (*class* in *labgrid.resource.udev*), 194
unknown (*labgrid.strategy.bareboxstrategy.Status* attribute), 203
unknown (*labgrid.strategy.dockerstrategy.Status* attribute), 204
unknown (*labgrid.strategy.shellstrategy.Status* attribute), 206
unknown (*labgrid.strategy.ubootstrategy.Status* attribute), 206
unmatched () (*labgrid.remote.common.Place* method), 161
unregister () (*labgrid.util.helper.ProcessWrapper* method), 212
unsubscribe () (*labgrid.step.Steps* method), 226
UPD (*labgrid.remote.coordinator.Action* attribute), 163
update () (*labgrid.remote.common.Place* method), 161
update () (*labgrid.remote.common.ResourceEntry* method), 160
update () (*labgrid.resource.ethernetport.SNMPSwitch* method), 176
update () (*labgrid.resource.udev.USBNetworkInterface* method), 197
update () (*labgrid.resource.udev.USBResource* method), 195

update() (*labgrid.resource.udev.USBSerialPort method*), 195
 update_resources() (*labgrid.target.Target method*), 228
 USBAudioInput (*class in labgrid.resource.udev*), 200
 USBAudioInputDriver (*class in labgrid.driver.usbaudiodriver*), 146
 USBAudioInputExport (*class in labgrid.remote.exporter*), 166
 USBDebugger (*class in labgrid.resource.udev*), 201
 USBDeditecRelaisExport (*class in labgrid.remote.exporter*), 167
 USBFlashableDevice (*class in labgrid.resource.udev*), 201
 USBFlashableExport (*class in labgrid.remote.exporter*), 168
 USBGenericExport (*class in labgrid.remote.exporter*), 165
 USBHIDRelayExport (*class in labgrid.remote.exporter*), 168
 USBMassStorage (*class in labgrid.resource.udev*), 195
 USBNetworkExport (*class in labgrid.remote.exporter*), 165
 USBNetworkInterface (*class in labgrid.resource.udev*), 197
 USBPowerDriver (*class in labgrid.driver.powerdriver*), 132
 USBPowerPort (*class in labgrid.resource.udev*), 199
 USBPowerPortExport (*class in labgrid.remote.exporter*), 167
 USBResource (*class in labgrid.resource.udev*), 194
 USBSDMuxDevice (*class in labgrid.resource.udev*), 198
 USBSDMuxDriver (*class in labgrid.driver.usbsdmuxdriver*), 149
 USBSDMuxExport (*class in labgrid.remote.exporter*), 166
 USBSDWireDevice (*class in labgrid.resource.udev*), 198
 USBSDWireDriver (*class in labgrid.driver.usbsdwiredriver*), 150
 USBSDWireExport (*class in labgrid.remote.exporter*), 166
 USBSerialPort (*class in labgrid.resource.udev*), 195
 USBSigrokExport (*class in labgrid.remote.exporter*), 166
 USBStorageDriver (*class in labgrid.driver.usbstoragedriver*), 150
 USBTMC (*class in labgrid.resource.udev*), 200
 USBTMCDriver (*class in labgrid.driver.usbtmcdriver*), 151
 USBVideo (*class in labgrid.resource.udev*), 199
 USBVideoDriver (*class in labgrid.driver.usbvideodriver*), 152
 UserError, 159
 UUUDriver (*class in labgrid.driver.usbloader*), 148

V

vendor_id() (*labgrid.resource.udev.USBResource property*), 195
 VideoProtocol (*class in labgrid.protocol.videoprotocol*), 157

W

wait() (*labgrid.util.agents.network_interface.Future method*), 207
 wait_for() (*labgrid.driver.commandmixin.CommandMixin method*), 115
 wait_for() (*labgrid.protocol.commandprotocol.CommandProtocol method*), 153
 wait_state() (*labgrid.driver.networkinterfacedriver.NetworkInterfaceDriver method*), 127
 wait_state() (*labgrid.util.agents.network_interface.NMDev method*), 208
 waiting (*labgrid.remote.common.ReservationState attribute*), 161
 write() (*labgrid.driver.consoleexpectmixin.ConsoleExpectMixin method*), 117
 write() (*labgrid.protocol.consoleprotocol.ConsoleProtocol method*), 154
 write() (*labgrid.protocol.filesystemprotocol.FileSystemProtocol method*), 155
 write() (*labgrid.protocol.mmioprotocol.MMIOProtocol method*), 156
 write_image() (*labgrid.driver.usbstoragedriver.USBStorageDriver method*), 150

X

XenaDriver (*class in labgrid.driver.xenadriver*), 152
 XenaManager (*class in labgrid.resource.xenamanager*), 202

Y

yaml_constructors (*labgrid.util.yaml.Loader attribute*), 218
 yaml_representers (*labgrid.util.yaml.Dumper attribute*), 218
 YKUSHPowerDriver (*class in labgrid.driver.powerdriver*), 132
 YKUSHPowerPort (*class in labgrid.resource.ykushpowerport*), 202